

| | |
|------------------------------------|-------------|
| Font Size | 3-2 |
| Changing Font Size | 3-2 |
| Wallpaper | 3-3 |
| Customized Screen | 3-4 |
| Customized Screen (Japanese) | 3-4 |
| Sounds & Alerts | 3-5 |
| Customizing Handset Responses ... | 3-5 |
| Text Entry | 3-6 |
| Entering Characters | 3-8 |
| Editing Characters | 3-11 |
| User Dictionary | 3-12 |
| Saving Frequently Used Words | 3-12 |

| | |
|-------------------------------------|-------------|
| Dictionary | 3-13 |
| Using Dictionaries (Japanese) | 3-13 |
| Search | 3-16 |
| Searching Text | 3-16 |
| Scratch Pad | 3-17 |
| Phone Book | 3-18 |
| Creating Phone Book Entries | 3-18 |
| Using Phone Book Entries | 3-20 |
| Additional Functions | 3-21 |
| Troubleshooting | 3-26 |

3

 
Universal Operations, Etc.




Changing Font Size

Enlarging All Fonts

Activate Large Font Menu to enlarge fonts for menus, text entry, etc. as follows:

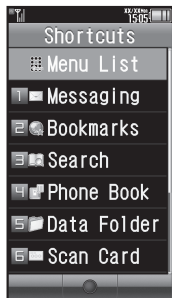

1 (Long)

 

2 **Large Font Menu** ➔

Canceling Large Font Menu

In 2, **Standard Menu** ➔

 
Customizing Font Sizes

1 ➔ **Settings** ➔



2 In Sound/Display menu, **Display** ➔

3 **Font Settings** ➔




Font Settings Menu

4 **Font Size** ➔ ➔ **Select item** ➔

5 **Select size** ➔

Changing Font Weight

 1 In Font Settings menu, **Font Weight** ➔

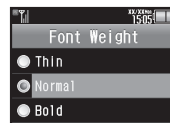







2 **Select weight** ➔




Customized Screen (Japanese)

Preset Customized Screens

- 1  ➔ 
- 2 **Preset Screens** ➔ 
- 3 **Select pattern** ➔ 
- 4  ➔ 

When Selected Customized Screen is Active

- Cancellation confirmation appears after ③.
To cancel, choose **Yes** and press .

Downloading Customized Screens

Read information (price, etc.) on Customized Screen download page.

- 1  ➔ **Data Folder** ➔  ➔ **Customized Screen** ➔ 




Customized Screen Menu

- 2 **Download Customized Screen** ➔ 



- Follow onscreen instructions.

Customized Screen Setup






- 1 **In Customized Screen menu, select Customized Screen** ➔ 

- 2  ➔ 

Applying Fee-based Customized Screen

- If Contents Key is required, follow these steps:
After ①,  ➔ **Yes** ➔ 
■ Read terms of service and then follow onscreen instructions.

Advanced

-   Canceling Customized Screen
-  Canceling Customized Screen unconditionally
-  Deleting Customized Screens
-  Accessing Customized Screen source sites (P.3-21)



Customizing Handset Responses

Ringtones

- 1 ➔ **Settings** ➔ ➔ In **Sound/Display menu, Sounds & Alerts** ➔



Sounds & Alerts Menu

- 2 **Ringtone/videos** ➔

- 3 **Select item** ➔

For **For New Message**, etc., select **Assign Tone** and press .



- 4 **Select folder** ➔

- 5 **Select tone/file** ➔

Setting Ring Time for Incoming Mail, etc.
After , **Duration** ➔ ➔ Enter time ➔

Playing Video for Incoming Transmissions
In 4, **Videos** ➔ ➔ Select file ➔

If Portion of File Content is Specifiable

- After , start point selection window opens. Follow these steps:

Select start point ➔

Selecting Files with Limited Usage Period

- A confirmation appears. Choose **Yes** and press to proceed.

Machi-Uta Service Registration (Japanese)

Use Machi-Uta to play music instead of the standard ringback tone.

Machi-Uta requires a separate contract.

- 1 In **Sounds & Alerts menu, Machi-Uta** ➔

- 2 **Register/Cancel** ➔

- Follow onscreen instructions.

Vibration

- 1 In **Sounds & Alerts menu, Vibration** ➔

- 2 **Select item** ➔ ➔ **Switch On/Off** ➔

- 3 **On** ➔

- 4 **Vibration Pattern** ➔

- To check vibration patterns, select one and press .

- 5 **Select pattern** ➔

Setting Ringtones to Control Vibration

In , **Link to Sound** ➔

Important Vibration Usage Note

- Cancel Vibration when charging battery to help avoid accidents.

3

Universal Operations, Etc.

Advanced

 
- Using Machi-Uta (Japanese) (P.3-21)



Text Entry

Use handset keys or Touch Panel to enter text.

Handset Keys

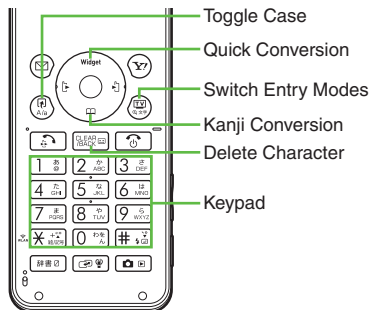


Unless noted otherwise, text entry descriptions are for text entry windows opened by handset keys.


Touch Panel

Use Onscreen Keyboard to enter text.

 - Onscreen Keyboard keys correspond to Keypad keys.
- Onscreen Keyboard appears when a text entry window is opened in Viewer position.

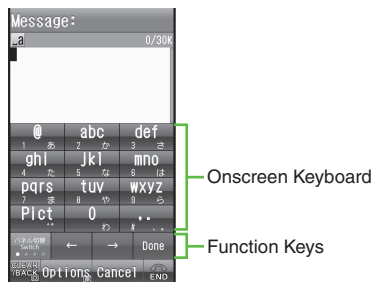

↓ Tap **Switch**

 


- Tap **Switch** at the bottom to toggle Function Key assignments.

Function Key Assignments

| Input Mode | Switch entry modes |
|-------------|-------------------------------|
| A/a | Toggle case |
| Conv | Convert hiragana to kanji |
| Conf. | Enter current characters |
| Rev. Order | Reverse character options |
| Undo | Undo conversion/deletion |
| Emoticons | Open emoticon list |
| Search Word | Enter text from dictionaries |
| Prev. | Open previous page |
| Next | Open next page |
| Common Pict | Show cross-carrier Pictograms |
| All Pict | Show all Pictograms |
| Quick Conv | Initiate Quick Conversion |
| Pred. Mode | Toggle suggestion mode |
| ←/→ | Move cursor left/right |
| Range Text | Highlight text range |
| Quit | Cancel Range Text |
| Copy | Copy highlighted text |
| Cut | Cut highlighted text. |
| Del. All | Delete all characters |
| Dict. | Use dictionaries |
| Done | End text entry |
| Keyboard | Show/hide Keyboard |



 Switching Entry Modes

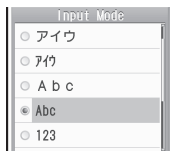

- Available entry modes appear.

2 Select mode ➡ ●

- Entry Mode Indicators:

| | |
|--|--|
| | Kanji (hiragana) |
| | Double/single-byte katakana |
| | Double-byte alphanumerics (upper/lower case) |
| | Single-byte alphanumerics (upper/lower case) |
| | Single-byte number |
| | Character Code |

* appears when Predictive is active.

Character Entry Basics

Use Keypad to enter characters. Multiple characters are assigned to each key. Press a key to toggle character options for that key.

Example: In double-byte katakana entry, press three times.



- Press to toggle options in reverse. To type characters assigned to the same key, press first.

Example: In single-byte alphanumerics mode, enter *no*.



- Long Press a key to enter the current character and advance cursor.



Advanced

- Opening Help
- Using Character Codes
- Using Pager Code (P.3-21)



Entering Characters

Hiragana

Follow these steps to enter **すずぎ** in kanji (hiragana) mode:



2 (Confirm)

Kanji

Convert **すずぎ** to **鈴木**.

1 Type **すずぎ**



- In kanji (hiragana) mode, word suggestions change as hiragana are typed. (Predictive)
- Long Press to toggle suggestion mode between Standard, Business, Male, Female and Automatic. (Personal Mode)

 
2



3 **鈴木**

- To exit suggestion list, press .

4

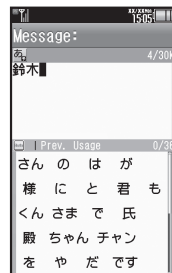

- Words likely to follow the entry appear based on previous entries. (Previous Usage)

When Target Word is Not Listed

- Press or to segment hiragana to convert separately.
 - Press to toggle Predictive and Non-Predictive suggestions.

Single Kanji Conversion

Type reading in hiragana → (Long)

Advanced

 
- Inserting line breaks
- Inserting spaces
- Clearing entry log
- Changing Font Size
- Disabling suggestions based on entered characters
- Disabling suggestions based on entered words
- Disabling emoticon/Pictogram suggestions based on entered words
- Lowering type priorities in suggestion list
- Selecting a suggestion mode (P.3-21 - 3-22)



Entering from Dictionaries (Search Word)

Enter text by referring to word definitions, translations, etc.

- 1 **Type hiragana ➔ Before pressing  to complete entry,**

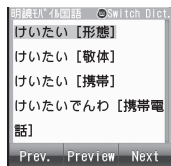

- Press  to toggle dictionaries.

- 2 **Select word, etc. ➔ **
- Definition/translation appears.

- 3 

One-Hiragana Conversion

Type the first hiragana to access previously selected words.

Example: **ずずき** was previously converted to **鈴木**.

 
- 1    (ず) ➔ 

 
- 2 **Select word/phrase ➔ **

Katakana

Follow these steps to switch to double-byte katakana mode and enter **ジュン**:

- 1  ➔ アイウ ➔ 











- 2   (シ) ➔  (ジ) ➔   (ユ) ➔   (ン) ➔ 




Pictograms & Symbols

May be unavailable depending on the entry mode.

- 1   
 - Pictogram/Symbol Log appears.
- 2   or  (switch tabs) ➔  or  (toggle Lists)



- In Pictogram List, press  to toggle cross-carrier Pictograms and all Pictograms.

- 3 **Select Pictogram or Symbol ➔ **

- Pictograms are double-byte even in single-byte modes.

- 4   ➔ **List closes**



Emoticons

1 [Envelope] ➔ **Emoticons** ➔ [Circle]

2 **Select emoticon** ➔ [Circle]

Alternative Emoticon Entry Method

- In kanji (hiragana) mode, type **かお** or a descriptive word such as **わーい** or **うーん**, then convert the entry.

EmoticonWordLink

- Immediately after inserting a descriptive word such as **嬉しい** or **悲しい**, corresponding emoticons may appear in the suggestion list.

Mail & Web Extensions

Enter **.co.jp**, **http://**, etc., easily.

1 [Envelope] ➔ **Quick Addr. List** ➔ [Circle]



2 **Select extension** ➔ [Circle]

- Extensions are single-byte even in double-byte entry modes.

 
Hiragana to Katakana/
Alphanumeric Conversion

Enter katakana and alphanumerics in kanji (hiragana) mode.

Example: To enter **PM**

Use key inscriptions.

1 [7] [P] [6] [M] ➔ [Y]

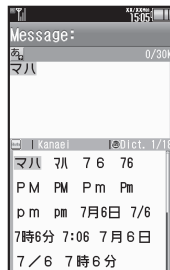

2 **Select word/phrase (PM)** ➔ [Circle]

Quick Conversion (for Hiragana)

A list of word suggestions appears based on the key pressed.

Example: To enter **終電**

1 [3] [O] [E] [F] (さ) ➔ [8] [T] [U] [V] (や)
➔ [1] [A] [B] (あ) ➔ [4] [G] [H] (だ)
➔ [0] [W] [A] (わ) ➔ [Circle]



2 **Select word/phrase (終電)** ➔ [Circle]

One Hiragana Word Call

- Type the first hiragana of entries you used Quick Conversion for and press [Circle].



Editing Characters

Deleting & Editing

Follow these steps to correct **また、お願いします** to **また明日お願いします**.

1 Select character



2



- The highlighted character is deleted.

3 Select target location Enter characters



Recovering Deleted Characters

- Press once for each character after deletion.

Deleting All Text

 
- Long Press at the end of text. To delete characters on and after cursor, select the first character of text and Long Press .

Jumping to the End or Top of Text

- ➔ *Cursor Position* ➔ ➔ *Jump to End or Jump to Top* ➔

Copy/Cut & Paste

1 ➔ *Cut or Copy* ➔ ➔ Select first character ➔



Cut

- To cancel and start over, press .

2 Highlight text range ➔

3 Select target location ➔ (Long)



- Text is entered.

Pasting Previously Cut/Copied Text

Select target location ➔ ➔ *Paste*

➔ ➔ Select text ➔

- Available when Paste List appears.

Advanced

- Undo conversion or recover deleted characters
- Inserting Phone Book entry items (P.3-21)

 


Saving Frequently Used Words

Saving Words (Japanese)

Saved words appear among suggestions.

- 1 → **Settings** → → → **Phone/** → **User Dictionary** →

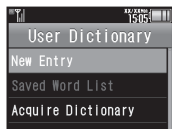

User Dictionary Menu

- 2 **New Entry** → → **Enter word** →

- 3 **Enter reading** →

Editing Entries

- In , **Saved Word List** → → → **Select word** → → **Edit** → → → **Edit reading** → → **Yes** →

 
940SH Download Dictionary (Japanese)

Get specialized 940SH Download Dictionaries via SH-web Mobile Internet site (ケーブーメーガ **SH-web** in Bookmarks; see P.6-9).

Activate dictionaries to improve handset character conversion. Dictionary words appear among suggestions.

Some dictionary files may not be usable.

- 1 **In User Dictionary menu,**
Acquire Dictionary →

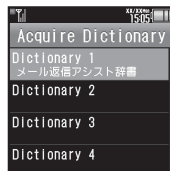

- 2 **Select number** → → → **Select dictionary** →

- Existing dictionary is replaced.

Canceling Dictionary

In , **select dictionary** → →

Cancel →

Viewing Dictionary Information

In , **select dictionary** → → **Info** →

Reply Assist Dictionary (メール返信アシスト辞書)

- When replying, this dictionary prioritizes original message words in suggestion list.
- Effective in kanji (hiragana) mode.

Advanced

- Deleting entries (P.3-22)**



Using Dictionaries (Japanese)

Available Dictionaries:

| | |
|--------------------------------|---|
| Preloaded Dictionaries* | Meikyo Japanese Dictionary, Genius English-Japanese Dictionary, Genius Japanese-English Dictionary |
| Online Dictionaries | Yahoo! Answers, Meikyo Japanese Dictionary MX.net, Genius English-Japanese Dictionary MX.net, Genius Japanese-English Dictionary MX.net, Imidas Encyclopedia, Complete Japanese Encyclopedia (Encyclopedia Nipponica 2001) including "Nipponica Plus," Digital Dai-ji-sen Japanese Dictionary, Shogakukan Progressive English-Japanese/Japanese-English Dictionaries, Hot Pepper FooMoo, Amazon.co.jp, Family Medical Encyclopedia, Guide to Prescription Drugs |

*Download and add dictionaries as needed.

 
Online Dictionaries

- Online dictionary use requires Internet connection incurring packet transmission fees. Information fees may also apply. Read terms of service and then follow onscreen instructions.
- Update dictionary list for most recent versions.

Using Preloaded Dictionaries

Searching As-You-Type

1

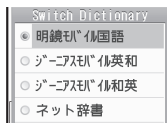

2

Select dictionary ➔



Dictionary Window

- Last used dictionary appears first.

3

Enter reading (spelling for English-Japanese dictionary)



- Enter reading in katakana.
- Search results appear as you type.

4

Select word, etc. ➔



Definition/Translation Window

Looking Up in Online Dictionaries [Definition/Translation Window]

➔ WebDict.Search ➔

- Perform from 2 (except 3) in "Using Online Dictionaries" on P.3-14. (Read bulleted sentence in 1 beforehand.)

Searching by Keyword

1

In Dictionary window,

2

Search Method ➔ ➔
Keyword Search ➔

3

Select entry field ➔ ➔
Enter text ➔



4

Search ➔ ➔ Select word, etc. ➔

- Definition/translation window opens.

Advanced

- Changing Font Size ● Looking up copied words in dictionaries ● Viewing dictionary information ● Updating dictionary list (And more on P.3-22)

3

Universal Operations, Etc.



Copying Text

 
Selected Portions

1 In definition/translation window,

2 Select first character
 ➔ Highlight text range

Index Word Only


1 In definition/translation window,

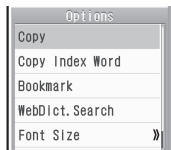

2 Copy Index Word

Adding Downloaded Dictionary

 1 In Dictionary window,

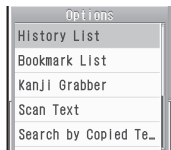

2 Add Dictionary

3 Select file

Canceling Added Dictionary

In , Cancel Dictionary ➔ Yes

Using Online Dictionaries

1 In Dictionary window, ➔ ネット辞書

- Terms of service (Japanese) appear when using online dictionary for the first time; read and then press . A confirmation appears subsequently; select image download option.

2 Select pull-down menu



3 Select dictionary

- Select **すべて** to look up in all dictionaries at once.

4 Select entry field ➔ Enter text

5 Search

6 Yes

7 Select word, etc.
 • Definition/translation window opens.

Disabling Confirmation

After , (✓) ➔ From

Viewing Dictionary Information

After , select word, etc. ➔ Reference ➔ Yes

Looking Up in Preloaded Dictionaries

After , ➔ Find by Other Dict.
 ➔ Select dictionary ➔ Search
 ➔ Select word, etc.

Opening Terms of Service

After 1, ➔ Terms of service

- Press to return to Dictionary window.

 
Advanced

- Changing Font Size Selecting dictionaries for use Selecting search method Selecting search area (And more on P.3-22 - 3-23)

Using History & Bookmarks

Saving Bookmarks


- 1 In definition/translation window, 

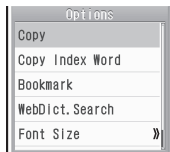


- 2 **Bookmark** ➡ 

Opening History or Bookmarks

 - 1 In Dictionary window, 

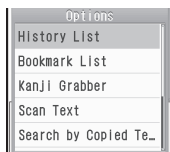






- 2 **History List or Bookmark List** ➡ 

- 3 **Select word, etc.** ➡ 
 - Definition/translation window opens.
 - Not available in History List of online dictionaries.



Advanced

-   Deleting History & bookmarks (P.3-22)

Using Dictionaries during Text Entry

- 1 **Type text** ➡ **Before pressing**  **to complete entry,** 
- 2 **Select dictionary** ➡ 
- 3 **Search** ➡  ➡ **Select word, etc.** ➡ 
 - Definition/translation window opens.

Inserting Index Word into Text

After  ➡ **Paste Index Word** ➡ 



Searching Text

Web Search

Packet transmission fees apply.

1 ➔ **Tools** ➔ ➔ ➔ **Doc./Rec.**

2 **Search** ➔



Search Window

- **Web Search** is selected by default.

3 **Select entry field** ➔ ➔ **Enter search text** ➔

4 **Search** ➔

- Search results appear.

Switching Browsers

 
[Search Window] ➔ **Change Browser** ➔ ➔ **Select browser** ➔

Mail Search

1 **In Search window, Mail Search** ➔

2 **Select entry field** ➔ ➔ **Enter search text** ➔

3 **Search** ➔

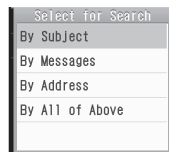

4 **Select option** ➔

Searching within Received or Sent Messages

[Search Window] ➔ **Change Mail Folder** ➔ ➔ **Received Messages or Sent Messages** ➔



 
Scratch Pad

Open Scratch Pad to jot down text, and more.

1 ➔ **Tools** ➔ ➔ ➔
Doc./Rec.

2 **Scratch Pad** ➔
• Text entry window opens.

3 **Enter text** ➔

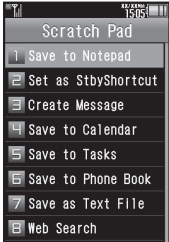

4 **Save to Notepad** ➔
• Open saved entries from Notepad.

| Other Scratch Pad Usage | |
|---|---|
| Usage | Operation |
| Paste to Standby | <i>Set as StbyShortcut</i> ➔ ➔ Select sheet ➔ |
| Enter Mail Message Text | <i>Create Message</i> ➔ ➔ Select mail type ➔ |
| Enter Schedule Subject/Details | <i>Save to Calendar</i> ➔ |
| Enter Task Subject/Details | <i>Save to Tasks</i> ➔ |
| Add Last Name/ Phone Number/ Mail Address to Phone Book | <i>Save to Phone Book</i> ➔ ▪ Reading is not entered. |
| Save Text File | <i>Save as Text File</i> ➔ ➔ Enter name ➔ ➔ <i>Save here</i> ➔ ▪ Saved to Data Folder (Other Documents). |
| Search Internet | <i>Web Search</i> ➔ ➔ Select browser ➔ |

For more, see corresponding function description or follow onscreen instructions.



Creating Phone Book Entries

Enter a name, phone number and mail address (enter at least one of these items) and classify the entry.

1 ➔ **Phone** ➔ ➔ **Add New Entry** ➔



2 **Last Name:** ➔ ➔ **Enter last name** ➔ ➔ **First Name:** ➔ ➔ **Enter first name** ➔



 
- Characters entered for names (reading for kanji) appear.

3 **Add Phone Number:** ➔ ➔ **Enter phone number** ➔ ➔ **Select type** ➔




- To save additional phone numbers, repeat **3**.

4 **Add Email Address:** ➔ ➔ **Enter mail address** ➔ ➔ **Select type** ➔

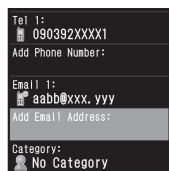

- To save additional mail addresses, repeat **4**.

 5 **Category:** ➔ ➔ **Select Category** ➔

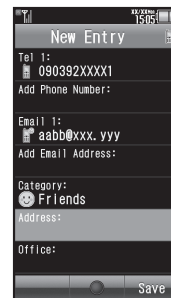

Phone Book Entry Window

6 ➔ **Entry is saved to Phone Book.**

Incoming Calls while Creating Entry

- Contents are temporarily saved. End the call to return.

Selecting Mode in Dual Mode

[Phone Book Entry Window] Mode:

➔ ➔ **Select mode** ➔ ➔ **6**

Advanced

- Saving other information
- Changing illumination settings
- Changing vibration pattern
- Editing Phone Book entries
- Setting incoming mail ring time
- Renaming Categories
- Changing Category icons
- Moving Categories (P.3-23 - 3-24)



Personal Ringtone

Set tone for calls from saved numbers.

- 1 In Phone Book entry window, select item, e.g., **Tone-Voice Call**: ➡ ●



- 2 **Assign Tone** ➡ ● ➡ Select folder ➡ ●
- 3 Select tone/file ➡ ● ➡ Ⓜ

Saving Secret Entries

Hide Phone Book entries to require Handset Code for access.

- 1 In Phone Book entry window, **Secret**: ➡ ●
- 2 **On** ➡ ● ➡ Ⓜ

Accessing Secret Entries

- ➡ ● ➡ **Unlock Temporarily** ➡
● ➡ Enter Handset Code ➡ ●

Customizing Response by Category

- 1 ● ➡ **Phone** ➡ ● ➡ **Set Category** ➡ ●



 
- 2 Select Category ➡ ● ➡ Select item ➡ ●
- 3 Select item ➡ ● ➡ Select item, e.g., **Assign Tone** ➡ ● ➡ **Customize responses**
 - Customize responses in the same way as Phone Book entries.
 - Not available for USIM Card.

Responses Set by Phone Book Entry

- Settings for each entry take priority.

Saving Numbers After Calls

After a call, save number to Phone Book.

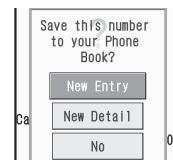

- 1 When confirmation appears, **New Entry** ➡ ● ➡ **Complete other fields** ➡ Ⓜ

Saving to an Existing Entry

- In 1, **New Detail** ➡ ● ➡ Select entry ➡ ● ➡ **Complete other fields** ➡ Ⓜ



Using Phone Book Entries

Dialing via Phone Book

- 1 Select katakana row



Entry Search Window (By あかさたな)

- When using Double Number in Dual Mode, Line indicators appear.

- 2 Select entry



- 3 Select phone number



Placing Video Calls

After 3, Video Call

Advanced

- Changing view for entry search window
- Assigning images to Phone Book entries for incoming transmissions
- Messaging via Phone Book
- Placing Decoration Calls via Phone Book
- Deleting Phone Book entries
- Checking memory status
- Copying Phone Book entries (And more on P.3-23 - 3-25)

Changing Search Method

- 1 In entry search window, Ph.Book Settings

- 2 Sort Entries



- 3 Select method


- Phone Book Search Methods:

| | |
|-------------|--|
| By あかさたな | Shows entries with Readings that start with katakana in the specified row |
| By Category | Opens entries in the specified Category |
| By Reading | Shows all entries in Reading order (katakana, alphabetical then numerical) |

Changing Search Method Temporarily
[Entry Search Window] (press to toggle search methods)

Opening from Other Functions

 Example: Enter a recipient via Phone Book when sending a message.

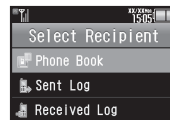

Select Recipient Window

- 1 Phone Book
- Entry search window opens.

- 2 Select entry

- 3 Select phone number or mail address



- Recipient is entered.
- Omit 3 if only one number or address is saved.



Customized Screen

| | |
|---|---|
| Canceling Customized Screen | ● ➔ ☰ ➔ Off ➔ ● ➔ Yes ➔ ● |
| Canceling Customized Screen unconditionally | ☰ ➔ Menu List ➔ ● ➔ Settings ➔ ● ➔ In Sound/Display menu, Customized Screen ➔ ● ➔ Off ➔ ● ➔ Yes ➔ ● |
| Deleting Customized Screens | ● ➔ Data Folder ➔ ● ➔ Customized Screen ➔ ● ➔ Select Customized Screen ➔ ☰ ➔ Delete ➔ ● ➔ Yes ➔ ● • When the corresponding Contents Key has been downloaded, choose Yes or No and press ●. |
| Accessing Customized Screen source sites | ● ➔ Data Folder ➔ ● ➔ Customized Screen ➔ ● ➔ Select Customized Screen ➔ ☰ ➔ Web Access ➔ ● • Follow onscreen instructions. |

Machi-Uta

| | |
|----------------------------|---|
| Using Machi-Uta (Japanese) | [Start Here] ● ➔ Settings ➔ ● ➔ In Sound/Display menu, Sounds & Alerts ➔ ● ➔ Machi-Uta ➔ ● ➔ See below |
| | Searching Music Music Search ➔ ● • Follow onscreen instructions. |
| | Changing Settings Settings ➔ ● • Follow onscreen instructions. |
| | Viewing Machi-Uta Information What's Machi-Uta ➔ ● • Follow onscreen instructions. |

Text Entry

| Entry & Edit | |
|---|---|
| Opening Help | In a text entry window, ☰ ➔ Help ➔ ● |
| Using Character Codes | In a text entry window, ☰ ➔ Character Code ➔ ● ➔ Enter four digits |
| Using Pager Code | In a text entry window, ☰ ➔ Input/Conversion ➔ ● ➔ Input Method ➔ ● ➔ Pager Code ➔ ● • Return to text entry window and enter two digits. |
| Inserting line breaks | At the End of Text In a text entry window, ⏏ Mid-Entry In a text entry window, ☰ ➔ ☰ ➔ ☰ or ☰ ➔ (select Symbols) ➔ ☰ ➔ ↵ ➔ ● |
| Inserting spaces | In a text entry window, ☰ |
| Clearing entry log | In a text entry window, ☰ ➔ Input/Conversion ➔ ● ➔ Reset Log ➔ ● ➔ Yes ➔ ● |
| Undo conversion or recover deleted characters | In a text entry window, ☰ ➔ Undo/Recover ➔ ● |
| Inserting Phone Book entry items | In a text entry window, ☰ ➔ Insert/Font Size ➔ ● ➔ Phone Book ➔ ● ➔ Select entry ➔ ● ➔ Select item ➔ ● |
| Changing Font Size | In a text entry window, ☰ ➔ Insert/Font Size ➔ ● ➔ Font Size ➔ ● ➔ Select size ➔ ● |



■ Conversion

| | |
|---|---|
| Disabling suggestions based on entered characters | In a text entry window, ☺ ➔ <i>Input/Conversion</i> ➔ ● ➔ <i>Predictive</i> ➔ ● ➔ <i>Off</i> ➔ ● |
| Disabling suggestions based on entered words | In a text entry window, ☺ ➔ <i>Input/Conversion</i> ➔ ● ➔ <i>Previous Usage</i> ➔ ● ➔ <i>Off</i> ➔ ● |
| Disabling emoticon/Pictogram suggestions based on entered words | In a text entry window, ☺ ➔ <i>Input/Conversion</i> ➔ ● ➔ <i>EmoticonWordLink</i> ➔ ● ➔ <i>Off</i> ➔ ● |
| Lowering type priorities in suggestion list | In a text entry window, ☺ ➔ <i>Input/Conversion</i> ➔ ● ➔ <i>Set Low Priority</i> ➔ ● ➔ Select type ➔ ● (✓) ➔ ☹ |
| Selecting a suggestion mode | In a text entry window, ☺ ➔ <i>Input/Conversion</i> ➔ ● ➔ <i>Personal Mode</i> ➔ ● ➔ Select mode ➔ ● |

User Dictionary

| | |
|------------------|--|
| Deleting entries | ● ➔ <i>Settings</i> ➔ ● ➔ ☹ <i>Phone/</i> ➔ <i>User Dictionary</i> ➔ ● ➔ <i>Saved Word List</i> ➔ ● ➔ Select word ➔ ☺ ➔ <i>Yes</i> ➔ ● |
|------------------|--|

Dictionary

■ Preloaded & Online Dictionaries

| | |
|---|---|
| Changing Font Size | 辞書 ☺ ➔ ☺ ➔ <i>Font Size</i> ➔ ● ➔ Select size ➔ ● |
| Looking up copied words in dictionaries | After copying text, 辞書 ☺ ➔ ☺ ➔ <i>Search by Copied Text</i> ➔ ● ➔ <i>Search</i> ➔ ● ➔ Select word, etc. ➔ ● |

| | |
|--|---|
| Deleting History & bookmarks | Start Here 辞書 ☺ ➔ ☺ ➔ <i>History List or Bookmark List</i> ➔ ● ➔ See below |
| | <i>One Word</i> Select word ➔ ☺ ➔ <i>Delete</i> ➔ ● ➔ <i>Yes</i> ➔ ● |
| Looking up scanned kanji in dictionaries | <i>All Words</i> ☺ ➔ <i>Delete All</i> ➔ ● ➔ Enter Handset Code ➔ ● ➔ <i>Yes</i> ➔ ● |
| | 辞書 ☺ ➔ ☺ ➔ <i>Kanji Grabber</i> ➔ ● ➔ <i>Frame kanji in Loupe</i> ➔ ● ➔ <i>Search</i> ➔ ● ➔ Select word, etc. ➔ ● ● Definition/translation window opens. |
| Looking up scanned text in dictionaries | 辞書 ☺ ➔ ☺ ➔ <i>Scan Text</i> ➔ ● ➔ <i>Frame text in center of Display</i> ➔ ● ➔ <i>Select line</i> ➔ ● ➔ <i>Search</i> ➔ ● ➔ Select word, etc. ➔ ● ● Definition/translation window opens. |
| ■ Preloaded Dictionaries | |
| Viewing dictionary information | 辞書 ☺ ➔ ☺ ➔ <i>Information</i> ➔ ● |
| ■ Online Dictionaries | |
| Updating dictionary list | 辞書 ☺ ➔ ☹ ➔ ネット辞書 ➔ ● ➔ ☺ ➔ <i>Update Dictionaries</i> ➔ ● ➔ <i>Yes</i> ➔ ● |
| Selecting dictionaries for use | 辞書 ☺ ➔ ☹ ➔ ネット辞書 ➔ ● ➔ ☺ ➔ <i>Edit Dict. List</i> ➔ ● ➔ Select dictionary ➔ ● (□) / (✓) ➔ ☹ |
| Selecting image download option | 辞書 ☺ ➔ ☹ ➔ ネット辞書 ➔ ● ➔ ☺ ➔ <i>Show Image</i> ➔ ● ➔ Select option ➔ ● ● For <i>Auto</i> , choose <i>Yes</i> or <i>No</i> and press ●. |



| | |
|-------------------------|---|
| Selecting search method | <p>辞書 ① ➡ ② ➡ ネット辞書 ➡ ③ ➡ Select pull-down menu ➡ ④ ➡ Select dictionary ➡ ⑤ ➡ ⑥ ➡ Set Search Method ➡ ⑦ ➡ Select option ➡ ⑧</p> <ul style="list-style-type: none"> Not available when すべて or unsupported dictionary is selected for online dictionary. |
| Selecting search area | <p>辞書 ① ➡ ② ➡ ネット辞書 ➡ ③ ➡ Select pull-down menu ➡ ④ ➡ Select dictionary ➡ ⑤ ➡ ⑥ ➡ Set Search Area ➡ ⑦ ➡ Select area ➡ ⑧</p> <ul style="list-style-type: none"> Not available when すべて or unsupported dictionary is selected for online dictionary. |
| Opening Help | <p>辞書 ① ➡ ② ➡ ネット辞書 ➡ ③ ➡ Select pull-down menu ➡ ④ ➡ Select dictionary ➡ ⑤ ➡ ⑥ ➡ Help ➡ ⑦ ➡ Yes ➡ ⑧</p> |

Phone Book

■ View Settings

| | |
|---------------------------------------|---|
| Changing view for entry search window | <p>Start Here ① ➡ Phone ➡ ② ➡ Ph.Book Settings ➡ ③ ➡ See below</p> <p>Portrait Orientation Vertical Display ➡ ④ ➡ List+Business Card ➡ ⑤</p> <p>Landscape Orientation Horizontal Display ➡ ⑥ ➡ Name+Email ➡ ⑦</p> |
|---------------------------------------|---|

| | |
|---|--|
| Assigning images to Phone Book entries for incoming transmissions | <p>Start Here ① ➡ Phone ➡ ② ➡ Add New Entry ➡ ③ ➡ Picture: ➡ ④ ➡ See below</p> <p>Assigning Images Assign Picture ➡ ⑤ ➡ Select image ➡ ⑥</p> <p>Capturing Images Take Picture ➡ ⑦ ➡ Frame image on Display ➡ ⑧ ➡ ⑨</p> |
| Hiding confirmation after calls to/from unsaved numbers | <p>⑩ ➡ Phone ➡ ⑪ ➡ Ph.Book Settings ➡ ⑫ ➡ New Number Prompt ➡ ⑬ ➡ Incoming Call or Outgoing Call ➡ ⑭ ➡ Off ➡ ⑮</p> |

■ Phone Book Entry

Press ① at the end to save entry. (At least a name, phone number or mail address must be entered.)

| | |
|--------------------------|---|
| Saving other information | <div>Start Here</div> <div>➡ Phone ➡ Add New Entry ➡</div> <div>➡ See below</div> |
| | <div>Address</div> <div>Address: ➡ Select item ➡</div> <div>Complete field ➡</div> |
| | <div>Office</div> <div>Office: ➡ Select item ➡ Enter text ➡</div> <div>➡</div> |
| | <div>Homepage</div> <div>Homepage: ➡ Enter URL ➡ Select type ➡</div> |
| | <div>Note</div> <div>Note: ➡ Enter text ➡</div> |
| | <div>Birthday</div> <div>Birthday: ➡ Enter date ➡</div> |
| | <div>Location Information</div> <div>Location Info.: ➡ Enter Location Information ➡</div> |



| | |
|--------------------------------|---|
| Changing illumination settings | <p>Start Here → Phone → Add New Entry → Select item, e.g., <i>Illumi.-Voice Call</i> → See below</p> <p>Enabling Illumination Switch On/Off → On or Link to Sound</p> <p>Changing Illumination Pattern <i>Illumi. Pattern</i> → Select pattern → Select color</p> <p>• Light color is unselectable for some patterns.</p> <p>Changing Key Illumination Pattern Key Pattern → Select pattern</p> <p>• Not effective when Switch On/Off is set to <i>Link to Sound</i>.</p> |
| | <p>Phone → Add New Entry → Select item, e.g., <i>Vibration-Message</i>: Switch On/Off → Select option → Vibration Pattern → Select pattern</p> |
| | Changing vibration pattern |

■ Editing Entries & Categories

| | |
|---------------------------------|---|
| Editing Phone Book entries | <p>Select entry → Edit → Select item → Edit</p> <p>• Edit Reading after editing names.</p> |
| Setting incoming mail ring time | <p>Select entry → Edit → Tone-New Message: → Duration → Enter time</p> <p>• Available for compatible ringtones.</p> |

| | |
|-------------------------|--|
| Renaming Categories | <p>Phone → Set Category → Select Category → Edit Name → Enter name</p> |
| Changing Category icons | <p>Phone → Set Category → Select Category → Change Icon → Select Pictogram</p> |
| Moving Categories | <p>Phone → Set Category → Select Category → Select target location</p> <p>• View for <i>By Category</i> Phone Book search changes accordingly.</p> |

■ Using Entries

| | |
|--|---|
| Messaging via Phone Book | <p>Start Here → Select entry → See below</p> <p>Phone Numbers Select phone number → Create Message → S! Mail or SMS → Complete message</p> <p>Mail Addresses Select mail address → Complete message</p> |
| | <p>Select entry → Select phone number → Deco. Call → Deco. Call File → Deco. Call Folder → Select file → Call Type → Voice Call or Video Call</p> <p>• When placing a Decoration Call for the first time, follow onscreen prompt.</p> |
| | <p>Select entry → Select phone number → Call S! Circle Talk → Set Connection status to <i>Online</i> first.</p> |
| Placing international calls via Phone Book | <p>Select entry → Select phone number → Int'l Call → Select country</p> |



| | |
|---|---|
| Using Location Information via Phone Book | → Select entry → → Settings → → Set to Destination → • Follow onscreen instructions. |
|---|---|

■ Managing Entries

| | |
|-----------------------------|---|
| Deleting Phone Book entries | One Entry → Select entry → Delete → → Yes → All Entries → Phone → Manage Entries → → Delete All → Select entry type → → Yes → Enter Handset Code → |
| Checking memory status | → Phone → Manage Entries → → Memory Status → |
| Copying Phone Book entries | One Entry (Handset → USIM Card) → Select entry → Manage Entries → → Copy Entry to USIM → → Yes → One Entry (USIM Card → Handset) → Ph.Book Settings → → Select Phone Book → → USIM Memory → → Select entry → Manage Entries → → Copy Entry to Phone → All Entries → Manage Entries → → Copy All → → Select method → → Yes → • If handset/USIM Card memory is low, some entries may not be copied. |

Editing Categories on USIM Card

| | |
|---|---|
| Start Here → Phone → → Set Category → → Change to USIM → → See below | Renaming Categories Select Category → → Edit Name → → Enter name → |
| Moving Categories Select Category → → Select target location → | Changing Icons Select Category → → Change Icon → → Select Pictogram → |
| Changing default storage media for new entries → Phone → Ph.Book Settings → → Save New Entry → → USIM Memory or Ask Each Time → | Switching reference Phone Book → Phone → Ph.Book Settings → → Select Phone Book → → USIM Memory or Both → |

■ Mode Settings

First, activate Double Number.

| | |
|--|--|
| Changing modes of all entries at once → Phone → Manage Entries → → Change Mode(All) → → Select mode → → Enter Handset Code → | Changing modes of multiple entries → Manage Entries → → Multiple Selection → → Select entry → (✓/□) → Change Mode → → Select mode → |
| Changing modes of entries by Category → Select Category → Manage Entries → → Change Mode(Category) → → Select mode → → Enter Handset Code → • Set search method to By Category first. | |



Customized Screen

? Customized Screen is not applied

- Some Customized Screens may not contain files for Wallpaper, System Graphics, ringtones or ringvideos; default settings apply for these functions.

Phone Book

? Assigned images do not appear for incoming transmissions

- Source files may be deleted or moved to Memory Card; reassign files.
- When using copy protected files, etc., confirm that source file license/usage period has not expired.
- Images do not appear if corresponding Phone Book entry is set to Secret.
- Images do not appear for incoming Decoration Calls including image/video.
- Images may not appear when another function is active, etc.

? Handset does not ring for incoming transmissions as set

- Source files may be deleted; reassign files.
- When using copy protected files, etc., confirm that source file license/usage period has not expired.
- Ringtone/ringvideo settings are disabled if corresponding Phone Book entry is set to Secret.
- Ringtones do not sound for incoming Decoration Calls with sound.
- Memory Card with source files may be removed; reinsert the card to restore settings.

? Cannot enter 16 characters for Category names

- Character entry limit for Category names may be lower depending on the USIM Card in use.

