

16

Handset Customization

Date & Time	16-2
Display & Illumination	16-3
Language.....	16-3
Image & Text.....	16-3
Display & Backlight.....	16-3
Standby Display.....	16-4
Collective Illumination.....	16-4
Key Backlight.....	16-4
Effect Illumination	16-4

Incoming Transmissions.....	16-5
Handset Response.....	16-5
Sounds	16-6
System Sounds	16-6
Additional Sound Settings	16-6
Connectivity	16-7
Network	16-7
IP Service	16-7
Reset.....	16-8
Restoring Default Settings.....	16-8





Date & Time Settings

Date & Time

Start Here

Settings ➔ In Sound/Display menu, Date & Time ➔

Setting the date and time	<i>Set Date/Time ➔ Enter the year ➔ Enter the month ➔ Enter the day ➔ Enter the time ➔</i>
Correcting Clock manually	<i>Time Correction ➔ Manual ➔ Yes ➔ Yes ➔</i>
Disabling auto Clock correction	<i>Time Correction ➔ Auto Corr. Setting ➔ Off ➔</i>
Setting auto Clock correction timing	<i>Time Correction ➔ Auto Corr. Setting ➔ On ➔ Select item ➔ (□/✓) ➔</i>
Activating Daylight Saving	<i>Daylight Saving ➔ On ➔</i>
Changing Time Zone	<i>Set Time Zone ➔ Select area ➔</i>
Adding custom time zone	<i>Set Time Zone ➔ Select area ➔ Enter city name ➔ + or - ➔ Enter time difference ➔</i>
Changing time format to 12 hour	<i>Time Format ➔ 12 Hour ➔</i>
Changing date format	<i>Date Format ➔ Select option ➔</i>
Starting the Calendar week on Monday	<i>Calendar Format ➔ Monday-Sunday ➔</i>

Display & Illumination Settings

Language

Start Here (●) ➔ **Settings** ➔ (●) ➔ Sound/Display menu

Switching interface between Japanese and English

Language or 言語選択 ➔ (●) ➔ *English or 日本語* ➔ (●)

Image & Text

Start Here (●) ➔ **Settings** ➔ (●) ➔ In Sound/Display menu, *Display* ➔ (●)

Showing preloaded images for incoming calls, etc.

System Graphics ➔ (●) ➔ Select item ➔ (●) ➔ *Preset Animation* (or *Pattern 1* to *Pattern 3*) ➔ (●)

Showing Data Folder images for incoming calls, etc.

System Graphics ➔ (●) ➔ Select item ➔ (●) ➔ Select folder ➔ (●) ➔ Select image ➔ (●) ➔ Specify image area ➔ (●)
• Some images may be usable without specifying image area.

Showing Customized Screen for incoming calls, etc.

System Graphics ➔ (●) ➔ Select item ➔ (●) ➔ *Customized Screen* ➔ (●) ➔ (●)
• Not available for *Power On* or *Power Off*.

Selecting image enhancement option for Standby and video playback

Vivid Mode ➔ (●) ➔ Select option ➔ (●)

Changing font of numbers entered in Standby

Dial Number ➔ (●) ➔ Select pattern ➔ (●)

Showing a message each time handset is powered on

Greeting Message ➔ (●) ➔ *Edit Message* ➔ (●) ➔ Enter message ➔ (●) ➔
Switch On/Off ➔ (●) ➔ *On* ➔ (●)

Hiding caller info in Viewer position

Caller Display ➔ (●) ➔ *Off* ➔ (●)

Display & Backlight

Start Here (●) ➔ **Settings** ➔ (●) ➔ In Sound/Display menu, *Display* ➔ (●)

Disabling display transition effects

Display Effects ➔ (●) ➔ *Off* ➔ (●)

Changing Display/key Backlight illumination time

Backlight ➔ (●) ➔ *Time Out* ➔ (●) ➔ Select time ➔ (●)

Changing Display Brightness

Backlight ➔ (●) ➔ *Brightness* ➔ (●) ➔ Adjust level ➔ (●)

Canceling/activating Light Sensor

Backlight ➔ (●) ➔ *Brightness* ➔ (●) ➔ (☒/✓) ➔ (●)

Changing inactivity time after which Display turns off

Display Saving ➔ (●) ➔ Select period ➔ (●)





Display & Illumination Settings 2

Standby Display

[Start Here](#) () ➔ **Settings** ➔ () ➔ In Sound/Display menu, **Display** ➔ () ➔ **Standby Display** ➔ ()

Changing Clock/Calendar	Clock/Calendar ➔ () ➔ Select type ➔ ()
Showing Network service provider name in Standby	Show Operator Name ➔ () ➔ On ➔ ()
Selecting Mobile Widget display option	Show Widget ➔ () ➔ Select option ➔ ()
Hiding Pedometer in Standby	Pedometer ➔ () ➔ Off ➔ ()

Collective Illumination

[Start Here](#) () ➔ **Settings** ➔ () ➔ In Sound/Display menu, **Sounds & Alerts** ➔ ()

Changing Separate illumination patterns at once	Set Illumination ➔ () ➔ Collective ➔ () ➔ Select theme ➔ () ➔ Yes or No ➔ ()
--	---

Key Backlight

[Start Here](#) () ➔ **Settings** ➔ () ➔ () **Phone/** ()

Disabling key Backlight illumination	Set Key Light ➔ () ➔ Off ➔ ()
--------------------------------------	---

Effect Illumination

[Start Here](#) () ➔ **Settings** ➔ () ➔ In Sound/Display menu, **Sounds & Alerts** ➔ ()

Setting illumination pattern by action	Set Illumination ➔ () ➔ Separate ➔ () ➔ Effect Illumination ➔ () ➔ Select action ➔ () ➔ Illumi. Pattern ➔ () ➔ Select pattern ➔ () ➔ Select color ➔ () • Light color is unselectable for some patterns.
Setting Key illumination pattern by action	Set Illumination ➔ () ➔ Separate ➔ () ➔ Effect Illumination ➔ () ➔ Select action ➔ () ➔ Key Pattern ➔ () ➔ Select pattern ➔ ()
Disabling illumination by action	Set Illumination ➔ () ➔ Separate ➔ () ➔ Effect Illumination ➔ () ➔ Select action ➔ () ➔ Switch On/Off ➔ () ➔ Off ➔ ()
Keeping Illumination Light on during calls	Set Illumination ➔ () ➔ Separate ➔ () ➔ Effect Illumination ➔ () ➔ Calling ➔ () ➔ Switch On/Off ➔ () ➔ Always On ➔ ()

Incoming Transmission Settings

Handset Response

Start Here **Settings** In Sound/Display menu, **Sounds & Alerts**

Changing ringtone volume	Volume Select item Adjust level
Selecting illumination option	Set Illumination Separate Event Illumination Select item Switch On/Off On, Link to Sound or Off
Changing Illumination Light patterns	Set Illumination Separate Event Illumination Select item Illumi. Pattern Select pattern Select color • Light color is unselectable for some patterns.
Changing Key Illumination patterns	Set Illumination Separate Event Illumination Select item Key Pattern Select pattern • Not effective when Switch On/Off is set to Link to Sound .
Enabling/disabling illumination for missed transmissions	Set Illumination Separate Status Illumination Select item Switch On/Off On or Off
Setting illumination pattern for missed transmissions	Set Illumination Separate Status Illumination Select item Illumi. Pattern Select pattern Select color • Light color is unselectable for some patterns. • After Information window opens, Illumination Light flashes for up to 24 hours, then goes out (to save battery power).
Answering calls with other keys	Any Key Answer On • Use - , , , , , , or in addition to .
Muting ringer with other keys	Any Key Answer Only Mute • Use - , , , , , , or in addition to .





Sound Settings

System Sounds

Start Here () ➔ **Settings** ➔ () ➔ In Sound/Display menu, **Sounds & Alerts** ➔ ()

Enabling Keypad Tones	System Sounds ➔ () ➔ Keypad Tones ➔ () ➔ Select tone ➔ ()
Changing S! Circle Talk tone	System Sounds ➔ () ➔ S! Circle Talk ➔ () ➔ Select tone ➔ ()
Changing other System Sounds	System Sounds ➔ () ➔ Select item ➔ () ➔ Tone or Sound ➔ () ➔ Select folder ➔ () ➔ Select tone/file ➔ () • For files with limited usage period, choose Yes and press ().
Disabling System Sounds	System Sounds ➔ () ➔ Select item ➔ () ➔ Tone or Sound ➔ () ➔ Off ➔ () • Not available for S! Circle Talk .
Changing System Sound duration	System Sounds ➔ () ➔ Select item ➔ () ➔ Duration ➔ () ➔ Select/enter time ➔ () • Not available for Keypad Tones or S! Circle Talk .
Changing System Sound volume	Volume ➔ () ➔ General Volume ➔ () ➔ Adjust level ➔ ()

Additional Sound Settings

Start Here () ➔ **Settings** ➔ () ➔ Sound/Display menu

Disabling Speaker when using Headphones	Ringer Output ➔ () ➔ Earphone ➔ ()
Activating Speaker surround	Sounds & Alerts ➔ () ➔ Surround ➔ () ➔ On ➔ ()

Connectivity Settings

Network

Start Here ➔ **Settings** ➔ **Network**

Selecting a Network manually	Select Network ➔ Manual ➔ Select Network
Adding preferred Networks	Select Network ➔ Set Preferred ➔ Select target location ➔ Insert ➔ Select Network
Adding preferred Networks to the end	Select Network ➔ Set Preferred ➔ Add to End ➔ Select Network
Deleting preferred Networks	Select Network ➔ Set Preferred ➔ Select Network ➔ Delete
Adding Networks	Select Network ➔ Add New Network ➔ Add ➔ Enter country code ➔ Enter Network code ➔ Enter name Select NW Type ➔ Select type • After selecting Add New Network and pressing ● , Network list appears if Network has already been added. To add more, press ● again and proceed.
Editing Networks	Select Network ➔ Add New Network ➔ Select Network ➔ Change ➔ Edit in the same manner as adding Networks
Deleting Networks	Select Network ➔ Add New Network ➔ Select Network ➔ Delete
Switching Network service between 3G and GSM manually	Select Service ➔ Manual ➔ Select service
Refreshing Network connection	Re-search Signal
Retrieving Network Information	Retrieve NW Info ➔ Yes
Checking Network status	Network Info
Editing connection names for mobile data communication	External Device ➔ Select name ➔ Edit
Clearing connection names for mobile data communication	External Device ➔ Reset ➔ Enter Handset Code ➔ Yes

IP Service

Start Here ➔ **Settings** ➔ **Phone/** ➔ **Locks**

Disabling IP Service	IP Service Setting ➔ Off ➔ Enter Handset Code • When Off , S! Friend's Status, S! Circle Talk, Decoration Call, S! Appli Notification Setting and Mobile Widget Notification Setting are disabled.
----------------------	---



Reset Settings

Restoring Default Settings

Start Here

Settings ➔ ● ➔ Phone/☞ ➔ Master Reset ➔ ●

Restoring default handset settings

Reset Settings ➔ ● ➔ Enter Administrator Code ➔ ● ➔ Yes ➔ ● ➔ Yes ➔ ●

- Some default settings may not be restored.

Clearing all Phone Book entries, Data Folder files, etc.

Reset All ➔ ● ➔ Enter Administrator Code ➔ ● ➔ Yes ➔ ● ➔ Yes ➔ ●

- Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keitai® service providers for details.)
- Files and records deleted by Reset All cannot be restored. Reset All deletes all downloaded S! Applications and Lifestyle-Applications.
- Handset Code and Administrator Code return to the default settings.

- A confirmation may appear before entering Administrator Code; end the current function to proceed.
- When Double Number is active, regardless of usage mode setting, Reset Settings restores all default settings (Double Number is canceled), and Reset All clears all user files.

