Emergency Calls

Call 110 (Police), 119 (Fire & Ambulance) or 118 (Coast Guard) even when some handset restrictions are active.

• Calls cannot be made in PIN/PIN2, PUK/PUK2 entry window.

Emergency Location Report

When an emergency call is made from handset, location is reported to first response agencies such as the police.

- Location information may be inaccurate due to location or signal conditions.
 Describe location or nearby landmarks.
- Base Station Positioning System is accurate within 100 meters to 10 kilometers. Location information from distant base stations may be inaccurate.
- Function available wherever system is installed by first response agencies.
- Dialing 184 before 110, 119 or 118, cancels location report.
 However, first responders may obtain location information for immediate and serious threats to life.
- Not available for international roaming.
- Requires no separate subscription or transmission fees.

Voice Calls

Making Voice Calls


- Enter number with area code →
 - To adjust Volume: 📵
- **7** to end call
- Call from Call Logs
- Make Calls from Phone Book
- $\rightarrow \bigcirc$ to select a tab \rightarrow Select an entry $\rightarrow \bigcirc$ \rightarrow Select a number
- Show/Hide Caller ID
- > Enter number $\rightarrow [\Sigma]$ [Menu] \rightarrow Notify caller ID \rightarrow OFF or ON
- To always show/hide Caller ID: Main Menu ➤ Settings ➤ Call Settings
 - ► Caller ID ► Activate ► ON, OFF or Network Set*
 - *Network Set Caller ID setting varies by subscription.

Answering Voice Calls

- 1 When a call is received,
 to talk
 - To adjust Volume: 💿
- **7** to end call

Video Calls

Video Call Window

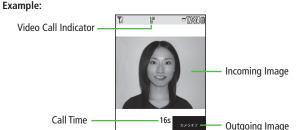

4.60 ≥ 40 %

t⊙ image

Hold



(a): Incoming/Outgoing Sound OK

(Gray): Incoming/
Outgoing Sound NA

: Incoming/Outgoing Image OK

: Incoming/Outgoing Imag

(Gray): Incoming/ Outgoing Image NA

: Video ON

🔌): Night mode

(1) : Speaker ON

: Alternative Image ON

(R): During Bluetooth® handsfree call

(Alternative Image/

Video Image)

• Display appearance may vary by settings/conditions.

Making Video Calls

1 Enter number with area code → [V.Call]

Alternative Image is sent.

- To send Video Image: 👜 [image]
- To adjust Volume: 📵
- 2 **a** to end call
- Call from Call Logs
- Make Calls from Phone Book
- > ② → ⑥ to select a tab → Select an entry → ③ → Highlight a number
 → [V.Call]

Answering Video Calls

- 1 When a video call is received, 🕜 to talk
 - To send Video Image: 🔯 [image]
 - To adjust Volume: 💿
- **7** to end call

International Calls

Calling Abroad from Japan

- No application required. See SoftBank Mobile Website: http://mb.softbank.jp/en/global_services/call/
- 1 Enter number
- 2 **Y**/[Menu] → Int'l dial assist Country/region code list appears.
- 3 Select a country/region
- 4 Voice Call

Video Call

[V. Call]

Enter Country/Region Code Directly

- > ① → Press and Hold ② for + (IDD Prefix) → Enter a country/region code → Enter number (omit first 0) → Voice Call: ✓/Video Call: ☑/V. Call)
- Do not omit leading **0** when calling Italy (country code: 39).

Global Roaming

 May require Global Roaming Service application. See SoftBank Mobile Website: http://mb.softbank.jp/en/global_services/global_roaming/

Example: When Roaming Dial Assistant is ON

- Roaming Dial Assistant (P.3-4) is **ON** and **Japan** by default.
 - | Voice Call Enter number → 🕜

Video Call

Enter number $\rightarrow \square[V. Call]$

Select an item

Item	Operation/Description	
Call to Japan*	Call Japan	
Call to set code*	Call a country/region set for <i>Roaming Dial Assistant</i>	
As is Call	Manually enter number to call Select when calling within the country/region	

^{*}First **0** is replaced by IDD Prefix and country/region code (e.g. **+81**). (When calling Italy, **+39** is added before first **0**.)

 Confirmation window appears the first time. Select NO to set Roaming Dial Assistant to OFF.

Note

IDD Prefix and country/region code can be manually entered in Step 1.
 Alternatively, save IDD Prefix and country/region code in Phone Book entries.

International Call Settings

From ▶ Main Menu ▶ Settings ▶ International Call

International Dial Assist Settings

>Int'l Dial Assist → Select an item

Item	Operation/Description	
Roaming Dial Assistant	Automatically inserts prefixes (IDD Prefix and country code) > ON or OFF (→ For ON, select a country/region)	
Country/Area Code	Save country/region codes > Highlight <not recorded=""> → ☑ [Edit] → Enter country/region name → Enter country/region code • To view an entry: Select a saved country/region • To delete: Highlight a country/region → ☑ [Menu] → Delete this or Delete all (→ For Delete all, enter Phone Password) → YES</not>	
IDD prefix setting	Edit IDD Prefix. IDD Prefix is set to 0046010 by default > [17] [Menu] → Edit → Edit IDD Prefix	

Network Mode

<Default> Automatic

> Select Network → Select an item

Item	Operation/Description	
Automatic	Handset automatically selects 3G network in Japan, and available network (3G or GSM) abroad	
Manual	Select an item 3G/GSM: 3G service area in Japan or 3G/GSM abroad. Handset selects an available network automatically. 3G: 3G service areas in Japan or abroad. GSM: GSM service areas abroad. Unavailable in Japan.	

• Automatic is recommended.

Select Operator

<Default> Auto

> Select Operator \rightarrow Select an item

Item	Operation/Description	
Auto	Select an operator automatically	
Manual	Select an operator manually > Select an operator ■ Operators with X are not available. ■ To view operator list: [☑ [Update]	
Network Re-search	 Search for available networks When <i>Auto</i>, handset selects an available operator automatically. When <i>Manual</i>, operator list appears. 	

Answer Phone

- When Answer Phone is active, □ 5 (Voice Call) or □ 2 (Video Call) appears in Standby (Voice Call icon takes priority).
- Unavailable when: handset is off or in Offline Mode; OUT appears. Use Voicemail (P.3-7).

Activating/Canceling Answer Phone

<Default> OFF

- 1 Press and Hold @UT/©
 - To toggle setting, repeat operation.
- Redirect a Call to Answer Phone
- > **□**[Ans. Ph]

 
Note

 When limit is reached, new messages cannot be recorded even if Answer Phone is active. Delete old messages (☐ Right).

Playing Messages

When a new message is recorded, Information Window opens in Standby.

1 In Information Window, *Have Answer Ph Msq*



2 Select a message

Deleting Messages

Main Menu ► Tools ► Sound Recorders ► Voice Call Data or Video Call Data

- 1 (Highlight a message →) **Y**/[Menu] → Select an item
-) YES
- Delete a message during playback
- > During playback, **Y**?[Erase] → YES

Optional Services

• For details, see SoftBank Mobile Website: http://mb.softbank.jp/en/

Call Forwarding

Forward unanswerable calls to a preset number when handset is off, out-of-range, etc.

• Call Forwarding and Voicemail cannot be active simultaneously.

Activating Call Forwarding

Main Menu ► Settings ► Call Settings ► Voicemail/Call Fwding

- **1** Call Forwarding ON → Select a type → Enter destination number
 - 💿 to select a number from Phone Book.
- Select an item

Item	Operation/Description	
Ringer ON	Forward missed calls > Select a ring time → YES	
Ringer OFF	Forward all calls without ringing/vibrating > YES	

- Check Call Forwarding Status
- > In Step 1, Get Status
- Cancel Call Forwarding

> In Step 1, **Deactivate All** → **YES**

Note

• Toll free/international numbers cannot be saved as forwarding number.

Voicemail

Unanswered calls are forwarded to Voicemail Center as set or when handset is off, out-of-range, engaged, etc.

- Call Forwarding and Voicemail cannot be active simultaneously.
- Voicemail is not available for Video Calls.

Activating Voicemail

Main Menu ► Settings ► Call Settings ► Voicemail/Call Fwding

- 1 Voicemail ON
- Select an item

Item	Operation/Description	
Ringer ON	Forward missed calls Select a ring time → YES	
Ringer OFF	Forward all calls without ringing/vibrating > YES	

Check Voicemail Status

> In Step 1, Get Status

Cancel Voicemail

> In Step 1, Deactivate All → YES

Playing Voicemail Messages

Information Window and papear in Standby when new messages are recorded.

¶ In Information Window, Voicemail → YES



Follow voice guidance.

- When Information Window does not appear,
 - Main Menu ► Settings ► Call Settings
 - ► Voicemail/Call Fwding
 - ▶ Play Voicemail ▶ YES.

View Details

View callers' numbers and date/time of messages before playback.

- > (o) → Voice Mail Notif. → (a) [191416]

Missed Call Notification

When Missed Call Notification function is active, Information Window appears for calls missed while handset was off, out-of range, engaged etc.

Available only when Voicemail is active.

Main Menu ► Settings ► Call Settings ► Missed Call Notifi.

1 YES

Follow voice guidance.

Call Waiting

Place the current call on hold and answer a second, or alternate between calls.

Separate subscription is required for this service.

Activating/Canceling Call Waiting

Main Menu ► Settings ► Call Settings ► Call Waiting

1 Activate or Deactivate → YES

Check Call Waiting Status

> In Step 1, **Get Status**

Answering Second Call

When tone sounds,

- Press to alternate between calls.
- When a second call comes in while first call is on hold, hold status is canceled and first call resumes.

Reject Second Call

> When tone sounds, [Y₂][Menu] → Call Rejection

Note

- When Voicemail or Call Forwarding is set to Ringer ON while Call Waiting is active, unanswered calls are transferred to Voicemail Center or the forwarding number.
- When Voicemail or Call Forwarding is set to Ringer OFF, Call Waiting is disabled.

Call Barring

Restrict incoming/outgoing Voice Calls, Video Calls or SMS messages.

- Bar All Outgoing and Bar All Incoming are not available when Call Forwarding or Voicemail is active. (Call Forwarding or Voicemail takes priority.)
- Emergency numbers (110, 119, 118) are dialable even while Call Barring for outgoing calls is active.

Activating/Canceling Call Barring

Main Menu ► Settings ► Call Settings ► Call Barring

Select an item

Item	Operation/Description
Bar All Outgoing	Restrict all non-emergency calls
Bar All Int'l	Restrict all international calls
Bar Int'l	Restrict all international calls except to Japan
Bar All Incoming	Reject all calls
Bar All Roaming	Reject calls when outside Japan

- 2 Activate or Deactivate → YES → Enter Center Access Code (Security Code)
- Check Call Barring Status
- > After Step 1, *Get Status*
- Cancel All Call Barring
- > In Step 1, *Cancel All Barring* → Enter Center Access Code (Security Code)

Phone Book

Saving to Phone Book

Creating New Entries

1 Press and Hold ② → Enter Last name → Enter First name → Select an item → Enter information → ☑ [Finish]

Saving Numbers from Call Logs

- 2 New Entry

New → Enter other details

Add to Existing Entry

Add → Select an entry → Enter other details

- When saving to USIM Card, Overwrite appears instead of Add.
- **3 □**[Finish] (→ *YES*)

Note

 Press [Y] [Menu] from any function; information is savable if Add to Phone Book appears.

From message window, *Add Address*From photo list/photos, *Set display* → *Phone Book*

Changing Save Settings

Main Menu ▶ Phone ▶ Settings ▶ Save Settings

1 Phone, USIM or Ask Every Time

Managing Phone Book

Editing Phone Book Entries

Delete Phone Book Entries

> Q → Highlight an entry → Y [Menu] → Delete phone book → Select an item → Follow steps for selected item

Phone Book Memory Status

Main Menu ▶ Phone ▶ Memory Status