

Internal Antenna

X02HT transmits via Internal Antenna.

Do not cover Internal Antenna area.

Doing so may inhibit transmissions.

