

# Handset Security



<b>Security Functions</b> .....	<b>9-2</b>
<b>Changing Phone Password</b> .....	<b>9-3</b>
Changing Phone Password .....	9-3
Changing PIN/PIN2 .....	9-3
<b>Lock</b> .....	<b>9-3</b>
Phone Lock .....	9-3
Auto Keypad Lock .....	9-4
Password Lock .....	9-4
USIM Lock .....	9-4
PIN Certification .....	9-4
<b>Function Lock</b> .....	<b>9-5</b>
Application Lock .....	9-5
Secret Mode .....	9-5
Secret Data Folder .....	9-6
Mobile Tracker .....	9-6
<b>Restoring Default Settings</b> .....	<b>9-7</b>
Clearing Phone Memory .....	9-7
Resetting Settings .....	9-7
All Reset .....	9-7

## Security Functions

Handset supports various security functions for your safety.

### Locking & Restricting Handset Operations

Lock handset in the following procedure. Handset operations cannot be executed while locked.

- Password



Phone Lock, Password lock, USIM lock are available (P.9-3).

### Application Lock

Activate to require Phone Password entry to use Phonebook, Messaging, or other privacy related functions.



### Restoring Default Settings

Clear Phonebook entries; restore function settings to defaults.


## Changing Phone Password

Handset uses two kinds of security codes; Phone Password and PIN/PIN2.

### Changing Phone Password

By default, Phone Password is set to "9999".

- 1 → *Settings* → *Security* → *Change password*
- 2 Enter current Phone Password → (OK)

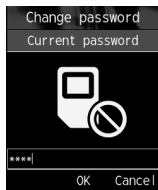

- 3 Enter new Phone Password (4 to 8 digits) → (OK)
- 4 Enter new Phone Password again → (OK)

## Changing PIN/PIN2

- 1 → *Settings* → *Security* → *Change PIN or Change PIN2*
  - Set *PIN certification* to *On* to enable PIN or PIN2 codes ( P.9-4).
- 2 Enter current PIN or PIN2 → (OK)
- 3 Enter new PIN or PIN2 (4 to 8 digits) → (OK)
- 4 Enter new PIN or PIN2 again (4 to 8 digits) → (OK)

### Advanced

#### Settings

- Change PIN ( P.12-15)
- Change PIN2 ( P.12-15)
- Change Phone Password ( P.12-15)

## Lock

Following lock methods are available.

- *Phone lock*
- *Auto keypad lock*
- *Password lock*
- *PIN certification*
- *USIM lock*
- *Secure Remote Lock*

### Phone Lock


Activate this function to require Phone Password entry each time handset is powered on.

- 1 → *Settings* → *Security* → *Phone lock*
- 2 *On or Off*
- 3 Enter Phone Password → (OK)

- If set to *On*, no operation including receiving calls can be performed when handset powers on until Phone Password is entered.

## Auto Keypad Lock


If set to **On**, **Auto lock** is automatically activated when Display is turned off.

1  → **Settings** → **Phone settings** → **Auto keypad lock**


2 **On or Off**

## Password Lock

After this function is activated, Phone Password window appears when any key is pressed in Standby. Enter Phone Password to cancel.

1  → **Settings** → **Security** → **Password lock**

2 **On or Off**

3 **Enter Phone Password** →  (OK)

- Even if Password lock is set, some operations such as receiving calls can be performed.
- Upon Password Lock activation, Standby reappears. Press any key to display Phone Password entry window. Enter Phone Password to unlock, **Password lock** is automatically set to **Off**.

## USIM Lock

Activate this function to require USIM Password entry to use handset with a different USIM Card.

1  → **Settings** → **Security** → **USIM lock**

2 **On or Off**

3 **Enter USIM password (4 to 8 digits)** →  (OK)

- To set to **On**, enter USIM password (4 to 8 digits) again and press  (OK).


• USIM Password is dedicated to USIM Card authentication. If USIM Password matches, another USIM Card can be used in handset. USIM Password can be changed each time **USIM lock** is set to **On**.

- If you forget USIM Password, insert USIM Card with **USIM lock** set to **On** and reset all settings (➔P.9-7).

## PIN Certification

PINs are security codes for USIM Card. For details on USIM Card, see "USIM Card" (➔P.1-5). To activate PIN certification each time the power is turned on, set this function to **On**.

### Setting

1  → **Settings** → **Security** → **PIN certification**

2 **On or Off**

3 **Enter PIN** →  (OK)

### Canceling

If PIN or PIN2 is incorrectly entered three consecutive times, PIN lock or PIN2 lock is activated to restrict handset operations. To cancel PIN lock or PIN2 lock, perform following operations.

1 **In PUK Code entry window, enter PUK Code** →  (OK)

2 **Enter new PIN or PIN2 (4 to 8 digits)** →  (OK)

3 **Enter new PIN or PIN2 again (4 to 8 digits)** →  (OK)

#### Note

- For more information about PUK and PUK2, contact SoftBank Mobile Customer Center, General Information (☎P.13-22).
- Entering incorrect PUK Code 10 consecutive times locks USIM Card (turning handset off does not reset the count).
- Once locked, USIM Card cannot be unlocked. Contact SoftBank Mobile Customer Center, General Information (☎P.13-22).

#### Advanced




##### Settings

- Activating or cancel Auto keypad lock (☞P.12-14)
- Activate or cancel Phone Lock (☞P.12-15)
- Activate or cancel Password Lock (☞P.12-15)
- Activate or cancel USIM Lock (☞P.12-15)
- Activate or cancel PIN Certification (☞P.12-15)

## Function Lock



### Application Lock

Activate this function to require Phone Password entry to open Phonebook, Calendar/Notepad/Tasks, Messaging, Call log, or Data Folder.

- 1  → *Settings* → *Security* → *Application lock*
- 2 **Check functions to lock** →  (Save)
- 3 **Enter Phone Password** →  (OK)

## Secret Mode

Select *Hide* to activate this function and hide Secret Phonebook entries, Messaging folders, Calendar schedules, or Tasks.

- 1  → *Settings* → *Security* → *Secret mode*
- 2 **Enter Phone Password** →  (OK)
- 3 *Show or Hide*

- Powering off handset then back on activates Secret mode.

## Secret Data Folder

Activate **Secret mode** to see additional Secret folders within **Data Folder**.

- 1 → **Settings** → **Security** → **Secret data folder**
- 2 **Enter Phone Password** → (OK)
- 3 **Show or Hide**

• Powering off handset then back on activates **Secret Data Folder**.

## Mobile Tracker

Activate this function to send SMS notification to a specified address when a different USIM Card is inserted. Specify up to 2 addresses.

- 1 → **Settings** → **Security** → **Mobile tracker**
- 2 **Enter Phone Password** → (OK)
- 3 **Select Activation field** → **On**
- 4 **Select Recipients field**
- 5 **Select To field** → **Enter address** → (**Save**)
  - To enter an address from Phonebook, highlight To field → → **Phonebook** → Search Phonebook and select an entry (ⓂP.2-17) → Select a phone number.
- 6 **Select Sender field** → **Enter sender name**
- 7 (**Save**) → **View entered content**
- 8 (**Agree**)
  - To disagree with displayed message, press (Reject).

• When a different USIM is inserted, SMS notification is sent to the specified address upon handset activation. Nothing appears on handset whose USIM is replaced. If Phone Password is incorrectly entered three consecutive times when trying to set Mobile Tracker, SMS notification is also sent.

• To delete a recipient address, press and select **Delete** in Step 5.

### Advanced




#### Settings

- Activate or cancel Application Lock (ⓂP.12-15)
- Activate or cancel Secret mode (ⓂP.12-15)
- Create or cancel Secret folders in Data Folder (ⓂP.12-15)
- Activate Mobile Tracker (ⓂP.12-16)

## Restoring Default Settings

### Clearing Phone Memory



Clear Data Folder, Messaging, handset Phonebook, Calendar/Notepad/Tasks, or User's dictionary. Alternatively, clear all handset files at once.

- 1  → **Settings** → **Memory settings** → **Phone memory** → **Clear phone memory**
- 2 **Check items to delete** →  (Delete)
- 3 **Enter Phone Password** →  (OK) → **Yes**

### Resetting Settings



Clear saved contents/settings regarding Settings and **Alarm** in **Tools**; then restore default settings. The following settings are not affected.

Item	Unaffected Settings
Call settings	<i>Voice mail On</i> settings <i>Call forwarding On</i> settings <i>Call waiting</i> settings <i>Call barring</i> settings <i>Edit Black list</i> contents
Phonebook	Entry details, <i>Group settings</i>
Security	<i>USIM lock</i> , <i>PIN certification</i> , <i>Change PIN</i> , <i>Change PIN2</i>
Calendar	<i>Calendar</i> settings

- 1  → **Settings** → **Security** → **Reset** → **Reset settings**
- 2 **Enter Phone Password** →  (OK) → **Yes**
  - Handset restarts after choosing **Yes**.


 
### All Reset

Restore handset to defaults and delete Phonebook (Phone), Call log (Dialed/Received), Messages, and Data Folder contents/settings. However, preinstalled files are not deleted.

- 1  → **Settings** → **Security** → **Reset** → **All reset**
- 2 **Enter Phone Password** →  (OK) → **Yes**
  - Handset restarts after choosing **Yes**.

#### Advanced

##### Settings

- Restore handset to defaults ( P.12-15)
- Restore Settings to default values ( P.12-15)

