

# Security



<b>PIN Settings</b> .....	<b>4-2</b>
Setting PIN1 Entry .....	4-2
Changing PIN1/PIN2 .....	4-2
<b>Prohibiting Unauthorized Handset Use</b> .....	<b>4-3</b>
Dial Lock .....	4-3
Original Lock .....	4-3
Disabling Keypad .....	4-4
Secure Remote Lock .....	4-4
<b>Prohibiting Outgoing/Incoming Calls</b> .....	<b>4-5</b>
Rejecting Calls without Caller ID .....	4-5
Rejecting Calls from Unsaved Numbers .....	4-5
Delaying Ringtone .....	4-5
Emission OFF Mode .....	4-5
<b>Secret Modes</b> .....	<b>4-6</b>
Secret Mode & Secret Data Only Mode .....	4-6
Hiding Handset Data.....	4-6

## 4



## Setting PIN1 Entry

Set to require PIN1 entry each time handset is turned on.

- 1 ⇒ **Settings** ⇒ ⇒ **Security**  
⇒ ⇒ **PIN setting** ⇒
- 2 Enter Security Code ⇒
- 3 **PIN1 code entry set** ⇒ ⇒ **ON**  
⇒ ⇒ Enter PIN1 ⇒

## Changing PIN1/PIN2

● *PIN1 code entry set* must be set to *ON* before changing PIN1.

- 1 ⇒ **Settings** ⇒ ⇒ **Security**  
⇒ ⇒ **PIN setting** ⇒
- 2 Enter Security Code ⇒
- 3 **Change PIN1 code** or **Change PIN2 code** ⇒
- 4 Enter current PIN1/PIN2 ⇒
- 5 Enter new PIN1/PIN2 ⇒ ⇒  
Enter new PIN1/PIN2 again for confirmation ⇒



# Prohibiting Unauthorized Handset Use

## Dial Lock

Prevent others from operating handset.

- 1 ⇒ **Settings** ⇒ ⇒ **Security** ⇒ ⇒ **Function Lock** ⇒
- 2 **Enter Security Code** ⇒
- 3 **Dial lock** ⇒

### Tip

- The following operations are possible even when Dial Lock is activated:
  - Power on/off
  - Calling emergency numbers 110, 119 and 118
  - Answering incoming voice/video calls

## Canceling Dial Lock

- 1 **Enter Security Code** ⇒   
If incorrect Security Code is entered, press and enter correct Security Code.

### Tip

- If Security Code is incorrectly entered five times, handset powers off. Turn handset power on and enter correct Security Code.


## Original Lock

Prevent others from accessing handset functions/data (e.g. Phone Book, Mail, etc). Select from three locks (1, 2 or 3) and customize as required.

- For IC Card Lock and Call Remote Lock, see P. 10-3 and P. 10-4.

## Activating Original Lock

- 1 ⇒ **Settings** ⇒ ⇒ **Security** ⇒ ⇒ **Function Lock** ⇒
- 2 **Enter Security Code** ⇒

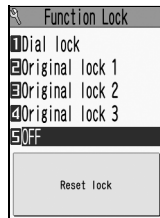

Function Lock Window

- 3 **Select an Original Lock** ⇒   
Functions/data specified under the selected lock type are locked.

## Tip

- To edit title: [Function Lock] window ⇒ Select an Original Lock ⇒ ⇒ **Edit title** ⇒ ⇒ Edit title ⇒

## When Original Lock is Set

Security Code entry is requested when accessing a locked function or data. Enter Security Code to unlock and access function/data. Setting returns when handset returns to Standby.

### Note

- *Dial/sending mail and Incoming/Mail disp.* cannot be unlocked temporarily.



# Prohibiting Unauthorized Handset Use

## Customizing Original Lock

Set lock per function, group or category.

Some functions/groups are locked.

All functions in Group/Category are locked.

## Customize by Function/Data

**1** [Function Lock] window  $\Rightarrow$  Select an Original Lock  $\Rightarrow$

**2** Select a category  $\Rightarrow$  ( $\Rightarrow$  Select a group  $\Rightarrow$  )

**3** Select an item  $\Rightarrow$

Checked items are locked. To uncheck an item, select the item and press .

■ To Select All Functions  
 $\Rightarrow$   $\Rightarrow$  Select all  $\Rightarrow$

■ To Deselect All Functions  
 $\Rightarrow$   $\Rightarrow$  Release all  $\Rightarrow$

**4** (twice) ( $\Rightarrow$  )

## Customize by Category or Group

**1** [Function Lock] window  $\Rightarrow$  Select an Original Lock  $\Rightarrow$

**2** Select a category ( $\Rightarrow$   $\Rightarrow$  Select a group)

**3**  $\Rightarrow$  Select  $\Rightarrow$

To deselect, press , select **Release** and then press .

■ To Select Lock for Category or Group  
 $\Rightarrow$   $\Rightarrow$  Select all  $\Rightarrow$

■ To Cancel Lock for Category or Group  
 $\Rightarrow$   $\Rightarrow$  Release all  $\Rightarrow$

**4** ( $\Rightarrow$  )

## Disabling Keypad

Set Keypad Lock to automatically lock handset keys when handset is closed or when handset is not operated for a certain period of time.

## Setting Keypad Lock

**1**  $\Rightarrow$  Settings  $\Rightarrow$   $\Rightarrow$  Security  $\Rightarrow$   $\Rightarrow$  Keypad lock  $\Rightarrow$

**2** Enter Security Code  $\Rightarrow$   $\Rightarrow$

▶ To Lock When Handset Closed After folded  $\Rightarrow$   $\Rightarrow$  ON  $\Rightarrow$

▶ To Lock After Handset Closed a Certain Time

Timer  $\Rightarrow$   $\Rightarrow$  Select time until lock activates  $\Rightarrow$

**3**

## When Keypad Lock is Set

All key operations are disabled, except for answering incoming calls and turning power on/off.

appears at bottom of Display when key operation is available in Keypad Lock.

### Tip

- Emergency numbers 110, 119 and 118 are available even when *Keypad lock* is set.

## Temporarily Unlocking Keypad Lock

**1** When Keypad Lock is set  $\Rightarrow$  Enter Security Code  $\Rightarrow$

## Secure Remote Lock

If your handset is lost, lock handset functions remotely from a PC or other mobile phones. All key operations are disabled except Power Key. For details, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>), or access My SoftBank from your handset:  $\Rightarrow$  メニューリスト (Menu List)  $\Rightarrow$   $\Rightarrow$  **My SoftBank**  $\Rightarrow$



## Rejecting Calls without Caller ID

Incoming calls from hidden and/or unidentified numbers can be rejected.

- 1 ⇒ **Settings** ⇒ ⇒ **Security** ⇒ ⇒
- 2 Enter Security Code ⇒
- 3 **Unknown, Payphone or User unset** ⇒
- 4 **Reject** ⇒

### Tip

- To allow incoming calls, after step 3: **Accept** ⇒ ⇒ **Select ring tone** or **Select calling disp.** ⇒ ⇒ **Select type** ⇒ ⇒ **Select a folder** ⇒ ⇒ **Select a ringtone or image** ⇒

## Rejecting Calls from Unsaved Numbers

- 1 ⇒ **Settings** ⇒ ⇒ **Security** ⇒ ⇒
- 2 Enter Security Code ⇒
- 3 **Reject** ⇒

### Note

- This procedure is unavailable when *Set mute seconds* under *Ring time (sec.)* is set to *ON* (P. 4-5).

### Tip

- To allow incoming calls, after step 2: **Accept** ⇒

## Delaying Ringtone

Delay ringtone, for callers not saved in Phone Book (including Secret Phone Book). In addition, set *Missed calls display* to *Not display* so missed calls with a short ring time do not appear in Received Calls. This can prevent you from accidentally returning calls from nuisance calls.

- This procedure is unavailable when *Reject unknown* is set to *Reject*.

- 1 ⇒ **Phone** ⇒ ⇒ **Check Phone setting** ⇒ ⇒ **Other settings** ⇒ ⇒ **Ring time (sec.)** ⇒
- 2 **Set mute seconds** ⇒ ⇒ **ON** ⇒ ⇒ Enter time before ringtone plays

- 3 **Missed calls display** ⇒ ⇒ **Display or Not display** ⇒

### Tip

- Ringing starts in zero seconds when *Set mute seconds* is *OFF*.

## Emission OFF Mode

The following are prohibited in Emission OFF Mode:

- Incoming/Outgoing Calls
- Incoming/Outgoing Messages
- Yahoo! Keitai Access

- 1 ⇒ **Settings** ⇒ ⇒ **Security** ⇒ ⇒ **Emission OFF Mode** ⇒ ⇒ **YES** ⇒

Repeat procedure to cancel Emission OFF Mode.

### Tip

- Emergency numbers (110, 119 and 118) are available even in Emission OFF Mode.



## Secret Mode & Secret Data Only Mode

Activate Secret Mode/Secret Data Only Mode to view secret Phone Book entries, secret Schedule events and secret files.

Secret Mode: View all data and secret data. Secret Data Only Mode: Only secret data is available for Phone Book and Schedule, although all data and secret data can be viewed for images, mail, and bookmarks.

### Activating Secret Mode & Secret Data Only Mode

- 1 ⇒ **Settings** ⇒ ⇒ **Security** ⇒ ⇒ **Secret mode or Secret data only mode** ⇒
- 2 Enter Security Code ⇒

### Canceling Secret Mode & Secret Data Only Mode

- 1

#### Tip

- Making or receiving a call cancels Secret Mode/Secret Data Only Mode.

## Hiding Handset Data

Files stored in Secret Folders are accessible only when Secret Mode or Secret Data Only Mode is activated.

- Storable file types: Images, videos, received and sent messages and bookmarks (Yahoo! Keitai and PC Browser).
- Data saved on memory card or USIM Card cannot be stored in Secret Folders.
- Each Secret Folder of Data Folder has a fixed storage capacity as follows:
  - My Picture: Approx. 2 MB
  - Videos: Approx. 10 MB

### Moving Data to Secret Folders

- 1 Set handset to Secret Mode or Secret Data Only Mode
- 2 From a folder, select an item ⇒ ⇒ **Keep in secret** ⇒

### Moving Data from Secret Folders

- 1 Set handset to Secret Mode or Secret Data Only Mode
- 2 In a folder list ⇒ **Secret** ⇒
- 3 Select an item ⇒ ⇒ **Put out** ⇒
- 4 Select a destination folder ⇒

#### Tip

- Functions available with Secret Folder data are limited.