

Customization



Clock, Display & Sounds	13-2
Phone Book & Calls.....	13-12
Mail.....	13-15
Internet.....	13-18
TV	13-21
Camera	13-23
Player & S! Appli.....	13-24
Other Settings.....	13-25

13




Clock, Display & Sounds

Clock

Start Here  ⇒ **Settings** ⇒ ● ⇒ **Display** ⇒ ● ⇒
Stand-by display ⇒ ● ⇒ **Clock display**

Hide Clock	⇒ Clock display ⇒ ● ⇒ Display ⇒ ● ⇒ OFF ⇒ ●
Clock Size	⇒ Clock display ⇒ ● ⇒ Size ⇒ ● ⇒ Select a size ⇒ ●
Clock Color	⇒ Clock display ⇒ ● ⇒ Color ⇒ ● ⇒ Black or White ⇒ ●
Time Zone (Sub Clock)	⇒ World clock display ⇒ ● ⇒ display method ⇒ ● ⇒ Always ⇒ ● (⇒ YES ⇒ ●) ⇒ Select a time zone ⇒ ●
Hide Sub Clock	⇒ World clock display ⇒ ● ⇒ display method ⇒ ● ⇒ OFF ⇒ ●
Summer Time (Sub Clock)	⇒ World clock display ⇒ ● ⇒ Summer time ⇒ ● ⇒ ON ⇒ ●

Start Here  ⇒ **Settings** ⇒ ● ⇒ **Other settings** ⇒ ●
 ⇒ **Set main time** ⇒ ●

Set Auto Time Adjustment	⇒ Time Adjustment ⇒ ● ⇒ Auto ⇒ ● ⇒ Select a time zone ⇒ ● • Press  to change city/area name in Time Zone Selection field.
Manually Adjust Time	⇒ Time Adjustment ⇒ ● ⇒ Manual(Date time set) ⇒ ● ⇒ Select a time zone ⇒ ● ⇒ Enter date and time ⇒ ●
Summer Time	⇒ Summer time ⇒ ● ⇒ ON ⇒ ●

Alarm

Start Here  ⇒ **Settings** ⇒ ● ⇒ **Other settings** ⇒ ●

Set Priority at Alarm Notification Time	⇒ Alarm Setting ⇒ ● ⇒ Operation preferred or Alarm preferred ⇒ ●
Change Alarm Tone	⇒ Clock Alarm Tone set ⇒ ● ⇒ Select an item ⇒ ● ⇒ Set an alarm tone



Clock, Display & Sounds

Auto Power On/Off

Set Auto Power On/Off*	<p>MENU ⇒ Settings ⇒ ● ⇒ Other settings ⇒ ● ⇒ Auto power ON or Auto power OFF ⇒ ● ⇒ ON ⇒ ● ⇒ Enter time ⇒ ● ⇒ 1 time or Daily ⇒ ●</p>
------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

* When near high precision electronic devices or devices using weak signals, or in areas where handset use is forbidden (aboard aircraft, in hospitals, etc.), set **Auto power ON** to **OFF** and turn handset power off.

Style Mode Settings

Start Here **MENU** ⇒ **Settings** ⇒ ● ⇒ **Display** ⇒ ● ⇒ **Style Mode Setting** ⇒ ●

Set Display Design Collectively	⇒ Select a style ⇒ ● ⇒ YES ⇒ ● (⇒ YES or NO ⇒ ●)
Check Default Style Mode Settings	<p>⇒ Select a style ⇒ </p> <ul style="list-style-type: none"> Details of some items can be checked by selecting an item and pressing .
Edit Title of a Style	⇒ Select a style ⇒ ⇒ Edit title ⇒ ● ⇒ Edit title ⇒ ●
Save Current Style Mode Settings as Favorite	<p>⇒ お気に入り (Favorites) ⇒ ⇒ ⇒ Take Setting info ⇒ ● ⇒ YES ⇒ ●</p> <ul style="list-style-type: none"> The current style mode settings can later be recalled collectively from お気に入り when they are changed.

Change Each Item for Favorites	⇒ お気に入り (Favorites) ⇒ ⇒ Select an item ⇒ ● ⇒ Set an image
Clear All Favorite Settings	⇒ お気に入り (Favorites) ⇒ ⇒ Reset Setting info ⇒ ● ⇒ YES ⇒ ●

Display Settings

Start Here **MENU** ⇒ **Settings** ⇒ ● ⇒ **Display** ⇒ ●

Wallpaper	<p>⇒ Stand-by display ⇒ ● ⇒ Stand-by display ⇒ ● ⇒ My Picture or Videos ⇒ ● ⇒ Set an image/video (⇒ Select a layout ⇒ ● (twice))</p>
Show Calendar in Standby	<p>⇒ Stand-by display ⇒ ● ⇒ Stand-by display ⇒ ● ⇒ Calendar ⇒ ● ⇒ Background ⇒ ● ⇒ Set an image ⇒ Select a layout ⇒ ● (twice)</p> <ul style="list-style-type: none"> Select No background if you do not want any image in the background of the calendar. Press ●, use to select the calendar and press ● to operate it. Use to switch to the previous/next month. Press ● to activate Schedule.



Clock, Display & Sounds

Slideshow	⇒ <i>Stand-by display</i> ⇒ ● ⇒ <i>Stand-by display</i> ⇒ ● ⇒ <i>Random display</i> ⇒ ● ⇒ Select a folder ⇒ ● ⇒ Select a layout ⇒ ● ● • Images switch at random each time handset is opened or returns to Standby.
Set a Wake-up Image	⇒ <i>Stand-by display</i> ⇒ ● ⇒ <i>Wake-up display</i> ⇒ ● ⇒ <i>My Picture</i> ⇒ ● ⇒ Set an image
Set a Wake-up Message	⇒ <i>Stand-by display</i> ⇒ ● ⇒ <i>Wake-up display</i> ⇒ ● ⇒ <i>Message</i> ⇒ ● ⇒ Enter message ⇒ ●
Set an Outgoing Call/Message Image	⇒ <i>Dialing/Calling disp.</i> ⇒ ● ⇒ <i>Dialing, Video Call Dialing or Mail sending</i> ⇒ ● ⇒ Set an image
Set Image or Video for Incoming Call/Message	⇒ <i>Dialing/Calling disp.</i> ⇒ ● ⇒ <i>Calling, Video Call Calling or Mail receiving</i> ⇒ ● (⇒ <i>My Picture</i> or <i>Videos</i> ⇒ ●) ⇒ Set an image/video
Set Image for New Message/Received Result Window	⇒ <i>Dialing/Calling disp.</i> ⇒ ● ⇒ <i>Retrieve New or Mail rec'd result</i> ⇒ ● ⇒ Set an image
Display Color Scheme	⇒ <i>Color theme/Icon</i> ⇒ ● ⇒ <i>Color theme</i> ⇒ ● ⇒ Select a color ⇒ ●


Battery Level Indicator/Signal Strength Indicator Design	⇒ <i>Color theme/Icon</i> ⇒ ● ⇒ <i>Battery icon</i> or <i>Antenna icon</i> ⇒ ● ⇒ Select a pattern ⇒ ●
Set Softkey Color	⇒ <i>Color theme/Icon</i> ⇒ ● ⇒ <i>Soft key</i> ⇒ ● ⇒ Select a color ⇒ ●
Interface Language	⇒ <i>Other settings</i> ⇒ ● ⇒ <i>言語選択</i> ⇒ ● ⇒ <i>日本語</i> or <i>English</i> ⇒ ● • To change interface language from Japanese to English: ⇒ <i>MENU</i> ⇒ <i>設定</i> ⇒ ● ⇒ <i>画面表示</i> ⇒ ● ⇒ <i>その他の設定</i> ⇒ ● ⇒ <i>Language</i> ⇒ ● ⇒ <i>English</i> ⇒ ●
Set Image List View	⇒ <i>Other settings</i> ⇒ ● ⇒ <i>Viewer settings</i> ⇒ ● ⇒ <i>Picture</i> or <i>Title</i> ⇒ ●
Guard from Prying Eyes	⇒ <i>Other settings</i> ⇒ ● ⇒ <i>Privacy angle</i> ⇒ ● ⇒ <i>ON</i> ⇒ ● • Alternatively, press and hold [8] in Standby to toggle Privacy Angle on and off. The other party may hear a short beep when this operation is performed during a call. • When <i>Privacy angle</i> is set, Display is whitish and the viewing angle is narrower.
Show New Message Info While Viewing TV	⇒ <i>Other settings</i> ⇒ ● ⇒ <i>Quick Info setting</i> ⇒ ● ⇒ <i>Display sender</i> or <i>Display sender/subject</i> ⇒ ●



Clock, Display & Sounds

Set Effect for Screen Change	⇒ <i>Screen Effect</i> ⇒ ● ⇒ Select an item ⇒ ●
------------------------------	-------------------------------------------------

Start Here  ⇒ **Settings** ⇒ ● ⇒ **Character/Font** ⇒ ●

Set Font Type	⇒ <i>Font</i> ⇒ ● ⇒ <i>Font type</i> ⇒ ● ⇒ <i>Gothic</i> or <i>Ming-cho</i> ⇒ ●
Set Font Thickness	⇒ <i>Font</i> ⇒ ● ⇒ <i>Thickness</i> ⇒ ● ⇒ <i>Thin</i> or <i>Bold</i> ⇒ ●
Set Font Sizes Collectively	⇒ <i>Font</i> ⇒ ● ⇒ <i>Character size</i> ⇒ ● ⇒ <i>Standard</i> or <i>X-large</i> ⇒ ● <ul style="list-style-type: none"> Items settable with <i>Separate setting</i> for <i>Character size</i> can be set collectively.
Set Font Size for Each Function Window	⇒ <i>Font</i> ⇒ ● ⇒ <i>Character size</i> ⇒ ● ⇒ <i>Separate setting</i> ⇒ ● ⇒ Select a window ⇒ ● ⇒ Select a size ⇒ ● ⇒  <ul style="list-style-type: none"> In PC Site Browser, only available in Small Screen view.

Backlight

Start Here  ⇒ **Settings** ⇒ ● ⇒ **Display** ⇒ **Other settings** ⇒ ● ⇒ **Backlight** ⇒ ●

Set Backlight & Power Saving	⇒ <i>Lighting</i> ⇒ ● ⇒ <i>ON</i> or <i>OFF</i> ⇒ ● ⇒ <i>ON</i> or <i>OFF</i> ⇒ ● (⇒ Enter a time before the Power Saver Mode is activated) <ul style="list-style-type: none"> Press and hold (F5) to toggle Backlight on/off. When the Power Saver Mode is activated, nothing appears in Standby. Pressing any key cancels the Power Saver Mode.
Set Backlight during Charging	⇒ <i>Charging</i> ⇒ ● ⇒ <i>Standard</i> or <i>All time ON</i> ⇒ ●
Set Backlight Lighting Area	⇒ <i>Area</i> ⇒ ● ⇒ <i>LCD+Keys</i> or <i>LCD</i> ⇒ ●
Set Brightness of Backlight	⇒ <i>Brightness</i> ⇒ ● ⇒ <i>ON</i> or <i>OFF</i> ⇒ ● ⇒ Select a Level ⇒ ● <ul style="list-style-type: none"> Backlight is Middle by default. Setting to Bright reduces battery life.



Desktop Icons

Start Here ⇒ **Settings** ⇒ ● ⇒ **Display** ⇒ ● ⇒
Stand-by display ⇒ ● ⇒ **Desktop icon** ⇒ ●

Set Desktop Theme	⇒ Select a theme ⇒ ● ⇒ YES ⇒ ● • Press to see details of the selected theme.
Change Icon Design of a Theme	⇒ Select a theme ⇒ ⇒ Select an icon ⇒ ⇒ CHG icon image ⇒ ● ⇒ Select icon image or Default icon image ⇒ ● (⇒ Set and icon)
Change Order of Icons of a Theme	⇒ Select a theme ⇒ ⇒ Select an icon ⇒ ⇒ Sort ⇒ ● ⇒ Select a position ⇒ ●
Copy Icons to Another Theme	⇒ Select a theme ⇒ ⇒ Select an icon ⇒ ⇒ Copy ⇒ ● ⇒ Copy this, Copy selected or Copy all ⇒ ● ⇒ Select a destination theme ⇒ ● (⇒ Select icons ⇒ ● ⇒) • When Copy selected or Copy all is selected, select YES and press ● at the end of the procedure.
Move Icons to Another Theme	⇒ Select a theme ⇒ ⇒ Select an icon ⇒ ⇒ Move ⇒ ● ⇒ Move this, Move selected or Move all ⇒ ● ⇒ Select a destination theme ⇒ ● (⇒ Select icons ⇒ ● ⇒) ⇒ YES ⇒ ●

Delete Icons of a Theme ⇒ Select a theme ⇒ ⇒ Select an icon
 ⇒ ⇒ **Delete** ⇒ ● ⇒ **Delete this, Delete selected** or **Delete all** ⇒ ● (⇒ Select icons ⇒ ● ⇒) ⇒ **YES** ⇒ ●

Start Here ⇒ **Mail Setting** ⇒ ● ⇒ **Other settings** ⇒ ●

Set New Message Indicator in 3D ⇒ **3D display setting** ⇒ ● ⇒ **ON** ⇒ ●



Clock, Display & Sounds

Menu Display Settings

Start Here ⇒ **Settings** ⇒ ⇒ **Display** ⇒ ⇒ **Menu display set** ⇒

Set Menu Theme*	⇒ Theme ⇒ ⇒ Select a theme ⇒
Change Icon Design (Original Theme)*	⇒ Theme ⇒ ⇒ Original theme ⇒ (⇒ YES or NO ⇒) ⇒ Select a menu item ⇒ ⇒ Set an image <ul style="list-style-type: none"> Change Main Menu icons to any preferred image. Press to check current setting.
Change Background (Original Theme)*	⇒ Theme ⇒ ⇒ Original theme ⇒ (⇒ YES or NO ⇒) ⇒ Background image ⇒ ⇒ Set an image <ul style="list-style-type: none"> Change Main Menu background to any preferred image. Press to check current setting.
Reset Original Theme Settings*	⇒ Theme ⇒ ⇒ Original theme ⇒ (⇒ YES or NO ⇒) ⇒ Select a menu item ⇒ ⇒ Reset or All reset ⇒ ⇒ YES ⇒ <ul style="list-style-type: none"> Only available when any Original theme settings have been changed.
Save Last Selected Menu Item to Memory	⇒ Memory focus ⇒ ⇒ ON ⇒

* If menu theme is changed, handset operations will differ from descriptions in this guide.

Start Here ⇒ ⇒ *

Add a Menu Item to Original Menu	⇒ <Not stored> ⇒ ⇒ Select a function ⇒ (⇒ YES ⇒)
Change Order of Original Menu Items	⇒ Select an item ⇒ ⇒ Sort ⇒ ⇒ Select a position ⇒
Cancel Original Menu Items	⇒ Select an item ⇒ ⇒ Release or Release all ⇒ ⇒ YES ⇒
Reset Original Menu	⇒ ⇒ Reset org. menu ⇒ ⇒ YES ⇒

* Available when menu theme is set to **Basic Menu**. However, in **Basic Menu**, handset operations will differ from descriptions in this guide.

Start Here ⇒ **Settings** ⇒ ⇒ **Display** ⇒ ⇒ **Menu display set** ⇒

List View and Details View*	⇒ Menu display ⇒ ⇒ List or Detail ⇒ <ul style="list-style-type: none"> Select View for menus from ⇒ Settings ⇒ when menu theme is Basic Menu.
-----------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

* Available when menu theme is set to **Basic Menu**. However, in **Basic Menu**, handset operations will differ from descriptions in this guide.



Standby Indicators

Enable Indicator Selector

→ **Settings** → ● → **Display** → ● →
Other settings → ● → **Icons setting** →
 ● → **ON** → ●

- The indicators at the top of Display are enabled by pressing ● in Standby. Use to select an indicator and press ● to access the corresponding function.

External Display (Indicator display)

Start Here → **Settings** → ● → **Display** → ● →
Indicator display → ● → **ON** → ●

Notifications/Animation

→ **Disp. clock only** → ● → **ON** → ● →

- Select **OFF** to set notifications (incoming messages, etc.) and animation (alarm, etc.) to appear.

Set Clock Pattern

→ **Clock type** → ● → Select a pattern →
 ● →

Set Messages to Appear

→ **Called, Mail or Connection** → ● → **ON**
 → ● →

Set Clock to Appear at Specified Time

→ **Time signal** → ● → **ON** → ● → **30**
minutes or **60 minutes** → ● →

Set Display On/Off

→ **Display time** → ● → **15 seconds, 1**
minute or **All time ON** → ● →

- 15 seconds: Display and Backlight stay on for 15 seconds
- 1 minute: Display stays on for 1 minute; Backlight stays on for 15 seconds
- All time ON: Display is always on; Backlight stays on for 15 seconds

Incoming Call/Message Alerts

Start Here → **Settings** → ● → **Ring Tone/Vibrator** →
 ●

Adjust Ringtone Volume

→ **Ring volume** → ● → **Phone, Video call**
 or **Mail** → ● → ● → ● to adjust volume → ●

- When **Step** is set, the ringtone volume increases every three seconds. When **Silent** is set, no ringtone sounds.

Set a Ringtone

→ **Select ring tone** → ● → **Phone, Video**
call or **Mail** → ● → Select an item → ●
 (→ Select a folder → ●) → Set a ringtone

Set Random Playback of Melodies as Ringtones

→ **Select ring tone** → ● → **Phone, Video**
call or **Mail** → ● → **Random melody** →
 ● → Select a folder → ●

- Melodies in the selected folder are played at random as ringtones.



Clock, Display & Sounds

Set Vibration*	<p>⇒ <i>Vibration setting</i> ⇒ ● ⇒ <i>Phone, Video call</i> or <i>Mail</i> ⇒ ● ⇒ Select a pattern ⇒ ●</p> <ul style="list-style-type: none"> When <i>Melody linkage</i> is set, handset vibrates to the melody set as ringtone.
-----------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

* When *Vibrator* is not set to *OFF*, be careful not to let handset fall off a desk or slide too close to a stove, etc. when it vibrates.

Start Here ⇒ **Mail Setting** ⇒ ● ⇒ **Sound/Display Settings** ⇒ ●

Set Ringtone Duration for Incoming Message	<p>⇒ <i>Ring time</i> ⇒ ● ⇒ <i>Mail</i> ⇒ ● ⇒ <i>ON</i> ⇒ ● ⇒ Enter ringing duration</p> <ul style="list-style-type: none"> When <i>OFF</i> is set, no ringtone sounds and handset does not vibrate when receiving messages.
---------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Start Here ⇒ **Settings** ⇒ ● ⇒ **Illumination** ⇒ ●

Set Illumination Color	<p>⇒ <i>Incoming call</i> ⇒ ● ⇒ <i>Color</i> ⇒ ● ⇒ <i>Phone, Video Call</i> or <i>Mail</i> ⇒ ● ⇒ Select a color ⇒ ●</p>
-------------------------------	-------------------------------------------------------------------------------------------------------------------------

Set Illumination Pattern	<p>⇒ <i>Incoming call</i> ⇒ ● ⇒ <i>Pattern</i> ⇒ ● ⇒ Select a pattern ⇒ ●</p> <ul style="list-style-type: none"> Even when <i>Melody linkage</i> is set, Illumination may not flash to the melody depending on the set ringtone.
---------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Set Illumination to Flash for Missed Calls/New Messages	<p>⇒ <i>Incoming call</i> ⇒ ● ⇒ <i>Missed info</i> ⇒ ● ⇒ <i>ON</i> ⇒ ●</p>
----------------------------------------------------------------	----------------------------------------------------------------------------

Set an Incoming Call/Message Image	<p> ⇒ <i>Settings</i> ⇒ ● ⇒ <i>Display</i> ⇒ ● ⇒ <i>Dialing/Calling disp.</i> ⇒ ● ⇒ <i>Calling, Video Call Calling</i> or <i>Mail receiving</i> ⇒ ● (⇒ <i>My Picture</i> or <i>Videos</i> ⇒ ●) ⇒ Set an image/video</p>
-------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Show Phone Book Entry Images for Incoming Calls/ Messages	<p> ⇒ <i>Phone</i> ⇒ ● ⇒ <i>Check Phone setting</i> ⇒ ● ⇒ <i>Other settings</i> ⇒ ● ⇒ <i>Disp. phonebook image</i> ⇒ ● ⇒ <i>ON</i> ⇒ ●</p>
------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------

Answering Incoming Calls

Start Here ⇒ **Phone** ⇒ ● ⇒ **Check Phone setting** ⇒ ● ⇒ **Other settings** ⇒ ●

Set to Answer Calls by Pressing Any Key	<p>⇒ <i>Answer setting</i> ⇒ ● ⇒ <i>Any key answer</i> ⇒ ●</p> <ul style="list-style-type: none"> Answer incoming voice calls by pressing a key from . The any key answer function is disabled for incoming video calls.
------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------



Clock, Display & Sounds

Set to Mute Ringtone by Pressing Any Key

⇒ **Answer setting** ⇒ ● ⇒ **Quick silent** ⇒ ●

- Mute the ringtone by pressing a key from 0 - 9, *, CLEAR, (for voice calls only), *, and or by opening handset.

Manner Mode

Start Here ⇒ **Settings** ⇒ ● ⇒ **Manner mode set** ⇒ ●

Set Manner Mode Type

⇒ Select a Manner Mode ⇒ ●

- When *Super silent* is set, all tones emitted through the earpiece are also muted.

Configure Original Manner Mode

⇒ **Original** ⇒ ● ⇒ Set each item ⇒

Checking Call Logs

Start Here ⇒ **Phone** ⇒ ● ⇒ **Check Phone setting** ⇒ ● ⇒ **Other settings** ⇒ ●

Notify Missed Calls with Tone (When Pressed)

⇒ **Info notice setting** ⇒ ● ⇒ **ON** ⇒ ●

- Two short beeps sound twice when there are missed calls, and three short beeps sound when there are none.

Change Colors of Names, Phone Numbers and E-mail Addresses in Call and Message Log Windows

⇒ **Disp. call/receive No.** ⇒ ● ⇒ Select a color ⇒ ●

- Press to toggle the color palette between 16 colors and 256 colors.
- To reset the color settings, press .

Sounds

Start Here ⇒ **Settings** ⇒ ● ⇒ **Other Settings** ⇒ ●

Set Key Sound Off

⇒ **Keypad sound** ⇒ ● ⇒ **OFF** ⇒ ●

Set to Play Charging Start/End Tones

⇒ **Charge sound** ⇒ ● ⇒ **ON** ⇒ ●

Start Here ⇒ **Tools** ⇒ ● ⇒ **Voice Announce** ⇒ ●

Record Sound to Set as Ringtone or Outgoing Message

⇒ Select an item ⇒ ● ⇒ **YES** ⇒ ● ⇒ Record sound (for about 15 seconds)

- Press ● to stop recording.

Play Recorded Sound

⇒ Select an item with ★ ⇒ ●

Delete Recorded Sound

⇒ Select an item with ★ ⇒ ⇒ **Erase** ⇒ ● ⇒ **YES** ⇒ ●



Earphone-Microphone

Start Here  ⇒ **Settings** ⇒ ● ⇒ **Other settings** ⇒ ●
 ⇒ **External Connection** ⇒ ●

Audio Output	⇒ Headset usage setting ⇒ ● ⇒ Headset+speaker or Headset only ⇒ ●
Microphone Setting	⇒ Select microphone ⇒ ● ⇒ Internal microphone or External microphone ⇒ ●
Answer Calls Automatically	⇒ Auto answer setting ⇒ ● ⇒ Phone or Video Call ⇒ ● ⇒ ON ⇒ ● ⇒ Enter ring time

Start Here  ⇒ **Phone** ⇒ ● ⇒ **Check Phone setting** ⇒ ●
 ⇒ **Other settings** ⇒ ●

Save a Phone Number to Dial with an Earphone-Microphone	⇒ Headset sw to dial ⇒ ● ⇒ Voice call ⇒ ● ⇒ Search Phone Book ⇒ Select an entry ⇒ ● ⇒ Select a phone number ⇒ ●
---------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------



Phone Book

Set Preferred Search Method	[Phone Book Search] window (P. 2-19) → Select a search method → → OK → ● <ul style="list-style-type: none"> To cancel the preferred search method, press in Phone Book Search window, select the search method with ★, and then press .
Change Group Name	[Phone Book Entry List] (P. 2-19) → → Group setting → ● → Select a group → ● → Edit group name → ● <ul style="list-style-type: none"> The name remains the same only for <i>No Group</i>.
Do Not Send Phone Book Entry Images via Infrared	→ Tools → ● → Forwarding Image → ● → OFF → ●

Outgoing Calls

Start Here → **Phone** → ● → **Check Phone setting** → ● → **Other settings** → ●

Save Area Code and Country Code as Prefix Numbers	→ Prefix setting → ● → Select an item → → Enter name → ● → Enter prefix numbers → ●
---------------------------------------------------	---------------------------------------------------------------------------------------------

Save Touch Tones	→ Pause dial → ● → → Enter touch tone numbers → ● <ul style="list-style-type: none"> Press and hold to enter "p" (Pause).
Set Numbers after "*" as Sub Address	→ Sub-address setting → ● → ON → ●

International Calls

Start Here → **Phone** → ● → **Check Phone setting** → ● → **Other settings** → ● → **Int'l dial assistance**

Change International Access Code Automatically Dialed with "+"	→ Auto int'l call set. → ● → ON → ● → Select a country code → ● → Select an international access code → ● <ul style="list-style-type: none"> When <i>OFF</i> is set, the international access code is not entered when you press and hold . Select an international access code you set in <i>IDD Prefix Setting</i>.
Change a Country Code	→ Country Code setting → ● → Select an item → → Enter country name → ● → Enter country code → ●
Save an International Access Code	→ IDD Prefix setting → ● → Select an item → → Enter international access name → ● → Enter international access code → ●



Call Settings

Start Here ⇒ **Phone** ⇒ ● ⇒ **Check Phone setting**
⇒ ● ⇒ **Talk** ⇒ ●

Set Reconnection Tone	⇒ Reconnect signal ⇒ ● ⇒ High tone or Low tone ⇒ ●
Set Noise Reduction	⇒ Noise reduction ⇒ ● ⇒ ON ⇒ ●
Set Weak Signal Alarm	⇒ Quality alarm ⇒ ● ⇒ High tone or Low tone ⇒ ● • Calls may be disconnected without sounding the alarm when signal suddenly becomes too weak.
Set Clarity of Other Party Voice	⇒ Hyper Clear Voice ⇒ ● ⇒ High, Low and OFF ⇒ ●
Change Color of Illumination While Calling	⇒ Illumination in talk ⇒ ● ⇒ Select a pattern ⇒ ●
Set a Hold Message	⇒ On hold tone ⇒ ● ⇒ Select a hold tone ⇒ ● (⇒ ●)
Set Closing Sound Off	⇒ Setting when folded ⇒ ● ⇒ No tone ⇒ ●
End Call By Closing Handset	⇒ Setting when folded ⇒ ● ⇒ End the call ⇒ ●

Call Costs

Start Here ⇒ **Phone** ⇒ ● ⇒ **Check Phone setting**
⇒ ● ⇒ **Call TimeCharge** ⇒ ●

Set Auto Reset of Total Call Cost	⇒ Auto reset total cost ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ Auto Reset ⇒ ● ⇒ ON or OFF ⇒ ● (⇒ Enter PIN2 ⇒ ●) • When ON is set, the total call cost indication is automatically reset to zero at twelve midnight on the first day of each month.
Set a Maximum Call Cost Limit*	⇒ Set Max Cost Limit ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ ¥ ⇒ ● ⇒ Enter cost limit ⇒ ● ⇒ ON ⇒ ● ⇒ ▶ ⇒ ● ⇒ Set alarm tone ⇒ ⇒ ● ⇒ 🔊 to adjust volume ⇒ ● ⇒ 📧 ⇒ ● Enter PIN2 ⇒ ● • A call ends automatically and appears in Display when the total call cost exceeds the set maximum limit. • When the set total call cost limit has been reached, all outgoing calls are disabled. To enable outgoing calls, set the maximum call cost limit to 0: ⇒ Set Max Cost Limit ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ ¥ ⇒ ● (twice) ⇒ 📧 ⇒ ● Enter PIN2 ⇒ ●

* Cost display may not be available depending on your subscription. If unavailable, you will also be unable to set a cost limit.



Video Calls

Start Here ⇒ **Phone** ⇒ ● ⇒ **Check Phone setting**
 ⇒ ● ⇒ **Video Call** ⇒ ● ⇒ **Other settings** ⇒ ●

Set an Image to be Sent during Video Calls	⇒ Select image ⇒ ● ⇒ Select an item ⇒ ● ⇒ Pre-installed or Original ⇒ ● • To set an image other than the preinstalled image: ⇒ Original ⇒ ⇒ Change Setting ⇒ ● ⇒ Set an image
Redial Automatically as Voice Call When Video Call Connection Fails	⇒ Auto redial as voice ⇒ ● ⇒ ON ⇒ ●
Set an Image to Appear in Main Window	⇒ Main display ⇒ ● ⇒ Other side or My side ⇒ ●
Reverse Front Camera Image	⇒ Front camera Reverse ⇒ ● ⇒ ON ⇒ ●
Automatically Switch to Handsfree Mode in Video Calls	⇒ Hands-free switch ⇒ ● ⇒ ON ⇒ ●

Global Roaming

Start Here ⇒ **Settings** ⇒ ● ⇒ **Other settings** ⇒ ●
 ⇒ **Int'l Roaming Set** ⇒ ●

Set Operator	⇒ NW search mode ⇒ ● ⇒ Manual ⇒ ● ⇒ Select an operator ⇒ ● • When Auto is set, an available operator is set automatically. • Use this procedure when handset is out of the service area of the currently used operator.
Search Available Operator	⇒ NW search mode ⇒ ● ⇒ Network re-search ⇒ ● ⇒ Select an operator ⇒ ● • Available when NW search mode is set to Manual .
Set Priority for Operators	⇒ NW search mode ⇒ ● ⇒ PLMN setting ⇒ ● ⇒ Select an operator ⇒ ⇒ Change priority ⇒ ● ⇒ Select a position on the priority list ⇒ ● ⇒ ⇒ YES ⇒ ● • When Auto or Network re-search is set under NW search mode , you are automatically connected to the highest priority operator among available operators.
Show Operator Name While Roaming	⇒ Display operator name ⇒ ● ⇒ Display ON ⇒ ● • Operator name unavailable when menu theme is set to Big Character Menu .



S! Mail Settings

Start Here ⇒ **Mail Setting** ⇒ ● ⇒ **Other settings** ⇒ ●

Edit Header/ Signature	⇒ Header/Signature ⇒ ● ⇒ Edit header or Edit signature ⇒ ● (twice) ⇒ Edit header/signature ⇒
Insert Header/ Signature Automatically	⇒ Header/Signature ⇒ ● ⇒ Insert setting ⇒ ● ⇒ Header or Signature ⇒ ● ⇒
Set to Check Delivery	⇒ S! Mail settings ⇒ ● ⇒ Delivery Report ⇒ ● ⇒ ON ⇒ ● <ul style="list-style-type: none"> After a recipient receives your S! Mail, a message titled S! Mail Report is sent to your Softbank handset.

SMS Settings

Start Here ⇒ **Mail Setting** ⇒ ● ⇒ **Other settings** ⇒ ● ⇒ **SMS settings** ⇒ ●

Set to Check Delivery	⇒ SMS report request ⇒ ● ⇒ ON ⇒ ● <ul style="list-style-type: none"> After a recipient receives your SMS message, a message titled SMS report is sent to your Softbank handset.
--------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

 

Set Server Storage Period of SMS Messages	⇒ SMS validity period ⇒ ● ⇒ Select a period ⇒ ● <ul style="list-style-type: none"> When None is set, SMS messages you send are not stored on the server.
Set SMS Input Language	⇒ SMS input character ⇒ ● ⇒ Japanese (70char.) or English (160char.) ⇒ ●

Incoming Message Settings

Start Here ⇒ **Mail Setting** ⇒ ●

Customize E-mail Address	⇒ Custom Mail Address ⇒ ● ⇒ Follow onscreen instructions
Do Not Show Emotion Indicators	⇒ Other settings ⇒ ● ⇒ Emotion/Keyword ⇒ ● ⇒ Take the checkmark off from Disp emotion ⇒
Show Keyword Indicators	⇒ Other settings ⇒ ● ⇒ Emotion/Keyword ⇒ ● ⇒ Put a checkmark to Disp keyword ⇒ Select a keyword entry field ⇒ ● ⇒ Enter keyword ⇒ ● ⇒ <ul style="list-style-type: none"> When handset receives an S! Mail containing the specified keyword, a keyword indicator - appears. In case a message contains both the content that matches an emotion indicator (P. 5-6) and a specified keyword, the keyword indicator takes priority.



Delete Keywords	<p>⇒ <i>Other settings</i> ⇒ ● ⇒ <i>Emotion/Keyword</i> ⇒ ● ⇒ Select a keyword ⇒ </p> <p>⇒ <i>Delete keyword</i> or <i>Delete all keyword</i> ⇒ ● ⇒ <i>YES</i> ⇒ ● ⇒ </p> <ul style="list-style-type: none"> To delete all keywords, take the checkmark off from <i>Disp keyword</i>.
Set Priority When Receiving Messages during Operation	<p>⇒ <i>Other settings</i> ⇒ ● ⇒ <i>Receiving setting</i> ⇒ ● ⇒ <i>Alarm preferred</i> or <i>Operation preferred</i> ⇒ ●</p>
Set Whether to Read Out Received Messages	<p>⇒ <i>Read out setting</i> ⇒ ● ⇒ <i>Read out received mail</i> ⇒ ● ⇒ <i>ON</i> or <i>OFF</i> ⇒ ●</p> <ul style="list-style-type: none"> Mail is only read out while in Japanese Language Mode.
Set Voice to Read Out Messages	<p>⇒ <i>Read out setting</i> ⇒ ● ⇒ <i>Select voice</i> ⇒ ● ⇒ Select a voice type ⇒ ●</p> <ul style="list-style-type: none"> Mail is only read out while in Japanese Language Mode.
Set Manual Receive	<p>⇒ <i>Other settings</i> ⇒ ● ⇒ <i>S! Mail settings</i> ⇒ ● ⇒ <i>Message Download</i> ⇒ ● ⇒ <i>Manual</i> ⇒ ●</p> <ul style="list-style-type: none"> The entire text is receivable by user operation.

Reply Settings

Change Quotation Marks	<p> ⇒ <i>Mail Setting</i> ⇒ ● ⇒ <i>Other settings</i> ⇒ ● ⇒ <i>Header/Signature</i> ⇒ ●</p> <p>⇒ <i>Edit Quotation marks</i> ⇒ ● ⇒ Edit quotation mark ⇒ ●</p>
------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Message View Settings & Others

Start Here  ⇒ *Mail Setting* ⇒ ●

Set Message List View	<p>⇒ <i>Other settings</i> ⇒ ● ⇒ <i>Mail list disp.</i> ⇒ ● ⇒ <i>2 lines, 1 line</i> or <i>1 line+body</i> ⇒ ●</p> <p>⇒ <i>Subject, Name</i> or <i>Address</i> ⇒ ●</p> <ul style="list-style-type: none"> <i>X-large</i> font size is unavailable when Message List view is set to <i>1 line</i> or <i>1line+body</i>. Size automatically switches to <i>Large</i>.
Play Attached Melodies Automatically	<p>⇒ <i>Other settings</i> ⇒ ● ⇒ <i>Start attachment (auto)</i> ⇒ ● ⇒ <i>ON</i> ⇒ ●</p> <ul style="list-style-type: none"> Automatic play only for received mail.
Set Number of Text Lines to Scroll	<p>⇒ <i>Other settings</i> ⇒ ● ⇒ <i>Scroll</i> ⇒ ● ⇒ <i>1 line, 3 lines</i> or <i>5 lines</i> ⇒ ●</p>
Set Font Size of Text	<p>⇒ <i>Character input set</i> ⇒ ● ⇒ <i>Font size</i> ⇒ ● ⇒ Select a size ⇒ ●</p> <ul style="list-style-type: none"> When set to <i>X-large</i>, <i>Mail list disp.</i> becomes set to <i>2 lines</i>.



Check Mail Settings	⇒ <i>Other settings</i> ⇒ ● ⇒ <i>Check settings</i> ⇒ ●
Reset Mail Settings	⇒ <i>Other settings</i> ⇒ ● ⇒ <i>Reset</i> ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ <i>YES</i> ⇒ ●

SMS Server Settings

Start Here  ⇒ **Settings** ⇒ ● ⇒ **Other settings** ⇒ ● ⇒ **Connection Settings** ⇒ ● ⇒ **SMS center selection** ⇒ ●

Change SMS Center Address	⇒ 819066519300 ⇒ ● ⇒ Enter SMS Center address ⇒ ● ⇒ International or Unknown ⇒ ● <ul style="list-style-type: none"> Address is 819066519300 by default. SMS may become unavailable if Center address is changed.
Reset to SoftBank SMS Center Address	⇒ Reset ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ YES ⇒ ●



Internet

Start Here for Yahoo! Keitai Press and hold → **Browser Settings** → ●

Start Here for PC Site Browser Press and hold → **PC Site Browser** → ● → **PC Site Brw. Settings** → ●

Set Scroll Unit/Speed	⇒ <i>Scroll</i> ⇒ ● ⇒ <i>Whole Page, Half Page</i> or <i>Single Line</i> ⇒ ●
Set Whether to Show Images or Play Melodies	⇒ <i>Downloads</i> ⇒ ● ⇒ <i>Display Images</i> or <i>Play Sounds</i> ⇒ ● ⇒ <i>ON</i> or <i>OFF</i> ⇒ ●
Clear Cache	⇒ <i>Memory Manager</i> ⇒ ● ⇒ <i>Delete Cache</i> ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ <i>YES</i> ⇒ ●
Delete Cookies	⇒ <i>Memory Manager</i> ⇒ ● ⇒ <i>Delete Cookies</i> ⇒ ● ⇒ <i>YES</i> ⇒ ●
Initialize Memory Status of Internet	⇒ <i>Initialized Browser</i> ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ <i>YES</i> ⇒ ●
Set Whether to Send Manufacture Number	⇒ <i>Security</i> ⇒ ● ⇒ <i>Manufacture Number</i> ⇒ ● ⇒ <i>ON</i> or <i>OFF</i> ⇒ ●
Set Whether to Send Referer	⇒ <i>Security</i> ⇒ ● ⇒ <i>Send Referer</i> ⇒ ● ⇒ <i>ON</i> or <i>OFF</i> ⇒ ●

Enable/Disable Cookies	⇒ <i>Security</i> ⇒ ● ⇒ <i>Cookie Settings</i> ⇒ ● ⇒ Select an option ⇒ ●
Set Whether to Activate Scripts	⇒ <i>Security</i> ⇒ ● ⇒ <i>Script Settings</i> ⇒ ● ⇒ Select an option ⇒ ●
Check Internet Settings	⇒ <i>Check Settings</i> or <i>Check PC Site Brw. Set</i> ⇒ ●
Reset Internet Settings	⇒ <i>Reset</i> or <i>Reset PC Site Brw. Set</i> ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ <i>YES</i> ⇒ ●

Yahoo! Keitai

Start Here Press and hold → **Browser Settings** → ●

Set Font Size	⇒ <i>Font Size</i> ⇒ ● ⇒ Select a size ⇒ ●
Set Flash® Sound On/Off	⇒ <i>Downloads</i> ⇒ ● ⇒ <i>Flash Sound Effect</i> ⇒ ● ⇒ <i>ON</i> or <i>OFF</i> ⇒ ●



PC Site Browser

Start Here Press and hold ⇒ **PC Site Browser** ⇒ ● ⇒ **PC Site Brw. Settings** ⇒ ●

Do Not Show Alert When Activating PC Site Browser & Switching Browsers	⇒ Warning Messages ⇒ ● ⇒ OFF ⇒ ●
Set Page Layout	⇒ Display Mode Settings ⇒ ● ⇒ PC Screen or Small Screen ⇒ ● ⇒ Select a size ⇒ ●

S! Quick News

Start Here Press and hold ⇒ **S! Quick News** ⇒ ● ⇒ **Settings** ⇒ ●

Set Automatic Updates for S! Quick News	⇒ Auto Refresh ⇒ ● ⇒ Select an item ⇒ ● ⇒ Select update interval, ON or OFF ⇒ ● (twice)
Hide S! Quick News in Standby	⇒ Standby Settings ⇒ ● ⇒ Standby Disp. Set. ⇒ ● ⇒ OFF ⇒ ● (twice)
Set Ticker Speed	⇒ Standby Settings ⇒ ● ⇒ Speed Settings ⇒ ● ⇒ Fast, Normal or Slow ⇒ ● (twice)
Set Information to appear in S! Quick News	⇒ Standby Settings ⇒ ● ⇒ Unread & Read Set. ⇒ ● ⇒ Unread Only or Unread & Read ⇒ ● (twice)
Hide S! Quick News Images	⇒ Set Image Disp. ⇒ ● ⇒ OFF ⇒ ● (twice)
Reset S! Quick News Registered Contents	⇒ Del. Quick News ⇒ ● ⇒ YES ⇒ ● (twice) ⇒ Enter Security Code ⇒ ● (three times)



S! Info Channel

Start Here Press and hold → **S! Info Ch./Weather** → ●
→ **Settings** → ●

Set Whether to Display Desktop Icon For New Received Information	→ S! Information Notif. → ● → ON or OFF → ●
Set Font Size for Web Pages	→ Font Size → ● → Select font size → ●

Weather Indicators

Start Here Press and hold → **S! Info Ch./Weather** → ●
→ **Weather Indicator** → ● → **Settings** → ●
●

Set Whether to Automatically Update Weather Information	→ Weather Update → ● → ON or OFF → ● (→ YES → ●)
Set Whether to Display Weather Indicators in Standby	→ Standby Setting → ● → ON or OFF → ●

Set Whether to Display Desktop Icon For New Received Information

→ **Weather Notif.** → ● → **ON** or **OFF** → ●

Transmission

Set Preference for When Location Info is Requested

→ **Settings** → ● → **Other settings** → ●
→ **Send Location Info** → ● → **Enter handset code** → ● → **Confirm, Send, or Not Send** → ●
• Information unretrievable when set to **Not Send**.



Channel List

Start Here ⇒ **TV/Music** ⇒ ⇒ **TV** ⇒ ⇒ **Channel List** ⇒

Change Title of Channel List	⇒ Select a channel list ⇒ ⇒ Edit Title ⇒ ⇒ Edit title ⇒
Delete a Channel List	⇒ Select a channel list ⇒ ⇒ Delete this ⇒ ⇒ YES ⇒ <ul style="list-style-type: none"> The currently used channel list cannot be deleted.
Assign Channels to Remote Control Numbers	⇒ Select a channel list ⇒ ⇒ ⇒ Remote Control No. ⇒ ⇒ Select a remote control number ⇒ ⇒ Select a channel ⇒ ⇒ Repeat the same step ⇒ ⇒ YES ⇒
Delete a Channel	⇒ Select a channel list ⇒ ⇒ Select a channel ⇒ ⇒ Delete this ⇒ ⇒ YES ⇒ <ul style="list-style-type: none"> Delete a channel from any channel list except for the currently used list.

Image & Sound

Start Here ⇒ **TV/Music** ⇒ ⇒ **TV** ⇒ ⇒ **User Settings** ⇒

Set Subtitle Display	⇒ Subtitles ⇒ ⇒ ON (Wide:Bottom), ON (Wide:Top) or OFF ⇒
Show/Hide Icons in Landscape View	⇒ Icon Always Show ⇒ ⇒ ON or OFF ⇒
Save Battery by Dimming Backlight	⇒ TV Power Saving ⇒ ⇒ YES ⇒ <ul style="list-style-type: none"> Following these steps when TV Power Saving is on will cancel TV Power Saving.
Set Sound On While Handset Closed	⇒ TV Sound While Closed ⇒ ⇒ ON ⇒ <ul style="list-style-type: none"> When set to ON and handset is closed, a page connected from data broadcast automatically updates. Packet transmission fees apply.
Keep Backlight On When Viewing TV	⇒ Display Light ⇒ ⇒ Constant Light ⇒ <ul style="list-style-type: none"> TV Power Saving must be off to set Display Light.
Set Backlight Duration for Viewing TV	⇒ Display Light ⇒ ⇒ Lighting Duration ⇒ ⇒ Enter lighting time <ul style="list-style-type: none"> TV Power Saving must be off to set Display Light.




Data Broadcasts

Start Here  ⇒ **TV/Music** ⇒ ● ⇒ **TV** ⇒ ● ⇒ **User Settings** ⇒ ● ⇒ **Data BC Settings** ⇒ ●


Set Whether to Show Images in Pages Accessed from Data Broadcasts	⇒ Set Image Disp. ⇒ ● ⇒ ON or OFF ⇒ ●
Enable/Disable Sound Effects of Data Broadcasts	⇒ Sound Effect ⇒ ● ⇒ ON or OFF ⇒ ●
Show Confirmation Window Again	⇒ Reset Disp. Set. ⇒ ● ⇒ YES ⇒ ●

Recording Programs

Continue/End Recording at Low Battery	 ⇒ TV/Music ⇒ ● ⇒ TV ⇒ ● ⇒ User Settings ⇒ ● ⇒ Rec. While Low Battery ⇒ ● ⇒ ON or OFF ⇒ ●
---------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Other Settings

Start Here  ⇒ **TV/Music** ⇒ ● ⇒ **TV** ⇒ ● ⇒ **User Settings** ⇒ ●

Check TV Settings	⇒ Check TV Settings ⇒ ●
Reset Channel Settings	⇒ Reset Channel Setting ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ YES ⇒ ●
Clear Data Broadcast Memory	⇒ Reset Storage Area ⇒ ● ⇒ Select an affiliated station ⇒  ⇒ Delete this or Delete all ⇒ ● (⇒ Enter Security Code ⇒ ●) ⇒ YES ⇒ ●
Reset TV Settings	⇒ Reset TV Settings ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ YES ⇒ ●



Camera/Video Settings

Set Shutter Sound	[Photo Viewfinder] (P. 7-5)/[Video Viewfinder] (P. 7-7) ⇨ [Fn] ⇨ Shutter Sound ⇨ ● ⇨ Select a shutter sound ⇨ ●
Set Interval for Continuous Shooting	[Continuous Shooting Viewfinder] (P. 7-9) ⇨ [Fn] ⇨ Interval/Number ⇨ ● ⇨ Shot interval ⇨ ● ⇨ 0.5 seconds, 1.0 seconds or 2.0 seconds ⇨ ● <ul style="list-style-type: none"> • <i>Shot interval</i> is available when <i>CHG Camera-mode</i> (P. 7-6) is set to <i>A-Continuous mode</i>.
Set Number of Shots for Continuous Shooting	[Continuous Shooting Viewfinder] (P. 7-9) ⇨ [Fn] ⇨ Interval/Number ⇨ ● ⇨ Shot number ⇨ ● ⇨ Enter Shot Number ⇨ ●

File Storage

Set Storage Location for Shot Still Images/Videos	[Photo Viewfinder] (P. 7-5)/[Video Viewfinder] (P. 7-7) ⇨ [Fn] ⇨ Select to save ⇨ ● ⇨ Phone or microSD ⇨ ● ⇨ Select a folder ⇨ ● <ul style="list-style-type: none"> • To save videos on memory card, select a folder of Inbox.
---------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------



Playback Window

Change Design of Playback Window	[Music Player Playback] window (P. 9-5) ⇨ ⇨ Action setting ⇨ ⇨ Change Skin ⇨ ⇨ Select a design ⇨
Set Image Display Size	[Video Player Playback] window (P. 9-5) ⇨ ⇨ Action setting ⇨ ⇨ Set image disp. ⇨ ⇨ Normal or Fit in display ⇨ <ul style="list-style-type: none"> Available when playing in Normal Screen mode.

When Running S! Appli

Start Here ⇨ S! Appli ⇨ ⇨ Settings ⇨	
Set Sound Volume	⇨ Sound/Vib Settings ⇨ ⇨ Volume ⇨ ⇨ to adjust volume ⇨
Set Vibration	⇨ Sound/Vib Settings ⇨ ⇨ Vibration ⇨ ⇨ ON or OFF ⇨
Set Backlight	⇨ Backlight Settings ⇨ ⇨ Switch ON/OFF ⇨ ⇨ Always ON, Always OFF or Link To Phone Set. ⇨
Set Blinking of Backlight	⇨ Backlight Settings ⇨ ⇨ Blink ⇨ ⇨ ON or OFF ⇨

Start Here ⇨ **S! Appli** ⇨ ⇨ **S! Appli List** ⇨

Allow/Prohibit S! Appli to Connect to Network	⇨ Select an S! Appli ⇨ ⇨ Security Settings ⇨ ⇨ Net Access ⇨ ⇨ All Permit, Prompt at 1st only, Prompt each time or Disable ⇨
Allow/Prohibit S! Appli to Write Personal Information	⇨ Select an S! Appli ⇨ ⇨ Security Settings ⇨ ⇨ Write/Del User Data ⇨ ⇨ All Permit, Prompt at 1st only, Prompt each time or Disable ⇨
Reset Security Settings of S! Appli	⇨ Select an S! Appli ⇨ ⇨ Security Settings ⇨ ⇨ Reset Security Set. ⇨ ⇨ YES ⇨

S! Appli

Start Here ⇨ **S! Appli** ⇨ ⇨ **Settings** ⇨

Reset S! Appli Settings	⇨ Reset ⇨ ⇨ Set to Default ⇨ ⇨ Enter Security Code ⇨ ⇨ YES ⇨
Delete All S! Appli	⇨ Reset ⇨ ⇨ Delete All S! App ⇨ ⇨ Enter Security Code ⇨ ⇨ YES ⇨



Other Settings

Text Entry

Start Here ⇒ **Settings** ⇒ ● ⇒ **Character/Font** ⇒ ●
 ⇒ **Char.Input** ⇒ ●

Set Text Input Method	⇒ Input mode ⇒ ● ⇒ Select an input method ⇒ ●
Set Word Prediction	⇒ Prediction ⇒ ● ⇒ ON or OFF ⇒ ●
Set to Show T9 Suggestion Words in Kanji or Hiragana	⇒ T9 change mode ⇒ ● ⇒ T9 Kanji change mode or T9 Kana change mode ⇒ ●
Clear Learning History	⇒ Clear learned ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ T9/Expect words/Pic. or Kana/Kanji change/face ⇒ ●
Change Font Size	⇒ CHG input size ⇒ ● ⇒ Select a size ⇒ ●

Shortcut Key

Start Here ⇒ **Settings** ⇒ ● ⇒ **Other Settings** ⇒ ●

Change Function Assigned to Shortcut Key	⇒ Shortcut-key setting ⇒ ● ⇒ Select a function ⇒ ● ⇒ YES ⇒ ● <ul style="list-style-type: none"> Alternatively, press and hold in Standby to set Shortcut-key setting. To return to original settings, press , select Reset Shortcut-key, and press ●.
------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Handset Opening Operation

Set Handset Opening Operation when Call Arrives, for Missed Call or New Message	⇒ Settings ⇒ ● ⇒ Other settings ⇒ ● ⇒ Setting when opened ⇒ ● ⇒ Select action to enable ⇒ ● ⇒
---------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------

Vibrator

Set Level	⇒ Settings ⇒ ● ⇒ Ring Tone/Vibrator ⇒ ● ⇒ Vibration level ⇒ ● ⇒ HIGH or LOW ⇒ ●
-----------	--------------------------------------------------------------------------------------------------------------------



Other Settings

Closed Illumination

Start Here ⇒ **Settings** ⇒ ● ⇒ **Illumination** ⇒ ● ⇒
Closed illum. ⇒ ● ⇒ **ON** ⇒ ●

Set Flashing Color for Handset Close	⇒ Set illumination ⇒ ● ⇒ Select a color ⇒ ●
Set Flashing Pattern for Handset Close	⇒ Set pattern ⇒ ● ⇒ Select a pattern ⇒ ●

Key Backlight

Set Key Backlight Color	⇒ Settings ⇒ ● ⇒ Illumination ⇒ ● ⇒ Key backlight ⇒ ● ⇒ Select a color ⇒ ●
-------------------------	-------------------------------------------------------------------------------------------------

Osaifu-Keitai®

Set Illumination and Vibrator for IC Card	⇒ Tools ⇒ ● ⇒ Osaifu-Keitai ⇒ ● ⇒ IC Card notice set. ⇒ ● ⇒ Illumination or Vibrator ⇒ ON or OFF ⇒ ●
-------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------

Delete all Lifestyle-Appli ⇒ **S! Appli** ⇒ ● ⇒ **Settings** ⇒ ● ⇒ **Reset** ⇒ ● ⇒ **Delete All LifeApp** ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ **YES** ⇒ ●

Resetting Handset

Start Here ⇒ **Settings** ⇒ ● ⇒ **Other Settings** ⇒ ●

Reset All Settings to Default	⇒ Reset settings ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ YES ⇒ ●
Initialize Handset to Default Status	⇒ Initialize ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ YES ⇒ ● ⇒ YES ⇒ ● <ul style="list-style-type: none"> • When the initialization is completed, handset automatically shuts down and restarts. • When handset is initialized, all data downloaded and saved on handset are deleted and cannot be restored. • Your Security Code will also be reset to default.