

# 14

## Handset Customization

<b>Date &amp; Time .....</b>	<b>14-2</b>
Clock & Calendar.....	14-2
<b>Display &amp; Illumination .....</b>	<b>14-3</b>
Language.....	14-3
Image & Text.....	14-3
Display & Key Illumination .....	14-3
External Display.....	14-4
Standby Display.....	14-4
Key Illumination .....	14-4

<b>Ringtones &amp; Sounds .....</b>	<b>14-5</b>
Handset Response.....	14-5
System Sound.....	14-5
Additional Sound Settings .....	14-5
<b>Connectivity .....</b>	<b>14-6</b>
Network .....	14-6
IP Service .....	14-7
Location Information.....	14-7
<b>Reset.....</b>	<b>14-8</b>
Restoring Default Settings.....	14-8





# Date & Time Settings

## Clock & Calendar

**Start Here**  ➔ **Settings**  ➔  In Phone menu, **Date & Time**

Setting the date and time	<b>Set Date/Time</b> <input type="checkbox"/> ➔ <input type="checkbox"/> ➔ Enter the year ➔ Enter the month ➔ Enter the day ➔ Enter the time <input type="checkbox"/>
Correcting Clock manually	<b>Time Correction</b> <input type="checkbox"/> ➔ <input type="checkbox"/> ➔ <b>Manual</b> <input type="checkbox"/> ➔ <input type="checkbox"/> ➔ <b>Yes</b> <input type="checkbox"/>
Disabling auto Clock correction	<b>Time Correction</b> <input type="checkbox"/> ➔ <input type="checkbox"/> ➔ <b>Auto Corr. Setting</b> <input type="checkbox"/> ➔ <input type="checkbox"/> ➔ <b>Off</b> <input type="checkbox"/>
Setting auto Clock correction timing	<b>Time Correction</b> <input type="checkbox"/> ➔ <input type="checkbox"/> ➔ <b>Auto Corr. Setting</b> <input type="checkbox"/> ➔ <input type="checkbox"/> ➔ <b>On</b> <input type="checkbox"/> ➔ <input type="checkbox"/> ➔ Select item <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> ➔ <input type="checkbox"/> <input type="checkbox"/> ➔ <input type="checkbox"/>
Activating Daylight Saving	<b>Daylight Save</b> <input type="checkbox"/> ➔ <input type="checkbox"/> ➔ <b>On</b> <input type="checkbox"/>
Changing Time Zone	<b>Set Time Zone</b> <input type="checkbox"/> ➔ <input type="checkbox"/> ➔ <input type="checkbox"/> Select area <input type="checkbox"/>
Adding custom time zone	<b>Set Time Zone</b> <input type="checkbox"/> ➔ <input type="checkbox"/> ➔ <input type="checkbox"/> ➔ Enter city name <input type="checkbox"/> ➔ <input type="checkbox"/> ➔ <input type="checkbox"/> + or - <input type="checkbox"/> ➔ <input type="checkbox"/> ➔ Enter time difference <input type="checkbox"/>
Changing time format to 12 hour	<b>Time Format</b> <input type="checkbox"/> ➔ <input type="checkbox"/> ➔ <b>12 Hour</b> <input type="checkbox"/>
Changing date format	<b>Date Format</b> <input type="checkbox"/> ➔ <input type="checkbox"/> ➔ Select option <input type="checkbox"/>
Starting the Calendar week on Monday	<b>Calendar Form.</b> <input type="checkbox"/> ➔ <input type="checkbox"/> ➔ <b>Monday-Sunday</b> <input type="checkbox"/>

# Display & Illumination Settings

## Language

**Start Here** [●] ➔ **Settings** ➔ [●] ➔ Phone menu

Switching interface between Japanese and English

*Language or 言語選択* ➔ [●] ➔ *English or 日本語* ➔ [●]

## Image & Text

**Start Here** [●] ➔ **Settings** ➔ [●] ➔ In Phone menu, *Display* ➔ [●]

Showing preloaded images for incoming calls, etc.

*System Graphs* ➔ [●] ➔ Select item ➔ [●] ➔ *Animation (or Pattern 1 to Pattern 3)* ➔ [●]

Showing Data Folder images for incoming calls, etc.

*System Graphs* ➔ [●] ➔ Select item ➔ [●] ➔ Select folder ➔ [●] ➔ Select image ➔ [●] ➔ Specify display area ➔ [●]  
• Some images may be usable without specifying display area.

Showing Customized Screen for incoming calls, etc.

*System Graphs* ➔ [●] ➔ Select item ➔ [●] ➔ *Customized Screen* ➔ [●] ➔ [●]  
• Not available for *Power On* or *Power Off*.

Changing font of numbers entered in Standby

*Dial Number* ➔ [●] ➔ Select pattern ➔ [●]

Showing a message each time handset is turned on

*Greeting Msg.* ➔ [●] ➔ *Edit Message* ➔ [●] ➔ Enter message ➔ [●] ➔ *Switch On/Off* ➔ [●] ➔ *On* ➔ [●]

- When using Double Number in Dual Mode, press  in System Graphs menu to switch modes.

## Display & Key Illumination

**Start Here** [●] ➔ **Settings** ➔ [●] ➔ In Phone menu, *Display* ➔ [●]

Disabling display transition effects

*Display Effects* ➔ [●] ➔ *Off* ➔ [●]

Changing Display/Keypad Backlight illumination time

*Backlight* ➔ [●] ➔ *Time Out* ➔ [●] ➔ Select time ➔ [●]

Changing Display Brightness

*Backlight* ➔ [●] ➔ *Brightness* ➔ [●] ➔ Adjust level ➔ [●]

Changing inactivity time after which Display turns off

*Display Saving* ➔ [●] ➔ Select period ➔ [●]





# Display & Illumination Settings 2

## External Display

**Start Here** [ ] ➔ **Settings** ➔ [ ] ➔ In Phone menu, *Display* ➔ [ ] ➔ *Ext. Display* ➔ [ ]

Changing inactivity time after which External Display turns off	<b>Duration</b> ➔ [ ] ➔ <b>Select time</b> ➔ [ ]
Hiding new received messages	<b>Messages</b> ➔ [ ] ➔ <i>Not Display</i> ➔ [ ]
Hiding caller info	<b>Caller Display</b> ➔ [ ] ➔ <i>Off</i> ➔ [ ]
Changing Clock view	<b>Disp. Date&amp;Time</b> ➔ [ ] ➔ <b>Select type</b> ➔ [ ]
Changing Clock font	<b>Clock Type</b> ➔ [ ] ➔ <b>Select pattern</b> ➔ [ ]

## Standby Display

**Start Here** [ ] ➔ **Settings** ➔ [ ] ➔ In Phone menu, *Display* ➔ [ ] ➔ *Standby Display* ➔ [ ]

Changing Clock/Calendar	<b>Clock/Calendar</b> ➔ [ ] ➔ <b>Select type</b> ➔ [ ]
Showing Network service provider name in Standby	<b>Operator Name</b> ➔ [ ] ➔ <i>On</i> ➔ [ ]

## Key Illumination

**Start Here** [ ] ➔ **Settings** ➔ [ ] ➔ **Phone menu**

Disabling Keypad light illumination	<b>Set Key Light</b> ➔ [ ] ➔ <i>Off</i> ➔ [ ]
-------------------------------------	---

# Ringtone & Sound Settings

## Handset Response

[Start Here](#)

► [ ] ► **Settings** ► [ ] ► In Phone menu, **Sounds & Alerts** ► [ ]

Changing ringtone volume	<b>Volume</b> ► [ ] ► Select item ► [ ] ► Adjust level ► [ ]
Selecting illumination option for incoming transmissions	<b>Event Light</b> ► [ ] ► Select item ► [ ] ► <b>On, Link to Sound or Off</b> ► [ ]
Enabling/disabling illumination for missed incoming transmissions	<b>Status Light</b> ► [ ] ► Select item ► [ ] ► <b>On or Off</b> ► [ ]
Answering calls with other keys	<b>Any Key Answer</b> ► [ ] ► <b>On</b> ► [ ] ● Use [0-9] - [ ], [*], [#], [静音], [清除], [A/B] or [B] in addition to [ ].

- When using Double Number in Dual Mode, press [ ] in Volume menu or Event Light menu to switch modes.

## System Sound

[Start Here](#)

► [ ] ► **Settings** ► [ ] ► In Phone menu, **Sounds & Alerts** ► [ ]

Enabling Keypad Tones	<b>System Sounds</b> ► [ ] ► <b>Keypad Tones</b> ► [ ] ► Select tone ► [ ]
Changing S! Circle Talk tone	<b>System Sounds</b> ► [ ] ► <b>S! Circle Talk</b> ► [ ] ► Select tone ► [ ]
Changing other System Sounds	<b>System Sounds</b> ► [ ] ► Select item ► [ ] ► <b>Tone or Sound</b> ► [ ] ► Select folder ► [ ] ► Select tone/file ► [ ] ● For files with limited usage period, choose <b>Yes</b> and press [ ].
Disabling System Sounds	<b>System Sounds</b> ► [ ] ► Select item ► [ ] ► <b>Tone or Sound</b> ► [ ] ► <b>Off</b> ► [ ] ● Not available for <b>S! Circle Talk</b> .
Changing System Sound duration	<b>System Sounds</b> ► [ ] ► Select item ► [ ] ► <b>Duration</b> ► [ ] ► Select/enter time ► [ ] ● Not available for <b>Keypad Tones</b> or <b>S! Circle Talk</b> .
Changing System Sound volume	<b>Volume</b> ► [ ] ► <b>General Volume</b> ► [ ] ► Adjust level ► [ ]

## Additional Sound Settings

[Start Here](#)

► [ ] ► **Settings** ► [ ] ► Phone menu

Disabling Speaker when using Headphones	<b>Ringer Output</b> ► [ ] ► <b>Earphone</b> ► [ ]
Activating Speaker surround	<b>Sounds &amp; Alerts</b> ► [ ] ► <b>Surround</b> ► [ ] ► <b>On</b> ► [ ]





# Connectivity Settings

Network	<b>Start Here</b> [ ] ➔ <b>Settings</b> [ ] ➔ [ ] ➔ <b>Network</b>
Selecting a Network manually	<b>Select Network</b> [ ] ➔ [ ] ➔ <b>Manual</b> [ ] ➔ [ ] ➔ <b>Select Network</b> [ ] ➔ [ ]
Adding preferred Networks	<b>Select Network</b> [ ] ➔ [ ] ➔ <b>Set Preferred</b> [ ] ➔ [ ] ➔ <b>Select location</b> [ ] ➔ [ ] ➔ <b>Insert</b> [ ] ➔ [ ] ➔ <b>Select Network</b> [ ] ➔ [ ]
Adding preferred Networks to the end	<b>Select Network</b> [ ] ➔ [ ] ➔ <b>Set Preferred</b> [ ] ➔ [ ] ➔ [ ] ➔ <b>Add to End</b> [ ] ➔ [ ] ➔ <b>Select Network</b> [ ] ➔ [ ]
Deleting preferred Networks	<b>Select Network</b> [ ] ➔ [ ] ➔ <b>Set Preferred</b> [ ] ➔ [ ] ➔ <b>Select Network</b> [ ] ➔ [ ] ➔ <b>Delete</b> [ ] ➔ [ ]
Adding Networks	<b>Select Network</b> [ ] ➔ [ ] ➔ <b>Add New NW</b> [ ] ➔ [ ] ➔ <b>Add</b> [ ] ➔ [ ] ➔ <b>Enter country code</b> [ ] ➔ [ ] ➔ <b>Enter Network code</b> [ ] ➔ [ ] ➔ <b>Enter name</b> [ ] ➔ [ ] ➔ <b>Select NW Type</b> [ ] ➔ [ ] ➔ <b>Select type</b> [ ] • After selecting <b>Add New NW</b> and pressing [ ], Network list appears if Network has already been added. To add more, press [ ] again and proceed.
Editing Networks	<b>Select Network</b> [ ] ➔ [ ] ➔ <b>Add New NW</b> [ ] ➔ [ ] ➔ <b>Select Network</b> [ ] ➔ [ ] ➔ <b>Change</b> [ ] ➔ [ ] ➔ <b>Edit in the same manner as adding Networks</b> [ ] ➔ [ ]
Deleting Networks	<b>Select Network</b> [ ] ➔ [ ] ➔ <b>Add New NW</b> [ ] ➔ [ ] ➔ <b>Select Network</b> [ ] ➔ [ ] ➔ <b>Delete</b> [ ] ➔ [ ]
Switching Network services manually	<b>Select Service</b> [ ] ➔ [ ] ➔ <b>Manual</b> [ ] ➔ [ ] ➔ <b>Select service</b> [ ] ➔ [ ]
Retrieving Network Information	<b>Retrieve NW Info</b> [ ] ➔ [ ] ➔ <b>Yes</b> [ ] ➔ [ ]
Checking Network status	<b>Network Info</b> [ ] ➔ [ ]
Editing access point names for communication with external devices	<b>External Device</b> [ ] ➔ [ ] ➔ <b>Select name</b> [ ] ➔ [ ] ➔ <b>Edit</b> [ ] ➔ [ ]
Clearing access point names for communication with external devices	<b>External Device</b> [ ] ➔ [ ] ➔ [ ] ➔ <b>Reset</b> [ ] ➔ [ ] ➔ <b>Enter Handset Code</b> [ ] ➔ [ ] ➔ <b>Yes</b> [ ] ➔ [ ]

# Connectivity Settings 2

## IP Service

[Start Here](#)  ➔ **Settings** ➔  ➔ In Phone menu, **Locks** ➔

### Disabling IP Service

**IP Service Setting** ➔  ➔ **Off** ➔  ➔ **Enter Handset Code** ➔

- When **Off**, S! Friend's Status, S! Circle Talk, Decoration Call, S! Appli Notification Setting and Mobile Widget Notification Setting are disabled.

## Location Information

[Start Here](#)  ➔ **Settings** ➔  ➔  **Network** ➔ **Location Info** ➔

### Adding/editing Location Information destination URLs

**URL Setting** ➔  ➔ <Empty> (or select URL) ➔  ➔ **Edit** ➔  ➔ **Enter URL** ➔

- Default URL is not editable.

### Specifying Location Information destination URL

**URL Setting** ➔  ➔ **Select URL** ➔

### Viewing Location Information destination URL

**URL Setting** ➔  ➔ **Select URL** ➔  ➔ **Display** ➔

### Deleting Location Information destination URLs

**URL Setting** ➔  ➔ **Select URL** ➔  ➔ **Delete** ➔  ➔ **Yes** ➔

### Hiding Location Information

**Datum On/Off** ➔  ➔ **Off** ➔  ➔ **Enter Handset Code** ➔

### Changing Location Information confirmation option

**Location Prop.** ➔  ➔ **Select option** ➔  ➔ **Enter Handset Code** ➔



# Reset Settings

## Restoring Default Settings

Start Here



Restoring default handset settings

**Reset Settings** ➔  ➔ Enter Handset Code ➔  ➔ Yes ➔  ➔ Yes ➔ 

- Some default settings may not be restored.

Clearing all Phone Book entries, Data Folder files, etc.

**Reset All** ➔  ➔ Enter Handset Code ➔  ➔ Yes ➔  ➔ Yes ➔ 

- Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keitai® service providers for details.)
- Files and records deleted by Reset All cannot be restored. Reset All deletes all downloaded S! Applications and Lifestyle-Applications.
- Handset Code returns to the default setting.

- A confirmation may appear before entering Handset Code; end the current function to proceed.
- When Double Number is active, regardless of usage mode setting, Reset Settings restores all default settings (Double Number is canceled), and Reset All clears all user files.

