


<b>Handset Parts</b> .....	<b>1-2</b>
Parts & Functions .....	1-2
<b>Charging Battery</b> .....	<b>1-4</b>
Charging Battery (AC Charger) .....	1-4
Charging Battery (In-Car Charger) ....	1-5
<b>Power On/Off</b> .....	<b>1-6</b>
Handset Power On/Off .....	1-6
<b>Display &amp; Indicators</b> .....	<b>1-7</b>
Display .....	1-7
Indicators .....	1-8
<b>Accessing Functions</b> .....	<b>1-11</b>
Main Menu .....	1-12
Shortcuts Menu & Key Shortcut ....	1-13
Toggling Active Functions (Multi Job)	
.....	1-14
Standby Shortcuts .....	1-15
Using Simplified Menus (Simple Menu)	
.....	1-16

<b>Mobile Manners</b> .....	<b>1-17</b>
<b>Security Codes</b> .....	<b>1-18</b>
<b>Basic Tools</b> .....	<b>1-19</b>
My Details & Basic Tools .....	1-19
<b>Double Number</b> .....	<b>1-21</b>
Using Double Number .....	1-21
Modes.....	1-22
<b>Additional Functions</b> .....	<b>1-24</b>
<b>Troubleshooting</b> .....	<b>1-27</b>

# 1

## Getting Started

### Parts & Functions

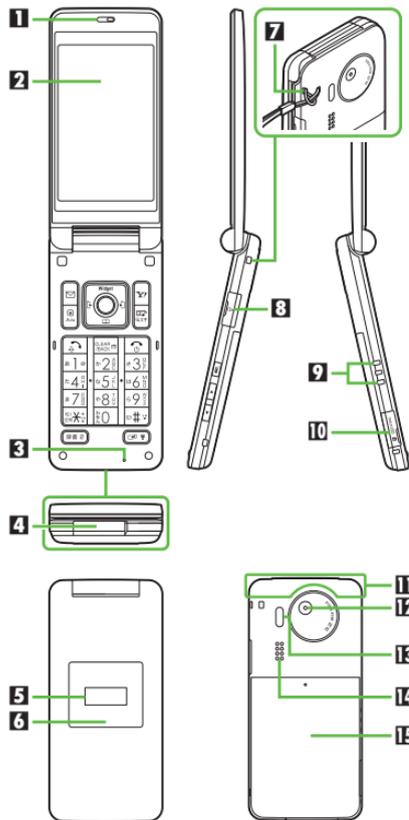

- 1** Earpiece
- 2** Display
- 3** Microphone
- 4** External Device Port (with Port Cover)
- 5** External Display
- 6** Small Light
- 7** Strap Eyelet
- 8** Headphone Port (with Port Cover)
- 9** Charging Terminals
- 10** Memory Card Slot (with Slot Cover)
- 11** Internal Antenna Location
- 12** External Camera (lens cover)
- 13** Infrared Port
- 14** Speaker
- 15** Battery Cover

- Do not cover or place stickers, etc. over Internal Antenna area.
- Replace Port/Slot Cover after Port/Slot use.
- Avoid metallic straps; Antenna sensitivity may be affected.

#### Handset Positions

##### Handset Closed



Keep handset closed when not in use.


##### Handset Open



Open handset to place or answer calls, enter text, etc.

## Handset Keys

- Keys are indicated in this guide as shown.
- Change functions with **^** via Set Key Shortcut as needed.

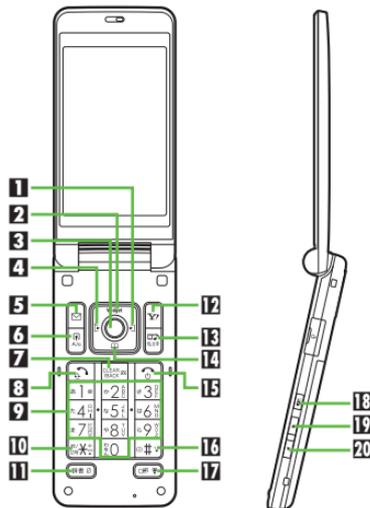

- 1 Multi Selector (right)** Open Received Calls. Long Press to activate/cancel Infrared<sup>®</sup>.
- 2 Multi Selector (up)** Open Mobile Widget window. Long Press to open PC Site Browser menu<sup>†</sup>.
- 3 Center Key** Open Main Menu. Long Press to activate/cancel Keypad Lock.

- 4 Multi Selector (left)** Open Dialed Numbers. Long Press to open Calendar<sup>†</sup>.
- 5 Mail Key** Open Messaging menu. Long Press to open SI Mail Composition window<sup>†</sup>.
- 6 Shortcuts & A/a Key** Open Shortcuts menu. Long Press to show active indicators (Status Icon List).
- 7 Clear/Back Key** Play Answer Phone messages. Long Press to activate/cancel Answer Phone.
- 8 Start Key** Open All Calls. Long Press to open Double Number Mode menu.
- 9 Keypad** Enter numbers to place calls or access functions (Quick Operations). Long Press to open Phone Book.
- 10 \* Key** Enter \*, +, P, ? and -. Long Press to open SI Friend's Status member list.
- 11 Dictionary Key** Open Dictionary. Long Press to activate/cancel VeilView.
- 12 Yahoo! Keitai Key** Open Yahoo! Keitai portal. Long Press to open Yahoo! Keitai menu<sup>†</sup>.
- 13 Multimedia & Text Key** Start Media Player. Long Press to open Change Menu window.
- 14 Multi Selector (down)** Open Phone Book. Long Press to create new Phone Book entries<sup>†</sup>.

- 15 Power On/Off Key** Toggle Standby display. Long Press to turn handset power off.
- 16 # Key** Enter #. Long Press to activate/cancel Manner mode.
- 17 Multi Job & Manner Key** Select handset mode. Long Press to activate/cancel Manner mode.

## Side Keys

- 18 S! Circle Talk Key** **Open:** Open S! Circle Talk member list. Long Press to activate mobile camera. **Closed:** Toggle Clock view.
- 19 Volume Up Key** **Closed:** Scroll External Display indicators.
- 20 Volume Down Key** **Closed:** Scroll External Display indicators.

## Multi Selector &amp; Side Keys

- In this guide, Multi Selector and Side Key operations are indicated as follows:


Press  or	
Press  or	
Press , ,  or	
Press  or	

## 1 Getting Started Charging Battery (AC Charger)

Getting Started

Battery must be inserted in handset to charge it.

- Use specified AC Charger **ZTDAA1** (sold separately) only. In this guide, ZTDAA1 is referred to as "AC Charger."
- Handset and AC Charger may warm during charging.

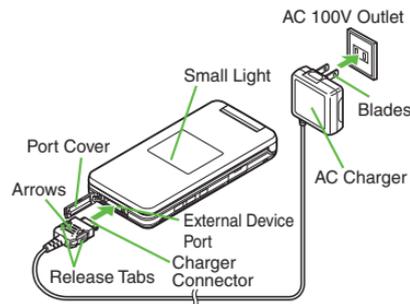

### Important AC Charger Usage Note

- Fold back blades after charging. Do not pull, bend or twist the cord.

 
### 1 Open Port Cover as shown



### 2 Insert Charger Connector


- With arrows up, insert connector until it clicks.

### 3 Extend blades and plug AC Charger into AC outlet



- Small Light illuminates red while charging.
- Small Light goes out when battery is full.

### 4 Unplug AC Charger

 

- Pull AC Charger straight out.

### 5 Disconnect handset

- Squeeze Charger Connector release tabs and pull straight out to remove.

### 6 Fold back blades and replace Port Cover

#### When Small Light Flashes

- Battery is unchargeable; may be defective or simply at the end of its life; replace it.

#### USB Charge

- Connect handset (with power on) to PC via USB Cable to charge battery.

#### Charging Battery Overseas


- SoftBank Mobile is not liable for problems resulting from charging battery abroad.

### Advanced

- Disabling USB Charge (P.1-24)

## Charging Battery (In-Car Charger)

In-Car Charger may be purchased separately.

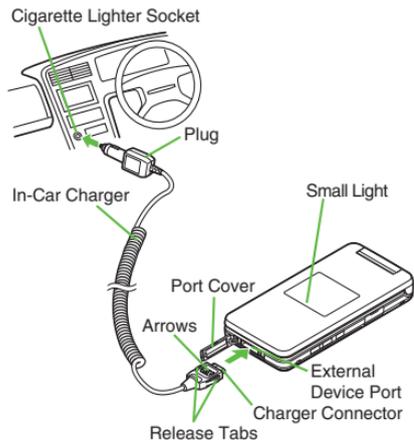

### 1 Open Port Cover as shown



### 2 Insert Charger Connector

- With arrows up, insert connector until it clicks.

### 3 Plug Charger into cigarette lighter socket

### 4 Start car engine

- Small Light illuminates red while charging.
- Small Light goes out when battery is full.

### 5 Unplug Charger

### 6 Disconnect handset

- Squeeze Charger Connector release tabs and pull straight out to remove.

### 7 Replace Port Cover

#### Important In-Car Charger Usage Notes

- Disconnect Charger before leaving vehicle to prevent charging with engine off.
- Do not use In-Car Charger with Desktop Holder.
- Avoid charging battery inside extremely hot vehicles.

# Handset Power On/Off

## Power On

Follow these steps when powering on 832SH for the first time:

 
### 1 (Long)

- After Power On Graphic, follow the steps below.

→ **設定**  
 → **Language** → **English**  
 → (Long) → (Long) → Change Menu window opens

### 2 Select option →

Guide descriptions are based on Standard Menu.



- My Details setup starts.

### 3 Enter last name → Enter first name →

- Change Menu display option confirmation appears.

### 4 Yes or No →



Standby

- Choose **No** to enter Standby immediately after powering on.
- Hereafter, most screenshots omit Mobile Widgets and Standby Shortcuts.

#### When USIM Card is Not Installed

- Insert USIM Card** appears; insert the card to use handset.

## Retrieving Network Information

Handset initiates Network Information retrieval when , , or is pressed for the first time.



Follow these steps to retrieve Network Information to use Network-related services and Camera; retrieval automatically sets Clock:

### 1 Yes →

### 2

## Power Off

### 1 (Long)


- After Power Off Graphic, handset shuts down.

## Display

### Standby



- Indicators (signal strength, battery strength, etc.) appear.
- Information window opens at the bottom for Missed Calls, new mail, etc.

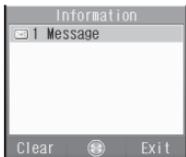

Information Window

- Information label (e.g., **Message**, etc.) and count appear in Information window. Select an item and press to open it.

### Softkeys

Functions/operations assigned to , , and appear at the bottom.



### Display Saving

- Display goes dark after Display Saving time elapses. Press any key to activate it.

### Backlight

- Backlight turns off after Time Out time elapses. Press - to illuminate it (key press may affect active function).

## Advanced

 
- Handling Information list (P.1-24)

# Indicators

## Display Indicators

, and indicate line type in Dual Mode (P.1-21).

### Basic Status



<b>1</b>		International roaming in progress
<b>2</b>		Signal strength <sup>1</sup>
<b>3</b>		Packet transmission protocol ready (3G)
		Packet transmission protocol ready (GSM)
		Packet transmission available (3G)
<b>4</b>		Packet transmission available (GSM)
		Battery strength (% <sup>2</sup> appears in turn)

<sup>1</sup>The more bars the better.


<sup>2</sup>Battery strength % is an approximation.

### Function Status


 
<b>1</b>		Active S! Application
		Paused S! Application
		Music playback in progress
<b>2</b>		Memory Card inserted
		Memory Card in use
<b>3</b>		Memory Card formatting
		Multiple functions (Multi Job) active

### Notifications




<b>1</b>		Unread mail
		Unread Delivery Report
<b>2</b>		Answer Phone active & message recorded
		Answer Phone canceled & message recorded
<b>3</b>		New Voicemail
<b>4</b>		Missed Call or new mail on idle line
<b>5</b>		S! Appli/Mobile Widget Notification
<b>6</b>		Contents Key received
<b>7</b>		Unread S! Information Channel info
		Software Update result
<b>8</b>		Unread S! Quick News info
		Unread S! Friend's Status notification or unanswered registration request

### Warnings


 
<b>1</b>		Mail memory low
<b>2</b>		Message delivery failure
<b>3</b>		Memory Card unusable/misinserted

## ■ Transmissions




		SSL browsing in progress <sup>1</sup>
1		Waiting packet transmission (3G)
		Waiting packet transmission (GSM)
2		Receiving mail
		Sending mail
3		S! Friend's Status online
		Positioning in progress <sup>2</sup>
4		Software Update in progress
5		USB Cable connected
		USB transmission in progress
		Infrared transmission in progress
		Infrared file transfer in progress
		S! Addressbook Back-up transmission in progress
		PC Site Browser in use
6		RSS-compatible site
7		Weather Indicator
8		Infrared transmission ready

<sup>1</sup>Hidden while Mobile Widget is in use.

<sup>2</sup>Flashes while positioning.

## ■ Settings

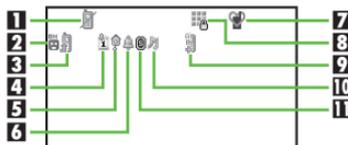

1		Offline Mode active
2		Answer Phone active
3		Call Forwarding or Voicemail active (forwarding condition: <b>Always</b> ) <sup>*</sup>
4		Schedule/Task (Alarm set)
		Schedule/Task (Alarm unset)
5		Hour Minder active
6		Alarm set
7		Manner mode active
		Drive mode active
		Original mode active
		VeilView active
8		Keypad Lock active
9		Auto Answer or Remote Monitor active

	Ringtone (Silent)
10	Ringtone (Increasing Volume)
	Vibration active
11	Show Secret Data active
	Function Lock active

<sup>\*</sup>Indicator does not appear when Call Forwarding is set to Video Calls only, with Voicemail unset.

## External Display Indicators

### Basic Status



- |   |                               |
|---|-------------------------------|
| 1 | Signal strength <sup>1</sup>  |
| 2 | Battery strength <sup>2</sup> |

<sup>1</sup>The more bars the better.

<sup>2</sup>Battery strength % is an approximation.

### Notifications



- |    |                                    |
|----|------------------------------------|
| 1  | Missed Calls                       |
| 2  | Answer Phone message recorded      |
| 3  | Missed Call Notification           |
| 4  | New Voicemail                      |
| 5  | Unread mail                        |
| 6  | Unread Delivery Report             |
| 7  | Contents Key received              |
| 8  | Unread S! Information Channel info |
| 9  | Weather Indicator update           |
| 10 | Weather Indicator                  |

### Warnings



- |   |   |
|---|---|
| 1 | Message delivery failure                      |
| 2 | S! Information Channel info reception failure |
| 3 | Decoration Call transmission failure          |
| 4 | IP Service connection failure                 |
| 5 | Weather Indicator update failure              |

### Handset Status



- |   |  |
|---|--|
| 1 | Alarm                                  |
| 2 | Schedule Alarm                         |
| 3 | Task Alarm                             |
| 4 | S! Appli/Mobile Widget Notification    |
| 5 | Unread S! Friend's Status notification |

### External Display Date & Time

- Press to toggle Clock view.


## Accessing Functions

Use the following methods as needed.


### Main Menu



**Repeat menu item selection.**

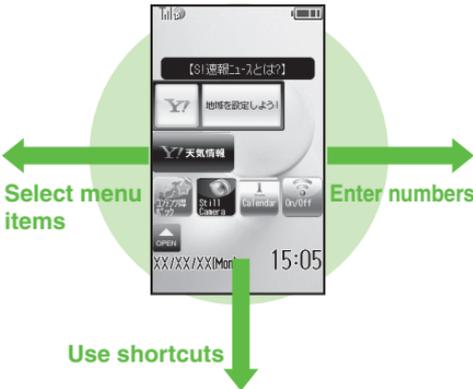

### Quick Operations

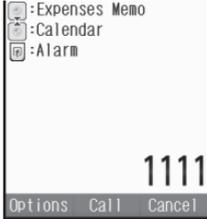


**Enter numbers to access functions. To activate functions, press the corresponding key.**

### ■ Shortcuts



**Access assigned functions (changeable).**

### ■ Key Shortcut

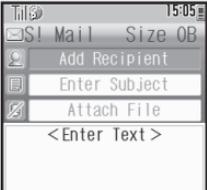

**Long Press , , or  to access assigned functions (changeable).**

### ■ Standby Shortcuts



**Save functions to Standby.**

Access a function in Shortcuts menu while another is active, then toggle function windows as needed.

# Main Menu


## Menu Item Selection

1 



- Main Menu opens.

2 Use  to select menu item

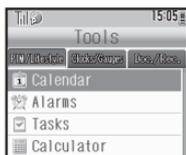

- Menu/window opens.
- If Sub Menu opens, use  to select an item and press .

### Tabs

- Menus/lists in a single window appear in separate tabs; use  to toggle tabs.



Tab

### Reverse Navigation

- Press . If a confirmation appears, follow onscreen prompts.

### Returning to Standby

- Press . If a confirmation appears, follow onscreen prompts.

### Simple Menu

- Simplify menus and enlarge fonts; ideal for users who use only basic handset functions.

## Main Menu Items

<b>Messaging</b>	Open/create messages, etc.
<b>Yahoo! Keitai</b>	Browse the Internet
<b>S! Appli</b>	Use S! Applications including games
<b>Dictionary</b>	Look up words in dictionaries
<b>Camera</b>	Capture images or record video
<b>Entertainment</b>	Read e-Books, receive news updates, etc.
<b>Tools</b>	Manage schedules, set Alarm, scan QR Codes, etc.
<b>Data Folder</b>	Open files saved on handset/Memory Card
<b>Media Player</b>	Play/download media files
<b>Communication</b>	Communicate with other users in various ways
<b>Phone</b>	Search contacts, add entries, etc.
<b>Settings</b>	Customize handset interface, sounds, etc.

# Shortcuts Menu & Key Shortcut

## Shortcuts Menu

Access assigned functions via Shortcuts menu.



Shortcuts Menu



- Menu/window opens.

### Changing Default Shortcuts

In 2, select numbered function   
 ➔ **Assign Function** ➔ **Select menu item** ➔ **Select new item**

- To assign menu items, select one and press .

### Assigning Files & Folders

In 2, select numbered function   
 ➔ **Assign Data** ➔ **Select file/folder**

- For folders, select **Set this folder** and press .

 
## Key Shortcut

In Standby, Long Press , or to access assigned functions.


	Open S! Mail Composition window
	Open PC Site Browser menu
	Create new Phone Book entries
	Open Calendar
	Activate/cancel Infrared
	Open Yahoo! Keitai menu

## Changing Assigned Functions

Follow these steps to assign Calculator to :



Key Shortcut Menu

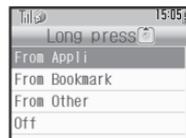

### Bookmark

In 4, **From Bookmark** ➔   
 Select title ➔ ➔ **Yes**

Infrared or Show Secret Data On/Off

In 4, **From Other** ➔ ➔ **Select item**

### Canceling Assigned Function

In 4, **Off**

## Advanced

- Changing item order
- Restoring default shortcuts (P.1-24)

# 1 Getting Started

## Toggling Active Functions (Multi Job)

### Multi Job Feature

Access a function in Shortcuts menu while another is active.

While browsing the Internet



① Open Scratch Pad

② Toggle windows



Jot down information


Multi Job may not activate from some menus/windows (e.g., ringtone/ringvideo selection, etc.).

### Using Multi Job

① In a function window, In text entry/dial windows, Long Press .





② Select function

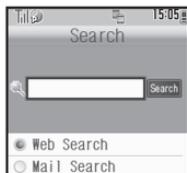

• Menu/window opens.

 ③ To toggle active windows,

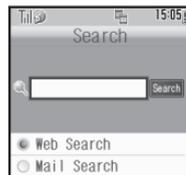



④ Multi Job ends

• If a confirmation appears, follow onscreen prompts.

## Standby Shortcuts

  Paste shortcuts to functions, files, folders, etc. to Standby for easy access.

### Saving Shortcuts to Standby

- 
  - Pointer (☞) appears.
-  Use  to select  (OPEN)
 

  - Press  to toggle selection.
  - Alternatively, use  to point to  (OPEN) and press .
- 

-  **Select item** 
  - Corresponding icon appears in Standby.
  - >> appears when more items are available.

### Advanced

-   Reversing icon selection order with   Editing sheet names  Locking sheets (P.1-24)

-  Use  to specify target location 

### Saving from Menu/Window

- In Options menu, select **Set as StbyShortcut** (may not appear for some items); select sheet as needed.

### Removing Shortcuts from Standby

-   Use  to select icon   **Operation**   **Remove**   **Yes** 

### Moving Icons

-   Use  to select icon   **Operation**   **Change Layout**   **Specify target location** 

### Moving Icons to Front/Back

-   Use  to select icon   **Operation**   **To Front or To Back** 

### Using Shortcuts

-   Use  to select icon 
  - Menu/window opens or command is executed.

### toggling Sheets

Toggle sheets to use Standby Shortcuts and widgets pasted on each sheet.

-    **(Long)**



- To toggle further, Long Press  or press .
- Sheet name appears at the top, then disappears.
- Save Standby Shortcuts as needed; corresponding icons appear on the current sheet.

### Using Locked Sheets

-   **Select**   **Enter Handset Code** 

# 1 Using Simplified Menu (Simple Menu)

Getting Started

## Simple Menu Features

Activate Simple Menu to reduce available handset functions and simplify menus.



- Fonts are enlarged and appear in bold.
- Clock is enlarged (Calendar is hidden).


## Menu Items

<b>Messaging</b>	Received Msg., Create Msg., Drafts, Templates, Sent Messages, Unsent Msg., Create SMS
<b>Phone</b>	Phone Book, Add New Entry, Play Messages, Answer Phone, Call VM, My Details, Speed Dial/Mail
<b>Camera</b>	Photo Camera, Video Camera, Scan Barcode, Scan Card, Scan Text, Review, Camera Settings, Video Settings
<b>Convenient Tool</b>	Calendar, Alarms, Calculator, Assignment, Notepad, S! Friend's Status, S! Circle Talk, Double Number, Change Menu
<b>Data Folder</b>	-
<b>Dictionary</b>	-

Key assignments are largely the same as those in Standard Menu.

## Activating Simple Menu

### 1 (Long)

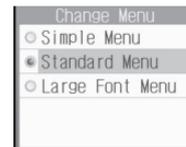

### 2 *Simple Menu* ➔

#### While Using an Incompatible Function

- End the function before activating Simple Menu.

#### Canceling Simple Menu

 (Long) ➔ *Standard Menu* ➔

## Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Turn it off in theaters, museums and other places where silence is the norm.
- Refrain from using it in restaurants, hotel lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

### Manner Mode

Mutes most handset function sounds.

#### 1 (Long)



- Manner mode is set.

#### When Manner Mode is Active

- Ringtones and other sounds are muted.
- 832SH vibrates for transmissions/alerts.
- Shutter click still sounds at fixed volume.

#### Canceling Manner Mode

##### (Long)

### Offline Mode


Temporarily suspends all transmissions.

#### 1 **Settings**

#### **Network**

#### 2 **Offline Mode**

#### 3 **On**

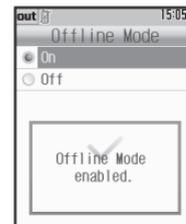

- Offline Mode is set.

#### Canceling Offline Mode

##### In **Off**

## Advanced

-   Changing handset modes
-  Creating a custom mode
-  Resetting Mode Settings (P.1-25)

## Security Codes

These codes are required for handset use.

- Write down Security Codes.
- Do not reveal Security Codes. SoftBank Mobile is not liable for misuse or damages.

<b>Handset Code</b>	9999 by default; use or change some functions
<b>Center Access Code</b>	4-digit code selected at contract; access Optional Services via landlines or change contract details
<b>Network Password*</b>	4-digit code selected at contract; restrict incoming/outgoing calls (Call Barring)

\*Change as needed.

### Incorrect Code Entry

- **Handset code is incorrect!** appears; try again.
- If Network Password is incorrectly entered three times consecutively, Call Barring settings are locked. To resolve, Network Password and Center Access Code must be changed.

### Changing Handset Code

Enter four to eight digits for new Handset Code.

1 → **Settings** →




Phone Menu

2 **Locks** →




3 **Chg. Handset Code** →

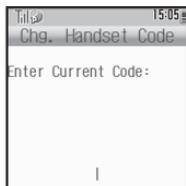

4 **Enter current Handset Code**



5 **Enter new Handset Code** →

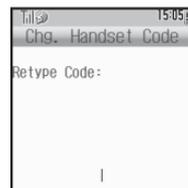

6 **Re-enter new Handset Code**



## My Details & Basic Tools

### My Number



- Handset phone number and the name entered at initial setup appear.

### Editing My Details

After 1,  (select tab)  Select item   Select item   Edit 

### VeilView

Activate VeilView to prevent peeking.



### Canceling VeilView

 (Long)

### Keypad Lock

Lock handset keys and prevent accidental operation/function activation.



- Keypad Lock activates.
-  does not turn off handset power.

### Incoming Calls while Keypad Lock is Active

- Keypad Lock is temporarily canceled; press  to answer calls. Keypad Lock reactivates after the call.

### Canceling Keypad Lock

 (Long)

### Battery Meter



### Clocks/Gauges



- Approximate battery strength appears.

### Changing Battery Strength Indicator Pattern

After 2,   Select pattern  

- Remaining time is approximated for current handset usage pattern.

## Advanced

-   Clearing My Details  Toggling My Details in Dual Mode  Changing battery strength indicator pattern  Changing VeilView pattern/density (P.1-25)


## Phone Help

Access this handy guide to handset settings and key functions/shortcuts.

1  → **Tools** →  → 

**Doc./Rec.**

2 **Phone Help** → 

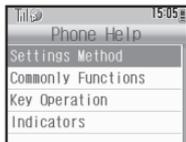

3 **Select item** → 

- For **Indicators**, select category and press .

## Indicator Descriptions

Check active indicators and their descriptions. (Status Icon List)

1  (Long)




- Active indicators are enlarged; description for selected indicator appears.
- Use  to select indicators to view their descriptions.
- Press  to open menu/window (e.g., Battery Meter window from battery strength indicator). May be unavailable for some indicators.

## Using Double Number

Manage two accounts (Line A and Line B, with separate phone numbers and mail addresses) on one handset.

- Double Number requires a separate contract and basic monthly fee.
- While abroad, any Line B messaging charges are applied to Line A.
- For more information, contact SoftBank Mobile Customer Center, General Information (P.14-39).

### Two Phone Numbers & Two Mail Addresses

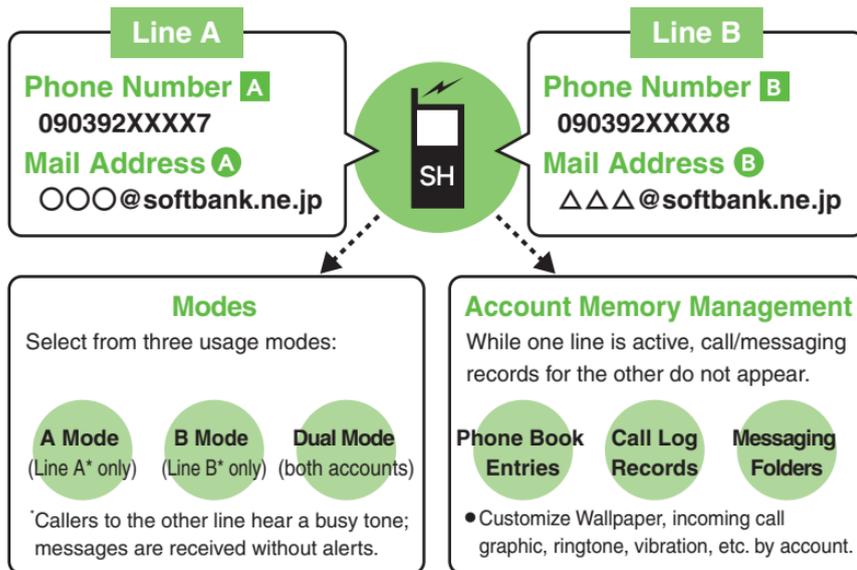

### Activating Double Number

Make sure signal is stable.

- 1  → **Settings** →
- 2 In Phone menu, **Double Number** →
- 3 **Switch On/Off** →
- 4 **On** →
- 5 **Enter Handset Code** →   
→ **Yes** →

### Canceling Double Number

- In 4, **Off** →  → 5
- When Double Number is canceled:
    - Line B calls and SMS messages are redirected to Line A Phone Number.
    - Initial portion of Line B S! Mail is redirected to Line A. (Full messages are irretrievable.)
    - Double Number account is not affected.

# Modes

Activate **A Mode** to use Line A only, **B Mode** to use Line B only, or **Dual Mode** to use both accounts.

## A Mode

### Receive Calls to Line A Only

- Place calls or send messages via Line A.

#### A Mode & B Mode Precautions

- Line indicators do not appear in Phone Book entries, message lists, Call Log records, etc.
- When an operation affects information on the other line, a confirmation appears. Follow onscreen prompt(s).

## B Mode

### Receive Calls to Line B Only

- Place calls or send messages via Line B.

#### B Mode Restrictions

- Handset connects to the Internet via Line A. (During Internet connections, place/receive calls via Line B.)
- S! Friend's Status, S! Circle Talk and Decoration Call are unavailable.

## Advanced

- Omitting Handset Code entry when switching modes
- Renaming Double Number modes
- Showing indicator for calls missed or new mail on idle line
- Hiding Internet connection confirmation (P.1-26)

## Dual Mode

## Receive Calls to Both Accounts

- Place calls or send messages via Line A (or the account of record for Phone Book entries or Call Log records) by default; toggle accounts as required.

## Phone Book Entries

Specify A, B or Dual.

## Messaging

Select Line A or Line B.  
Sender Address changes accordingly.

## Calling

Select Line A or Line B.  
Caller ID changes accordingly.

-  **B** and  indicate line type in Phone Book entries, message lists, Call Log records, etc.

## Switching Modes

-  (Long)
- Enter Handset Code ➔ 
- Select mode ➔ 
  - For *B Mode* confirmation appears.
- Yes ➔ 

## Saving Modes to Phone Book Entries

-  ➔ *Phone* ➔  ➔ *Add New Entry* ➔ 
- Mode:* ➔  ➔ *Select mode* ➔ 

## Entries Saved with Double Number Off

- Dual* is set automatically.

## Advanced

-  Rejecting calls to either line in Dual Mode
-  Setting main line for Dual Mode (P.1-26)

## USB Charge

Disabling USB Charge: [OK] → Settings → [OK] → Connectivity → USB Charge → [OK] → Disable → [OK]

## Information

Handling Information list: [Start Here] [OK] → Phone → [OK] → See below

Opening List Manually Information → [OK]

Clearing List Information → [OK] → [OK] → Yes → [OK]

## Shortcuts

Changing item order: [OK] → Select numbered function → [OK] → Move → [OK] → Select target location → [OK]

Restoring default shortcuts: [OK] → Select numbered function → [OK] → Set to Default → [OK] → Yes → [OK]

## Standby Shortcut (Sheets)

Reversing icon selection order with [OK]: [OK] → [OK] → Move Focus(Reverse) → [OK]

- To cancel, select *Move Focus(Order)*.

Editing sheet names: [Start Here] [OK] → [OK] → Sheet Settings → [OK] → Change Sheet Name → [OK] → See below

Renaming: Select sheet → [OK] → Enter name → [OK]

Resetting All Sheet Names: [OK] → Yes → [OK]

Locking sheets: [Start Here] [OK] → [OK] → Sheet Settings → [OK] → Set Sheet Lock → [OK] → Enter Handset Code → [OK] → See below

Activating Lock: Select sheet → [OK] → On → [OK]

Changing Method for Temporary Access: Unlock Method → [OK] → No Password → [OK]

- Press [OK], then select [OK] and press [OK] to unlock sheet temporarily.

Mode	
Changing handset modes	<p><b>Start Here</b> → <b>Settings</b> → <b>In Phone menu, Mode Settings</b> → See below</p> <p><b>Selecting a Handset Mode</b></p> <p>Select mode →</p> <p><b>Customizing Handset Modes</b></p> <p>Select mode → Select item →</p> <p><b>Adjust settings</b></p> <ul style="list-style-type: none"> <li>Not available for Normal mode.</li> </ul>
	<p>→ <b>Settings</b> → <b>In Phone menu, Mode Settings</b> → <b>Original</b> → Select item →</p> <p>→ Adjust settings</p>
	<p>→ <b>Settings</b> → <b>In Phone menu, Mode Settings</b> → Select mode → Enter Handset Code → Yes →</p>
My Details	
Clearing My Details	<p>→ <b>Reset My Details</b> → Yes →</p>
Toggling My Details in Dual Mode	<p>→ <b>Switch to B or Switch to A</b> →</p>

## Battery Meter

Changing battery strength indicator pattern	<p>→ <b>Settings</b> → <b>In Phone menu, Display</b> → <b>Mini Battery</b> → Select pattern →</p> <ul style="list-style-type: none"> <li>For patterns other than <b>Clock &amp; Battery</b>, indicators appear in turn. To change interval, press .</li> <li>For <b>Battery level</b> (or <b>Level</b>), approximate battery strength appears as a percentage.</li> <li><b>Remaining time</b> is approximated for current handset usage pattern.           <ul style="list-style-type: none"> <li>Remaining time is hidden while charging.</li> </ul> </li> </ul>

## VeilView

Changing VeilView pattern/density	<p><b>Start Here</b> → <b>Settings</b> → <b>In Phone menu, Display</b> → <b>VeilView</b> → See below</p> <p><b>Pattern</b></p> <p><b>Pattern Setting</b> → Select pattern →</p> <p><b>Pattern Scale</b></p> <p><b>Scale Setting</b> → Select scale or <b>Animation</b> →</p> <p><b>Pattern Color</b></p> <p><b>Color Setting</b> → Select color →</p> <p><b>Density</b></p> <p><b>Density Setting</b> → Adjust density →</p> <ul style="list-style-type: none"> <li>For <b>Density:2</b> or <b>Density:3</b>, use before pressing to adjust the pattern appearance for straight view.</li> </ul>

## Double Number

## ■ All Modes

Omitting Handset Code entry when switching modes	[ ] → <i>Settings</i> → [ ] → In Phone menu, <i>Double Number</i> → [ ] → <i>Password Entry</i> → [ ] → <i>Off</i> → [ ] → <i>Enter Handset Code</i> → [ ]
Renaming Double Number modes	[ ] → <i>Settings</i> → [ ] → In Phone menu, <i>Double Number</i> → [ ] → <i>Mode Name</i> → [ ] → <i>Select mode</i> → [ ] → <i>Enter name</i> → [ ] → <i>Select icon</i> → [ ]

## ■ A Mode &amp; B Mode

Showing indicator for calls missed or new mail on idle line	[ ] → <i>Settings</i> → [ ] → In Phone menu, <i>Double Number</i> → [ ] → <i>Show Missed</i> → [ ] → <i>On</i> → [ ]
Hiding Internet connection confirmation	[ ] → <i>Settings</i> → [ ] → In Phone menu, <i>Double Number</i> → [ ] → <i>Packet Warning</i> → [ ] → <i>Off</i> → [ ] • Available for B Mode.

## ■ Dual Mode

Rejecting calls to either line in Dual Mode	[ ] → <i>Settings</i> → [ ] → In Phone menu, <i>Double Number</i> → [ ] → <i>Reject By Line</i> → [ ] → <i>Select line</i> → [ ] → <i>On</i> → [ ]
Setting main line for Dual Mode	[ ] → <i>Settings</i> → [ ] → In Phone menu, <i>Double Number</i> → [ ] → <i>Send Priority</i> → [ ] → <i>Select option</i> → [ ]

## Battery Meter

### ? --- appears

- Calculating time; not a malfunction.

### ? 100% does not appear

- This is by design; not a malfunction.

### ? Battery runs out faster

- A low ambient temperature reduces battery time.
- An older battery may run out faster.

### ? Remaining time changes suddenly

- Time estimated by handset status; estimate may take time to appear.