

**Media Player** ..... 7-2  
Media Basics ..... 7-2  
**Music** ..... 7-4  
Playing Music..... 7-4  
**Video** ..... 7-5  
Playing Video..... 7-5

**Playlists** ..... 7-6  
Using Playlists ..... 7-6  
**S! Appli** ..... 7-7  
Using S! Applications ..... 7-7  
**Additional Functions** ..... 7-8  
**Troubleshooting**..... 7-13

# 7

## Media Player & S! Applications



## Media Basics

Use Media Player to play music/video on 832SH.

- Download media files from Mobile Internet sites via Media Player directly.
- Transfer PC music files and save them on Memory Card.

### Music File Support

#### My Music

(Handset/Memory Card)

Downloads/Transferred Files

#### SD AUDIO

(Memory Card)

Transferred SD-Audio Files

### Video File Support

#### My Videos

(Handset/Memory Card)

Downloads/Recorded Files

When using a Memory Card with SD-Video files recorded on other devices, open them from **SD VIDEO**.

### Playback Precautions

- Media Player is not compatible with some recording/playback formats. Files may not play depending on the Memory Card status.
- Playback stops for incoming calls.
- When battery is low, Media Player will not play. Playback stops if battery runs low during playback.
- Turn down the volume if distortion is noticeable in Speaker sound.
- Handset plays media while it downloads (streaming); downloaded media cannot be saved. Packet transmission fees apply even while stream is paused.

### Compatibility


- Files transferred from PCs cannot be used as ringtones or System Sounds.



## Downloading Media Files

Download media files from the Internet. Read information (price, expiry date, etc.) on the source site.

1 

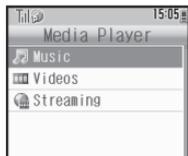

Media Player Menu

2 **Music or Videos** ➔ 

3 **Download Music or Download Videos** ➔ 

- Follow the links to download media.

### Download via Music Search (Japanese)

In  **Music Search** ➔ 

- Follow onscreen instructions.

## Saving Music Files from PCs

- Use software to convert music file format.
- For software usage and specifications, see the provider's website, etc.
- SoftBank Mobile does not guarantee compatibility with any software.
- USB Cable may be purchased separately.

### Handling Transferred Files

- Copyright laws limit duplicated material to private use only.
- Files created with PC software, etc. may not play.
- Comply with copyright and other intellectual property laws when using obtained files.

### Saving AAC Files

Convert PC music files to 832SH-compatible format (P.14-20), then save to corresponding Memory Card folder (P.14-23) via Mass Storage. Install USB Cable driver beforehand.



# Playing Music

1 → **Music** →


2 **My Music** → → **Select tab (folder)**



Music Playlists Window

3 **All Music** →

4 **Select file** →

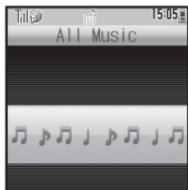

Music Playback Window

- Album art appears for compatible Chaku-Uta Full® files.

## Using Other Functions while Playing Music

After , or

- To stop playback, follow these steps in Standby:

→ **Yes** →

## Playing SD AUDIO Files

In , **SD AUDIO** → → **From**

## Searching Music Files

After , → **Search** → → **Enter search text** →

## Lyric Display-Compatible Files


- Press to display lyrics.

## Music Playback Operations

<b>Replay</b>	(Long Press: rewind <sup>1</sup> )
<b>Skip Forward</b>	(Long Press: fast forward <sup>1</sup> )
<b>Volume Down</b>	(Long Press: mute)
<b>Volume Up or Cancel Mute</b>	
<b>Pause</b>	
<b>Stop</b>	While paused,
<b>Open Help</b>	

<sup>1</sup>Release for playback.

## Music Playback Window Description

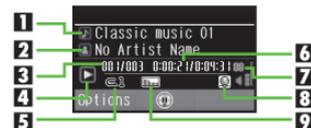

<b>1</b>	Title	<b>6</b>	Elapsed time
<b>2</b>	Artist name	<b>7</b>	Volume
<b>3</b>	Track number	<b>8</b>	Information link
<b>4</b>	Status	<b>9</b>	Sound Effects
<b>5</b>	Playback Mode		

## Advanced

- Resuming from stopped point
- Specifying start point
- Accessing linked information
- Playing repeatedly or randomly
- Changing Sound Effects (P.7-8)



## Playing Video

1 → **Videos** →


2 **My Videos** → → **Phone Memory or Memory Card** →



Video Playlists Window

3 **All Videos** →

4 **Select file** →

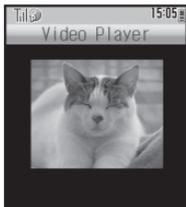

Video Playback Window

5 → **Playback stops**

### Playing SD VIDEO Files

In 2, **SD VIDEO** → → 4

### Searching Video Files

After , → **Search** → → Enter search text →

### At Alarm Time

- Playback stops.

### Video Recorded on Other Devices

- Video image may appear rotated.

### Video Playback Operations

For pause, volume up/down or help, see P.7-4 "Music Playback Operations."

<b>Replay</b>	(Long Press: rewind')
<b>Skip Forward</b>	(Long Press while paused: advance frame, Long Press: fast forward*)
<b>Toggle Display Size</b>	

\*Release for playback.

### Video Playback Window Description



1	Title	6	Elapsed time
2	Author name	7	Volume
3	Clip number	8	Information link
4	Status	9	Sound Effects
5	Playback Mode		

### Advanced

- Resuming from stopped point
- Specifying start point
- Accessing linked information
- Playing repeatedly or randomly
- Changing Sound Effects
- Changing playback size
- Setting Backlight status
- Hiding linked information (P.7-8)



## Using Playlists

Playlists store playback orders. Add favorite media files to Playlists, or organize files by artist/genre. Playlists store only file locations. Source files remain in All Music or All Videos.

### Adding to Playlist


Follow these steps to add a music file to **プレイリスト**:

**1** → **Music** →



**2** **My Music** →


**3** **All Music** → → **Select file** →

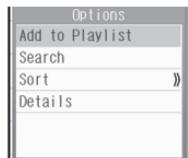

**4** **Add to Playlist** → → **プレイリスト** →

### Renaming Playlists

**1** In Playlists window, select **Playlist** →

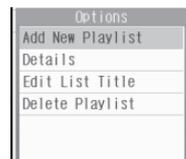

**2** **Edit List Title** → → **Enter name** →



### Advanced

- Organizing Playlists ● Sorting files ● Opening properties ● Deleting/editing SD AUDIO files ● Downloading Contents Keys (P.7-9)
- Organizing Playlists ● Sorting files ● Downloading Contents Keys ● Opening properties ● Deleting SD VIDEO files (P.7-10)



## Using S! Applications

Try out the preloaded S! Applications or download and use 832SH-compatible S! Applications, including games. Refer to the S! Application's help menu or the source Internet site, etc. for operational instructions.

1 → **S! Appli** →

2 **S! Appli Library** →



S! Appli Library

3 **Select application** →

### Network S! Applications

- A message appears indicating that Internet connection is required. Follow onscreen instructions.

### Incoming Calls

- Incoming calls automatically pause S! Application.

### Opening S! Appli Notification History

In , **Notification History** →

## Exiting S! Applications

1



2 **End** →

### Pausing S! Applications

In , **Suspend** →

### Resuming S! Applications

→ **Resume** →

- Select **Cancel** to open Main Menu and keep the S! Application paused. (Additional function activation may be disabled depending on the S! Application.)
- Select **End** to end the S! Application.

## Advanced

- Downloading S! Applications ● Adjusting S! Application sound volume ● Canceling surround effect ● Setting handset responses to incoming transmissions ● Setting S! Application to activate in Standby ● Setting Permissions ● Opening properties (P.7-11)
- Moving S! Applications to Memory Card ● Changing S! Application settings ● Deleting S! Applications ● Restoring default S! Application settings
- Restoring default S! Appli Library ● Synchronizing Memory Card S! Applications with 832SH ● Opening Java™ license information (P.7-12)



## Media Playback

### Music & Video

Resuming from stopped point	→ <i>Music or Videos</i> →  → <i>Last Played Music or Last Played Video</i> →
Specifying start point	During playback,  → <i>Time Search</i> →  → Enter time →
Accessing linked information	During playback,  → <i>Access Web Link</i> →  → Yes →

### Music

Playing repeatedly or randomly	During playback,  → <i>Playback Mode</i> →  → See below
	<i>Repeat One File</i> <i>Repeat</i> →
	<i>Repeat All Files</i> <i>Repeat All</i> →
	<i>Play Randomly</i> <i>Random</i> →
Changing Sound Effects	During playback,  → <i>Sound Effects</i> →  → Select effect →

## Video

Playing repeatedly or randomly	During playback,  → <i>Settings</i> →  → <i>Playback Mode</i> →  → See below
	<i>Repeat One File</i> <i>Repeat</i> →
	<i>Repeat All Files</i> <i>Repeat All</i> →
	<i>Play Randomly</i> <i>Random</i> →
Changing Sound Effects	During playback,  → <i>Settings</i> →  → <i>Sound Effects</i> →  → Select effect →
Changing playback size	During playback,  → <i>Settings</i> →  → <i>Display Size</i> →  → Select size →
Setting Backlight status	During playback,  → <i>Settings</i> →  → <i>Backlight</i> →  → Select option → <ul style="list-style-type: none"> <li>• Selecting <i>Normal Settings</i> applies Display Backlight settings.</li> </ul>
Hiding linked information	During playback,  → <i>Settings</i> →  → <i>Web Link Setting</i> →  → Off →



## Managing Music Files

Organizing Playlists	<p><b>Start Here</b> → <b>Music</b> → <b>My Music</b></p> <p>Select tab (folder) → See below</p> <p><b>Adding New Playlists</b></p> <p>Add New Playlist → Enter name</p> <p><b>Deleting Playlists</b></p> <p>Select Playlist → Delete Playlist → Yes</p> <p><b>Deleting Playlist Files</b></p> <p>Select Playlist → Select file → Delete → Yes</p> <p><b>Changing File Order</b></p> <p>Select Playlist → Select file → Change Order → Move file</p>
	<p><b>Sorting files</b></p> <p>Music → My Music</p> <p>Select tab (folder) → All Music → Sort → Select option</p>
	<p><b>Opening properties</b></p> <p><b>SD AUDIO Files</b></p> <p>SD AUDIO → All Music → Select file → Details</p> <p><b>Other Files</b></p> <p>My Music → Select tab (folder) → Select Playlist → Select file → Details</p>
	<p><b>Start Here</b> → <b>Music</b> → See below</p>

## Deleting/editing SD AUDIO files

**Start Here** → **Music** → **SD AUDIO**

See below

**Deleting Single Files**

All Music → Select file → Delete Track → Yes

- Source files will be deleted.

**Deleting All Files**

All Music → Del. All Tracks → Yes → Yes

- Source files will be deleted.

**Editing Title/Artist**

All Music → Select file → Edit → Select item → Enter title or name

## Downloading Contents Keys

Music → My Music

Select tab (folder) → Select Playlist → Select file (with ⌘) → Yes

- Follow onscreen instructions.



## Managing Video Files

Organizing Playlists	<p>Start Here   Videos   My Videos   </p> <p> Phone Memory or Memory Card   </p> <p>See below</p> <p><b>Adding New Playlists</b></p> <p>  Add New Playlist   Enter name  </p> <p><b>Deleting Playlists</b></p> <p>Select Playlist   Delete Playlist   </p> <p>Yes </p> <p><b>Deleting Playlist Files</b></p> <p>Select Playlist   Select file   </p> <p>Delete   Yes  </p> <p><b>Changing File Order</b></p> <p>Select Playlist   Select file   </p> <p>Change Order   Move file  </p>
	<p>  Videos   My Videos   </p> <p>Phone Memory or Memory Card   All Videos   Sort   Select option  </p>
	<p>  Videos   My Videos   </p> <p>Phone Memory or Memory Card   All Videos   Select file (with )   </p> <p>Yes </p> <p>• Follow onscreen instructions.</p>
	Sorting files

Opening properties	<p>Start Here   Videos     See below</p> <p><b>SD VIDEO Files</b></p> <p>SD VIDEO   Select file   Details   </p> <p><b>Other Files</b></p> <p>My Videos     Phone Memory or Memory Card   Select Playlist   Select file   Details   </p>
	<p>  Videos   SD VIDEO   Select file   Delete   Yes   </p> <p>• Source files will be deleted.</p>



## S! Applications

Downloading S! Applications	<ul style="list-style-type: none"> <li>● → S! Appli → ● → S! Appli Library → ●</li> <li>→ Download → ●</li> <li>● Follow onscreen instructions.</li> </ul>
Adjusting S! Application sound volume	<ul style="list-style-type: none"> <li>● → S! Appli → ● → Settings → ● →</li> <li>Application Volume → ● → Adjust level → ●</li> </ul>
Canceling surround effect	<ul style="list-style-type: none"> <li>● → S! Appli → ● → Settings → ● →</li> <li>Surround → ● → Off → ●</li> </ul>
Setting handset responses to incoming transmissions	<ul style="list-style-type: none"> <li>Start Here ● → S! Appli → ● → Settings → ●</li> <li>→ Calls &amp; Alarms → ● → See below</li> </ul>
	<p>Showing Calls</p> <ul style="list-style-type: none"> <li>Select item → ● → Show Call Notice → ●</li> </ul>
	<p>Pausing S! Application for Incoming Mail</p> <ul style="list-style-type: none"> <li>Incoming Message → ● → Message Priority → ●</li> </ul>
	<p>Showing Alarm Notice</p> <ul style="list-style-type: none"> <li>Alarm → ● → Alarm Notice → ●</li> </ul> <p>Showing Incoming S! Appli Request Notice</p> <ul style="list-style-type: none"> <li>Notification → ● → Start Notice → ●</li> </ul>

## Setting S! Application to activate in Standby

	<ul style="list-style-type: none"> <li>Start Here ● → S! Appli → ● → See below</li> </ul>
	<p>Activating Screensaver</p> <ul style="list-style-type: none"> <li>Settings → ● → Screensaver → ● → Switch On/Off → ● → On → ●</li> </ul>
	<p>Setting Screensaver</p> <ul style="list-style-type: none"> <li>S! Appli Library → ● → Select application → ●</li> <li>→ As Screensaver → ●</li> <li>● As Screensaver appears for compatible S! Applications.</li> <li>● Screensaver may not start or operate correctly when an external device (Headphones, etc.) is connected to handset.</li> </ul>
	<p>Changing Screensaver Activation Time</p> <ul style="list-style-type: none"> <li>Settings → ● → Screensaver → ● →</li> <li>Activation Time → ● → Enter time → ●</li> </ul>
	<p>Disabling Automatic Screensaver Restart</p> <ul style="list-style-type: none"> <li>Settings → ● → Screensaver → ● → Stop Auto Start → ● → On → ●</li> </ul>
Setting Permissions	<ul style="list-style-type: none"> <li>Start Here ● → S! Appli → ● → S! Appli Library → ● →</li> <li>Select application → ● → Permission → ● → See below</li> </ul> <p>Customizing Permissions for S! Appli Operations</p> <ul style="list-style-type: none"> <li>Select item → ● → Select option → ●</li> </ul> <p>Resetting Permission Settings</p> <ul style="list-style-type: none"> <li>Reset Settings → ● → Yes → ●</li> </ul>
Opening properties	<ul style="list-style-type: none"> <li>● → S! Appli → ● → S! Appli Library → ●</li> <li>→ Select application → ● → Details → ●</li> </ul>



Moving S! Applications to Memory Card	<p> <input type="checkbox"/> → <b>S! Appli</b> → <input type="checkbox"/> → <b>S! Appli Library</b> → <input type="checkbox"/>            → <input type="checkbox"/> → <b>Select application</b> → <input type="checkbox"/> ( <input type="checkbox"/>/ <input checked="" type="checkbox"/> ) →  <b>Complete selection</b> → <input type="checkbox"/> → <b>Move to Card</b> → <input type="checkbox"/> </p> <ul style="list-style-type: none"> <li>When an older version of the S! Application is saved, choose <b>Yes</b> or <b>No</b> and press <input type="checkbox"/>.</li> <li>Repeat application selection step as needed before pressing <input type="checkbox"/>.</li> <li>Some S! Applications cannot be moved to Memory Card.</li> </ul>
Changing S! Application settings	<p> <input type="checkbox"/> <b>Start Here</b> → <input type="checkbox"/> → <b>S! Appli</b> → <input type="checkbox"/> → <b>Settings</b> → <input type="checkbox"/>            → <b>See below</b> </p> <p> <b>Activating Notification Setting</b>  <b>Notification Setting</b> → <input type="checkbox"/> → <b>On</b> → <input type="checkbox"/> </p> <p> <b>Setting Backlight Status</b>  <b>Backlight</b> → <input type="checkbox"/> → <b>Switch On/Off</b> → <input type="checkbox"/> →  <b>Select option</b> → <input type="checkbox"/> </p> <ul style="list-style-type: none"> <li>Selecting <b>Normal Settings</b> applies Display Backlight settings.</li> </ul> <p> <b>Disabling Backlight Flashing</b>  <b>Backlight</b> → <input type="checkbox"/> → <b>Blink</b> → <input type="checkbox"/> → <b>Off</b> → <input type="checkbox"/> </p> <p> <b>Disabling Vibration</b>  <b>Vibration</b> → <input type="checkbox"/> → <b>Off</b> → <input type="checkbox"/> </p>
Deleting S! Applications	<p> <input type="checkbox"/> → <b>S! Appli</b> → <input type="checkbox"/> → <b>S! Appli Library</b> → <input type="checkbox"/>            → <b>Select application</b> → <input type="checkbox"/> → <b>Delete</b> → <input type="checkbox"/> →  <b>Yes</b> → <input type="checkbox"/> </p> <ul style="list-style-type: none"> <li>Handset Code may be required.</li> <li>Cancel Screensaver to delete Screensaver S! Application.</li> </ul>

Restoring default S! Application settings	<p> <input type="checkbox"/> → <b>S! Appli</b> → <input type="checkbox"/> → <b>Settings</b> → <input type="checkbox"/> → <b>Set to Default</b> → <input type="checkbox"/> → <b>Enter Handset Code</b> → <input type="checkbox"/> →  <b>Yes</b> → <input type="checkbox"/> </p>
Restoring default S! Appli Library	<p> <input type="checkbox"/> → <b>S! Appli</b> → <input type="checkbox"/> → <b>Settings</b> → <input type="checkbox"/> →  <b>Memory All Clear</b> → <input type="checkbox"/> → <b>Enter Handset Code</b>            → <input type="checkbox"/> → <b>Yes</b> → <input type="checkbox"/> </p> <ul style="list-style-type: none"> <li>Memory All Clear deletes all downloaded S! Applications.</li> </ul>
Synchronizing Memory Card S! Applications with 832SH	<p> <input type="checkbox"/> → <b>S! Appli</b> → <input type="checkbox"/> → <b>Settings</b> → <input type="checkbox"/> →  <b>Synchronization</b> → <input type="checkbox"/> → <b>Yes</b> → <input type="checkbox"/> </p>
Opening Java™ license information	<p> <input type="checkbox"/> → <b>S! Appli</b> → <input type="checkbox"/> → <b>Information</b> → <input type="checkbox"/> </p>



## Music

### How do I delete files in All Music?

- Delete files in My Music via Data Folder (Music or Ring Songs-Tones).

## Video

### How do I delete files in All Videos?

- Delete All Videos files via Data Folder (Videos).

### Cannot play video files

- Files created with PC software, etc. may not play.

## S! Applications

### Cannot move S! Applications to Memory Card

- The S! Application may already be saved or Memory Card memory may be low.

### S! Applications do not pause for incoming transmissions despite *Calls & Alarms* settings

- Regardless of setting, a message appears for Screensaver S! Applications.

