

Handset Security	10-2
Operations Security	10-2
Information Security.....	10-3
Additional Functions	10-4

10

Handset Security



 
Operations Security

Function Lock

Restrict access to handset functions.

Auto	Lock when Display turns off or handset is closed
Once	Lock immediately; setting is canceled once handset is unlocked
At Power On	Lock when handset is turned on; Handset Code entry window opens

- 1 **Settings** **In Phone menu, Locks**

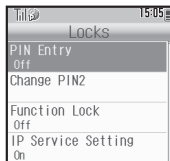

Locks Menu

- 2 **Function Lock**
- 3 **Select option** **Enter Handset Code**

Unlocking Temporarily

While handset is locked, enter Handset Code

When Function Lock is Active

- Press corresponding key to turn handset on/off, answer calls, place callers on hold, end calls, etc.

PIN Entry

Activate PIN Entry to require PIN entry each time handset is turned on.

- 1 **In Locks menu, PIN Entry** **Switch On/Off**
- 2 **On** **Enter PIN**

Secure Remote Lock

Lock a lost handset remotely via PC or another handset. Secure Remote Lock disables all operations except turning handset on.

For more about Secure Remote Lock, see SoftBank Mobile Website (P.14-22) or contact SoftBank Mobile Customer Center, General Information (P.14-39).



Advanced

- Changing PINs Setting Secure Remote Lock activation message to appear (P.10-4)

Information Security

Application Lock

Restrict access to these functions:

Phone Book

 
Calendar/Tasks

Yahoo! Keitai

Mail


Notepad

- 1 → **Settings** → → **In Phone menu, Locks** →



Locks Menu

 - 2 **Application Lock** →

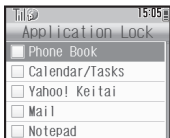

- 3 **Select item** → (✓)

For Phone Book, select **No Refer** (to hide entry names in message lists, Call Log, etc.) or **Refer** and press .

- 4 → **Enter Handset Code**
→

Temporary Access to Functions

- When accessing functions, enter Handset Code and press .

History Lock

Restrict access to Call Log and sent/received mail records.

- 1 **In Locks menu, History Lock** →



- 2 **Select item** → (✓)

- 3 → **Enter Handset Code**
→

Temporary Access to Records

- When accessing records, enter Handset Code and press .

Show Secret Data

Activate Show Secret Data to access Secret entries.

- 1 **In Locks menu, Show Secret Data** →

- 2 **On** → → **Enter Handset Code** →

When Show Secret Data is Active

- Predictive is not available for text entry.



PIN Entry

Changing PINs

Start Here [] ➔ **Settings** [] ➔ In Phone menu,
Locks [] ➔ **See below**

Changing PIN

PIN Entry [] ➔ **Change PIN** [] ➔ Enter
current PIN [] ➔ Enter new PIN [] ➔
Re-enter new PIN []

- Activate PIN Entry first.

Changing PIN2

Change PIN2 [] ➔ Enter current PIN2 [] ➔
Enter new PIN2 [] ➔ Re-enter new PIN2
[]

Secure Remote Lock

Setting Secure Remote Lock activation message to appear

Start Here [] ➔ **Settings** [] ➔ In Phone menu,
Locks [] ➔ **Set Lock Message** [] ➔ **See below**

Saving Message

Message [] ➔ Enter Handset Code [] ➔
Enter message [] ➔ **Yes** []

Checking Message

Check Message []

