

Date & Time	13-2
Date & Time	13-2
Display & Illumination	13-3
Language	13-3
Image & Text	13-3
Display & Key Illumination	13-3
External Display	13-4
Standby Display	13-4
Key Illumination	13-4

Ringtones & Sounds	13-5
Handset Response	13-5
System Sounds	13-5
Additional Sound Settings	13-5
Connectivity	13-6
Network	13-6
IP Service	13-7
Location Information	13-7
Reset	13-8
Restoring Default Settings	13-8

13

Handset Customization



🔧 Date & Time Settings

Date & Time

[Start Here](#) ➤ Settings ➤ In Phone menu, *Date & Time* ➤

Setting the date and time	<i>Set Date/Time</i> ➤ Enter the year ➤ Enter the month ➤ Enter the day ➤ Enter the time ➤
Correcting Clock manually	<i>Time Correction</i> ➤ Manual ➤ Yes ➤
Disabling auto Clock correction	<i>Time Correction</i> ➤ Auto Corr. Setting ➤ Off ➤
Setting auto Clock correction timing	<i>Time Correction</i> ➤ Auto Corr. Setting ➤ On ➤ Select item ➤ (☐/☑) ➤
Activating Daylight Saving	<i>Daylight Saving</i> ➤ On ➤
Changing Time Zone	<i>Set Time Zone</i> ➤ Select area ➤
Adding custom time zone	<i>Set Time Zone</i> ➤ Enter city name ➤ + or - ➤ Enter time difference ➤
Changing time format to 12 hour	<i>Time Format</i> ➤ 12 Hour ➤
Changing date format	<i>Date Format</i> ➤ Select option ➤
Starting the Calendar week on Monday	<i>Calendar Format</i> ➤ Monday-Sunday ➤



⌘ Display & Illumination Settings 1

Language

[Start Here](#) **Settings** Phone menu

Switching interface between Japanese and English

Language or **言語選択** **English** or **日本語**

Image & Text

[Start Here](#) **Settings** In Phone menu, **Display**

Showing preloaded images for incoming calls, etc.

System Graphics **Select item** **Preset Animation (or Pattern 1 to Pattern 3)**

Showing Data Folder images for incoming calls, etc.

System Graphics **Select item** **Select folder** **Select image** **Specify image area**
 • Some images may be usable without specifying image area.

Showing Customized Screen for incoming calls, etc.

System Graphics **Select item** **Customized Screen**
 • Not available for **Power On** or **Power Off**.

Changing font of numbers entered in Standby

Dial Number **Select pattern**

Showing a message each time handset is turned on

Greeting Message **Edit Message** **Enter message**
Switch On/Off **On**

- When using Double Number in Dual Mode, press in System Graphics menu to switch modes.

Display & Key Illumination

[Start Here](#) **Settings** In Phone menu, **Display**

Disabling display transition effects

Display Effects **Off**

Changing Display/Keypad Backlight illumination time

Backlight **Time Out** **Select time**

Changing Display Brightness

Backlight **Brightness** **Adjust level**

Changing inactivity time after which Display turns off

Display Saving **Select period**



Display & Illumination Settings 2

External Display

[Start Here](#) [Settings](#) [In Phone menu, Display](#) [External Display](#)

Changing inactivity time after which External Display turns off

[Duration](#) [Select time](#)

Hiding new received messages

[Messages](#) [Not Display](#)

Hiding caller info

[Caller Display](#) [Off](#)

Changing Clock view

[Display Date&Time](#) [Select type](#)

Changing Clock font

[Clock Type](#) [Select pattern](#)

Standby Display

[Start Here](#) [Settings](#) [In Phone menu, Display](#) [Standby Display](#)

Changing Clock/Calendar

[Clock/Calendar](#) [Select type](#)

Showing Network service provider name in Standby

[Show Operator Name](#) [On](#)

Key Illumination

[Start Here](#) [Settings](#) [Phone menu](#)

Disabling Keypad light illumination

[Set Key Light](#) [Off](#)



🔧 Ringtone & Sound Settings

Handset Response

[Start Here](#) → **Settings** → **In Phone menu, Sounds & Alerts**

Changing ringtone volume	Volume → Select item → Adjust level
Selecting illumination option for incoming transmissions	Event Light → Select item → On, Link to Sound or Off
Enabling/disabling illumination for missed incoming transmissions	Status Light → Select item → On or Off
Answering calls with other keys	Any Key Answer → On • Use [0], [-9], [*], [#], ##, ##, ##, ##, ## or [v] in addition to [v].

- When using Double Number in Dual Mode, press [v] in Volume menu or Event Light menu to switch modes.

System Sounds

[Start Here](#) → **Settings** → **In Phone menu, Sounds & Alerts**

Enabling Keypad Tones	System Sounds → Keypad Tones → Select tone
Changing S! Circle Talk tone	System Sounds → S! Circle Talk → Select tone
Changing other System Sounds	System Sounds → Select item → Tone or Sound → Select folder → Select tone/file • For files with limited usage period, choose Yes and press [v].
Disabling System Sounds	System Sounds → Select item → Tone or Sound → Off • Not available for S! Circle Talk .
Changing System Sound duration	System Sounds → Select item → Duration → Select/enter time • Not available for Keypad Tones or S! Circle Talk .
Changing System Sound volume	Volume → General Volume → Adjust level

Additional Sound Settings

[Start Here](#) → **Settings** → **Phone menu**

Disabling Speaker when using Headphones	Ringer Output → Earphone
Activating Speaker surround	Sounds & Alerts → Surround → On



Connectivity Settings 1

Network

[Start Here](#) **Settings** **Network**

Selecting a Network manually	<i>Select Network</i> <i>Manual</i> <i>Select Network</i>
Adding preferred Networks	<i>Select Network</i> <i>Set Preferred</i> <i>Select target location</i> <i>Insert</i> <i>Select Network</i>
Adding preferred Networks to the end	<i>Select Network</i> <i>Set Preferred</i> <i>Add to End</i> <i>Select Network</i>
Deleting preferred Networks	<i>Select Network</i> <i>Set Preferred</i> <i>Select Network</i> <i>Delete</i>
Adding Networks	<i>Select Network</i> <i>Add New Network</i> <i>Add</i> <i>Enter country code</i> <i>Enter Network code</i> <i>Enter name</i> <i>Select NW Type</i> <i>Select type</i> <ul style="list-style-type: none"> • After selecting Add New Network and pressing , Network list appears if Network has already been added. To add more, press again and proceed.
Editing Networks	<i>Select Network</i> <i>Add New Network</i> <i>Select Network</i> <i>Change</i> <i>Edit in the same manner as adding Networks</i>
Deleting Networks	<i>Select Network</i> <i>Add New Network</i> <i>Select Network</i> <i>Delete</i>
Switching Network services manually	<i>Select Service</i> <i>Manual</i> <i>Select service</i>
Retrieving Network Information	<i>Retrieve NW Info</i> <i>Yes</i>
Checking Network status	<i>Network Info</i>
Editing access point names for external devices	<i>External Device</i> <i>Select name</i> <i>Edit</i>
Clearing access point names for external devices	<i>External Device</i> <i>Reset</i> <i>Enter Handset Code</i> <i>Yes</i>



✚ Connectivity Settings 2

IP Service

[Start Here](#) → **Settings** → **In Phone menu, Locks**

Disabling IP Service

IP Service Setting → **Off** → **Enter Handset Code**

- When **Off**, S! Friend's Status, S! Circle Talk, Decoration Call, S! Appli Notification Setting and Mobile Widget Notification Setting are disabled.

Location Information

[Start Here](#) → **Settings** → **Network** → **Location Info**

Adding/editing Location Information destination URLs

URL Setting → **<Empty> (or select URL)** → **Edit** → **Enter URL**

- Default URL is not editable.

Specifying Location Information destination URL

URL Setting → **Select URL**

Viewing Location Information destination URL

URL Setting → **Select URL** → **Display**

Deleting Location Information destination URLs

URL Setting → **Select URL** → **Delete** → **Yes**

Hiding Location Information

Datum On/Off → **Off** → **Enter Handset Code**

Changing Location Information confirmation option

Location Property → **Select option** → **Enter Handset Code**



Reset Settings

Restoring Default Settings

[Start Here](#)   **Settings**   **In Phone menu, Master Reset**  

Restoring default handset settings	<p>Reset Settings   Enter Handset Code   Yes   Yes  </p> <ul style="list-style-type: none"> • Some default settings may not be restored.
Clearing all Phone Book entries, Data Folder files, etc.	<p>Reset All   Enter Handset Code   Yes   Yes  </p> <ul style="list-style-type: none"> • Files and records deleted by Reset All cannot be restored. Reset All deletes all downloaded S! Applications. • Handset Code returns to the default setting.

- A confirmation may appear before entering Handset Code; end the current function to proceed.
- When Double Number is active, regardless of usage mode setting, Reset Settings restores all default settings (Double Number is canceled), and Reset All clears all user files.

