

Digital TV

Basics	5-2
Initial Setup	5-3
Channel Settings	5-4
Watching TV	5-5
Indicators	5-6
Program List (Japanese)	5-7
Data Broadcast (Japanese).....	5-7
Functions while Viewing TV.....	5-8
TV Links (Japanese)	5-9
Saving TV Links	5-9
Opening TV Links.....	5-9
Functions Available in TV Link List.....	5-9

Basics

841P supports One Seg terrestrial digital TV broadcasting.

One Seg

One Seg is a digital TV broadcasting service for mobile phones.

For more information, visit The Association for Promotion of Digital Broadcasting Website:

[PC] <http://www.dpa.or.jp/>

[Handset] <http://www.dpa.or.jp/1seg/k/>
(Japanese only)

Features

Watch TV Programs (👉P.5-5)	Watch One Seg Digital TV on handset.
View Data Broadcast (👉P.5-7)	Access a variety of program-related information.

Precautions

- Digital TV is available only in Japan.
- Incoming calls/messages may affect TV image or audio quality while Digital TV is active.
- Digital TV is disabled if USIM Card is not installed or SoftBank subscription is terminated.
- SoftBank is not liable for damages from accidental loss/alteration of handset information. Data saved to handset (TV Links, Channel List, etc.) cannot be restored after repairs or handset replacement. Back up important information.

Signal Reception Areas

TV signal reception may be poor in the following conditions:

- Too far from or close to broadcasting stations
- Mountain areas or near tall buildings
- In moving vehicles, underground, in tunnels, etc.
- Near high-voltage wires, neon lights, wireless base stations, railroad tracks or highways
- Areas with numerous signal obstructions or areas where signal reception is blocked

When Battery is Running Out

- Warning tone sounds and warning message appears if Digital TV is activated with low battery.
- When battery runs low while programs are on, confirmation appears.
- Watching TV while charging may shorten battery life.

Incoming Transmissions

TV pauses for incoming calls. Resume TV after call ends.

Broadcast Storage Area

Information entered in a Data Broadcast site is saved in Broadcast storage area, and used by network-affiliated TV stations.

Saved information may include personal information such as membership number, sex, age, occupation, etc.

Previously entered information may appear in Data Broadcast window or be sent to TV broadcast stations.

- Delete Information saved in Broadcast Storage Area (☞ P.16-15)

Initial Setup

Set channels for your area.

- Up to ten Channel Lists can be saved.

Main Menu ► TV ► Channel Settings ► Select Area

1 Select a region → Select a prefecture

2 

Note


- If manual setup fails, try automatic channel setup (☞ P.5-4).
- Handset detects a change in reception area after moving to a different area. Set Channel List for that area.

Channel Settings

Automatic Channel Setup

Main Menu ► TV ► Channel Settings

► Set from Current Location

- 1 
- 2 After channel search,  → Enter title
 - If title is not entered, date (year/month/day/hour/minute) is automatically saved as title.

Using Channel List

From ► Main Menu ► TV ► Channel List




■ Set Channels

- > Select a Channel List
- Channel List is set, and available channels appear.
- Select a channel to access the station.

■ Delete Channel List

- > Highlight a Channel List →  [Menu] → *Delete One* → 
- Selected Channel List cannot be deleted.

■ Delete Channels from Channel List

- > Highlight a Channel List →  [Menu] → *Channel Information* → Highlight a channel →  [Menu] → *Delete One* → 
- Channels in selected Channel List cannot be deleted.

■ Edit Title

- > Highlight a Channel List →  [Menu] → *Edit Title* → Edit

■ Reassign a Remote Control Number (Keypad) to a Channel


- > Highlight a Channel List →  [Menu] → *Channel Information* →  [Menu] → *Set Remote Control No.* → Select a channel → Select a new remote control number →  [Complete] → 

Watching TV

- Set channels beforehand (☞ P.5-3).
- Change default view (☞ P.16-15).

1



Viewer appears.

- To change view: 



Viewer

2 Select a channel

Direct Channel Access	 (1 - 9)  (Channel 10)  (Channel 11)  (Channel 12)
Previous/Next Channel	
Channel Search	Press and hold  ● To stop:  [Cancel] / 


3 To end TV, →









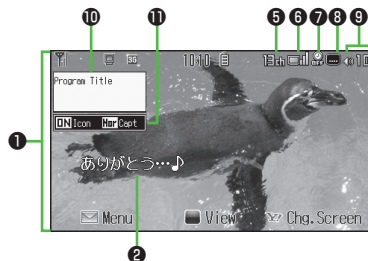


Note

- Alternatively, **Main Menu** ► **TV** ► **Watch TV**.
- After TV pauses for incoming calls in Wide Screen, TV restarts in Normal Screen. To toggle screens, press .

Indicators

- Screenshots are provided for reference only.
Actual handset windows differ in appearance.



	Item	Description	Operation
1	Image	—	—
2	Captions	—	—
3	Data Broadcast	(📄 P.5-7)	—
4	Operation Mode ¹	 AV Mode  Broadcast Mode	 <ul style="list-style-type: none"> • Each key press toggles modes.
5	Channel	(📄 P.5-3)	—
6	Signal Strength Level	 Strong ← → Weak Out of range	—
7	TV Off Timer	(📄 P.5-8)	—
8	Receiving Captions	—	—
9	Volume	—	<ul style="list-style-type: none"> • Adjust volume: ³ • Mute/Resume: ³ /  (Side Key)
10	Program Title	—	 / 
11	Indicator/ Caption Setting ²	Indicators: ON/OFF Caption: Normal/Small/OFF	 <ul style="list-style-type: none"> • Each key press toggles settings.
12	Display/Caption ¹	Display: ON/OFF Caption: ON/OFF	 <ul style="list-style-type: none"> • Each key press toggles settings.

¹ Available only in Normal Screen ² Available only in Wide Screen ³ Available only in AV Mode

Program List (Japanese)

Check program schedules to view TV programs.

Main Menu ▶ TV ▶ Program List

- Confirmation appears when using Program List for first time. Follow onscreen instructions.
- See Program List Help menu for usage information.

■ View Program List while Watching TV

> [Menu] → *Program List*

- Alternatively, press  in Normal Screen.



Data Broadcast (Japanese)

Access a variety of program-related information such as still images and videos.

- Data Broadcast is not available in Landscape View (Wide Screen).

1 Activate TV (AV Mode) →

 appears.

- Use  to select information.
- To deactivate Data Broadcast Mode: 


Note

- Viewing Data Broadcast information requires no fees; however, accessing websites will incur transmission fees.

Functions while Viewing TV

Available Operations

> While watching TV, [Menu] → Select an item (See below)

Item	Operation/Description
Channel Information	View channel details. Select a channel to watch that station
Program Information	View current program information
Channel List	View current Channel List (P.5-4)
Channel Settings	Set channels for your area (P.5-3)
Add to Channel List	Add current station to Channel List >  ● Assign current station to lowest available number key.
Program List	View program list
Switch Settings	Switch screen/operation mode > Select an item · Switch Display : Change display view · Switch Operation Mode : Switch AV Mode/Broadcast Mode in Normal Screen

Item	Operation/Description
Misc. Settings	> Select an item · TV Off Timer : Deactivate TV automatically after specified time elapses · Display Backlight (P.16-15) · Sound Settings : Set main/sub sound · Icon Always Display (P.16-15)
Data Broadcasting	· Sound Effect : Turn on/off sounds from Data Broadcast/sites · Reset Confirmation Display : Show confirmation on Data Broadcast
Return to DBC*	End Data Broadcast site and return to Data Broadcast window
Tuning Service	Select a program when multiple programs are available from the same broadcasting company > Select a station or its affiliate
TV Link	Show TV Link details

* Available in Data Broadcast site

TV Links (Japanese)

Saving TV Links

- Following function is not available in Landscape View (Wide Screen).

1 Switch Data Broadcast Mode on → Select a link




Follow onscreen instructions to save link.

Opening TV Links

Main Menu ► TV ► TV Link





1 Select a TV Link

- Confirmation appears when Internet access is required. Press  to proceed.
- If TV Link is expired, confirmation appears asking whether to delete link.

Functions Available in TV Link List

Main Menu ► TV ► TV Link

1  [Menu] → Select an item (See below)

Item	Operation/Description
Detailed Display	Show TV Link title, URL, summary, content type, expiration date
Number of TV Link	Show number of saved TV Links
Delete	> Select an item · <i>One</i> →  · <i>Selected Files</i> → Check TV link(s) →  [Menu] → <i>Delete</i> →  · <i>All</i> →  [YES] → Enter Phone Password

