

Managing Files

Data Folder	9-2
Data Folder Structure	9-2
Opening Files	9-4
Viewing & Playing Files	9-4
Copy Protected Files	9-5
File Display/Playback Functions	9-6
Options	9-7
Using/Editing Files	9-9
Using Files	9-9
Editing Still Images	9-11
Managing Folders & Files	9-12
Managing Folders/Files	9-12
Memory Card	9-13
Memory Card Installation	9-14
Formatting Memory Card	9-15
Viewing Memory Card Files	9-15
Handset Data Backup	9-15
PC File Transfers	9-17
Memory Card Functions	9-18

Data Folder

Save, play and manage files downloaded from Internet, etc.

- Access websites directly from Pictures, My Pictograms, Mail Art, Ring Songs-Tones, S! Appli, Music, Videos, Books, Customized Screen and Templates folders, and download files to handset.

Data Folder Structure

Folder	Data	File Format	Saved to
Pictures	Still images captured by handset or downloaded still images, etc.	JPEG (.jpg/.jpeg/.jpe/.jfif), GIF (.gif), PNG (.png), BMP (.bmp), WBMP (.wbmp) JPEG (.jpg) saved in Digital Camera	Phone Memory Card* Digital Camera*
	My Pictograms folder: Downloaded My Pictograms, etc.	GIF (.gif), GPK (.gpk)	Phone Memory Card*
	Mail Art folder: Downloaded Mail Art files, etc.	JPEG(.jpg .jpeg .jpe .jfif)/GIF(.gif)	Phone Memory Card*
Ring Songs-Tones	Downloaded sound files or sounds recorded by Voice Recorder, etc.	SMAF (.mmf), SP-MIDI (.mid/.midi), Mobile XMF (.mxmf), AMR-NB (.amr), MPEG-4 (.3gp/.mp4/.m4a)	Phone Memory Card*
S! Appli	Downloaded S! Appli, etc. (☞ P.15-1)	Java	Phone Memory Card*
Music	Downloaded music files, etc.	MPEG-4 (.3gp/.mp4/.m4a/.smc)	Phone Memory Card*
Videos	Videos recorded by handset or downloaded video files, etc.	MPEG-4 (.3gp/.mp4)	Phone Memory Card* Video Camera*
Books	E-comics, etc.	CCF (.ccf), X MDF (.zbf/.zbf/.zbs)	Phone Memory Card*
Customized Screen	Downloaded Customized Screen	CUSR (.xcsf)	Phone Memory Card*
Templates	Downloaded Graphic Mail Templates, etc.	HTML (.hmt)	Phone

Folder	Data	File Format	Saved to
Flash(R)	Downloaded Flash® image files	SWF (.swf)	Phone Memory Card*
	<i>Flash(R) Ringtones</i> folder: Downloaded Flash® sound files		
Other Documents	Other files	Other format files	Phone Memory Card*

* Available only when Memory Card is inserted

- Some copy protected files have extensions different from above.

Note

- These folders can be opened from other functions.
 - **S! Appli: Main Menu ▶ S! Appli** (📄 P.15-1)
 - **Templates: Main Menu ▶ Messaging ▶ Templates** (📄 P.13-6)
 - **Customized Screen: Main Menu ▶ Settings ▶ Customized Screen** (📄 P.1-21)
- 841P does not support Progressive JPEG files.

■ View Current Memory Status

> **Main Menu ▶ Data Folder ▶ Memory Status ▶ Phone or Memory Card**

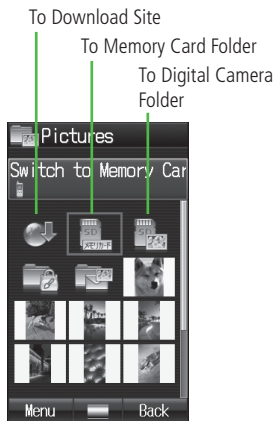 
Opening Files

Viewing & Playing Files

Main Menu ▶ Data Folder

1 Select a folder

Pictures, Videos and Customized Screen folders open in Thumbnail view by default.



Pictures (Thumbnail)



Ring Songs-Tones (List)

2 Select a file

File appears/plays.

Change Memory View

- > In List view, to switch views, Phone, Memory Card, Digital Camera¹ or Video Camera²
- > In Thumbnail view, select (Memory Card), (Digital Camera)¹ or (Video Camera)² → To return to handset memory, select (Phone)

¹ In Pictures folder only

² In Videos folder only

Change Folder View

Select Thumbnail or List view.

- > In Step 1, **Pictures**, **Videos** or **Customized Screen** → [Menu] → **More** → **Change View** → **Thumbnail** or **List**

Note

- Some still images may not appear, or may be reduced in size depending on image or file size.
- 841P supports MPEG-4 and H.263 formats, and Sub-QCIF, QCIF, QVGA and CIF size. Video files that were recorded by SoftBank handsets and can be sent via S! Mail are also supported. Some files may not play even if format and size are supported.

Tip


- Viewing e-Books & Documents (P.7-6)
- Playback Window Operations (P.8-7)

Changing Playback Method

Main Menu ► Data Folder ► Ring Songs-Tones, Music or Videos

- 1 Highlight a file →  [Menu] → *Playback Method*
- 2 Select a method

Continuous Play	Repeat all files in selected folder
Random Play	Play all files in selected folder randomly
Repeat Track	Repeat selected file

- Confirm playback method settings in Playback window (Playback Mode Indicators:  P.8-4).









Note

- When selecting Continuous Play or Random Play, playback starts from the file selected in Step 1.

Copy Protected Files

Playing/forwarding/saving may be restricted and Content Key may be required for usage.

If Content Key is expired, obtain a new Key to use file.

-  or  (Silver) appears for copy protected files requiring Content Keys.  files are accessible.  files are inaccessible.  appears on images in Thumbnail view of expired files.
- When deleting  files or folders containing  files, confirmation appears asking whether to delete corresponding Content Key. Other files requiring same Content Key may become unusable.
- See Property ( P.9-6) to confirm restrictions such as expiry term or usage limitation.
- 841P holds up to 1000 Content Keys. Multiple Keys may be required to use a file.

Using Copy Protected Files

- Files downloaded on 841P cannot be used on PCs.
- Network setting may be required for usage.
- File usage may require insertion of USIM Card in use at time of download.
- When set as wallpaper or ringtone, license expiry or inserting a different USIM Card may reset default.
- Limited use files cannot be set as wallpaper or ringtone.

Obtaining Content Key

If Content Key is expired, a message appears when the file is opened. To obtain a new Key, press [M] [YES]. Handset connects to Content Key site.

Note

- Alternatively, obtain Content Key as follows: Highlight a file → [M] [Menu] → **More** → **Download Content Key** → [G].
- Depending on contents, some Content Keys may not be obtained from websites even when warning for expired contents appears.
- When 1000 Content Keys have been saved, a message appears. Delete old Keys; otherwise downloads may fail (transmission fees apply).

Tip

- Back Up Content Key (☞ P.9-18)

File Display/Playback Functions

From ► Main Menu ► Data Folder

View Still Images at Original Size

- > **Pictures** → Select a file → [Z] [Zoom] → [X] to change the position
- Press [P] to return.
- Still images larger than VGA (480x640) appear at VGA (480x640).


Rotate Still Images

- > **Pictures** → Select a file → [R] [Rotate R] → [L] [Rotate L] or [R] [Rotate R]
- Press [P] to return.

 




 
 


 


 
View File Properties

- > Select a folder → Highlight a file → [M] [Menu] → **More** → **Property**
- Available information varies by file.

Options

Highlight a file in Data Folder, and press  [Menu] for the following operations.

 
 
 
 

 
 
 
 




Pictures

Item	Operation/Description
View	Open files
Send ¹	Send files via S! Mail ( P.9-10) or Infrared ( P.10-3)
Send S! Mail ²	Send files via S! Mail
Set as ¹	Set as wallpaper ( P.9-9), Phone Book image, Main Menu Icons ( P.9-10), etc.
Edit ¹	Resize files, trim files, rotate files, add frame, clear shadow, etc. ( P.9-11)
Rename	Change file names ( P.9-12)
New Folder ¹	Create new folders ( P.9-12)
Move	Move files to other folders ( P.9-13)
Copy	Copy files ( P.9-13)
Delete	Delete files ( P.9-12)
More	Change folder view ¹ ( P.9-4), obtain Content Key ¹ ( P.9-6), open Memory Card folder/Phone folder/Digital Camera folder ¹ , view file properties ( P.9-6)

¹ Picture files only

² My Pictogram/Mail Art files only

Ring Songs-Tones/Music/Videos

Item	Operation/Description
Play	Play files
Send	Send files via S! Mail ( P.9-10) or Infrared ( P.10-3)
Set as ¹	Set ringtone (Voice Call, Video Call and messages) ( P.9-9) or save to Phone Book ( P.9-10)
Playback Method	Select playback method ( P.9-5)
Rename	Change file names ( P.9-12)
New Folder	Create new folders ( P.9-12)
Move	Move files to other folders ( P.9-13)
Copy	Copy files ( P.9-13)
Delete	Delete files ( P.9-12)
More	Change folder view ² ( P.9-4), obtain Content Key ( P.9-6), open Memory Card folder/Phone folder/Video Camera folder ² , view file properties ( P.9-6)

¹ Ring Songs-Tones and Music only

² Videos only

■ Books/Customized Screen

Item	Operation/Description
Play ¹	Play files
View ²	View files
Jump to Web	Connect to website from linked files
Send	Send files via S! Mail (☞ P.9-10) or Infrared (☞ P.10-3)
Set ²	Set Customized Screen
Rename	Change file names (☞ P.9-12)
New Folder	Create new folders (☞ P.9-12)
Move	Move files to other folders (☞ P.9-13)
Copy	Copy files (☞ P.9-13)
Delete	Delete files (☞ P.9-12)
More	Change folder view ² (☞ P.9-4), obtain Content Key (☞ P.9-6), open Memory Card folder/Phone folder, view file properties (☞ P.9-6)

¹ Books only

² Customized Screen only

■ Flash(R)

Item	Operation/Description
Play	Play files
Send	Send files via S! Mail (☞ P.9-10) or Infrared (☞ P.10-3)
Set as Wallpaper ¹	Set as wallpaper (☞ P.9-9)
Set as ²	Set ringtone (Voice Call or Video Call) (☞ P.9-9) or save to Phone Book (☞ P.9-10)
Rename	Change file names (☞ P.9-12)
New Folder	Create new folders (☞ P.9-12)
Move	Move files to other folders (☞ P.9-13)
Copy	Copy files (☞ P.9-13)
Delete	Delete files (☞ P.9-12)
More	Obtain Content Key (☞ P.9-6), open Memory Card folder/Phone folder, view file properties (☞ P.9-6)

¹ Flash® image files only

² Flash® sound files only

Other Documents

Item	Operation/Description
Rename	Change file names (☞ P.9-12)
New Folder	Create new folders (☞ P.9-12)
Move	Move files to other folders (☞ P.9-13)
Copy	Copy files (☞ P.9-13)
Delete	Delete files (☞ P.9-12)
More	Open Memory Card folder/Phone folder, view file properties (☞ P.9-6)

Using/Editing Files

Using Files

Wallpaper

From ► Main Menu ► Data Folder

Select from Pictures Folder

> *Pictures* → Highlight a file → [Menu] → *Set as* → *Wallpaper*

Select from Flash(R)

> *Flash(R)* → Highlight a file → [Menu] → *Set as Wallpaper*

Ringtones

From ► Main Menu ► Data Folder

Select from Ring Songs-Tones/Music Folder

> *Ring Songs-Tones* or *Music* → Highlight a file → [Menu] → *Set as* → Select an item (→ For SMC file, highlight a Play Point → [Set])

Select from Flash(R) Folder

> *Flash(R)* → *Flash(R) Ringtones* → Highlight a file → [Menu] → *Set as* → Select an item

- Flash® Ringtones cannot be set as *Message Ringtone*.

Saving to Phone Book

From ► Main Menu ► Data Folder

■ Save a Still Image to a Phone Book Entry

- Unavailable when *Change View* is *USIM*.

> **Pictures** → Highlight a file → [Menu] → **Set as**
 → **Phone Book Picture** → Select a Phone Book entry (→ When warning message appears, [OK] → Enter file name) → [Save]

■ Save Sound/Music Files to a Phone Book Entry

> **Ring Songs-Tones** or **Music** → Highlight a file → [Menu] → **Set as** → **Add to Phone Book** (→ For SMC files, highlight a Play Point → [Set]) → Select a Phone Book entry → Select a ringtone ([Voice Call Ringtone/Video Call Ringtone/Message Ringtone] → [Save])

■ Save Flash® Sound Files to a Phone Book Entry

> **Flash(R)** → **Flash(R) Ringtones** → Highlight a file → [Menu] → **Set as** → **Add to Phone Book** → Select a Phone Book entry → Select a ringtone ([Voice Call Ringtone/Video Call Ringtone] → [Save])

Main Menu Icons

From ► Main Menu ► Data Folder ► Pictures
 ► Highlight a file ► [Menu] ► Set as
 ► Main Menu Icons

■ Change Background

> **Change Full Image** → [Back] → [Back]*

* Handset returns to Pictures folder top menu.

■ Change Menu Icons

> **Change Image** → Select an icon → [Back] → [Back]*

* Handset returns to Pictures folder top menu.

Sending Files via S! Mail

> **Main Menu** ► **Data Folder** ► Select a folder ► Highlight a file
 ► [Menu] ► **Send** ► **Attach to S! Mail** ► Enter information
 ► [Send]

Note

- Sounds recorded by Voice Recorder cannot be set as ringtone.

Editing Still Images

- Edit features are not available for some file types.

Main Menu ► Data Folder ► Pictures

- 1 Highlight a file → [Menu] → *Edit*
- 2 Select an item (See below)


Files	Operation/Description
Resize	Change image size > Select an image size → ● To start over: After selecting file size, [Back]
Rotate	> (When warning message appears, →) [Rotate L] or [Rotate R] → ● Images captured by handset Camera may rotate 90° on cross-carrier handsets or PC.
Add Frame	> Select a frame → ● To change frame: to toggle frames ● Available only for Wallpaper(240x427), QQVGA(120x160) and QVGA(240x320).
Trimming	> Trim to preset size: Select a size → to move rectangle to crop point → > Trim to selected size: <i>Free Size</i> → to move [] to specify the area → → to adjust crop point → ● To start over: After setting crop point, [Back]
Super Clear Shadow	> (When warning message appears, →)



 
- 3 Enter file name

Managing Folders & Files

- Digital Camera, Video Camera, S! Appli, My Pictograms, Mail Art and Templates do not support new folders.
- Only names of created folders can be changed.
- Digital Camera and Video Camera folder names are fixed.

Main Menu ► Data Folder

- 1 Select a folder → (Highlight a folder →)  [Menu] → Select an item (See below)

Item	Operation/Description
Open	Open folders
Playback Method¹	Select playback method ( P.9-5)
Rename	Change folder names > Enter folder name
New Folder	Create new folders > Enter folder name
Delete	Delete folders ( Right)
More²	Change folder view ( P.9-4), open Memory Card folder, open Digital Camera folder/Video Camera folder ⁴ , open Phone folder
Memory Card/Phone³	Open Memory Card folder/Phone folder

¹ Ring Songs-Tones, Music and Videos only

² Pictures, Videos and Customized Screen only


³ Ring Songs-Tones, Music, Books, Flash(R) and Other Documents only






 






⁴ Pictures and Videos only

Managing Folders/Files

From ► **Main Menu** ► **Data Folder** ► Select a folder

Delete Folders/Files

- > (Highlight a folder or file →)  [Menu] → **Delete** → Select an item (See below)

Item	Operation/Description
One	>  [YES] (→ If confirmation appears,  [YES] or  [NO] → When selecting a folder, enter Phone Password)
Selected Files	> Check files →  [Menu] → Delete →  [YES] →  [YES] (→ If confirmation appears,  [YES] or  [NO]) ● To select all files or release all checkmarks:  [Menu] → Check All or Uncheck All
All	>  [YES] → in confirmation window,  [YES] or  [NO] → Enter Phone Password

- Some files may not be deleted.
- Folders including undeleted files cannot be deleted.
- Multiple folders cannot be selected.

■ Move/Copy Files

> (Highlight a file →) [Menu] → **Move** or **Copy** → Select an item (See below) → Select a folder (→ For **Selected Files** or **All**, [YES])

Item	Operation/Description
One	Move/copy a file
Selected Files	Move/copy multiple files > Check files → [Menu] → Move or Copy <ul style="list-style-type: none">● To select all files or release all checkmarks: [Menu] → Check All or Uncheck All
All	Move/copy all the folders/files in a folder

- Only JPEG files saved in handset memory can be moved/copied to Digital Camera folder.
- Only Video files saved in handset memory can be moved/copied to Video Camera folder.
- In Other Documents folder, copy protected files can be copied, but handset does not recognize copyright.
- Files may not be moved/copied depending on file format or data.
- Forward protected files may be moved to other folders by retrieving Network information (P.1-15).
- After being copied/moved between handset and Memory Card, some files may be unusable on other SoftBank handsets or PCs, etc.

Memory Card

- 841P is compatible with up to 2 GB commercial Memory Cards (as of January 2010). For information on memory card compatibility, visit the website below (Japanese). Note that Memory Cards not listed on the website may not function properly.
 - From Yahoo! Keitai P-egg (as of January 2010)
Main Menu ▶ Yahoo! ▶ Bookmarks ▶ Panasonic Site (P-egg)
 - From PC
<http://panasonic.jp/mobile/>
Not all operations are guaranteed by the Memory Cards listed.
- Format new Memory Cards for use with handset (P.9-15).

Note

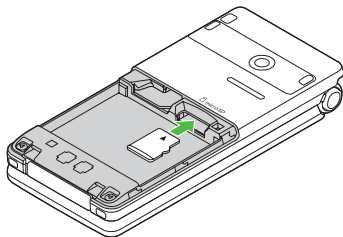 
- SoftBank is not liable for damages from accidental loss/alteration of Memory Card information. Keep a copy of Phone Book entries, etc. in a separate place.
- Memory Card has no write protect feature; there is a risk of accidental erasure/overwriting of files.

Memory Card Installation




- Turn off handset before inserting/removing Memory Card.
- Battery Installation: [☞ P.1-13](#)

Inserting

- 1 Insert Memory Card until it clicks

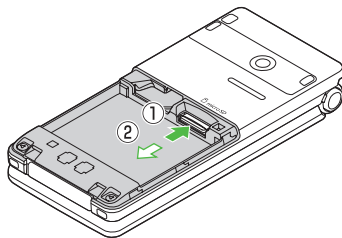 


Memory Card Check


When Memory Card is installed correctly,  appears. If  appears, Memory Card cannot be used. Remove Memory Card from handset, and re-insert it. If  does not disappear, check Memory Card ([☞ P.9-18](#)) or format Memory Card ([☞ P.9-15](#)). (Display Indicator: [☞ P.1-8](#))

Removing

- 1 Gently push Memory Card in
 - Memory Card pops out with a light push.



Note

- Do not turn off handset or remove Memory Card/battery while  flashes. Memory Card may be damaged or files lost.
- Memory Card may pop out when inserting/removing it.

Formatting Memory Card

- Formatting Memory Card deletes all saved files/data.


Main Menu ► Settings ► Memory Card Manager
► Format Memory Card

1  → Enter Phone Password

Note

- Do not turn handset power off or remove Memory Card or battery while formatting; may damage handset or Memory Card.
- Memory Cards formatted on other devices may not be used. Format Memory Card on 841P before use.
- Handset cannot format incompatible Memory Cards.
- If format fails, turn power off and remove Memory Card from handset. Reinsert Memory Card and format it again.

Viewing Memory Card Files

View files in Memory Card from Data Folder. To toggle memory views, see "Viewing & Playing Files" ( P.9-4).

Note

- View up to 1000 Memory Card files/folders on handset. To view hidden Memory Card files/folders, delete files, then turn handset power off and restart it. Previously hidden files appear in equal number to those that were deleted.
- Files with names over 32 alphanumeric/extensions over six alphanumerics cannot be viewed.
- Unsupported files cannot be viewed.

Handset Data Backup

Back up handset data (Phone Book, Calendar, Messages, Bookmarks, Content Keys) to Memory Card; restore handset data after accidental loss/alteration.

- Back up Content Key:  P.9-18

Notes

- Backup is not available when battery is low.
- Check memory beforehand (☞ P.9-3).
- Handset transmission unavailable during backup/restoration.
- When restoring files other than Content Keys from Memory Card, the same type files are all deleted from handset before restoration. Back up files saved on handset beforehand.
- Backup files created on other SoftBank handsets may not be restored or usable on 841P.
- Settings such as Reminder, Schedule Tone and Notification Light cannot be backed up/restored.
- Schedule entries that date/time are not specified cannot be restored. Schedule entries that cannot be saved on handset (☞ P.12-3) cannot be restored.
- The initial portion of S! Mail messages are restored as complete S! Mail messages, and complete message retrieval is invalidated.
- Mail Delivery Rule for Incoming Mail folder cannot be backed up/ restored.
- Depending on contents, Phone Book/Schedule entries, messages or bookmarks may not be backed up/restored, or may be altered beyond the parameters.

Backup/Restore

Main Menu ► Settings ► Memory Card Manager
► Memory Card Backup/Restore

- 1 Enter Phone Password
- 2 Select an item
 - For **Messaging**, select a messaging folder

- 3 **Backup**
Copy to Memory Card →
→

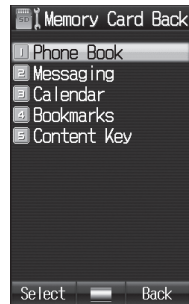 
Restore

- Overwrite to Phone** →
→ Select a file →

- Backup date serves as file name.
Example: "100202000.vcf" indicates that the file was backed up on 2 February 2010
- Backup files restored from Incoming Mail/Sent Messages folders are saved to Received/Sent folders.

■ Delete Backup Files

- In Step 3, **Overwrite to Phone** → → Highlight a file
→ [Menu] → **Delete** →
- Content Key backup files cannot be deleted.



PC File Transfers

Files moved or copied from handset to Memory Card are organized as follows:

- Save files in folders by file type. See "Using Files" (☞ P.9-9) for more about files.

DCIM		
<ul style="list-style-type: none"> ● Still images saved to Memory Card ● Still images moved/copied to Digital Camera folder 		
PRIVATE		
MYFOLDER		
Utility		
Calendar	Calendar.BCK	Schedule Backup files
Contacts	Contacts.BCK	Phone Book Backup files
Rights		Content Key Backup files
Mail		
Drafts	Drafts.BCK	Drafts Backup files
Inbox	Inbox.BCK	Incoming Mail Backup files
Outbox	Outbox.BCK	Unsent Messages Backup files
Sent Messages	Sent Messages.BCK	Sent Messages Backup files

My Items

Book		E-comics, etc.
Bookmarks	Bookmarks.BCK	Bookmarks Backup files
Custom Screens		Customized Screen files
Flash(R)		Flash® image files
Flash(R) Ringtones		Flash® sound files
Games and More		S! Appli
Mail Art		Mail Art
Music		Sound files with .3gp/.mp4/.m4a/.smc
Other Documents		Other files
Pictograms		My Pictograms
Pictures		Still images moved/copied from handset to Main Folder in Memory Card
Sounds & Ringtones		Sound files with .3gp/.mp4/.m4a/.mid/.midi/.amr/.mmf/.mxmf
Videos		Videos moved/copied from handset to Main Folder in Memory Card

SD_VIDEO

- Videos saved to Memory Card
 - Videos moved/copied from handset to Video Camera folder
- Some copy protected files have extensions different from above.

Note

- Handset temporary files are saved in Memory Card PRIVATE – MEIGROUP - PMC - FS_TEMP folder. All folders/files in this folder are deleted each time Memory Card is inserted into handset; do not save PC folders/files in this folder.
- Folder layers recognizable in handset are limited to the first layer of each folder (such as, Music folder) in My Items (MYFOLDER).
- When multiple folders/files with same numbers exist in DCIM folder, the folders/files cannot be viewed on handset.
- Images captured by handset Camera may rotate 90° on cross-carrier handsets or PC.

Memory Card Functions

■ Check Memory Card

Repair Memory Card data errors.

> **Main Menu** ▶ **Settings** ▶ **Memory Card Manager**
 ▶ **Check Memory Card** ▶ 

- Do not remove Memory Card or battery during Check Memory Card. May damage handset or Memory Card.
- It may take 30 seconds or longer to complete procedures.
- Incompatible/improperly formatted Memory Cards are not checked.
- Unrecoverable data may be deleted.

■ Back Up Content Key

Copy Content Keys to Memory Card from handset, or to handset from Memory Card.

> **Main Menu** ▶ **Settings** ▶ **Memory Card Manager**
 ▶ **Memory Card Backup/Restore** ▶ Enter Phone Password
 ▶ **Content Key** ▶ **Copy to Memory Card** or **Copy to Phone**

- Content Keys with expiration dates or usage limits cannot be backed up.
- USIM Card inserted when Content Keys were moved to Memory Card must be inserted to move Content Keys from Memory Card.
- Some applications are not compatible with handset. Only Content Keys for compatible applications are backed up. Also, note that some keys are moved to Memory Card when backed up. Contact SoftBank Mobile Customer Center, General Information for more information (☎ P.17-30).
- Backing up Content Keys overwrites previously saved Content Key backup.