

Date & Time 13-2
Display & Key 13-3

Ringtones & Sounds 13-5
Connectivity 13-6
Reset 13-8

13

Handset Customization



🔧 Date & Time Settings

Clock View/Settings

[Start Here](#) ⦿ ➔ *Settings* ➔ ⦿ ➔ In Phone Settings menu, *Date & Time* ➔ ⦿

Setting the date and time	<i>Set Date/Time</i> ➔ ⦿ ➔ Enter the year ➔ Enter the month ➔ Enter the day ➔ Enter the time ➔ ⦿
Correcting Clock manually	<i>Time Correction</i> ➔ ⦿ ➔ <i>Manual</i> ➔ ⦿ ➔ <i>Yes</i> ➔ ⦿
Disabling auto Clock correction	<i>Time Correction</i> ➔ ⦿ ➔ <i>Auto Corr. Setting</i> ➔ ⦿ ➔ <i>Off</i> ➔ ⦿
Setting auto Clock correction timing	<i>Time Correction</i> ➔ ⦿ ➔ <i>Auto Corr. Setting</i> ➔ ⦿ ➔ <i>On</i> ➔ 📧 ➔ Select item ➔ ⦿ (☐/☑) ➔ 📧 ➔ 📧
Activating Daylight Saving	<i>Daylight Saving</i> ➔ ⦿ ➔ <i>On</i> ➔ ⦿
Changing Time Zone	<i>Set Time Zone</i> ➔ ⦿ ➔ 🌐 Select area ➔ ⦿
Adding custom time zone	<i>Set Time Zone</i> ➔ ⦿ ➔ 📧 ➔ Enter city name ➔ ⦿ ➔ 📍 + or - ➔ ⦿ ➔ Enter time difference ➔ ⦿
Changing time format to 12 hour	<i>Time Format</i> ➔ ⦿ ➔ <i>12 Hour</i> ➔ ⦿
Changing date format	<i>Date Format</i> ➔ ⦿ ➔ Select option ➔ ⦿
Starting the Calendar week on Monday	<i>Calendar Format</i> ➔ ⦿ ➔ <i>Monday-Sunday</i> ➔ ⦿



⌘ Display & Key Settings 1

Language

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ Phone Settings menu

Switching interface between Japanese and English

Language or 言語選択 ➔ ● ➔ **English** or 日本語 ➔ ●

Display Image

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ In Phone Settings menu, **Display** ➔ ●

Showing preloaded images for incoming calls, etc.

System Graphics ➔ ● ➔ **Select item** ➔ ● ➔ **Preset Animation (or Pattern 1 to Pattern 3)** ➔ ●

Showing Data Folder images for incoming calls, etc.

System Graphics ➔ ● ➔ **Select item** ➔ ● ➔ **Select folder** ➔ ● ➔ **Select image** ➔ ● ➔ **Specify display area** ➔ ●
 ● Some images may be usable without specifying display area.

Showing Customized Screen for incoming calls, etc.


System Graphics ➔ ● ➔ **Select item** ➔ ● ➔ **Customized Screen** ➔ ● ➔ ●
 ● Not available for **Power On** or **Power Off**.

Changing image enhancement option for Standby and video playback

Vivid Mode ➔ ● ➔ **Select option** ➔ ●

Changing font of numbers entered in Standby

Dial Number ➔ ● ➔ **Select pattern** ➔ ●

- When using Double Number in Dual Mode (P.1-19), press  in System Graphics menu to switch modes.

Display Illumination

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ In Phone Settings menu, **Display** ➔ ●

Changing display transition effects

Display Effects ➔ ● ➔ **Select option** ➔ ●

Changing Display/Keypad Backlight illumination time

Backlight ➔ ● ➔ **Time Out** ➔ ● ➔ **Select time** ➔ ●

Changing Display Brightness

Backlight ➔ ● ➔ **Brightness** ➔ ● ➔ **Adjust level** ➔ ●

Canceling/activating Light Sensor

Backlight ➔ ● ➔ **Brightness** ➔ ● ➔  (/) ➔ ●

Changing inactivity time after which Display turns off

Display Saving ➔ ● ➔ **Select period** ➔ ●



🔧 Display & Key Settings 2

External Display

Start Here ● ➔ **Settings** ➔ ● ➔ In Phone Settings menu, **Display** ➔ ●

Changing inactivity time after which External Display turns off	External Display ➔ ● ➔ Duration ➔ ● ➔ Select time ➔ ●
Hiding new received messages	External Display ➔ ● ➔ Messages ➔ ● ➔ Not Display ➔ ●
Hiding caller's number/name	External Display ➔ ● ➔ Caller Display ➔ ● ➔ Off ➔ ●
Changing Clock view	External Display ➔ ● ➔ Display Date&Time ➔ ● ➔ Select type ➔ ●
Changing Clock font	External Display ➔ ● ➔ Clock Type ➔ ● ➔ Select pattern ➔ ●

Additional Display Settings

Start Here ● ➔ **Settings** ➔ ● ➔ In Phone Settings menu, **Display** ➔ ●

Changing Clock/Calendar	Standby Display ➔ ● ➔ Clock/Calendar ➔ ● ➔ Select type ➔ ●
Showing/hiding indicators or Softkeys in Standby	Standby Display ➔ ● ➔ Show Indicators ➔ ● ➔ Status Area or Softkey Area ➔ ● ➔ On or Off ➔ ●
Showing Network service provider name in Standby	Standby Display ➔ ● ➔ Show Operator Name ➔ ● ➔ On ➔ ●
Showing a message each time handset is turned on	Greeting Message ➔ ● ➔ Edit Message ➔ ● ➔ Enter message ➔ ● ➔ Switch On/Off ➔ ● ➔ On ➔ ●

Handset Keys

Start Here ● ➔ **Settings** ➔ ● ➔ Phone Settings menu

Disabling Keypad light illumination	Set Key Light ➔ ● ➔ Off ➔ ●
-------------------------------------	---



🔊 Ringtone & Sound Settings

Handset Response

[Start Here](#) ➔ Settings ➔ In Phone Settings menu, **Sounds & Alerts** ➔

Changing ringtone volume	Volume ➔ Select item ➔ Adjust level ➔
Changing illumination option for incoming transmissions	Event Light ➔ Select item ➔ Switch On/Off ➔ On, Link to Sound or Off ➔
Setting illumination color for incoming transmissions	Event Light ➔ Select item ➔ Light Color ➔ Select color ➔
Enabling/disabling illumination for missed incoming transmissions	Status Light ➔ Select item ➔ Switch On/Off ➔ On or Off ➔
Setting illumination color for missed incoming transmissions	Status Light ➔ Select item ➔ Light Color ➔ Select color ➔
Answering calls with other keys	Any Key Answer ➔ On ➔ • Use [0] - [9], *, #, [M], [C], [V], [A], [S] in addition to [R].

- When using Double Number in Dual Mode (P.1-19), press in Volume menu or Event Light menu to switch modes.

System Sound

[Start Here](#) ➔ Settings ➔ In Phone Settings menu, **Sounds & Alerts** ➔

Enabling Keypad Tones	System Sounds ➔ Keypad Tones ➔ Select tone ➔
Changing S! Circle Talk tone	System Sounds ➔ S! Circle Talk ➔ Select tone ➔
Changing other System Sounds	System Sounds ➔ Select item ➔ Tone ➔ Select folder ➔ ➔ Select tone/file ➔ • For files with limited usage period, choose Yes and press .
Disabling System Sounds	System Sounds ➔ Select item ➔ Tone ➔ Off ➔ • Not available for S! Circle Talk .
Changing System Sound duration	System Sounds ➔ Select item ➔ Duration ➔ Select/enter time ➔ • Not available for Keypad Tones or S! Circle Talk .
Changing System Sound volume	Volume ➔ General Volume ➔ Adjust level ➔

Additional Sound Settings

[Start Here](#) ➔ Settings ➔ Phone Settings menu

Disabling Speaker when using Headphones	Ringer Output ➔ Earphone ➔
Activating/canceling Speaker surround	Sounds & Alerts ➔ Surround ➔ On ➔



Advanced Connectivity Settings 1

Network

Start Here → Settings → NW Settings

Selecting a Network manually	Select Network → Manual → Select Network
Adding preferred Networks	Select Network → Set Preferred → Select location → Insert → Select Network
Adding preferred Networks to the end	Select Network → Set Preferred → Add to End → Select Network
Deleting preferred Networks	Select Network → Set Preferred → Select Network → Delete
Adding Networks	Select Network → Add New NW → Add → Enter country code → Enter Network code → Enter name → Select NW Type → Select type • After selecting Add New NW and pressing , Network list appears if Network has already been added. To add more, press again and proceed.
Editing Networks	Select Network → Add New NW → Select Network → Change → Edit in the same manner as adding Networks
Deleting Networks	Select Network → Add New NW → Select Network → Delete
Switching Network services manually	Select Service → Manual → Select service
Retrieving Network Information	Retrieve NW Info → Yes
Checking Network status	Network Info
Editing access point names for communication with external devices	External Device → Select name → Edit
Clearing access point names for communication with external devices	External Device → → Reset → Enter Handset Code → Yes



Advanced Connectivity Settings 2

Location Information

[Start Here](#) → Settings → NW Settings → Location Info

Adding/editing Location Information destination URLs	URL Setting → <Empty> (or select URL) → Edit → Enter URL Default URL is not editable.
Specifying Location Information destination URL	URL Setting → Select URL
Viewing Location Information destination URL	URL Setting → Select URL → Display
Deleting Location Information destination URLs	URL Setting → Select URL → Delete → Yes
Hiding Location Information	Datum On/Off → Off → Enter Handset Code
Changing Location Information confirmation option	Location Prop. → Select option → Enter Handset Code

IP Service

[Start Here](#) → Settings → In Phone Settings menu, Locks

Disabling IP Service	IP Service Setting → Off → Enter Handset Code
----------------------	---

- When **Off**, S! Friend's Status, S! Circle Talk, Decoration Call and S! Appli Communication are disabled.



Reset Settings

Restoring Default Settings

[Start Here](#) → Settings → In Phone Settings menu, *Master Reset*

Restoring default handset settings	<p>Reset Settings → Enter Handset Code → Yes → Yes</p> <ul style="list-style-type: none"> Some default settings may not be restored.
Clearing all Phone Book entries, Data Folder files, etc.	<p>Reset All → Enter Handset Code → Yes → Yes</p> <ul style="list-style-type: none"> Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keitai® service providers for details.) Files and records deleted by Reset All cannot be restored. Reset All deletes all downloaded S! Applications and Lifestyle-Applications. Handset Code returns to the default setting.

- A confirmation may appear before entering Handset Code; end the current function to proceed.
- When Double Number is active, regardless of usage mode setting, Reset Settings restores all default settings (Double Number is canceled), and Reset All clears all user files.

Handset Customization

