 
 


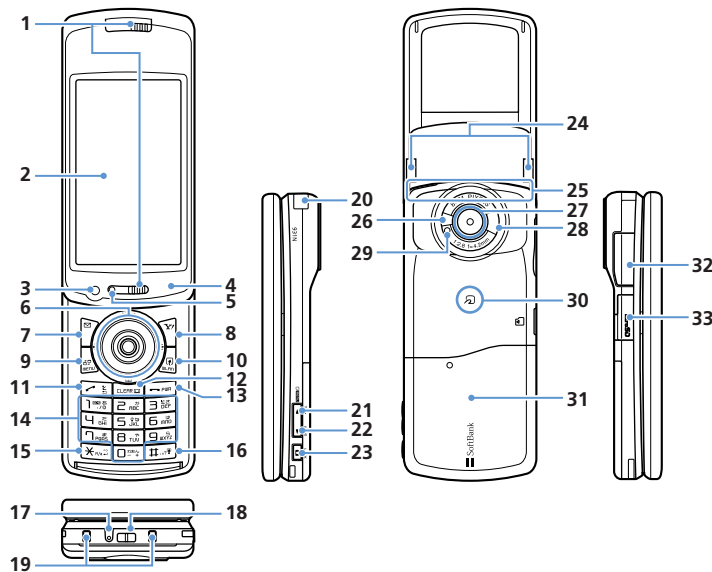


 
 





Getting Started

Handset Parts	1-2	Power On/Off	1-26
Basic Key Operations	1-3	Power On	1-26
Display Positions	1-6	Power Off	1-26
Touch Panel	1-9	Mobile Manners	1-28
Using Touch Panel	1-9	Activating Manner Mode	1-28
Swipe	1-12	Codes	1-29
Using Softkey Labels	1-12	Security Code	1-29
Touchkeys	1-13	Center Access Code	1-29
Undo/Return to Standby	1-14	Network Password	1-29
Neuropointer	1-15	Other Basic Information	1-30
Using Neuropointer	1-15	Checking Battery Level	1-30
Display	1-16	My Phone Number	1-30
Display Indicators	1-16	Checking Network Status	1-30
Mobile Widget (Japanese)	1-17	Stereo Earphone Conversion Cable	1-30
USIM Card	1-19	Using WLAN	1-31
Before Using USIM Card	1-19	Using ECO Mode	1-32
Other Notes on USIM Cards	1-19		
USIM PINs	1-20		
USIM Card Installation	1-21		
Battery & Charger	1-22		
Notes on Charging Battery	1-22		
Battery Installation	1-22		
Charging Battery	1-24		



- 1 Earpiece/Stereo Speaker
- 2 Display/Touch Panel
- 3 Front Camera
- 4 Charging Indicator
- 5 Light Sensor
- 6 Multi Selector 
- 7 Mail Key 
- 8 Yahoo! Keitai Key 
- 9 Menu Key 
- 10 Shortcut Key 
- 11 Send Key 
- 12 Clear/Back Key 
- 13 Power/End Key 
- 14 Keypad 
- 15 *Key 
- 16 # /Manner Key 
- 17 Microphone
- 18 Strap Eyelet
- 19 Charger Terminals
- 20 TV Antenna
- 21 Volume up/Manner Key 
- 22 Volume down/WLAN Key 
- 23 Camera/Lock Key 
- 24 Illumination
- 25 Internal Antenna
- 26 Light
- 27 Rear Camera














- 28 Infrared Port
- 29 Camera Indicator
- 30 FeliCa Mark
- 31 Battery Cover
- 32 External Device Port
- 33 Memory Card Slot

Tip

- Because Earpiece also acts as a speaker, put the earpiece to the ear only for accepted/outgoing calls. Otherwise, handset sounds can damage your ears.
- Key illustrations are simplified and differ in appearance from actual handset keys.
- For optimal signal reception, do not cover Internal Antenna with hands or anything else. Do not affix stickers over Internal Antenna.

Basic Key Operations

In Standby (Communication Style/Share Style)

No.	Key/Operations	Description
6		Access widgets.
	Press and hold 	Open S! Quick News List.
		Open Phone Book Search menu.
		Open Received Calls window.
	Press and hold 	Open Received Address List.
		Open Redial window.
	Press and hold 	Open Sent Address List.
		Access Desktop Icons/Indicators. Use Neuropointer to move pointer.
7		Open Mail menu.
	Press and hold 	Compose a new message.
8		Access Yahoo! Keitai portal.
	Press and hold 	Open Yahoo! menu.
9		Open Main Menu.

No.	Key/Operations	Description
10		Activate function assigned to key.
	Press and hold	Set WLAN ON or OFF .
11		Open Tomo-Den Window.
12		Play messages on Answering Machine.
	Press and hold	Set/cancel Answering Machine.
13	Press and hold	Turn power on/off.
14	Press and hold	Display current location using GPS function.
	Press and hold	Set/cancel IC Card Lock.
	Press and hold	Set/cancel ECO Mode.
	Press and hold	Set font type, thickness and size.
	Press and hold	Set Privacy Angle on/off.
	Press and hold	Enter “+” (international access code).
16	Press and hold	Set/cancel Manner Mode.
21		Increase earpiece volume.
	Press and hold	Set/cancel Manner Mode.
22		Decrease earpiece volume.
	Press and hold	Set WLAN ON or OFF .
23	Press and hold	Activate Camera in Photo Mode.

In Standby (Touch Style)

No.	Key/Operations	Description
21		Open Touch Menu.
22	Press and hold	Set WLAN ON or OFF .
23		Set Keypad Lock.
	Press and hold	Activate Camera in Photo Mode.

During Voice Calls

No.	Key/Operations	Description
6		Open Phone Book Search Group menu.
	Press and hold	Continuously increase earpiece volume.
		Open Phone Book Search Column menu.
	Press and hold	Continuously decrease earpiece volume.
		Open Received Calls window.
		Open Redial window.
7		Turn handsfree on/off.
8		Toggle Hyper Clear Voice modes (High, OFF or Low).
9		Open Task Switch window.
10		Display function menu.

No.	Key/Operations	Description
12		Hold call.
13		End call.
	Press and hold	Turn power off.
16	Press and hold	Set/cancel Manner Mode.
30		Increase earpiece volume.
31		Decrease earpiece volume.
	Press and hold	Record other party's voice.

During Text Entry

No.	Key/Operations	Description
6		Insert line feed (when cursor is at the end of text).
		Add a space (when cursor is at the end of text).
7		Toggle character entry modes (in 5-touch or T9 input mode). Toggle double-byte and single-byte characters (in 2-touch mode).
7	Press and hold	Toggle text input methods (in 5-touch, 2-touch or T9 input mode).

No.	Key/Operations	Description
8		Open pictograph/symbol lists.
	Press and hold	Access My Pictograms (in S! Mail).
11		Cycle characters in reverse order (in 5-touch mode).
	Press and hold	Undo last operation (conversion, pasting, cut, etc.) and return to the previous state.
12		Delete one character to right of cursor. When cursor is at end of text, a character to left is deleted.
	Press and hold	Delete all text to right of cursor. When cursor is at end of text, delete all text.
15		Enter dakuten (゛) or handakuten (゜) (in 5-touch, 2-touch or T9 input mode). Toggle case (in 5-touch or 2-touch mode). Insert line feed .
	Press and hold	Select area.
16		Toggle Shift, Caps Lock and lower case modes (when entering alphanumerics in T9 input mode).
	Press and hold	Paste copied or cut text.

Display Positions

Use following Display positions according to handset use (P. 2-2 to P. 2-4).

Communication Style

Make calls, browse the Internet, configure settings, etc.



Share Style

Use Display in Landscape View or Split Landscape View for TV or Internet browsing.



Touch Style

Use Touch Panel to operate TV, Camera, etc. with handset closed.




Tip

- Unless indicated otherwise, key operation is described in Communication Style.
- Set Keypad Lock when handset is closed, to prevent unintentional Touch Panel or Side Key operation (P. 4-4).
- Set the handset operation when changing Styles (P. 14-28).

Changing Display Position

Rotate Display to change positions.

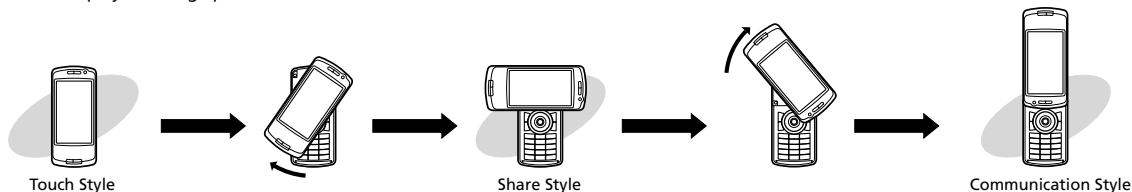

Note

- Do not rotate Display with excessive force. Doing so may scratch or damage handset. When rotating Display, be careful not to pinch fingers, palm or Strap; may cause injury or damage.

Functions in Each Style

Available functions and Display views vary by Display position.

- For details on activating each function, see P. 2-2.

Display Position	Display View	Available Functions
Communication Style	Portrait View	All functions
Share Style	Landscape View	Standby, PC Site Browser, Camera, TV, My Picture, Videos
	Split Landscape View	Mail (opening new messages, composing messages only), Yahoo! Keitai, TV, etc.
Touch Style	Portrait View	Standby, mail (opening new messages, opening manually retrieved messages only), Yahoo! Keitai, PC Site Browser, Phone, Music Player, etc.
	Landscape View	Camera, TV, My Picture, Videos, Quick Album, Music Player (video only)

Split Landscape View

In Landscape View, some functions appear in split-window format.

<Inbox/Received Message>



Main Window

Sub Window

Note

- Open Mail functions while TV is active. For other functions, only menus within the same function appear in Split Landscape View.

Tip

- In Touch Style, the following operations are unavailable.
 - Text Entry
 - Operations with widgets
- Touch operations not supported for S! Quick News ticker.

More Features

Customize

Touch Panel

- Set Touch Panel On/Off for Each Style
- Set Vibrator Operation during Touch Operation

(▶ P. 14-27)

Share Style

- Wallpaper
- Show Calendar in Standby
- Set Random Display of Images
- Clock Size

(▶ P. 14-27)

Style Change



- Set to Answer Calls By Opening Handset
- Set Sound at Style Change
- Set Flashing Color for Style Change Illumination



(▶ P. 14-28)

Using Touch Panel

Touch Display to select items, scroll pages, etc.

- Touch Panel is unavailable when Display backlight is off. Press Side Keys to turn backlight on when handset closed.
- When handset is open, use Touch Panel or keypad for handset operations. However, Touch Panel may be unavailable for some functions. (ex. text entry, Calculator, etc.).
- Customize Touch Panel settings (sound, Vibrator, etc.) (P. 14-10, P. 14-27).

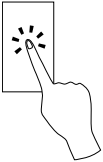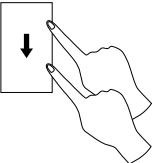	<p>Tap Tap Display to open windows or execute Softkey function, etc.</p>
	<p>Drag Touch and drag target item to change volume, scroll menu, etc.</p>

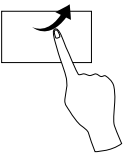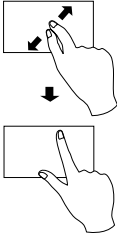	<p>Swipe Swipe finger across Display to see previous or next items.</p>
	<p>Pinch Pinch or pinch apart your fingers to reduce or enlarge the subject.</p>

Note

- Do not press Touch Panel with excessive force or use sharp objects (fingernail, ballpoint pen, pin, etc.).
- Touch Panel may not respond when
 - Wearing gloves
 - Using fingernails
 - Objects are placed on Display
 - Protective sheet or sticker is affixed to Display

Basic Operations


Selecting an Item

1 Tap an item



Scrolling


1 Drag up or down

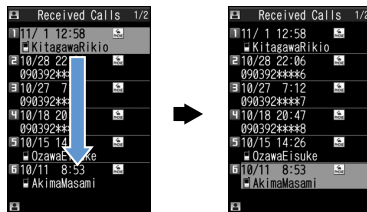

Toggle Pages

When content/items continue onto multiple pages, scroll to view next/previous pages.


1 Swipe to the left or right

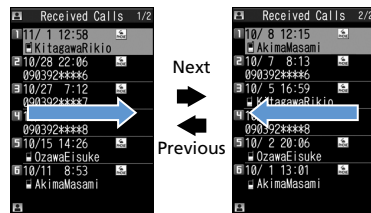

Using Scrollbar

Use Scrollbar in Music, My Picture, Videos and TV and other folder/file lists.

1 Drag Scrollbar up or down

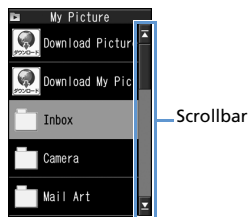

Tap / to jump to top/bottom of list.

Enlarging/Reducing

Enlarge or reduce pages or images in PC Site Browser, My Picture, etc.

1 Pinch apart to enlarge




Enlarge Reduce



■ To Reduce
Pinch to reduce.


Selecting Tabs

1 Tap tab to select

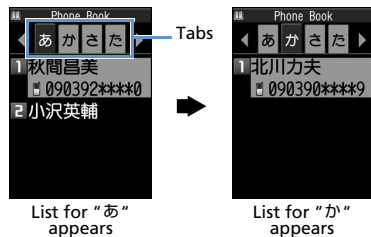

Canceling Keypad Lock

To cancel Keypad Lock, drag Scrollbar at bottom of Display or tap icon.

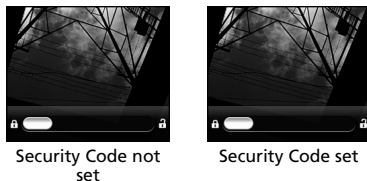

Tip


- For information about Keypad Lock, see P. 4-4.

Entering Security Code

Use Touch Keypad to enter Security Code.

1 Enter the four to eight digit Security Code then tap **Set**

- appears for each digit entered. To correct misentries, tap **←** to delete a character at a time.

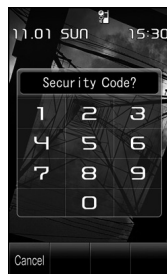


Tip

- An error notification appears if Security Code is incorrect. Enter Security Code again.
- For information about Security Code, see P. 1-29.

Using Touch Operation Icons

Tap icons at left and right of Display for operations. Icons differ according to the activated function. Touch Operation Icons are available when Camera is activated (P. 7-4) and Picture window is open (P. 12-4).

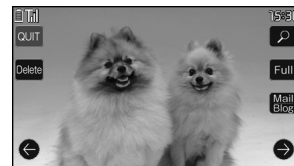

Using Pallet

Tap Display or Touchkeys to activate Pallet. Pallet gathers Keys for carrying out settings and adjustments into one place. Use Pallet when:

- Camera activated (P. 7-7, P. 7-10)
- Watching TV (P. 8-6)
- Music Player activated (P. 9-6)
- Video Player activated (P. 9-6)
- A voice call (P. 3-5) or video call (P. 3-9) arrives
- Using Yahoo! Keitai (P. 6-4)
- Using PC Site Browser (P. 6-7)


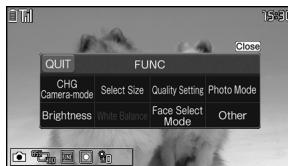


Photo Viewfinder (Touch Style)

Swipe

In Touch Style, swipe up, down, left or right.

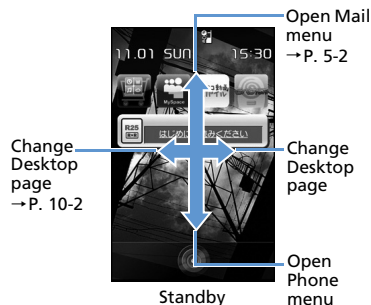

Using Softkey Labels

Tap softkey labels at bottom of Display, to access/perform that operation.




①	Tap to access/perform that item.
②	Use touch operation when icon appears.

Tip

- For details on using Softkeys, see P. 2-2.

Touchkeys

When Touchkeys appear at bottom of Display, tap to perform that operation.

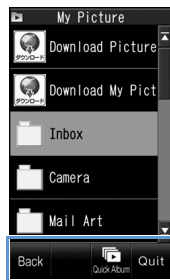
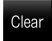



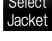




Touchkeys

- Touchkeys are available for the following:
Touch Menu, received message windows, Yahoo! Keitai, PC Site Browser, TV¹, Videos¹, My Picture, Music Player, voice call, Direct Input window, Phone Book, Redial, Dialed Calls², Received Calls, Tomo-Den
- 1 Touchkeys appear only in list windows.
- 2 Dialed Calls available when activated in Communication Style.

Icon	Function
	Finalize operation
	Cancel operation
	Return to source window Close list window
	Toggle view format
	Move to previous
	Move to next
	Return to previous (web pages)
	Advance to next (web pages)
	Open Pallet
	Close Pallet
	Toggle Touchkey view

Icon	Function
	Open item
	End function
	End call
	Answer/place a call
	Start video call
	Place incoming call on hold
	Place current call on hold
	Hyper Clear Voice (Off)
	Hyper Clear Voice (High)
	Hyper Clear Voice (Normal)
	Answer video call with substitute image


Icon	Function
	Send pause dial
	Close window after voice call ends
	Play song playlist
	Activate Quick Album
	Play BGM
	View album cover (Music Player)
	Switch sound output to Bluetooth® device
	Switch sound output to handset

Tip




- Change to Communication Style or Share Style when Touchkeys do not appear.

Undo/Return to Standby

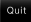Tap  to undo an operation.


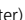

Tap  to end the current function and return to Standby. Handset does not return to Standby from some functions.

Note




- When multiple functions are active in Multitask (P. 2-11), tap  to end all functions and  to end current function. When using Yahoo! Keitai or PC Site Browser,  ⇒ YES only ends the browser in use. Other functions remain active.


Using Neuropointer


Use Neuropointer to move pointer on Display. Select icons and menus or toggle pages with pointer.

- When  appears at the bottom of Display, use  (Neuropointer) to move pointer .

Previous/Next Menu Page

- 1 Use  to activate  Move pointer down until  appears.

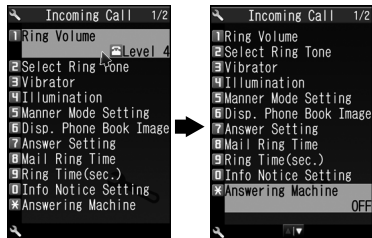

 appears when pointer is at top of Display.

- 2 Press 
The next (previous) page appears.

Tip


- Indicator appearance differs by window.

Scrolling in Window

In the following windows, use Neuropointer to scroll.

- Yahoo! Keitai or PC Site Browser when viewing site (P. 6-3, P. 6-7)
- Picture window (P. 12-3)
- PDF window (P. 12-5)
- Other Documents window (P. 12-5)

Tip

- Neuropointer unavailable in Sub Window of Split Landscape View.
- In PDF and Other Document windows, pointer changes to  or other icon, and the window scrolls in the direction you slide pointer.

More Features


Customize

Neuropointer

- Set Neuropointer On/Off
- Neuropointer Speed (Simple Setting)
- Neuropointer Speed (Detailed Setting)
- Reset Neuropointer Speed
- Adjust Neuropointer Slide Range
- Reset Neuropointer Slide Range
- Set Neuropointer Icon Design

(▶ P. 14-26)

Display Indicators

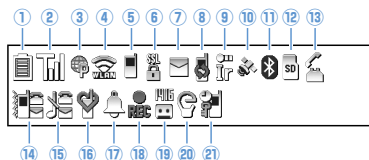

- ① Battery Level
- ② Temperature Warning
- ③ Signal Strength
OUT Out of Range
- ④ Emission OFF Mode
- ⑤ USIM Lock Active
- ⑥ Yahoo! Keitai Mode
- ⑦ Yahoo! Keitai Communication in Progress
- ⑧ Packet Transmission (No Data Transfer)
- ⑨ Connecting to Network for Packet Transmission
- ⑩ Packet Transmission (Sending/Receiving Data)
- ⑪ WLAN Signal Strength
- ⑫ WLAN Out of Range
- ⑬ Keitai Wi-Fi Connected
- ⑭ WLAN Packet Transmission
- ⑮ SSL Secured Site Connected

- ⑯ Unread Messages
- ⑰ Handset Message Memory Full
- ⑱ USIM SMS Memory Full (when there are unread messages)
- ⑲ Handset & USIM SMS Memory Full
- ⑳ Software Updated
- ㉑ IC Card Lock Active
- ㉒ Infrared Transmission
- ㉓ Authenticating IC Card
- ㉔ S! Addressbook Back-up Synchronizing
- ㉕ Dial Lock Active
- ㉖ Original Lock Active
- ㉗ Secret Mode/Secret Data Only Mode
- ㉘ Original Lock Active in Secret Mode/Secret Data Only Mode
- ㉙ GPS Tracking
- ㉚ (Blue) Bluetooth Communication in Progress
- ㉛ (Black) Bluetooth Power Saving
- ㉜ Bluetooth Call
- ㉝ Memory Card Inserted
- ㉞ Invalid Memory Card Inserted
- ㉟ Memory Card Reader/Writer in Use
- ㊱ Accessing Memory Card
- ㊲ Voice Call
- ㊳ Video Call
- ㊴ Maximum Call Cost Limit Reached
- ㊵ USB Cable Connected (Communication, microSD or MTP Mode)
- ㊶ microSD/MTP Mode
- ㊷ Handsfree Device Connected (Communication, microSD or MTP Mode)
- ㊸ USB Cable/Handsfree Device Connected (Communication, microSD or MTP Mode)
- ㊹ Vibration Set for Incoming Calls & Messages
- ㊺ Vibration Set for Incoming Calls/ Messages
- ㊻ No Ringtone for Incoming Calls & Messages
- ㊼ No Ringtone for Incoming Calls/ Messages
- ㊽ Manner Mode
- ㊾ Auto Manner Mode Start On
- ㊿ Auto Manner Mode Release On

- 17 Alarm Set
 - Alarm Set for Today (appears prior to set time.)
- 18 One Seg Timer Recording in Progress
- 19 New Messages at Voice Mail Center
 - Answering Machine On
 - New Voice Calls
 - New Video Calls
 - New Voice & Video Calls
 - Auto Voice Memo On
 - New Auto Voice Memos
 - Answering Machine & Auto Voice Memo On
 - New Voice Calls
 - New Video Calls
 - New Auto Voice Memos
 - New Voice & Video Calls
 - New Voice Calls & Auto Voice Memos
 - New Video Calls & Auto Voice Memos
 - New Voice & Video Calls, Auto Voice Memos
- 20 ECO Mode
 - Privacy Angle On (when Backlight is Off)
- 21 Keypad Lock Active (*After Closed, Timer or Lock Key is ON*)

Tip

- To see indicator descriptions:

⇒ Settings ⇒ ⇒ Display ⇒ ⇒ Icons ⇒

Mobile Widget (Japanese)

Set Widgets to appear on Desktop.

- For information about Mobile Widget, see P. 10-2.



Desktop Page

Add Widgets Here

Use Pointer to select widget

Note

- Flash® wallpaper pauses when accessing widgets. To allow Flash® to operate, set **Standby Disp. Set.** (P. 14-24) for Mobile Widget to **OFF**.

Tip

- Tap widgets for direct access from Standby (Touch Style).

More Features

Customize

Style Mode Settings

- Set Display Design Collectively
- Check Default Style Mode Settings
- Edit Title of a Style
- Save Current Style Mode Settings as Favorite
- Change Each Item for Favorites
- Clear All Favorite Settings

(▶ P. 14-3)

Display Settings

- Wallpaper
- Show Calendar in Standby
- Set Wallpaper Image to Change When Handset Returns to Standby
- Display Color Scheme
- Battery Level Indicator/Signal Strength Indicator Design
- Interface Language
- Guard from Prying Eyes
- Set Effect for Screen Change
- Display Quality

(▶ P. 14-3)

Backlight

- Set Backlight & Power Saving
- Set Brightness of Backlight

(▶ P. 14-5)

Standby Indicators

- Enable Indicator Selector

(▶ P. 14-7)


Before Using USIM Card

Universal Subscriber Identity Module (USIM) Card is an IC card that contains customer information (phone number, etc.). A USIM Card must be inserted to use your handset.

- Store Phone Book entries and SMS on USIM Card.
- Insert USIM Card into other USIM-compatible SoftBank handsets to use information on Card.
- Do not apply excessive force when inserting/removing USIM Card.
- SoftBank is not liable for any damage caused by inserting USIM Card into other IC card readers/writers.
- USIM Card may become warm during use. This is not a malfunction.
- Keep IC chip clean.
- For details, refer to the manual supplied with your USIM Card.
- Do not drop USIM Card or subject to excessive shock. Doing so may cause malfunction.
- Do not bend USIM Card or place heavy objects on it. Doing so may cause malfunction.
- Avoid extreme temperatures.
- Do not scratch, carelessly touch or short-circuit the IC chip. Doing so may result in data loss or malfunction.
- Clean USIM Card with a dry soft cloth (such as is used for eyeglasses).
- Use a SoftBank-designated USIM Card. Using a non-designated card may result in handset malfunction.

Other Notes on USIM Cards

- USIM Cards are the property of SoftBank.
- USIM Cards will be reissued for a fee if lost or damaged.
- Return USIM Cards to SoftBank upon cancellation or suspension of service.
- Returned USIM Cards are recycled.
- USIM Card specifications and performance may change without prior notice.
- Keep a separate copy of data saved on your USIM Card. SoftBank is not liable for lost data.
- If USIM Card or handset (with USIM Card inserted) is lost or stolen, suspend service immediately. For details, contact SoftBank Mobile Customer Center, General Information (P. 15-57).
- Downloaded files (S! Appli, videos, Saved Pages, etc.) saved to handset or memory card may be inaccessible after USIM Card replacement, handset upgrade or service subscription cancellation. If a different USIM Card is inserted, the cookies and cache are cleared to protect personal information.

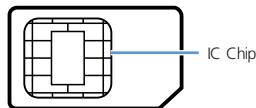

USIM PINs

There are two security codes for USIM Cards: PIN1 and PIN2.

PIN1

PIN1 is a four- to eight-digit code to prevent unauthorized handset use by a third party.

- Default PIN1 is 9999.
- PIN1 can be changed (P. 4-2).
- When **PIN1 Code Entry Set** is set to **ON**, PIN1 must be entered each time handset is turned on to be used.

PIN2

PIN2 is required to reset total call cost or to set a maximum limit to call costs.

- Default PIN2 is 9999.
- PIN2 can be changed (P. 4-2).

PIN Lock & Cancellation (PUK)

If PIN1 or PIN2 is incorrectly entered three times consecutively, PIN Lock is activated, limiting handset use to specific functions. Enter Personal Unblocking Key (PUK1/PUK2) to cancel PIN Lock.

- For information on PUK, contact SoftBank Mobile Customer Center, General Information (P. 15-57).

Note


- If PIN1 is incorrectly entered three times, and then PUK is incorrectly entered 10 times, USIM Card locks and handset cannot be used.
- If PIN2 is incorrectly entered three times, and then PUK is incorrectly entered 10 times, operations that require PIN2 will become unusable.
- Write down your PUK.
- To cancel USIM Card lock, contact SoftBank Mobile Customer Center, General Information (P. 15-57).

USIM Card Installation


- Remove Battery (P. 1-23) before inserting or removing USIM Card.

Insertion

1 Slide in USIM Card (IC chip facing down)

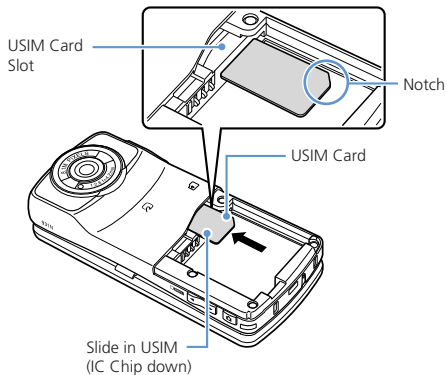

2 Push USIM Card in completely

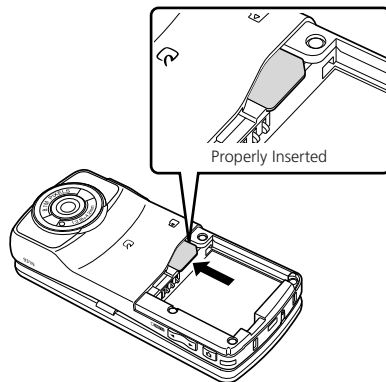

Removal


1 Slide USIM Card out gently

1

Getting Started

Notes on Charging Battery


- Charge battery at least once every six months. If battery is left uncharged for a long period, it may become unusable or its operation time may decrease.
- Avoid connecting too many things to one AC outlet. Doing so may cause the AC outlet to overheat and cause a fire.
- Battery and AC Charger may become warm during charging, but this is not a malfunction. If they become too hot, however, stop charging and contact SoftBank Mobile Customer Center, Customer Assistance (P. 15-57).
- If Charging Indicator flashes red during charging, battery may be faulty. Contact SoftBank Mobile Customer Center, Customer Assistance (P. 15-57).
- Depending on the conditions of usage, the battery may expand as it nears the end of its life. However, this presents no safety problems.
- Check the battery type on its label:

Mark	Type
Li-ion00	<p>Lithium-ion battery</p> <p>Lithium-ion batteries are a recyclable resource. Do not dispose of them as municipal waste. Bring used batteries to your nearest SoftBank Shop or recycling center after insulating the terminals with tape. Observe local regulations on battery disposal.</p> <p style="text-align: center;">  Li-ion00 </p>


Battery Installation

Insertion


1 Press and slide battery cover off

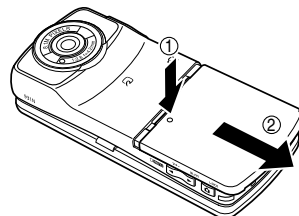

2 Align battery and handset terminals then insert battery

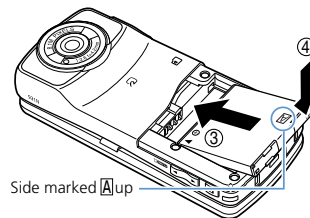

3 Replace cover

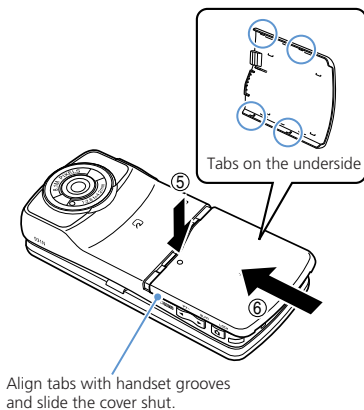


Note

- Do not force Battery Cover shut. Tab may be misaligned and cause breakage.

Removal

- Turn off handset before removing battery.


- 1 Remove battery cover
- 2 Press (①) and lift out (②)

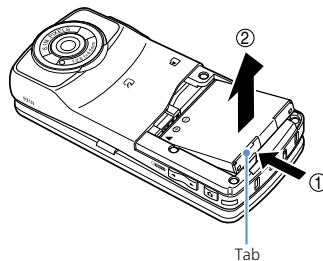

Charging Battery

Using AC Charger


Use only SoftBank-specified AC Charger (ZTDAA1, sold separately).

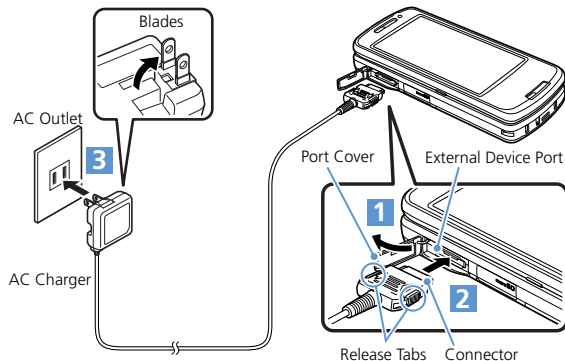

- 1 Open Port Cover
- 2 Insert Charger connector into External Device Port
- 3 Extend Charger blades and plug into an AC Outlet
Charging Indicator lights red while charging. When charging is complete, Indicator goes out.
- 4 Disconnect connector from handset
Press and hold Release Tabs to remove connector.
- 5 Unplug Charger from AC Outlet
- 6 Close Port Cover

Using Desktop Holder

Desktop Holder is sold separately.

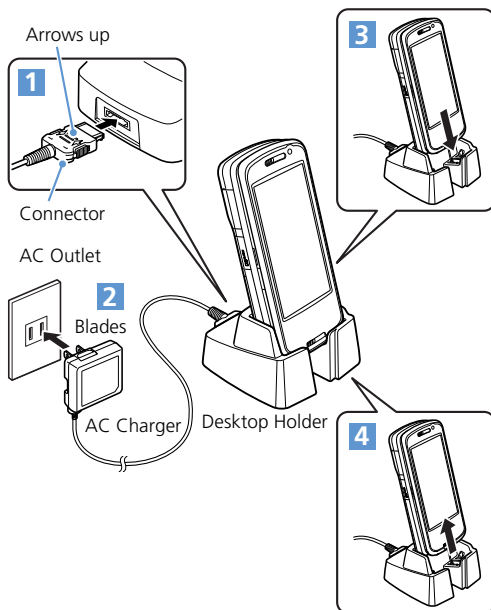

1 Insert Charger connector into Desktop Holder



2 Plug Charger into an AC Outlet

3 Place handset in Desktop Holder

Charging Indicator lights red while charging. When charging is complete, Indicator goes out.

4 Lift out

Note

- Battery can only be charged while inserted in handset.
- When both Charging Indicator and Display Indicator  go out and **Charge Unusual Stop Charge** appears, disconnect handset from AC Charger and remove battery. Set up handset and Charger and start charging again. If the same error occurs, AC Charger may be faulty or a non-specified charger is being used. Contact SoftBank Mobile Customer Center, Customer Assistance (P. 15-57).
- When both Charging Indicator and Display Indicator  flash, handset temperature is unsuitable for charging (Temperature Warning). Wait until handset cools down.

More Features

Customize


Backlight

- Set Backlight during Charging

 P. 14-5

Sounds

- Set to Play Charging Start/End Tones

 P. 14-10

Power On

- Make sure USIM Card is correctly inserted before turning power on.


1 Press and hold



Tip

- After USIM Card is replaced, Security Code is required when powering handset on for the first time. If Security Code is incorrectly entered five times, handset shuts down. Turn handset on again.

Initial Setup

Setup prompt appears in Japanese the first time handset is turned on. Select **NO** and press  to exit. Change interface language to English (P. 14-5) and restart handset to perform setup as follows.

1 [Initial Settings] window **YES**



▶ To Automatically Enter Date & Time **Auto** Select a time zone



▶ To Manually Enter Date & Time **Manual (Date Time Set)** Select a time zone Enter date and time

2 Enter Security Code (9999)

Enter new Security Code

YES

3 Select a font size

Select **Separate Setting** to customize font per window (P. 14-4).

4 [Keypad Sound Setting] window




ON or **OFF**

5 Select pointer speed







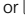


Tip

- Setup prompt no longer appears after setup is complete.
- The default Security Code is 9999.

Retrieving Network Information

When , , or  is pressed after initial setup, a prompt appears. Select **YES** to update network settings.

Tip

- Retrieve network information to use network-related services, such as mail and the Internet.
- To manually update network settings:
  **Settings**   **Connection**
Settings   **Retrieve NW Info** 
 **YES** 

Power Off

1 Press and hold

Handset shuts down.

More Features

Customize

Clock

- Hide Clock
- Clock Size
- Clock Color
- Set Auto Time Adjustment
- Manually Adjust Time
- Summer Time
- Time Zone (Sub Clock)
- Hide Sub Clock
- Summer Time (Sub Clock)
- Time Zone Major City (Sub Clock)

(▶ P. 14-2)

Auto Power On/Off

- Set Auto Power On/Off

(▶ P. 14-3)

Display Settings

- Set a Wake-up Image
- Set a Wake-up Message
- Set Font Type
- Set Font Thickness
- Set Font Sizes Collectively
- Set Font Size for Each Function Window

(▶ P. 14-4)

Sounds

- Set Key Sound Off

(▶ P. 14-10)

Neuropointer

- Set Neuropointer On/Off
- Neuropointer Speed (Simple Setting)
- Neuropointer Speed (Detailed Setting)
- Reset Neuropointer Speed
- Adjust Neuropointer Slide Range
- Reset Neuropointer Slide Range
- Set Neuropointer Icon Design

(▶ P. 14-26)

Resetting Handset

- Reset All Settings to Default
- Initialize Handset to Default Status

(▶ P. 14-31)

Use your handset responsibly. Inappropriate handset use can be both dangerous and bothersome. Take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Turn handset power off in theaters, museums and other places where silence is the norm.
- Refrain from use in restaurants, lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

Activating Manner Mode




Mute handset sound.

1 Press and hold

Note

- When handset is set to vibrate for incoming calls, be careful as handset may slide off, slide into a stove, etc.
- The other party may hear a short beep if Manner Mode is set or canceled during a call.

Tip

- Press and hold  again to cancel Manner Mode.
- Shutter click sounds even in Manner Mode.
- Press and hold  to set or cancel Manner Mode during a call. Short beeps sound through the earpiece when Manner Mode is set or canceled during a call.
- Set or cancel Manner Mode by pressing and holding .

More Features

Customize

Manner Mode

- Set Manner Mode Type
- Configure Original Manner Mode
- Set Time for Auto Manner Mode Start
- Set Time for Auto Manner Mode Release
- Toggle Auto Manner Mode Start and Release On/Off

 **P. 14-9**

Security Code, Center Access Code and Network Password are required to use handset.

- Do not reveal these codes to others.
Write down your codes.
- SoftBank is not liable for any damage due to handset misuse.

Security Code








Security Code, 9999 by default, is required to use some handset functions. The code can be changed.

- If Security Code is entered incorrectly or nothing is entered for 15 seconds, a tone sounds and a message appears. Enter correct Security Code.

Note

- The warning tone does not sound in Manner Mode or when *Keypad Sound* is set to *OFF*.

Changing Security Code

- 1  ⇒ **Settings** ⇒  ⇒ **Security**
⇒  ⇒ **Change Security Code**
⇒ 
- 2 Enter current Security Code ⇒ 
- 3 Enter new Security Code ⇒  ⇒ **YES** ⇒ 

Center Access Code

Center Access Code, a four-digit code assigned at initial subscription, is required to access Optional Services via landlines or to subscribe to fee-based information.

Network Password

Network Password, a four-digit code assigned at initial subscription, is required to use Call Barring.






- If Network Password is incorrectly entered three times, Call Barring settings are locked. Network Password and Center Access Code must be changed.

Checking Battery Level

Use Battery Level meters as a guide only.

Battery Level Indicator

Appears at top of Display.

-  81% to 100% Battery Level
-  61% to 80% Battery Level
-  41% to 60% Battery Level
-  21% to 40% Battery Level
-  0% to 20% Battery Level

Battery Level Beeper & Large Indicator

Check battery level by number of beeps and large indicator.

- 1    **Settings**   **Battery Level** 

Battery Level indicator appears. Beeps sound according to the battery level.

Five beeps:

81% to 100% Battery Level

Four beeps:

61% to 80% Battery Level

Three beeps:

41% to 60% Battery Level

Two beeps:

21% to 40% Battery Level

One beep:

0% to 20% Battery Level

Note


















- The battery level beeper does not sound in Manner Mode or when *Keypad Sound* is set to *OFF*.

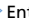Tip

- When Battery is empty, *Recharge Battery* appears, the battery alarm sounds for about 10 seconds, and handset powers off in about 60 seconds. Charge battery.

My Phone Number

Check handset phone number.

- 1  
- Account Details appear.
- **Add Other Information**   Enter Security Code  
 - Select an item   Enter information  
 - **View All Information**    
 - Enter Security Code  
 -  to switch tabs

Reset Account Details

  **Reset**   Enter Security Code   **YES** 

Checking Network Status

Check Network Status to confirm if voice calls and/or packet transmission is available.

- 1   **Settings**   **Other Settings**   **Network Status** 

Network information appears.

Stereo Earphone Conversion Cable


Use Stereo Earphone Conversion Cable (sold separately) to connect earphones. When sound source is monaural (calls, etc.), stereo earphones output monaural sound to left and right earphones; when sound source is stereo, only the left channel is output to monaural earphones.

Using WLAN

Use WLAN connections for access to the Internet. Select from household network or public networks.

- For details on WLAN configuration, see P. 13-12.

Available Networks

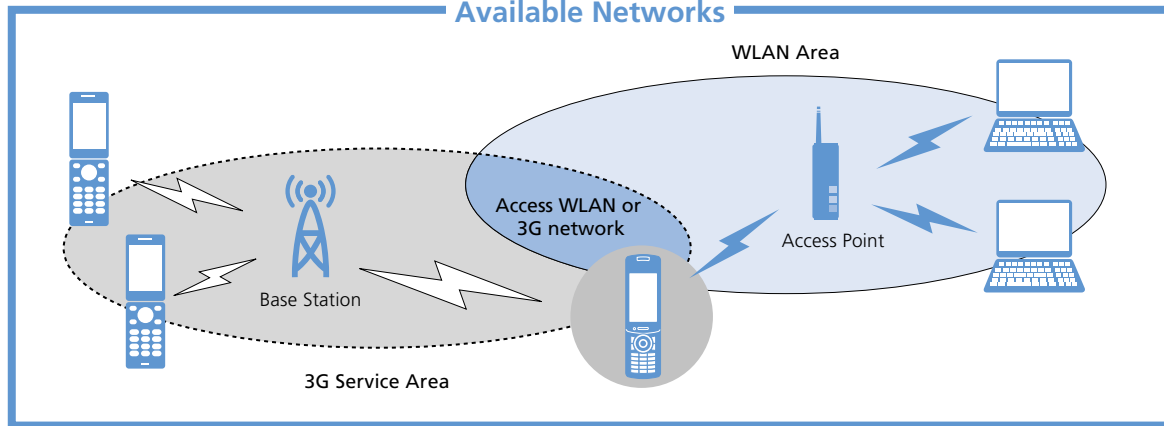


Faster Internet Access with WLAN

- Access the Internet at higher speeds than 3G/GSM networks. With WLAN connection, Internet access is available even outside the 3G network range.
- Access Keitai Wi-Fi or other services for high-speed packet transmission. Download large-size content, stream multimedia files and use PC Site Browser.

Using ECO Mode

When set to ECO Mode, light, sound and Display settings are modified to decrease battery consumption.


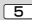
1 Press and hold 

ECO Mode is set, and  appears.

Note

- ECO Mode is canceled when handset is turned off.
- The other party may hear short beeps if ECO Mode is set or canceled during a call.

Tip

- Press and hold  again to cancel ECO Mode.
- Press and hold  to set or cancel ECO Mode during a call.