

Security



PIN Settings	4-2
Setting PIN1 Entry	4-2
Changing PIN1/PIN2	4-2
Prohibiting Unauthorized Handset Use	4-3
Dial Lock	4-3
Original Lock	4-3
Disabling Keypad	4-4
Secure Remote Lock	4-5
IC Card Authentication	4-5
Prohibiting Outgoing/Incoming Calls	4-6
Rejecting Calls without Caller ID	4-6
Rejecting Calls from Unsaved Numbers	4-6
Delaying Ringtone	4-6
Emission OFF Mode	4-6
Secret Modes	4-7
Secret Mode & Secret Data Only Mode	4-7
Hiding Handset Data	4-7

4



Setting PIN1 Entry

Set to require PIN1 entry each time handset is turned on.

- 1 → **Settings** → → **Security**
→ → **PIN Setting** →
- 2 Enter Security Code →
- 3 **PIN1 Code Entry Set** → → **ON**
→ → Enter PIN1 →

Changing PIN1/PIN2

● *PIN1 Code Entry Set* must be set to *ON* before changing PIN1.

- 1 → **Settings** → → **Security**
→ → **PIN Setting** →
- 2 Enter Security Code →
- 3 **Change PIN1 Code** or **Change PIN2 Code** →
- 4 Enter current PIN1/PIN2 →
- 5 Enter new PIN1/PIN2 → →
Enter new PIN1/PIN2 again for confirmation →



Prohibiting Unauthorized Handset Use

Dial Lock

Prevent others from operating handset.

1 ⇒ **Settings** ⇒ ⇒ **Security**
⇒ ⇒ **Lock** ⇒

2 Enter Security Code ⇒

3 **Dial Lock** ⇒

Note

- GPS positioning features unavailable during Dial Lock. Location Information is based on radio station signals for:
 - Emergency Location Report (P. 3-2)
 - Location Information is reported to corresponding agencies (110, 119 or 118) when emergency calls are placed.
 - 紛失ケータイ捜索サービス (Lost Mobile Phone Search)
- Location Navi is unavailable during Dial Lock.

Tip

- The following operations are possible even when Dial Lock is activated:
 - Power on/off
 - Calling emergency numbers 110, 119 and 118
 - Answering incoming voice/video calls

Canceling Dial Lock

1 Enter Security Code ⇒

If incorrect Security Code is entered, press and enter correct Security Code.

Tip

- If Security Code is incorrectly entered five times, handset powers off. Turn handset power on and enter correct Security Code.

Original Lock

Prevent others from accessing handset functions/data (e.g. Phone Book, Mail, etc). Select from three levels (high, medium or low) and customize as required.

- For IC Card Lock and Call Remote Lock, see P. 11-3.

Activating Original Lock

1 ⇒ **Settings** ⇒ ⇒ **Security**
⇒ ⇒ **Lock** ⇒

2 Enter Security Code ⇒



Lock Window

3 Select an Original Lock level ⇒

Functions/data specified under the selected lock type are locked.

Tip

- To edit title:
[Lock] window ⇒ Select an Original Lock ⇒ ⇒ **Edit Title** ⇒ ⇒ Edit title ⇒
- Security Code entry is requested when accessing a locked function or data. Enter Security Code to unlock and access function/data. Original Lock setting returns when handset returns to Standby.
- **Dial/Sending Mail** and **Incoming/Mail Disp.** cannot be unlocked temporarily.



Prohibiting Unauthorized Handset Use

Customizing Original Lock

Set lock per function, group or category.

Some functions/groups are locked.

All functions in Group/Category are locked.

Customize by Function/Data

1 [Lock] window Select an Original Lock

2 Select a category

3 Select a group

4 Select an item

Checked items are locked. To uncheck an item, select the item and press .

■ To Select All Functions

Select All

■ To Deselect All Functions

Release All

5 (three times)

Customize by Category or Group

1 [Lock] window Select an Original Lock

2 Select a category (Select a group)

3 Select

To deselect, press , select **Release** and then press .

■ To Select Lock for Category or Group

Select All

■ To Cancel Lock for Category or Group

Release All

4 ()

Disabling Keypad

Set Keypad Lock to automatically lock handset keys. Customize Lock settings as required. Alternatively, press in Touch Style to lock keypad/Touch Panel operation.

Setting Keypad Lock

1 **Settings** **Security** **Keypad Lock**

2 Enter Security Code

▶ To Lock When Handset Closed After Closed ON

▶ To Lock After Handset Closed a Certain Time
Timer Select time until lock activates

▶ To Lock by Pressing Lock Key ON

In Touch Style, press to lock.

▶ To Require Security Code to Cancel Lock

Security Code YES

3

Tip

- All keypad operations are disabled, except for answering incoming calls and turning power on/off.
- appears at bottom of Display when keypad operation is available in Keypad Lock.
- Emergency numbers 110, 119 and 118 are available even when **Keypad Lock** is set.

Temporarily Unlocking Keypad Lock

When Security Code Required

1 Enter Security Code

■ In Touch Style

Enter Security Code

When Security Code Not Required

1 Open handset

■ In Touch Style

Drag Scrollbar to the right.



Secure Remote Lock

If your handset is lost, lock handset functions remotely from a PC or other mobile phones. All key operations are disabled except Power Key. For details, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>), or access My SoftBank from your handset:
 ⇒ **メニューリスト** (Menu List) ⇒ ⇒ **My SoftBank** ⇒


IC Card Authentication

Hold a FeliCa compatible contactless IC card over handset to authenticate the user ID without canceling Dial Lock or Keypad Lock, or without entering a code number.

- IC Card Authentication is available even when IC Card Lock is activated.
- Register up to two contactless IC cards.

Activating IC Card Authentication

- ⇒ **Settings** ⇒ ⇒ **Security** ⇒ ⇒ **IC Card Authentic.** ⇒ ⇒ **Enter Security Code** ⇒

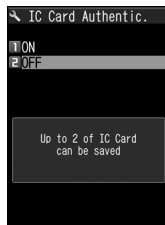

IC Card Authentication Window

- ON** ⇒ ⇒ **OK** ⇒

■ To Activate Registered IC Card

⇒ **ON** ⇒

- Place IC Card over logo**
 disappears after card is registered.

Tip

- To deactivate Authentication:
 [IC Card Authentication] window ⇒ **OFF** ⇒ ⇒ **YES** or **NO** ⇒
 Select **YES** to delete or **NO** not to delete all registered IC Card data.

Registering IC Card

- [IC Card Authentication] window** ⇒ ⇒ **New Ext. IC Card** ⇒
- Place IC Card over logo**
 disappears after card is registered.

Tip

- To delete IC card registration:
 [IC Card Authentication] window ⇒ ⇒ **Del. Ext. IC Card** ⇒ ⇒ Select IC Card to delete ⇒ ⇒ ⇒ **YES** ⇒



Prohibiting Outgoing/Incoming Calls

Rejecting Calls without Caller ID

Incoming calls from hidden and/or unidentified numbers can be rejected.

1 ⇒ **Settings** ⇒ ⇒ **Security** ⇒ ⇒ **Call Setting W/O ID** ⇒

2 Enter Security Code ⇒

3 **Unknown, Payphone or User Unset** ⇒

4 **Reject** ⇒

Tip

- To allow incoming calls, after Step 3:
Accept ⇒ ⇒ Select Ring Tone or Select Calling Disp. ⇒ ⇒ Select type ⇒ (⇒ Select a folder ⇒ ⇒ Select a ringtone or image ⇒

Rejecting Calls from Unsaved Numbers

1 ⇒ **Settings** ⇒ ⇒ **Security** ⇒ ⇒ **Reject Unknown** ⇒

2 Enter Security Code ⇒

3 **Reject** ⇒

Note

- This procedure is unavailable when **Set Mute Seconds** under **Ring Time (sec.)** is set to **ON** (P. 4-6).

Tip

- To allow incoming calls, after Step 2:
Accept ⇒

Delaying Ringtone

Delay ringtone, for callers not saved in Phone Book (including Secret Phone Book). In addition, set **Missed Calls Display** to **Not Display** so missed calls with a short ring time do not appear in Received Calls. This can prevent you from accidentally returning calls from nuisance calls.

- This procedure is unavailable when **Reject Unknown** is set to **Reject**.

1 ⇒ **Settings** ⇒ ⇒ **Incoming Call** ⇒ ⇒ **Ring Time (sec.)** ⇒

2 **Set Mute Seconds** ⇒ ⇒ **ON** ⇒ ⇒ Enter time before ringtone plays

3 **Missed Calls Display** ⇒ ⇒ **Display or Not Display** ⇒

Tip

- For calls from numbers in Secret Phone Book, only the number appears when **Set Mute Seconds** is set to **OFF**.
- Ringtone starts in zero seconds when **Set Mute Seconds** is **OFF**.

Emission OFF Mode

The following are prohibited in Emission OFF Mode:

- Incoming/Outgoing Calls
- Incoming/Outgoing Messages
- Yahoo! Keitai Access
- PC Site Browser Access

1 ⇒ **Settings** ⇒ ⇒ **Security** ⇒ ⇒ **Emission OFF Mode** ⇒ ⇒ **YES** ⇒

Repeat procedure to cancel Emission OFF Mode.

Tip

- Emergency numbers (110, 119 and 118) are available even in Emission OFF Mode.



Secret Mode & Secret Data Only Mode

Activate Secret Mode/Secret Data Only Mode to view secret Phone Book entries, secret Schedule events and secret files.

Secret Mode: View all data and secret data.

Secret Data Only Mode: For Phone Book and Schedule, only secret entries appear. For image files, messages and bookmarks, all saved data appear.

Activating Secret Mode & Secret Data Only Mode

1 ⇒ **Settings** ⇒ ⇒ **Security** ⇒ ⇒ **Secret Mode or Secret Data Only Mode** ⇒

2 Enter Security Code ⇒

Canceling Secret Mode & Secret Data Only Mode

1 In Standby,

Hiding Handset Data

Files stored in Secret Folders are accessible only when Secret Mode or Secret Data Only Mode is activated.

- Storable file types: Images, videos, received and sent messages and bookmarks (Yahoo! Keitai and PC Browser).
- Data saved on memory card or USIM Card cannot be stored in Secret Folders.
- Each Secret Folder of Data Folder has a fixed storage capacity as follows:
 - My Picture: Approx. 4 MB
 - Videos: Approx. 10 MB

Moving Data to Secret Folders

1 Set handset to Secret Mode or Secret Data Only Mode

2 From a folder, select an item ⇒ ⇒ **Keep in Secret** ⇒

Moving Data from Secret Folders

1 Set handset to Secret Mode or Secret Data Only Mode

2 In a folder list ⇒ **Secret** ⇒

3 Select an item ⇒ ⇒ **Put Out** ⇒

4 Select a destination folder ⇒

Tip

- Functions available with Secret Folder data are limited.

