


Customization

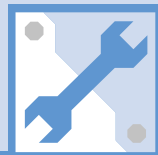

Clock, Display & Sounds.....	14-2
Phone Book & Calls.....	14-11
Mail.....	14-15
Internet.....	14-18
TV	14-20
Camera	14-22
Player & S! Appli.....	14-23
Entertainment.....	14-24
Other Settings.....	14-26

14



Clock, Display & Sounds

Clock

Start Here ⇒ **Settings** ⇒ ● ⇒ **Clock** ⇒ ●

Hide Clock	⇒ Clock Display ⇒ ● ⇒ Display ⇒ ● ⇒ OFF ⇒ ●
Clock Size	⇒ Clock Display ⇒ ● ⇒ Size ⇒ ● ⇒ Select a size ⇒ ●
Clock Color	⇒ Clock Display ⇒ ● ⇒ Color ⇒ ● ⇒ Black or White ⇒ ●
Set Auto Time Adjustment	⇒ Set Main Time ⇒ ● ⇒ Auto Time Adjust ⇒ ● ⇒ Auto ⇒ ● ⇒ Select a time zone ⇒ ● <ul style="list-style-type: none"> • Press to change city/area name in Time Zone Selection field. • If auto time adjustment is still not performed, open Yahoo! Keitai top page again and perform Reload before returning to Standby.
Manually Adjust Time	⇒ Set Main Time ⇒ ● ⇒ Auto Time Adjust ⇒ ● ⇒ Manual(Date Time Set) ⇒ ● ⇒ Select a time zone ⇒ ● ⇒ Enter date and time ⇒ ●
Summer Time	⇒ Set Main Time ⇒ ● ⇒ Summer Time ⇒ ● ⇒ ON ⇒ ●

Time Zone (Sub Clock)	⇒ Set Sub Clock ⇒ ● ⇒ Display Method ⇒ ● ⇒ Always ⇒ ● ⇒ Select a time zone ⇒ ●
Hide Sub Clock	⇒ Set Sub Clock ⇒ ● ⇒ Display Method ⇒ ● ⇒ OFF ⇒ ●
Summer Time (Sub Clock)	⇒ Set Sub Clock ⇒ ● ⇒ Summer Time ⇒ ● ⇒ ON ⇒ ●
Time Zone Major City (Sub Clock)	⇒ Set Sub Clock ⇒ ● ⇒ Area Name ⇒ ● ⇒ Display ⇒ ●

Alarm

Start Here ⇒ **Settings** ⇒ ● ⇒ **Clock** ⇒ ●

Set Priority at Alarm Notification Time	⇒ Alarm Setting ⇒ ● ⇒ Operation Preferred or Alarm Preferred ⇒ ●
Change Alarm Tone	⇒ Clock Alarm Tone Set ⇒ ● ⇒ Select an item ⇒ ● ⇒ Set an alarm tone



Clock, Display & Sounds

Auto Power On/Off

Set Auto Power On/Off*	<p> ⇒ Settings ⇒ ● ⇒ Clock ⇒ ● ⇒ Auto Power ON or Auto Power OFF ⇒ ● ⇒ ON ⇒ ● ⇒ Enter time ⇒ ● ⇒ 1 Time or Daily ⇒ ● </p>
------------------------	--

* When near high precision electronic devices or devices using weak signals, or in areas where handset use is forbidden (aboard aircraft, in hospitals, etc.), set **Auto Power ON** to **OFF** and turn handset power off.

Style Mode Settings

Start Here ⇒ **Settings** ⇒ ● ⇒ **Style Mode Setting** ⇒ ●

Set Display Design Collectively	<p> ⇒ Select a style ⇒ ● ⇒ YES ⇒ ● (⇒ YES or NO ⇒ ●) </p>
Check Default Style Mode Settings	<p> ⇒ Select a style ⇒ • Details of some items can be checked by selecting an item and pressing . </p>
Edit Title of a Style	<p> ⇒ Select a style ⇒ ⇒ Edit Title ⇒ ● ⇒ Edit title ⇒ ● </p>
Save Current Style Mode Settings as Favorite	<p> ⇒ お気に入り (Favorites) ⇒ ⇒ ⇒ Take Setting Info ⇒ ● ⇒ YES ⇒ ● • The current style mode settings can later be recalled collectively from お気に入り when they are changed. </p>

Change Each Item for Favorites	<p> ⇒ お気に入り (Favorites) ⇒ ⇒ Select an item ⇒ ● ⇒ Set an image </p>
Clear All Favorite Settings	<p> ⇒ お気に入り (Favorites) ⇒ ⇒ Reset Setting Info ⇒ ● ⇒ YES ⇒ ● </p>

Display Settings

Start Here ⇒ **Settings** ⇒ ● ⇒ **Display** ⇒ ●

Wallpaper	<p> ⇒ Display Setting ⇒ ● ⇒ Stand-by Display ⇒ ● ⇒ My Picture or Videos ⇒ ● ⇒ Set an image/video (⇒ Select a layout ⇒ ● (twice)) </p>
Show Calendar in Standby	<p> ⇒ Display Setting ⇒ ● ⇒ Stand-by Display ⇒ ● ⇒ Calendar ⇒ ● ⇒ Background ⇒ ● ⇒ Set an image ⇒ ● (twice) • Select No Background if you do not want any image in the background of the calendar. • Press ●, use to select the calendar and press ● to operate it. Use to switch to the previous/next month. Press ● to activate Schedule. </p>



Clock, Display & Sounds

Set Wallpaper Image to Change When Handset Returns to Standby	⇒ <i>Display Setting</i> ⇒ ● ⇒ <i>Stand-by Display</i> ⇒ ● ⇒ <i>Random Display</i> ⇒ ● ⇒ Select a folder ⇒ ● ⇒ Select a layout ⇒ ● <ul style="list-style-type: none"> Each time handset returns to Standby, a different wallpaper image appears. Images are randomly selected from the set folder. Available in Touch Style or Communication Style.
Set a Wake-up Image	⇒ <i>Display Setting</i> ⇒ ● ⇒ <i>Wake-up Display</i> ⇒ ● ⇒ <i>My Picture</i> ⇒ ● ⇒ Set an image
Set a Wake-up Message	⇒ <i>Display Setting</i> ⇒ ● ⇒ <i>Wake-up Display</i> ⇒ ● ⇒ <i>Message</i> ⇒ ● ⇒ Enter message ⇒ ●
Set an Outgoing Call/Message Image	⇒ <i>Display Setting</i> ⇒ ● ⇒ <i>Dialing, Video Call Dialing or Mail Sending</i> ⇒ ● ⇒ Set an image
Set Image or Video for Incoming Call/Message	⇒ <i>Display Setting</i> ⇒ ● ⇒ <i>Calling, Video Call Calling or Mail Receiving</i> ⇒ ● ⇒ <i>Select Calling Disp.</i> or <i>Select Receiving Disp.</i> ⇒ ● (⇒ <i>My Picture</i> or <i>Videos</i> ⇒ ●) ⇒ Set an image/video
Set Image for New Message/Received Result Window	⇒ <i>Display Setting</i> ⇒ ● ⇒ <i>Retrieve New or Mail Rec'd Result</i> ⇒ ● ⇒ Set an image
Display Color Scheme	⇒ <i>Display Design</i> ⇒ ● ⇒ <i>Color Theme</i> ⇒ ● ⇒ Select a color ⇒ ●

Battery Level Indicator/Signal Strength Indicator Design	⇒ <i>Display Design</i> ⇒ ● ⇒ <i>Icon Pattern</i> ⇒ ● ⇒ <i>Battery Icon</i> or <i>Antenna Icon</i> ⇒ ● ⇒ Select a pattern ⇒ ●
Set Softkey Color	⇒ <i>Display Design</i> ⇒ ● ⇒ <i>Soft Key</i> ⇒ ● ⇒ Select a color ⇒ ●
Set Font Type	⇒ <i>Font</i> ⇒ ● ⇒ <i>Font Type</i> ⇒ ● ⇒ <i>Gothic</i> or <i>Ming-cho</i> ⇒ ● <ul style="list-style-type: none"> Alternatively, press and hold [7] in Standby to make font settings.
Set Font Thickness	⇒ <i>Font</i> ⇒ ● ⇒ <i>Thickness</i> ⇒ ● ⇒ <i>Thin</i> or <i>Bold</i> ⇒ ● <ul style="list-style-type: none"> Alternatively, press and hold [7] in Standby to make font settings.
Set Font Sizes Collectively	⇒ <i>Font</i> ⇒ ● ⇒ <i>Character Size</i> ⇒ ● ⇒ <i>Standard</i> or <i>X-large</i> ⇒ ● <ul style="list-style-type: none"> Items settable with <i>Separate Setting</i> for <i>Character Size</i> can be set collectively. Alternatively, press and hold [7] in Standby to make font settings.
Set Font Size for Each Function Window	⇒ <i>Font</i> ⇒ ● ⇒ <i>Character Size</i> ⇒ ● ⇒ <i>Separate Setting</i> ⇒ ● ⇒ Select a window ⇒ ● ⇒ Select a size ⇒ ● ⇒ [8]



Clock, Display & Sounds

Interface Language	<p>⇒ 言語選択 ⇒ ● ⇒ 日本語 or English ⇒ ●</p> <ul style="list-style-type: none"> To change interface language from Japanese to English: <p>⇒ ⇒ 設定 ⇒ ● ⇒ ディスプレイ ⇒ ● ⇒ Language ⇒ ● ⇒ English ⇒ ●</p>
Set Image List View	<p>⇒ Viewer Settings ⇒ ● ⇒ Picture or Title ⇒ ●</p>
Guard from Prying Eyes	<p>⇒ Privacy Angle ⇒ ● ⇒ ON ⇒ ●</p> <ul style="list-style-type: none"> Alternatively, press and hold in Standby to toggle on and off. The other party may hear a short beep when this operation is performed during a call. When <i>Privacy Angle</i> is set, Display is whitish and the viewing angle is narrower. Turn power off then on again to cancel Privacy Angle.
Show New Message Info While Viewing TV	<p>⇒ Quick Info Setting ⇒ ● ⇒ Display Sender or Display Sender/Subject ⇒ ●</p>
Set Effect for Screen Change	<p>⇒ Screen Effect ⇒ ● ⇒ Select an item ⇒ ●</p>
Display Quality	<p>⇒ Image Display Mode ⇒ ● ⇒ Normal, Vivid or Dynamic ⇒ ●</p> <ul style="list-style-type: none"> TV image quality setting follows the <i>Visual Image Effect</i> setting in <i>TV Effect</i>. A preview image for each mode appears during selection in <i>Image Display Mode</i> to check the effect.

Backlight

Start Here ⇒ Settings ⇒ ● ⇒ Display ⇒ ● ⇒ Backlight ⇒ ●

Set Backlight & Power Saving	<p>⇒ Lighting ⇒ ● ⇒ ON or OFF ⇒ ● (⇒ Select time Backlight is lit ⇒ ●) ⇒ ON or OFF ⇒ ● (⇒ Enter a time before the Power Saver Mode is activated)</p> <ul style="list-style-type: none"> Press and hold to toggle TV Power Saving on/off. When the Power Saver Mode is activated, nothing appears in Standby. Pressing any key cancels the Power Saver Mode.
Set Backlight during Charging	<p>⇒ Charging ⇒ ● ⇒ Standard or All Time ON ⇒ ●</p>
Set Backlight Area	<p>⇒ Area ⇒ ● ⇒ LCD+Keys or LCD ⇒ ●</p>
Set Brightness of Backlight	<p>⇒ Brightness ⇒ ● ⇒ ON or OFF ⇒ ●</p> <p>⇒ Select a Level ⇒ ●</p> <ul style="list-style-type: none"> When set to <i>ON</i>, Display Backlight automatically adjusts to surrounding brightness. Key Backlight automatically switches on/off. <i>Brightness</i> is <i>Level 4</i> by default. For maximum brightness, set to <i>Level 6</i>. Note that a higher setting will decrease battery time faster.



Desktop Icons

Start Here → **Settings** → → **Display** →

Set Desktop Theme	<p>→ Desktop Icon → → Select a theme → → YES → </p> <ul style="list-style-type: none"> Press to see details of the selected theme.
Change Icon Design of a Theme	<p>→ Desktop Icon → → Select a theme → → Select an icon → → CHG Icon Image → → Select Icon Image or Default Icon Image → (→ Set and icon)</p>
Change Order of Icons of a Theme	<p>→ Desktop Icon → → Select a theme → → Select an icon → → Sort → → Select a position → </p>
Copy Icons to Another Theme	<p>→ Desktop Icon → → Select a theme → → Select an icon → → Copy → → Copy This, Copy Selected or Copy All → → Select a destination theme → (→ Select icons → →)</p> <ul style="list-style-type: none"> When Copy Selected or Copy All is selected, select YES and press at the end of the procedure.

Move Icons to Another Theme	<p>→ Desktop Icon → → Select a theme → → Select an icon → → Move → → Move This, Move Selected or Move All → → Select a destination theme → (→ Select icons → →) → YES → </p>
Delete Icons of a Theme	<p>→ Desktop Icon → → Select a theme → → Select an icon → → Delete → → Delete This, Delete selected or Delete All → (→ Select icons → →) → YES → </p>
Set New Message Indicator in 3D	<p>→ 3D Display Setting → → ON → </p>

Menu Display Settings

Start Here → **Settings** → → **Display** → → **Menu Display Set** →

List View and Details View	<p>→ Menu Display → → List or Detail → </p> <ul style="list-style-type: none"> Select View for menus from → Settings →
Set Main Menu Theme	<p>→ Theme → → Select a theme → (→ YES or NO → </p>



Clock, Display & Sounds

Change Icon Design (Original Theme)	<p>⇒ Theme ⇒ ● ⇒ Original Theme ⇒ ●</p> <p>⇒ Select a menu item ⇒ ● ⇒ Set an image</p> <ul style="list-style-type: none"> • Change Main Menu icons to any preferred image. • Press to check current setting.
Change Background (Original Theme)	<p>⇒ Theme ⇒ ● ⇒ Original Theme ⇒ ●</p> <p>⇒ Background Image ⇒ ● ⇒ Set an image</p> <ul style="list-style-type: none"> • Change Main Menu background to any preferred image. • Press to check current setting.
Reset Original Theme Settings	<p>⇒ Theme ⇒ ● ⇒ Original Theme ⇒ ●</p> <p>⇒ Select a menu item ⇒ ⇒ Reset or All reset ⇒ ● ⇒ YES ⇒ ●</p> <ul style="list-style-type: none"> • Only available when any Original theme settings have been changed.
Save Last Selected Menu Item to Memory	<p>⇒ Memory Focus ⇒ ● ⇒ ON ⇒ ●</p>
<p>Start Here ⇒ </p>	
Add a Menu Item to Original Menu	<p>⇒ <Not Recorded> ⇒ ⇒ Select a function ⇒ ● (⇒ YES ⇒ ●)</p>
Change Order of Original Menu Items	<p>⇒ Select an item ⇒ ⇒ Sort ⇒ ● ⇒ Select a position ⇒ ●</p>

Cancel Original Menu Items	<p>⇒ Select an item ⇒ ⇒ Release or Release All ⇒ ● ⇒ YES ⇒ ●</p>
Reset Original Menu	<p>⇒ ⇒ Reset Org. Menu ⇒ ● ⇒ YES ⇒ ●</p>

Standby Indicators

Enable Indicator Selector	<p> ⇒ Settings ⇒ ● ⇒ Display ⇒ ● ⇒ Icons Setting ⇒ ● ⇒ ON ⇒ ●</p> <ul style="list-style-type: none"> • The indicators at the top of Display are enabled by pressing ● in Standby. Use to select an indicator and press ● to access the corresponding function.
---------------------------	--

Incoming Call/Message Alerts

<p>Start Here ⇒ Settings ⇒ ● ⇒ Incoming Call ⇒ ●</p>	
Adjust Ringtone Volume	<p>⇒ Ring Volume ⇒ ● ⇒ Phone, Video Call or Mail ⇒ ● ⇒ to adjust volume ⇒ ●</p> <ul style="list-style-type: none"> • When Step is set, the ringtone volume increases every three seconds. When Silent is set, no ringtone sounds.



Clock, Display & Sounds

Set a Ringtone	<p>⇨ <i>Select Ring Tone</i> ⇨ ● ⇨ <i>Phone, Video Call or Mail</i> ⇨ ● ⇨ <i>Select Ring Tone</i> ⇨ ● ⇨ Select an item ⇨ ● (⇨ Select a folder ⇨ ●) ⇨ Set a ringtone</p>
Set Random Playback of Melodies as Ringtones	<p>⇨ <i>Select Ring Tone</i> ⇨ ● ⇨ <i>Phone, Video Call or Mail</i> ⇨ ● ⇨ <i>Select Ring Tone</i> ⇨ ● ⇨ <i>Random Melody</i> ⇨ ● ⇨ Select a folder ⇨ ●</p> <ul style="list-style-type: none"> • Melodies in the selected folder are played at random as ringtones.
Set Ringtone Duration for Incoming Message	<p>⇨ <i>Mail Ring Time</i> ⇨ ● ⇨ <i>Mail</i> ⇨ ● ⇨ ON ⇨ ● ⇨ Enter ringing duration</p> <ul style="list-style-type: none"> • When <i>OFF</i> is set, no ringtone sounds and handset does not vibrate when receiving messages.
Set Vibration*	<p>⇨ <i>Vibrator</i> ⇨ ● ⇨ <i>Phone, Video Call or Mail</i> ⇨ ● ⇨ Select a pattern ⇨ ●</p> <ul style="list-style-type: none"> • When <i>Melody Linkage</i> is set, handset vibration is linked to the set ringtone melody.
Set Illumination Color	<p>⇨ <i>Illumination</i> ⇨ ● ⇨ <i>Set Color</i> ⇨ ● ⇨ <i>Phone, Video Call or Mail</i> ⇨ ● ⇨ Select a color ⇨ ●</p>
Set Illumination Pattern	<p>⇨ <i>Illumination</i> ⇨ ● ⇨ <i>Set Pattern</i> ⇨ ● ⇨ Select a pattern ⇨ ●</p> <ul style="list-style-type: none"> • When <i>Melody Linkage</i> is set, illumination pattern is linked to the set ringtone melody.

Adjust Illumination Color	<p>⇨ <i>Illumination</i> ⇨ ● ⇨ <i>Adjust Color</i> ⇨ ● ⇨ <i>Edit Color Name</i> or <i>Adjust Color Tone</i> ⇨ ● ⇨ Select color ⇨ ● ⇨ Set color name or color ⇨ ●</p>
Set Illumination to Flash for Missed Calls/New Messages	<p>⇨ <i>Illumination</i> ⇨ ● ⇨ <i>Missed Info</i> ⇨ ● ⇨ ON ⇨ ●</p>
Set an Incoming Call/Message Image	<p>⇨ <i>Select Ring Tone</i> ⇨ ● ⇨ <i>Phone, Video Call or Mail</i> ⇨ ● ⇨ <i>Select Calling Disp.</i> or <i>Select Receiving Disp.</i> ⇨ ● (⇨ <i>My Picture</i> or <i>Videos</i> ⇨ ●) ⇨ Set an image/video</p>
Show Phone Book Entry Images for Incoming Calls/ Messages	<p>⇨ <i>Disp. Phone Book Image</i> ⇨ ● ⇨ ON ⇨ ●</p>

* When *Vibrator* is not set to *OFF*, be careful not to let handset fall off a desk or slide too close to a stove, etc. when it vibrates.



Answering Incoming Calls

Start Here → **Settings** → ● → **Incoming Call** → ●

Set to Answer Calls by Pressing Any Key	<p>→ Answer Setting → ● → Any Key Answer → ●</p> <ul style="list-style-type: none"> Answer incoming voice calls by pressing a key from , ● , - , , , , and . The any key answer function is disabled for incoming video calls.
Set to Mute Ringtone by Pressing Any Key	<p>→ Answer Setting → ● → Quick Silent → ●</p> <ul style="list-style-type: none"> Mute the ringtone by pressing a key from - , , , , , and or by opening handset.

Manner Mode

Start Here → **Settings** → ● → **Incoming Call** → ● → **Manner Mode Setting** → ●

Set Manner Mode Type	<p>→ Manner Mode Set → ● → Select a Manner Mode → ●</p> <ul style="list-style-type: none"> When <i>Super Silent</i> is set, all tones emitted through the earpiece are also muted.
Configure Original Manner Mode	<p>→ Manner Mode Set → ● → Original → ●</p> <p>● → Set each item → </p>

Set Time for Auto Manner Mode Start	<p>→ Manner Start Time → ● → Start Time Set1 or Start Time Set2 → → → ●</p> <p>→ Enter time → ● → → ● → 1 Time, Daily (D) or Select Day (W) → ● →</p> <p>(Select day →) → </p>
Set Time for Auto Manner Mode Release	<p>→ Manner Release Time → ● → Release Time Set1 or Release Time Set2 → → → ● → Enter time → ● → → ●</p> <p>→ 1 Time, Daily (D) or Select Day (W) → ● → (Select day →) → </p>
Toggle Auto Manner Mode Start and Release On/Off	<p>→ Manner Start Time or Manner Release Time → ● → Select an item → </p> <ul style="list-style-type: none"> Press to toggle on/off. Settings (e.g., time) are not updated. To cancel all settings at once: → → Release All → ● → YES → ●

Checking Call Logs

Start Here → **Settings** → ● → **Incoming Call** → ●

Notify Missed Calls with Tone (When Pressed)	<p>→ Info Notice Setting → ● → ON → ●</p> <ul style="list-style-type: none"> Two short beeps sound twice when there are missed calls, and three short beeps sound when there are none.
---	---



Clock, Display & Sounds

Change Colors of Names, Phone Numbers and E-mail Addresses in Call and Message Log Windows

- ⇒ *Disp. Call/Receive No.* ⇒ ● ⇒ Select a color ⇒ ●
- Press to toggle the color palette between 16 colors and 256 colors.
- To reset the color settings, press .

Sounds

Start Here ⇒ **Settings** ⇒ ● ⇒ **Other Settings** ⇒ ●

Set Key Sound Off

- ⇒ *Keypad Sound* ⇒ ● ⇒ **OFF** ⇒ ●
- Sound when tapping Display is also turned off.

Set to Play Charging Start/End Tones

- ⇒ *Charge Sound* ⇒ ● ⇒ **ON** ⇒ ●

Start Here ⇒ **Tools** ⇒ ● ⇒ **Voice Announce** ⇒ ●

Record Sound to Set as Ringtone or Outgoing Message

- ⇒ Select an item ⇒ ● ⇒ **YES** ⇒ ● ⇒
- Record sound (for about 15 seconds)
- Press ● to stop recording.

Play Recorded Sound

- ⇒ Select an item with ★ ⇒ ●

Delete Recorded Sound

- ⇒ Select an item with ★ ⇒ ⇒ **Erase** ⇒ ● ⇒ **YES** ⇒ ●

Earphone-Microphone

Start Here ⇒ **Settings** ⇒ ●

Audio Output

- ⇒ *External Connection* ⇒ ● ⇒ *Headset Usage Setting* ⇒ ● ⇒ *Headset+speaker* or *Headset Only* ⇒ ●

Microphone Setting

- ⇒ *External Connection* ⇒ ● ⇒ *Headset Mic. Setting* ⇒ ● ⇒ *Built-in Microphone* or *Headset Microphone* ⇒ ●

Answer Calls Automatically

- ⇒ *External Connection* ⇒ ● ⇒ *Auto Answer Setting* ⇒ ● ⇒ *Phone* or *Video Call* ⇒ ● ⇒ **ON** ⇒ ● ⇒ Enter ring time

Save a Phone Number to Dial with an Earphone-Microphone

- ⇒ *Dialing* ⇒ ● ⇒ *Headset SW to Dial* ⇒ ● ⇒ *Voice Call* ⇒ ● ⇒ Search Phone Book ⇒ Select an entry ⇒ ● ⇒ Select a phone number ⇒ ●



Phone Book

Set Preferred Search Method	[Phone Book Search] window (P. 2-22) → Select a search method → → OK → ● <ul style="list-style-type: none"> To cancel the preferred search method, press in Phone Book Search window, select the search method with ★, and then press .
Change Group Name	[Phone Book Entry List] (P. 2-22) → → Group Setting → ● → Select a group → ● → Edit group name → ● <ul style="list-style-type: none"> The name remains the same only for <i>No Group</i>.
Do Not Send Phone Book Entry Images via Infrared	→ Tools → ● → Forwarding Image → ● → OFF → ●

S! Addressbook Back-up

Start Here → **Tools** → ● → **S! Addressbook Back-up** → ●

Set Auto Synchronize	→ Auto Sync Settings → ● → ON/OFF → ● → ON → ● → Enter Security Code → ● → Select synchronize timing → ● (→ Set synchronize cycle and day) → Select synchronize type → ● → YES → ● (twice)
----------------------	---

Set Auto Synchronize Off	→ Auto Sync Settings → ● → ON/OFF → ● → OFF → ●
Check Auto Synchronize Settings	→ Auto Sync Settings → ● → Confirm Settings → ●

Outgoing Calls

Start Here → **Settings** → ● → **Dialing** → ●

Save Area Code and Country Code as Prefix Numbers	→ Prefix Setting → ● → Select an item → → Enter name → ● → Enter prefix numbers → ●
Save Touch Tones	→ Pause Dial → ● → → Enter touch tone numbers → ● <ul style="list-style-type: none"> Press and hold to enter "p" (Pause).
Set Numbers after "*" as Sub Address	→ Sub-address Setting → ● → ON → ●



International Calls

Start Here → **Settings** → ● → **Dialing** → ● → **Int'l Dial Assistance** → ●

Change International Access Code Automatically Dialed with "+"	<p>→ Auto Int'l Call Set. → ● → ON → ●</p> <p>→ Select a country code → ● → Select an international access code → ●</p> <ul style="list-style-type: none"> • When OFF is set, the international access code is not entered when you press and hold . • Select an international access code you set in IDD Prefix Setting.
Change a Country Code	<p>→ Country Code Setting → ● → Select an item → → Enter country name → ● → Enter country code → ●</p>
Save an International Access Code	<p>→ IDD Prefix Setting → ● → Select an item → → Enter international access name → ● → Enter international access code → ●</p>

Call Settings

Start Here → **Settings** → ● → **Talk** → ●

Set Reconnection Tone	<p>→ Reconnect Signal → ● → High Tone or Low Tone → ●</p>
-----------------------	--

Set Noise Reduction	<p>→ Noise Reduction → ● → ON → ●</p>
Set Weak Signal Alarm	<p>→ Quality Alarm → ● → High Tone or Low Tone → ●</p> <ul style="list-style-type: none"> • Alarm may not sound before call is disconnected, if signal strength drops suddenly.
Set Clarity of Other Party Voice	<p>→ Hyper Clear Voice → ● → High, Low or OFF → ●</p>
Automatically Record During Voice Call	<p>→ Auto Voice Memo → ● → ON → ●</p> <ul style="list-style-type: none"> • Record latest 60 seconds of call (two recordings).
Change Color of Illumination While Calling	<p>→ Illumination in Talk → ● → Select a pattern → ●</p>
Set Outgoing Message while Call is on Hold	<p>→ Set Hold Tone → ● → On Hold Tone → ● → Select a hold tone → ● (→ ●)</p>
Set Closing Sound Off	<p>→ Setting When Folded → ● → No Tone → ●</p>
Continue Call With Handset Closed	<p>→ Setting When Folded → ● → Continue Talking → ●</p>
End Call By Closing Handset	<p>→ Setting When Folded → ● → End the Call → ●</p>



Call Costs

Start Here ⇒ **Settings** ⇒ ⇒ **Call Time/Charge** ⇒

Set Auto Reset of Total Call Cost	<p>⇒ Auto Reset Total Cost ⇒ ⇒ Enter Security Code ⇒ ⇒ Auto Reset ⇒ ⇒ ON or OFF ⇒ (⇒ Enter PIN2 ⇒)</p> <ul style="list-style-type: none"> When ON is set, the total call cost indication is automatically reset to zero at twelve midnight on the first day of each month.
Set a Maximum Call Cost Limit*	<p>⇒ Set Max Cost Limit ⇒ ⇒ Enter Security Code ⇒ ⇒ ⇒ ⇒ Enter cost limit ⇒ ⇒ ⇒ ⇒ ON ⇒ ⇒ ⇒ ⇒ Set alarm tone ⇒ ⇒ ⇒ ⇒ to adjust volume ⇒ ⇒ ⇒ Enter PIN2 ⇒ </p> <ul style="list-style-type: none"> A call ends automatically and appears in Display when the total call cost exceeds the set maximum limit. When the set total call cost limit has been reached, all outgoing calls are disabled. To enable outgoing calls, set the maximum call cost limit to 0: ⇒ Set Max Cost Limit ⇒ ⇒ Enter Security Code ⇒ ⇒ ⇒ (twice) ⇒ ⇒ Enter PIN2 ⇒

* Cost display may not be available depending on your subscription. If unavailable, you will also be unable to set a cost limit.

Video Calls

Start Here ⇒ **Settings** ⇒ ⇒ **Video Call** ⇒

Set Outgoing Image during Video Calls	<p>⇒ Select Image ⇒ ⇒ Select an item ⇒ ⇒ Pre-installed or Original ⇒ </p> <ul style="list-style-type: none"> To set an image other than the preinstalled image: ⇒ Original ⇒ ⇒ Change Setting ⇒ ⇒ Set an image
Redial Automatically as Voice Call When Video Call Connection Fails	<p>⇒ Auto Redial as Voice ⇒ ⇒ ON ⇒ </p>
Set an Image to Appear in Main Window	<p>⇒ Display Setting ⇒ ⇒ Main Display ⇒ ⇒ Other Side or My Side ⇒ </p>
Reverse Front Camera Image	<p>⇒ Display Setting ⇒ ⇒ Front Camera Reverse ⇒ ⇒ ON ⇒ </p>
Automatically Switch to Handsfree Mode in Video Calls	<p>⇒ Hands-free Switch ⇒ ⇒ ON ⇒ </p>



Global Roaming

Start Here ⇒ **Settings** ⇒ ● ⇒ **Int'l Roaming Set** ⇒ ●

Show Operator Name While Roaming

⇒ **Display Operator Name** ⇒ ● ⇒ **Display ON** ⇒ ●

Set Operator	<p>⇒ NW Search Mode ⇒ ● ⇒ Manual ⇒ ●</p> <p>⇒ Select an operator ⇒ ●</p> <ul style="list-style-type: none"> • When <i>Auto</i> is set, an available operator is set automatically. • Use this procedure when handset is out of the service area of the currently used operator.
Search Available Operator	<p>⇒ NW Search Mode ⇒ ● ⇒ Network Re-search ⇒ ● ⇒ Select an operator ⇒ ●</p> <ul style="list-style-type: none"> • Available when <i>NW Search Mode</i> is set to <i>Manual</i>.
Set Priority for Operators	<p>⇒ PLMN Setting ⇒ ● ⇒ Select an operator ⇒ ⇒ Change Priority ⇒ ●</p> <p>⇒ Select a position on the priority list ⇒ ● ⇒ ⇒ YES ⇒ ●</p> <ul style="list-style-type: none"> • When <i>Auto</i> is set under <i>NW Search Mode</i>, you are automatically connected to the highest priority operator among available operators.
Change Network	<p>⇒ Select Network ⇒ ● ⇒ AUTO, 3G or GSM/GPRS ⇒ ●</p> <ul style="list-style-type: none"> • Set to <i>AUTO</i> or network used in current location.



S! Mail Settings

Start Here ⇒ Mail Setting ⇒ ●

Edit Header/Signature	⇒ Header/Signature ⇒ ● ⇒ Edit Header or Edit Signature ⇒ ● (twice) ⇒ Edit header/signature ⇒
Insert Header/Signature Automatically	⇒ Header/Signature ⇒ ● ⇒ Insert Setting ⇒ ● ⇒ Header or Signature ⇒ ● ⇒
Request Delivery Report	⇒ S! Mail Settings ⇒ ● ⇒ Delivery Report ⇒ ● ⇒ ON ⇒ ● <ul style="list-style-type: none"> Delivery Report arrives when recipient has received your S! Mail. <i>S! Mail Report</i> appears in Subject field of Delivery Report.

SMS Settings

Start Here ⇒ Mail Setting ⇒ ● ⇒ SMS Settings ⇒ ●

Request Delivery Report	⇒ SMS Report Request ⇒ ● ⇒ ON ⇒ ● <ul style="list-style-type: none"> Delivery Report arrives when recipient has received your SMS message. <i>SMS Report</i> appears in Subject field of Delivery Report.
-------------------------	---

Set Server Storage Period of SMS Messages	⇒ SMS Validity Period ⇒ ● ⇒ Select a period ⇒ ● <ul style="list-style-type: none"> When <i>None</i> is set, SMS messages you send are not stored on the server.
Set SMS Input Language	⇒ SMS Input Character ⇒ ● ⇒ Japanese (70char.) or English(160char.) ⇒ ●

Incoming Message Settings

Start Here ⇒ Mail Setting ⇒ ●

Customize E-mail Address	⇒ Custom Mail Address ⇒ ● ⇒ Follow onscreen instructions
Do Not Show Emotion Indicators	⇒ Emotion/Keyword ⇒ ● ⇒ Uncheck <i>Disp. Emotion</i> ⇒
Show Keyword Indicators	⇒ Emotion/Keyword ⇒ ● ⇒ Put a checkmark to <i>Disp. Keyword</i> ⇒ Select a keyword entry field ⇒ ● ⇒ Enter keyword ⇒ ● ⇒ <ul style="list-style-type: none"> When handset receives an S! Mail containing the specified keyword, a keyword indicator - appears. In case a message contains both the content that matches an emotion indicator (P. 5-6) and a specified keyword, the keyword indicator takes priority.



Delete Keywords	<p>⇒ <i>Emotion/Keyword</i> ⇒ ● ⇒ Select a keyword ⇒ ⇒ <i>Delete Keyword</i> or <i>Delete All Keyword</i> ⇒ ● ⇒ YES ⇒ ● ⇒ </p> <ul style="list-style-type: none"> To delete all keywords, uncheck <i>Disp. Keyword</i>.
Set Priority When Receiving Messages during Operation	<p>⇒ <i>Receiving Setting</i> ⇒ ● ⇒ <i>Alarm Preferred</i> or <i>Operation Preferred</i> ⇒ ●</p>
Set Whether to Read Out Received Messages	<p>⇒ <i>Read Out Setting</i> ⇒ ● ⇒ <i>Read Out Received Mail</i> ⇒ ● ⇒ ON or OFF ⇒ ●</p> <ul style="list-style-type: none"> Mail is only read out while in Japanese Language Mode.
Set Voice to Read Out Messages	<p>⇒ <i>Read Out Setting</i> ⇒ ● ⇒ <i>Select Voice</i> ⇒ ● ⇒ Select a voice type ⇒ ●</p> <ul style="list-style-type: none"> Mail is only read out while in Japanese Language Mode.
Set Manual Receive	<p>⇒ <i>S! Mail Settings</i> ⇒ ● ⇒ <i>Message Download</i> ⇒ ● ⇒ <i>Manual</i> ⇒ ●</p> <ul style="list-style-type: none"> The entire text is receivable by user operation.

Reply Settings

Quote Message Marks	<p> ⇒ <i>Mail Setting</i> ⇒ ● ⇒ <i>Header/Signature</i> ⇒ ● ⇒ <i>Edit Quotation Marks</i> ⇒ ● ⇒ Edit quotation mark ⇒ ●</p>
---------------------	---

Message Window/Messaging Settings

Start Here ⇒ *Mail Setting* ⇒ ●

Set Message List View	<p>⇒ <i>Mail List Disp.</i> ⇒ ● ⇒ <i>2 Lines, 1 Line</i> or <i>1 Line+Body</i> ⇒ ● ⇒ <i>Subject, Name</i> or <i>Address</i> ⇒ ●</p>
Set Auto-Play for Melody Attachments	<p>⇒ <i>Start Attachment (auto)</i> ⇒ ● ⇒ ON ⇒ ●</p> <ul style="list-style-type: none"> Automatic play only for received mail.
Set Scroll Unit	<p>⇒ <i>Scroll</i> ⇒ ● ⇒ <i>1 Line, 3 Lines</i> or <i>5 Lines</i> ⇒ ●</p>
Set Font Size	<p>⇒ <i>Font Size</i> ⇒ ● ⇒ Select a size ⇒ ●</p>
Check Mail Settings	<p>⇒ <i>Check Settings</i> ⇒ ●</p>
Restore to Default Settings	<p>⇒ <i>Reset</i> ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ YES ⇒ ●</p>



SMS Server Settings

Start Here  ⇒ **Settings** ⇒ ● ⇒ **Connection Settings**
 ⇒ ● ⇒ **SMS Center Selection** ⇒ ●

Change SMS Center Address	⇒ 819066519300 ⇒ ● ⇒ Enter SMS Center address ⇒ ● ⇒ International or Unknown ⇒ ● • Address is 819066519300 by default. SMS may become unavailable if Center address is changed.
Reset to SoftBank SMS Center Address	⇒ Reset ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ YES ⇒ ●



Internet

Start Here for Yahoo! Keitai Press and hold → **Browser Settings** → ●

Start Here for PC Site Browser Press and hold → **PC Site Browser** → ● → **PC Site Brw. Settings** → ●

Set Scroll Unit/Speed	→ <i>Scroll</i> → ● → <i>Whole Page, Half Page</i> or <i>Single Line</i> → ●
Set Whether to Show Images or Play Melodies	→ <i>Downloads</i> → ● → <i>Display Images</i> or <i>Play Sounds</i> → ● → <i>ON</i> or <i>OFF</i> → ●
Clear Cache	→ <i>Memory Manager</i> → ● → <i>Delete Cache</i> → ● → Enter Security Code → ● → <i>YES</i> → ●
Delete Cookies	→ <i>Memory Manager</i> → ● → <i>Delete Cookies</i> → ● → <i>YES</i> → ●
Initialize Memory Status of Internet	→ <i>Initialized Browser</i> → ● → Enter Security Code → ● → <i>YES</i> → ●
Set Whether to Send Manufacture Number	→ <i>Security</i> → ● → <i>Manufacture Number</i> → ● → <i>ON</i> or <i>OFF</i> → ●
Set Whether to Send Referer	→ <i>Security</i> → ● → <i>Send Referer</i> → ● → <i>ON</i> or <i>OFF</i> → ●

Enable/Disable Cookies	→ <i>Security</i> → ● → <i>Cookie Settings</i> → ● → Select an option → ●
Set Whether to Activate Scripts	→ <i>Security</i> → ● → <i>Script Settings</i> → ● → Select an option → ●
Check Internet Settings	→ <i>Check Settings</i> or <i>Check PC Site Brw. Set</i> → ●
Reset Internet Settings	→ <i>Reset</i> or <i>Reset PC Site Brw. Set</i> → ● → Enter Security Code → ● → <i>YES</i> → ●

Yahoo! Keitai

Start Here Press and hold → **Browser Settings** → ●

Set Font Size	→ <i>Font Size</i> → ● → Select a size → ●
Set Flash® Sound On/Off	→ <i>Flash Sound Effect</i> → ● → <i>ON</i> or <i>OFF</i> → ●



PC Site Browser

Start Here Press and hold  ⇒ **PC Site Browser** ⇒ ● ⇒
PC Site Brw. Settings ⇒ ●

Do Not Show Alert When Activating PC Site Browser & Switching Browsers	⇒ Warning Messages ⇒ ● ⇒ OFF ⇒ ●
Set Page Layout	⇒ Display Mode Settings ⇒ ● ⇒ PC Screen or Small Screen ⇒ ● ⇒ Select a size ⇒ ●



Channel List

Start Here → TV → ● → Channel List → ●

Change Title of Channel List	→ Select a channel list → → <i>Edit Title</i> → ● → Edit title → ●
Delete a Channel List	→ Select a channel list → → <i>Delete This</i> → ● → YES → ● <ul style="list-style-type: none"> The currently used channel list cannot be deleted.
Assign Channels to Remote Control Numbers	→ Select a channel list → → → <i>Remote Control No.</i> → ● → Select a remote control number → ● → Select a channel → ● → Repeat the same step → → YES → ●
Delete a Channel	→ Select a channel list → → Select a channel → → <i>Delete This</i> → ● → YES → ● <ul style="list-style-type: none"> Delete a channel from any channel list except for the currently used list.

Image & Sound

Start Here → TV → ● → User Settings → ●

Set Subtitle Display	→ <i>Subtitles</i> → ● → ON (<i>Wide:Bottom</i>), ON (<i>Wide:Top</i>) or OFF → ●
Show/Hide Icons in Landscape View	→ <i>Icon Always Show</i> → ● → ON or OFF → ●
Save Battery by Dimming Backlight	→ <i>TV Power Saving</i> → ● → YES → ● <ul style="list-style-type: none"> Following these steps when <i>TV Power Saving</i> is on will cancel <i>TV Power Saving</i>.
Keep Backlight On When Viewing TV	→ <i>Display Light</i> → ● → <i>Constant Light</i> → ● <ul style="list-style-type: none"> <i>TV Power Saving</i> must be off to set <i>Display Light</i>.
Set Backlight Duration for Viewing TV	→ <i>Display Light</i> → ● → <i>Lighting Duration</i> → ● → Enter lighting time <ul style="list-style-type: none"> <i>TV Power Saving</i> must be off to set <i>Display Light</i>.
Set Sound Effects	→ <i>TV Effect</i> → ● → <i>Sound Effect</i> → ● → Select an effect → ●
Set Visual Image Effects	→ <i>TV Effect</i> → ● → <i>Visual Image Effect</i> → ● → Select an effect → ●



Set TV to Pause or Continue for Incoming Calls (Time Shift Playback)	⇒ <i>Time Shift Setup</i> ⇒ ● ⇒ <i>Auto ON</i> or <i>Auto OFF</i> ⇒ ●
--	---

Data Broadcasts

Start Here  ⇒ **TV** ⇒ ● ⇒ **User Settings** ⇒ ● ⇒ **Data BC Settings** ⇒ ●


Set Whether to Show Images in Pages Accessed from Data Broadcasts	⇒ <i>Set Image Disp.</i> ⇒ ● ⇒ <i>ON</i> or <i>OFF</i> ⇒ ●
Enable/Disable Sound Effects of Data Broadcasts	⇒ <i>Sound Effect</i> ⇒ ● ⇒ <i>ON</i> or <i>OFF</i> ⇒ ●
Show Confirmation Window Again	⇒ <i>Reset Disp. Set.</i> ⇒ ● ⇒ <i>YES</i> ⇒ ● <ul style="list-style-type: none"> Once you select <i>YES</i> (By default) in a confirmation window for accessing a web page from Data Broadcast, the window no longer appears. Use this procedure to set the window to reappear.

Recording Programs

Continue/End Recording at Low Battery	 ⇒ TV ⇒ ● ⇒ User Settings ⇒ ● ⇒ <i>Rec. While Low Battery</i> ⇒ ● ⇒ <i>ON</i> or <i>OFF</i> ⇒ ●
---------------------------------------	--

Other Settings

Start Here  ⇒ **TV** ⇒ ● ⇒ **User Settings** ⇒ ●

Check TV Settings	⇒ <i>Check TV Settings</i> ⇒ ●
Reset Channel Settings	⇒ <i>Reset Channel Setting</i> ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ <i>YES</i> ⇒ ●
Clear Data Broadcast Memory	⇒ <i>Reset Storage Area</i> ⇒ ● ⇒ Select an affiliated station ⇒  ⇒ <i>Delete This</i> or <i>Delete All</i> ⇒ ● (⇒ Enter Security Code ⇒ ●) ⇒ <i>YES</i> ⇒ ●
Reset TV Settings	⇒ <i>Reset TV Settings</i> ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ <i>YES</i> ⇒ ●



Camera/Video Settings

Set Shutter Sound	[Photo Viewfinder] (P. 7-6)/[Video Viewfinder] (P. 7-9) → → Shutter Sound → ● → Select a shutter sound → ●
Set Level of Smile for Smile Mode	[Smile Mode Viewfinder] (P. 7-12) → → Camera Settings → ● → Smile Level → ● → Select a level → ●
Set Display for Landscape View Shooting	[Photo Viewfinder] (P. 7-6)/[Video Viewfinder] (P. 7-9) → → Icon Always Show → ● → ON or OFF → ● <ul style="list-style-type: none"> Below icons do not appear if set to OFF. <ul style="list-style-type: none"> ● Photo Viewfinder <ul style="list-style-type: none"> Focus Frame, Auto Timer, Storage Capacity ● For Video Viewfinder or Shooting window <ul style="list-style-type: none"> Auto Timer, Storage Capacity, Recording Status, Recording Time (remaining)
Set Interval for Continuous Shooting	[Continuous Shooting Viewfinder] (P. 7-12) → → Interval/Number → ● → Shot Interval → ● → 0.5 Seconds , 1.0 Seconds or 2.0 Seconds → ● <ul style="list-style-type: none"> Shot Interval is available when CHG Camera-mode (P. 7-6) is set to A-Continuous Mode.

Set Number of Shots for Continuous Shooting	[Continuous Shooting Viewfinder] (P. 7-12) → → Interval/Number → ● → Shot Number → ● → Enter Shot Number → ●
---	---

File Storage

Set Storage Location for Still Images/Videos	[Photo Viewfinder] (P. 7-6)/[Video Viewfinder] (P. 7-9) → → Select to Save → ● → Phone or microSD → ● → Select a folder → ● <ul style="list-style-type: none"> To save videos on memory card, select a folder of Inbox.
--	---



Playback Window

Change Design of Playback Window	[Music Playback] window (P. 9-5) → → Action Setting → ● → Change Skin → ● → Select a design → ●
Set Image Display Size	[Video Playback] window (P. 9-5) → → Action Setting → ● → Set Image Disp. → ● → Normal or Fit in Display → ● • Available when playing in Normal Screen mode.

When Running S! Appli

Start Here → **S! Appli** → ● → **Settings** → ●

Set Sound Volume	→ Sound/Vib Settings → ● → Volume → ● → to adjust volume → ●
Set Vibration	→ Sound/Vib Settings → ● → Vibration → ● → ON or OFF → ●
Set Backlight	→ Backlight Settings → ● → Switch ON/OFF → ● → Always ON, Always OFF or Link To Phone Set. → ●
Set Blinking of Backlight	→ Backlight Settings → ● → Blink → ● → ON or OFF → ●

Start Here → **S! Appli** → ● → **S! Appli List** → ●

Allow/Prohibit S! Appli to Connect to Network	→ Select an S! Appli → → Security Settings → ● → Net Access → ● → All Permit, Prompt at 1st only, Prompt each time or Disable → ●
Allow/Prohibit S! Appli to Write Personal Information	→ Select an S! Appli → → Security Settings → ● → Write/Del User Data → ● → All Permit, Prompt at 1st only, Prompt each time or Disable → ●
Reset Security Settings of S! Appli	→ Select an S! Appli → → Security Settings → ● → Reset Security Set. → ● → YES → ●

S! Appli

Start Here → **S! Appli** → ● → **Settings** → ●

Reset S! Appli Settings	→ Reset → ● → Set to Default → ● → Enter Security Code → ● → YES → ●
Delete All S! Appli	→ Reset → ● → Delete All S! App → ● → Enter Security Code → ● → YES → ●



Mobile Widget

Start Here  → **Entertainment** → ● → **Mobile Widget**
 → ● → **Settings** → ●

Check Auto Synchronize Settings	→ Auto Refresh → ● → ON or OFF → ●
Set Whether to Automatically Transmit When Abroad	→ Auto Roaming → ● → ON or OFF → ●
Delete All Widgets from Desktop Page	→ Delete Content → ● → Select a Desktop page → ● → YES → ●
Set Whether to Use Cookies	→ Cookies → ● → ON or OFF → ●
Delete Cookies	→ Delete Cookies → ● → YES → ●
Set Whether to Use Mobile Widget	→ Standby Disp. Set. → ● → ON or OFF → ●

S! Quick News

Start Here  → **Entertainment** → ● → **S! Quick News**
 → ● → **Settings** → ●

Set Automatic Updates for S! Quick News	→ Auto Refresh → ● → Select an item → ● → Select update interval, ON or OFF → ● (twice)
Hide S! Quick News in Standby	→ Standby Settings → ● → Standby Disp. Set. → ● → OFF → ● (twice)
Set Ticker Speed	→ Standby Settings → ● → Speed Settings → ● → Fast, Normal or Slow → ● (twice)
Set Information to appear in S! Quick News	→ Standby Settings → ● → Unread & Read Set. → ● → Unread Only or Unread & Read → ● (twice)
Hide S! Quick News Images	→ Set Image Disp. → ● → OFF → ● (twice)
Reset S! Quick News Registered Contents	→ Del. Quick News → ● → YES → ● (twice) → Enter Security Code → ● (three times)



S! Info Channel

Start Here  → **Entertainment** → ● → **S! Info Ch./Weather** → ● → **Settings** → ●

Set Whether to Display Desktop Icon For New Received Information	→ S! Information Notif. → ● → ON or OFF → ●
Set Font Size for Web Pages	→ Font Size → ● → Select font size → ●

Weather Indicators

Start Here  → **Entertainment** → ● → **S! Info Ch./Weather** → ● → **Weather Indicator** → ● → **Settings** → ●

Set Whether to Automatically Update Weather Information	→ Weather Update → ● → ON or OFF → ● (→ YES → ●)
Set Whether to Display Weather Indicators in Standby	→ Standby Setting → ● → ON or OFF → ●

Set Whether to Display Desktop Icon For New Received Information	→ Weather Notif. → ● → ON or OFF → ●
--	---





Other Settings

Text Entry

Start Here  ⇒ **Settings** ⇒ ● ⇒ **Other Settings** ⇒ ●
 ⇒ **Character Input Set** ⇒ ●

Set Text Input Method	⇒ Input Mode ⇒ ● ⇒ Select an input method ⇒ ●
Set Word Prediction	⇒ Prediction ⇒ ● ⇒ ON or OFF ⇒ ●
Set to Show T9 Suggestion Words in Kanji or Hiragana	⇒ T9 Change Mode ⇒ ● ⇒ T9 Kanji Change Mode or T9 Kana Change Mode ⇒ ●
Clear Learning History	⇒ Clear Learned ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ T9/Expect Words/Pic. or Kana/Kanji Change/Face ⇒ ●
Change Font Size	⇒ CHG Input Size ⇒ ● ⇒ Select a size ⇒ ●
Set Auto Cursor Movement in 5-Touch Mode	⇒ Auto Cursor ⇒ ● ⇒ Fast, Normal, Slow or OFF ⇒ ●

Shortcut Key

Change Function Assigned to Shortcut Key  ⇒ **Settings** ⇒ ● ⇒ **Other Setting** ⇒ ● ⇒ **Shortcut-key Setting** ⇒ ● ⇒
 Select a function ⇒ ● ⇒ **YES** ⇒ ●
 • To return to original settings, press , select **Reset Shortcut-key**, and press ●.

Neuropointer

Start Here  ⇒ **Settings** ⇒ ● ⇒ **Other Settings** ⇒ ●
 ⇒ **Neuropointer** ⇒ ●

Set Neuropointer On/Off	⇒ Pointer ⇒ ● ⇒ ON or OFF ⇒ ●
Neuropointer Speed (Simple Setting)	⇒ Speed ⇒ ● ⇒ Simple ⇒ ● ⇒ Normal or High ⇒ ● ⇒ YES ⇒ ●
Neuropointer Speed (Detailed Setting)	⇒ Speed ⇒ ● ⇒ Detail ⇒ ● ⇒ Select window to set ⇒ ● ⇒ Set speed ⇒ OK ⇒ ●
Reset Neuropointer Speed	⇒ Speed ⇒ ● ⇒ Reset ⇒ ● ⇒ YES ⇒ ●
Adjust Neuropointer Slide Range	⇒ Slide ⇒ ● ⇒ Adjust ⇒ ● ⇒ YES ⇒ ●



Other Settings

Reset Neuropointer Slide Range	⇒ <i>Slide</i> ⇒ ● ⇒ <i>Reset</i> ⇒ ● ⇒ <i>YES</i> ⇒ ●
Set Neuropointer Icon Design	⇒ <i>Pointer Icon Setting</i> ⇒ ● ⇒ Select icon design ⇒ ● ⇒ <i>YES</i> ⇒ ●

Touch Panel

Start Here  ⇒ **Settings** ⇒ ● ⇒ **Other Settings** ⇒ ●
 ⇒ **Touch Panel Setting** ⇒ ●

Set Touch Panel On/Off for Each Style	⇒ <i>Touch Style, Share Style</i> or <i>Communication Style</i> ⇒ ● ⇒ <i>ON</i> or <i>OFF</i> ⇒ ●
Set Vibrator Operation during Touch Operation	⇒ <i>Vibrator</i> ⇒ ● ⇒ <i>ON</i> or <i>OFF</i> ⇒ ●

Share Style

Start Here  ⇒ **Settings** ⇒ ● ⇒ **Display** ⇒ ● ⇒ **Share Style Settings** ⇒ ●

Wallpaper	⇒ <i>W-stand-by Display</i> ⇒ ● ⇒ <i>My Picture</i> or <i>Videos</i> (or <i>Same as Length</i>) ⇒ ● ⇒ Set an image/video (Select a layout ⇒ ● (twice)) <ul style="list-style-type: none"> To set same Standby image as Communication Style, set to <i>Same as Length</i>.
Show Calendar in Standby	⇒ <i>W-stand-by Display</i> ⇒ ● ⇒ <i>Calendar</i> ⇒ ● ⇒ <i>Background</i> ⇒ ● ⇒ Select an image ⇒ ● ⇒ Select a layout ⇒ ● (twice) <ul style="list-style-type: none"> To not show image for calendar, set to <i>No Background</i>.
Set Random Display of Images	⇒ <i>W-stand-by Display</i> ⇒ ● ⇒ <i>Random Display</i> ⇒ ● ⇒ Select a folder ⇒ ● ⇒ Select a layout ⇒ ● <ul style="list-style-type: none"> Image switches at random when handset is changed to Share Style or returns to Standby.
Clock Size	⇒ <i>Clock Size</i> ⇒ ● ⇒ Select size ⇒ ●



Other Settings

Style Change

Start Here ⇒ **Settings** ⇒ ⇒ **Style Change Setting** ⇒

Set to Answer Calls By Opening Handset	⇒ Auto-ans at Style-chg ⇒ ON or OFF ⇒ <ul style="list-style-type: none"> Choose ON to answer calls by opening to Communication Style.
Set Sound at Style Change	⇒ Style-chg Sound ⇒ ⇒ Touch Style, Share Style or Communication Style ⇒ ⇒ Melody ⇒ ⇒ Select a sound ⇒ ⇒ Ring Time ⇒ ⇒ Select time sound emitted ⇒ <ul style="list-style-type: none"> Set to OFF to turn off sound.
Set Flashing Color for Style Change Illumination	⇒ Style-chg Illumination ⇒ ⇒ ON ⇒ ⇒ Set Color ⇒ ⇒ Select a color ⇒ ⇒ Set Pattern ⇒ ⇒ Select a pattern ⇒

Osaifu-Keitai®

Set Illumination for IC Card	⇒ Tools ⇒ ⇒ Osaifu-Keitai ⇒ ⇒ IC Card Illumination ⇒ ⇒ ON or OFF ⇒
Delete all Lifestyle-Appli	⇒ S! Appli ⇒ ⇒ Settings ⇒ ⇒ Reset ⇒ ⇒ Delete All LifeApp ⇒ ⇒ Enter Security Code ⇒ ⇒ YES ⇒
Set Whether to Enable Opening from Reader/Writer	⇒ Tools ⇒ ⇒ Osaifu-Keitai ⇒ ⇒ Interface Settings ⇒ ⇒ Enter Security Code ⇒ ⇒ Browser ⇒ ⇒ ON or OFF ⇒

S! GPS Navi

Start Here ⇒ **Tools** ⇒ ⇒ **S! GPS Navi** ⇒ ⇒ **NAVI Settings** ⇒

Set Default Navi Appli	⇒ Map Setting ⇒ ⇒ Select Navi Appli ⇒ ⇒ ⇒ Select a Navi Appli ⇒
Begin Positioning Before/After Activating Map	⇒ Map Setting ⇒ ⇒ Map Activate Setting ⇒ ⇒ After Positioning or Before Positioning ⇒



Other Settings

Save Map URL	<p>⇒ Map URL Settings ⇒ ● ⇒ <Not Recorded> ⇒ [ⓧ] ⇒ Enter Security Code ⇒ ● ⇒ Map URL Name ⇒ ● ⇒ Enter URL name ⇒ ● ⇒ Map URL ⇒ ● ⇒ Enter URL ⇒ ● ⇒ [ⓧ]</p>
Edit URL Name	<p>⇒ Map URL Settings ⇒ ● ⇒ Select a map URL ⇒ [ⓧ] ⇒ Enter Security Code ⇒ ● ⇒ Select name ⇒ ● ⇒ Enter name ⇒ ● ⇒ Select URL ⇒ ● ⇒ Edit URL ⇒ ● ⇒ [ⓧ]</p> <ul style="list-style-type: none"> • The map URL set by default cannot be edited.
Delete Map URL	<p>⇒ Map URL Settings ⇒ ● ⇒ Select a map URL ⇒ [ⓧ] ⇒ Delete ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ YES ⇒ ●</p> <ul style="list-style-type: none"> • The map URL set by default cannot be deleted.
Set Map URL	<p>⇒ Map URL Settings ⇒ ● ⇒ Select a map URL ⇒ ●</p>
Set Location Information Send Method	<p>⇒ Send Location Info ⇒ ● ⇒ Confirm, Send or Not Send ⇒ ●</p>

Bluetooth®

Start Here [MENU] ⇒ **Tools** ⇒ ● ⇒ **Bluetooth** ⇒ ● ⇒ **Bluetooth Settings** ⇒ ●

Set Detection Time for Device	<p>⇒ Time-out to Search ⇒ ● ⇒ Enter search time</p>
Set Whether to Send Ring Tone for Voice Call, Video Call to Headset or Handsfree Device	<p>⇒ Forward Ring Tone ⇒ ● ⇒ ON or OFF ⇒ ●</p> <ul style="list-style-type: none"> • Ring tone will also sound from handset if <i>Headset Usage Setting</i> is set to <i>Headset+speaker</i> and <i>Forward Ring Tone</i> is set to <i>OFF</i>.
Set Whether to Enable Calling from External Device	<p>⇒ Dial From Other Device ⇒ ● ⇒ Valid or Invalid ⇒ ●</p>
Check Handset Bluetooth® Information	<p>⇒ Bluetooth Info ⇒ ●</p> <ul style="list-style-type: none"> • Press [ⓧ] to change name of added device.



Other Settings

WLAN

Start Here → **Settings** → ● → **WLAN Setting** → ●

Show Confirmation Before Switching to 3G	→ WLAN/3G Change Setting → ● → Confirm Mode or Auto Mode → ● • Unavailable when <i>ON/OFF</i> for <i>WLAN Setting</i> is set to <i>OFF</i> .
Reset WLAN Setting	→ Reset WLAN Setting → ● → Enter Security Code → ● → YES → ●

Start Here → **Settings** → ● → **WLAN Setting** → ● → **Manual Setup** → ● → **Profile Setting** → ● → Select a profile → ●

Change Profile Name*	→ Set Profile Name → ● → Enter profile name → ● → (twice)
Set ESSID*	→ WLAN Detail Setting → ● → ESSID Setting → ● → Enter ESSID → ● → (three times) • ESSID is an ID for preventing unintended network crossing. Specify the same setting as for the access point.
Select Wireless Mode Setting*	→ WLAN Detail Setting → ● → Radio Mode Setting → ● → AUTO(802.11b/g) or 802.11b → ● → (three times)

Set IP Address*	→ IP Setting → ● → IP Address Setting → ● → Automatic Setup or Manual Setup → ● (→ IP Address , Subnet Mask and Default Gateway → ● → Enter setting values → ●) → (three times)
Set DNS Server*	→ IP Setting → ● → DNS Setting → ● → Automatic Setup or Manual Setup → ● (→ Primary DNS and Secondary DNS → ● → Enter setting values → ● → (three times)
Use HTTP Proxy Server*	→ HTTP Proxy Setting → ● → ON → ● → Server Address , Port Number (HTTP) , Port Number (SSL) and Unset Proxy Address → ● → Enter setting values → ● → (three times) • Available when <i>WLAN Access Mode</i> is set to <i>Direct Access</i> .
Set Security Method*	→ Set Security Method → ● → None , WEP , WPA/WPA2-PSK or WPA2-PSK → ● (→ Enter or select setting values → ●) → (twice)



Other Settings

Set to Use Public Wireless LAN*	<p>⇒ Public WLAN Setting ⇒ ● ⇒ ON ⇒ ● ⇒ ID and Password ⇒ ● ⇒ Enter ID and password ⇒ ● ⇒ (three times)</p> <ul style="list-style-type: none"> When using a profile other than <i>BB モバイルポイント</i>, ID and password entry may be required even if an ID and password are already set. Does not guarantee connection to all public WLAN services.
Set Access Mode*	<p>⇒ WLAN Access Mode ⇒ ● ⇒ Keitai Wi-Fi or Direct Access ⇒ ● ⇒ (twice)</p>

* After setting, in Manual Setup window (P. 13-13), press (Finish).

Resetting Handset

Start Here ⇒ **Settings** ⇒ ● ⇒ **Other Settings** ⇒ ●

Reset All Settings to Default	<p>⇒ Reset Settings ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ YES ⇒ ●</p>
Initialize Handset to Default Status	<p>⇒ Initialize ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ YES ⇒ ● ⇒ YES ⇒ ●</p> <ul style="list-style-type: none"> When the initialization is completed, handset automatically shuts down and restarts. When handset is initialized, all data downloaded and saved on handset are deleted and cannot be restored. Your Security Code will also be reset to default. Retrieve network information to use Keitai Wi-Fi service again (P. 1-26).

