

# Internet Services

 


<b>Internet Services</b> .....	<b>5-2</b>
Web Certificates (SSL/TLS) .....	5-2
Opening Saved Pages .....	5-2
<b>Yahoo! Keitai</b> .....	<b>5-3</b>
Yahoo! Keitai Main Menu.....	5-3
Entering URL .....	5-3
Entering URL from History.....	5-3
<b>PC Site Browser</b> .....	<b>5-4</b>
PC Site Browser Homepage .....	5-4
Entering URL .....	5-4
Entering URL from History.....	5-4
<b>Page Operations</b> .....	<b>5-5</b>
Selecting Menu.....	5-5
Entering Text.....	5-5
Page Zoom.....	5-6
Multi Page (Tab).....	5-6
Buttons & Check Boxes.....	5-6
Streaming from Page Link .....	5-7
<b>Bookmarks &amp; Saved Pages</b> .....	<b>5-7</b>
Saving Bookmarks .....	5-7
Accessing Bookmarks .....	5-7
Saving Pages .....	5-7
Opening Saved Pages .....	5-7
<b>Advanced Settings</b> .....	<b>5-8</b>
Yahoo! Keitai .....	5-8
PC Site Browser .....	5-10
Page Operations.....	5-12
Bookmarks .....	5-13
Saved Pages .....	5-15

## Internet Services

Access Mobile sites via Yahoo! Keitai or Internet sites via PC Site Browser.

View Web page contents or download media files.

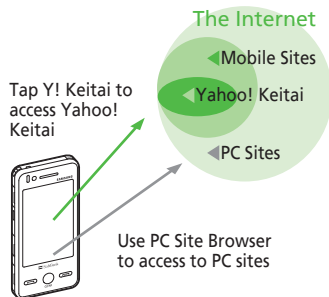

- In this guide, "Yahoo! Keitai" refers to SoftBank Mobile Internet portal and service itself. "PC sites" are sites accessible via PC Site Browser. "Internet" refers to both Internet and Mobile Internet sites.
- A separate subscription is required for Internet services.
- Before using Internet, retrieve Network information.

### Note

- Internet connections incur Packet Communication fees.

## Web Certificates (SSL/TLS)

Secure Sockets Layer (SSL) and Transport Layer Security (TLS) are encryption protocols for secure Internet transmissions of important/sensitive information (credit card numbers, etc.) and authentication.

Confirm electronic certificates saved on handset (☞ P.5-10, P.5-12).

### Note

#### ● Using SSL/TLS

When a security notice appears, subscribers must decide for themselves whether or not to open a page.

Opening secure pages constitutes agreement to the terms of usage, SOFTBANK MOBILE Corp., VeriSign Japan K.K., Cybertrust Japan Co., Ltd., Entrust Japan Co., Ltd., GlobalSign K.K., RSA Security Inc. and SECOM Trust Systems Co., Ltd. are not liable for the security of SSL/TLS. No liability is assumed for any damage associated with SSL/TLS use.

## Opening Saved Pages

Retrieved Mobile Internet pages are temporarily saved in cache. Cache remains even after a session ends or handset is turned off. When full, oldest pages are automatically deleted to make room for new ones.

When a saved page is opened again, it may open from Cache. For the latest content, reload the page.

- When another USIM Card is inserted, cache contents are automatically deleted.
- When a page with an expiry date is saved, page is automatically deleted upon expiry.

## Yahoo! Keitai

Use Yahoo! Keitai to view page contents or download image/music files.

Alternatively, access Yahoo! Keitai from Main menu, Access History, or by entering URL.

### Yahoo! Keitai Main Menu

Access Mobile sites via Yahoo! Keitai main menu.

#### 1 Tap Y!Keitai

#### 2 Select an item

- When accessing Mobile site for the first time, a screen for retrieving Network Information appears at Step 1. After the retrieval, an information page appears.
- To open PC Site Browser from Yahoo! Keitai, tap More → *Switch to PC site browser* → *This page or Link* → *Yes* or *No*.

#### Note

- When *Send referer* is set to *Not send*, pages may not appear (P.5-10).

### Entering URL

Enter URL in Yahoo! Keitai Enter URL window to access target page.

#### 1 Tap Menu → Tap Y!Keitai → Enter URL

- "http://" is set by default.

#### 2 Enter URL

### Entering URL from History

Accessed URLs from Yahoo! Keitai are saved in Yahoo! Keitai Access History.

Select site from Access History to access target page.

#### 1 Tap Menu → Tap Y!Keitai → History

#### 2 Select site

#### Advanced

#### Advanced Settings (P.5-8)

- Showing or Hiding Keypad on Pages
- Copying Text
- Refreshing Page
- Entering URL to Open Another Site/Page
- Searching with New Window

- Searching Text
- Moving to Top/Bottom of Page
- Sending URL
- Deleting Access History
- Sending Access History
- Viewing Access History Details
- Zooming Page in/out
- Viewing Flash®
- Viewing Only Selected Frame
- Viewing Page Details
- Moving to Main Menu
- Exiting Browser

#### Settings

- Delete cache/Cookie/certificates (P.14-15)
- Show or hide Manufacture Number (P.14-15)
- Send or hide Referer (P.14-15)
- Select Cookie setting (P.14-15)
- Select Script setting (P.14-15)
- Confirm Root Certificate (P.14-16)
- Set Certificate retention period (P.14-16)
- Initialize Browser (P.14-15)
- Reset settings (P.14-16)


## PC Site Browser

Use PC Site Browser to view page contents or download image/music files from PC sites. Alternatively, access PC Site Browser from Main menu, Access History, or by entering URL.

### PC Site Browser Homepage

Access PC sites via PC Site Browser Homepage.

- 1 Tap Menu → Tap Y!Keitai → *PC site browser* → *Homepage*
  - If a warning appears, choose *Yes* or *No*.
- 2 Select an item

- Activate PC Site Browser,  appears.
- In PC Site Browser, only document files can be downloaded or stream.
- Some sites may not appear correctly.
- To open Yahoo! Keitai from PC Site Browser, tap More → *Switch to Yahoo! Keitai* → If a warning appears, choose *Yes* or *No*.

#### Note

- When *Send referer* is set to *Not send*, pages may not open (☞P.5-12).
- Viewing rich contents sites may incur high Packet Communication fees.

### Entering URL

Enter URL from PC Site Browser Enter URL window to access target page.

- 1 Tap Menu → Y!Keitai → *PC site browser* → *Enter URL*
  - "http://" is set in URL field by default.
- 2 Enter URL
  - If a warning appears, choose *Yes* or *No*.

### Entering URL from History

Accessed URLs from PC Site Browser are saved in History.

Select site from History to access target page.

- 1 Tap Menu → Tap Y!Keitai → *PC site browser* → *History*
- 2 Select site
  - When warning message appear, select *Yes* or *No*.

### Advanced

#### Advanced Settings (☞P.5-10)

- Zooming Page in/out
- Copying Text
- Searching Text
- Sending URL
- Moving to Top/Bottom of Page
- Deleting Access History
- Sending Access History
- Viewing Access History Details
- Viewing Flash®
- Viewing Only Selected Frame
- Viewing Page Details
- Opening Main Menu
- Changing Page Layout
- Exiting Browser

#### Settings


- Delete cache/Cookie/certificates (☞P.14-16)
- Show or hide Manufacture Number (☞P.14-16)
- Send or hide Referer (☞P.14-16)
- Select Cookie setting (☞P.14-16)
- Select Script setting (☞P.14-16)
- Confirm Root Certificate (☞P.14-16)
- Set Certificate retention period (☞P.14-16)
- Show or hide warning (☞P.14-17)
- Initialize Browser (☞P.14-16)
- Reset settings (☞P.14-16)

## Page Operations

Text and pictures shown in page can be zoom in/out.

Alternatively, select menu to link target page, set function with radio button.
 
## Selecting Menu

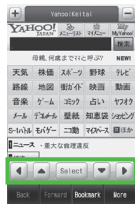

Yahoo! Keitai Screen

- 1 : Scroll to up/down/left/right, or move the cursor *Select*
- 2 Select Menu and tap Select

- Alternatively, tap an item directly to select the link.
- Alternatively, touch the screen directly to scroll.
- Press with no previous page, you are prompted to close Internet connection. Choose **Yes** to close it.
- Tap Back or press to return previous page.
- Highlight link and tap Select; move to target page.
- Tap Next to back to the status before tapping Back or pressing .
- In case of PC Site Browser, rotate handset to display image view horizontally to Landscape view. Operations are the same as Landscape view.
- In case of PC Site Browser, press to change to full screen view. Press it again to return to the previous view.
- In case of PC Site Browser, touching and holding an item will open it in a new tab (not available in full screen view).

## Entering Text

Enter text or recognition password.



- 1 Select Text field
- 2 Enter text

### Note

- Text entry and item selection varies by page.

## Page Zoom

Zoom is available only in PC Site Browser.

### 1 Tap zoom

 
### 2 Tap / to adjust zoom level



- Alternatively, use  to adjust zoom.

## Multi Page (Tab)


Use tabs at top of Display to open pages.  
Open up to three pages simultaneously.

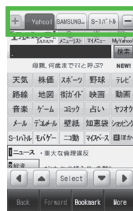

### 1 Tap

 
### 2 Select tab, access target information (P.5-12)

### 3 Select tab to switch Pages

- Tap  to close viewing tab.


- Yahoo! Keitai and PC sites cannot be open simultaneously.
- Some pages may open in a new tab automatically.
- When multiple tabs are open, some pages may be partially obscured. Close unnecessary tabs.

## Buttons & Check Boxes

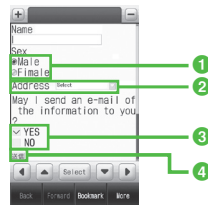

- 1 Radio button**  
Select an item only. Select an item with  to select it (Appearing as .
- 2 Menu field**  
Open a menu and select an item.  
Highlight menu → select an item.
- 3 Check box**  
Select multiple items. Select an item with  to select it (Appearing as .
- 4 Command button**  
Perform operations assigned to a button.  
Highlight a command button → select an item.

## Streaming from Page Link

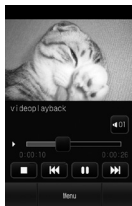 

- 1 Open a page containing a page link
- 2 Select a link

### Advanced

#### Settings

- Change page font size (☞ P.14-15, P.14-16)
- Set page scroll unit (☞ P.14-15)
- Show or hide page navigation when zooming (☞ P.14-16)
- Show or hide page images (☞ P.14-15, P.14-16)
- Play or mute page sounds (☞ P.14-15, P.14-16)
- Set text size in Yahoo! Keitai pages (☞ P.14-5)
- Set text size in PC Site Browser (☞ P.14-5)

## Bookmarks & Saved Pages

Save site URLs to Bookmarks. Save page content to Saved Pages. Open pages without establishing an Internet connection.

### Saving Bookmarks

Save up to 50 bookmarks for Yahoo! Keitai and PC Site Browser, each.

- 1 Open a page
- 2 Tap Bookmark → *Save*
- 3 Enter title

### Accessing Bookmarks

- 1 Hold Y! Keitai → *PC site browser* as required → *Bookmarks*
- 2 Select a bookmark

#### Note

- Internet connections may incur Packet Communication fees.

## Saving Pages

Save pages to view without connecting to the Internet.

Save up to 30 pages for Yahoo! Keitai and PC Site Browser, each.

- 1 Open a page
- 2 Tap Menu (in some windows, tap More → *Saved pages*) → *Save*
- 3 Enter title

### Opening Saved Pages

- 1 Tap Menu → Tap Y!Keitai → *PC site browser* as required → *Saved pages*
- 2 Select a page

#### Note

- If USIM Card inserted when page was saved is replaced, saved page will not open.

## Advanced

## Advanced Settings (P.5-13)

- Opening Bookmarked Site
- Saving Bookmark by Direct Entry
- Editing Bookmark Title or URL
- Deleting Bookmarks
- Creating Folders in Bookmark List
- Sending Bookmark URL
- Sending Bookmark URL via Bluetooth®
- Sending Bookmark URL via Infrared
- Moving Bookmark to Folders
- Changing Bookmark Order
- Saving Bookmark to Data Folder
- Viewing Bookmark Details
- Opening Saved Pages in a Page
- Renaming Saved Pages
- Deleting Saved Pages
- Changing Order of Saved Pages

## Advanced Settings

## Advanced Settings

## Yahoo! Keitai

## Showing or Hiding Keypad on Pages

In a page, tap More → *Show keypad* or *Hide keypad*

- In some pages, tap numbers on Keypad, [X], or [#] to select an item.
- Move slider displayed to adjust the transparency of Keypad.

## Copying Text

In a page, tap More → *Copy text*

## To copy selected text

Tap the first character to copy → Tap Start point  
→ Tap the last character to copy → Tap End point

## To copy all text in text entry window

Tap All

## Refreshing Page

In a page, tap More → *Refresh*

## Entering URL to Open Another Site/Page

In a page, tap More → *Enter URL* → Enter URL

## Entering URL from History

## From Yahoo! Keitai

Tap Menu → Tap Y!Keitai → *Enter URL* → Tap More  
→ *Insert* → *EnterURL logs* → Select URL

## From a page

In a page, tap More → *Enter URL* → Tap More  
→ *Insert* → *EnterURL logs* → Select URL

- In URL entry window, enter URL from History. Up to 10 URL logs appear, newest first. When limit is reached, the oldest page is deleted automatically.

## Searching with New Window

In a page, tap More → *Web search* → Enter text

## Searching Text

In a page, tap More → *Search* → Enter text to search

- Words that match are highlighted. Tap Prev. or Next to search for the previous or next match.

## Moving to Top/Bottom of Page

In a page, tap More → *Jump* → Select an item

## Sending URL

In a page, tap More → *Send URL* → *S! Mail* or *SMS* → (P.4-4 S! Mail 2, P.4-7 SMS 2)



---

## Opening Previously Viewed Page

### ■ From Yahoo! Keitai

Tap Menu → Tap Y!Keitai → **History** → Select URL

### ■ From a page

In a page, tap More → **History** → Select URL

- Up to 50 accessed URLs are saved.

---

## Deleting Access History

Tap Menu → Tap Y!Keitai → **History** → Tap Delete  
→ Check history to delete → Tap Delete → **Yes**

- Alternatively, in a page, tap More → **History** → Tap Delete → Check history to delete → Tap Delete → **Yes**.

---

## Sending Access History

Tap Menu → Tap Y!Keitai → **History** → Tap Send URL → **S! Mail** or **SMS** → Select history to send → **Yes** → (📧P.4-4 S! Mail 📄, P.4-7 SMS 📄)

- Alternatively, in a page, tap More → **History** → Tap Send URL → **S! Mail** or **SMS** → Select history to send → **Yes**.

---

## Viewing Access History Details

Tap Menu → Tap Y!Keitai → **History** → Tap Details → Select history

- Alternatively, in a page, tap More → **History** → Tap Details → Select history.

---

## Zooming Page in/out

In a page, tap More → **Zoom in/out** → Adjust size

---

## Viewing Flash®

In a page, open Flash® file, and tap More → **Flash® menu**

### ■ To pause/play

**Pause** or **Play**

### ■ To play from beginning

**Play from start**

---

## Viewing Only Selected Frame

In a page, tap More → **Frame in**

- Some pages may be divided into multiple sections. Such a section is referred as "Frame".
- To return to the normal display, tap More → **Frame out**.

---

## Viewing Page Details

In a page, tap More → **Details**

### ■ To view Page information

**Page information**

### ■ To view Server certificate

**Server certification**

---

## Moving to Main Menu

In a page, tap More → **Yahoo! Keitai**

---

## Show or hide Navigation Bar

In a page, tap More → **Settings** → Under **Navigation bar**, **On** or **Off**

---

## Changing Font Size

In a page, tap More → **Settings** → **Font size** → Select an item

---

## Changing Scroll Unit

In a page, tap More → **Settings** → **Scroll unit** → Select an item

---

## Changing Character Code

In a page, tap More → **Settings** → **Encoding** → Select an item

- If page text appears garbled, changing character encoding may solve the problem.

---

## Setting Show/Play of Image/Sound

In a page, tap More → **Settings** → **Downloads**

### ■ To set image

Under **Display image**, **On** or **Off**

### ■ To set sound

Under **Play sounds**, **On** or **Off**

---

## Setting the Saving Location

Tap Menu → Tap Y!Keitai → **Yahoo! Keitai browser settings** → **Save to** → **Phone/Memory card/Ask each time**

- Alternatively, in a page, tap More → **Settings** → **Save to** → **Phone/Memory card/Ask each time**

---

## Clearing Cache

In a page, tap More → **Settings** → **Memory manager** → **Clear cache** → **Yes**

---

### Deleting Cookies

In a page, tap More → *Settings* → *Memory manager* → *Delete cookies* → *Yes*

---

### Deleting Certificates

In a page, tap More → *Settings* → *Memory manager* → *Delete certificates* → *Yes*

---

### Setting Manufacture Number Notification

In a page, tap More → *Settings* → *Security* → Under *Manufacture number, On* or *Off*

---

### Sending/Not Sending Referer Information

In a page, tap More → *Settings* → *Security* → *Send referer* → Select an item

- Referer is a link source URL information. It is sent to Web server when accessing websites.

---

### Enabling Cookies

In a page, tap More → *Settings* → *Security* → *Cookies* → Select an item

- Select *Confirm* for acceptance confirmation every time before a Cookie is saved.
- Cookie automatically saves identification information of visitors to handset. Cookies contain user information and allow sites to recognize users and track preferences.

---

### Enabling Script

In a page, tap More → *Settings* → *Security* → *Script* → Select an item

---

### Checking Root Certificates

In a page, tap More → *Settings* → *Security* → *Root certificates* → Select a certificate

- View electronic certificate preinstalled on handset.

---

### Certificate Retention

In a page, tap More → *Settings* → *Security* → *Certificate retention* → Select an item

---

### Initializing Saved Information

In a page, tap More → *Settings* → *Initialized browser* → Enter Phone Password → Tap OK → *Yes*

- Initialize browser settings or information such as Bookmarks or Saved pages.

---

### Resetting Yahoo! Keitai Settings

In a page, tap More → *Settings* → *Reset settings* → Enter Phone Password → Tap OK → *Yes*

---

### Exiting Browser

In a page, tap More → *Exit*

---

## PC Site Browser

---

### Zooming Page in/out

In a page, tap Zoom → Adjust size

---

### Copying Text

In a page, tap More → *Copy text*

#### ■ To copy selected text

Tap the first character to copy → Tap Start point  
→ Tap the last character to copy → Tap End point

#### ■ To copy all text in text entry window

Tap All

---

### Entering URL from History

#### ■ From PC Site Browser

Tap Menu → Tap Y!Keitai → *PC site browser*  
→ *Enter URL* → Tap More → *Insert* →  
*EnterURL logs* → Select URL

#### ■ From a page

In a page, tap URL field → Tap More → *Insert*  
→ *EnterURL logs* → Select URL

- In URL entry window, enter URL from History. Up to 10 URL logs appear, newest first. When limit is reached, the oldest page is deleted automatically.

---

### Searching Text

In a page, tap More → *Search* →  
Enter text to search

- Words that match are highlighted. Tap Prev. or Next to search for the previous or next match.

## Sending URL

In a page, tap More → *Send URL* → *S! Mail* or *SMS* → (☎P.4-4 *S! Mail* 2, P.4-7 *SMS* 2)

## Moving to Top/Bottom of Page

In a page, tap More → *Quick movement* → Drag a frame to an area to view → Tap Select

## Opening Previously Viewed Page

### ■ From PC Site Browser

Tap Menu → Tap Y!Keitai → *PC site browser* → *History* → Select URL

### ■ From a page

In a page, tap More → *History* → Select URL

- Up to 50 accessed page URLs are saved.

## Deleting Access History

Tap Menu → Tap Y!Keitai → *PC site browser* → *History* → Tap Delete → Check history to delete → Tap Delete → *Yes*

- Alternatively, in a page, tap More → *History* → Tap Delete → Check history to delete → Tap Delete → *Yes*.

## Sending Access History

Tap Menu → Tap Y!Keitai → *PC site browser* → *History* → Tap Send URL → *S! Mail* or *SMS* → Select history to send → *Yes* → (☎P.4-4 *S! Mail* 2, P.4-7 *SMS* 2)

- Alternatively, in a page, tap More → *History* → Tap Send URL → *S! Mail* or *SMS* → Select history to send → *Yes*.

## Viewing Access History Details

Tap Menu → Tap Y!Keitai → *PC site browser* → *History* → Tap Details → Select history

- Alternatively, in a page, tap More → *History* → Tap Details → Select history.

## Viewing Flash®

In a page, open Flash® file, and tap More → *Flash® menu*

### ■ To pause/play

*Pause* or *Play*

### ■ To play from beginning

*Play from start*

## Viewing Only Selected Frame

In a page, tap More → *Frame in*

- Some pages may be divided into multiple sections. Such a section is referred as a "Frame".
- To return to the normal display, tap More → *Frame out*.

## Viewing Page Details

In a page, tap More → *Details*

### ■ To view Page information

*Page information*

### ■ To view Server certificate

*Server certification*

## Opening Main Menu

In a page, tap More → *Homepage*

## Changing Font Size

In a page, tap More → *Settings* → *Font size* → Select an item

## Setting the Guide Show or Hide When Zoom

In a page, tap More → *Settings* → Under *Page navigation, On* or *Off*

## Changing Character Code

In a page, tap More → *Settings* → *Encoding* → Select an item

- If page text appears garbled, changing character encoding may solve the problem.

## Setting Show/Play of Image/Sound

In a page, tap More → *Settings* → *Downloads*

### ■ To set image

Under *Display image, On* or *Off*

### ■ To set sound

Under *Play sounds, On* or *Off*

## Setting the Saving Location

Tap Menu → Y!Keitai → *PC site browser* → *PC site browser settings* → *Save to* → *Phone/Memory card/Ask each time*

- Alternatively, in a page, tap More → *Settings* → *Save to* → *Phone/Memory card/Ask each time*

## Clearing Cache

In a page, tap More → *Settings* → *Memory manager* → *Clear cache* → *Yes*

---

### Deleting Cookies

In a page, tap More → *Settings* → *Memory manager* → *Delete cookies* → *Yes*

---

### Deleting Certificates

In a page, tap More → *Settings* → *Memory manager* → *Delete certificates* → *Yes*

---

### Setting Manufacture Number Notification

In a page, tap More → *Settings* → *Security* → Under *Manufacture number, On* or *Off*

---

### Sending/Not Sending Referer Information

In a page, tap More → *Settings* → *Security* → *Send referer* → Select an item

- Referer is a link source URL information. It is sent to Web server when accessing websites.

---

### Enabling Cookies

In a page, tap More → *Settings* → *Security* → *Cookies* → Select an item

- Select *Confirm* to display acceptance confirmation every time before Cookie is saved.
- Cookie automatically saves identification information of visitors to handset. Cookies contain user information and allow sites to recognize users and track preferences.

---

### Enabling Script

In a page, tap More → *Settings* → *Security* → *Script* → Select an item

---

### Checking Root Certificates

In a page, tap More → *Settings* → *Security* → *Root certificates* → Select a certificate

- View electronic certificate preinstalled on handset.

---

### Certificate Retention

In a page, tap More → *Settings* → *Security* → *Certificate retention* → Select an item

---

### Setting to Show Warning Messages

In a page, tap More → *Settings* → *Warning messages* → Under *Activate PC site browser* or *Switch to Yahoo! Keitai, On* or *Off*

- Always show or hide warning when activating PC Site Browser or switching between Yahoo! Keitai and PC Site Browser or vice versa.

---

### Initializing Saved Information

In a page, tap More → *Settings* → *Initialized browser* → Enter Phone Password → Tap OK → *Yes*

- Initialize browser settings or information such as Bookmarks or Saved pages.

---

### Resetting PC Site Browser

In a page, tap More → *Settings* → *Reset settings* → Enter Phone Password → Tap OK → *Yes*

---

### Changing Page Layout

In a page, tap More → *Small screen* or *PC screen*

---

### Exiting Browser

In a page, tap More → *Exit*

---

## Page Operations

---

### Saving Phone Number/E-mail Address

In a page containing phone number/E-mail address, select phone number or E-mail address → *Save Number* → *Phone* or *USIM*

---

#### ■ To save as a new entry

*New* → (P.2-17 Creating New Entries 2)

---

#### ■ To update entry

*Update* → Search Phonebook and select entry (P.2-18) → Enter each item (P.2-17)

- Available phone numbers and E-mail addresses appear underlined.

---

### Sending Mail to Number/E-mail Address

In a page containing phone number/E-mail address, select phone number or E-mail address → *Create Message* → *S! Mail* or *SMS* → (P.4-4 S! Mail 5, P.4-7 SMS 5)

- Available phone numbers and E-mail addresses appear underlined.

---

### Calling Phone Number

In a page containing phone number, select phone number → *Voice Call* or *Video Call*

- Available phone numbers appear underlined.

---

### Using URL to Open Another Page

Select URL in a page

- Available URLs appear underlined.

## Saving Images or Other Files from Pages

### To save images on a page

In a page, tap More → *Save files* → *Save items* → Select image to save → Tap Save

- For Yahoo! Keitai, select an image to save only when multiple images are there.

### To save background images

In a page, tap More → *Save files* → *Save BG image* → Tap Save

### To save background sound

In a page, tap More → *Save files* → *Save items* → Tap Save

- They cannot be saved with PC Site Browser.

### To save linked files



In a page, select a link → Tap Save

- For Auto Save files, tap link to save files.
- If file details appear, select from these options: (Available options vary by file type.)  
Display: Open file (e.g., image file)  
Play: Play file (e.g., media file)  
Save to pictogram: Save item as a Pictogram  
Back to browser: Return to page  
Set as: Save file to Wallpaper or Ringtone
- If files with same name exist, notification appears, choose *Yes* to save it with a different name. Choose *No* to edit the file name.

## Bookmarks

### Opening Bookmarked Site

In a page, tap Bookmark → *Open list* → Select a bookmark

- Tap  or  in Bookmark list to toggle between List view and Thumbnail view.

### Saving Bookmark by Direct Entry

#### In Yahoo! Keitai

Tap Menu → Tap Y!Keitai → *Bookmarks* → Tap Add → Tap URL field → Enter URL → Tap Title field → Enter title → Tap Save

#### In PC Site Browser

Tap Menu → Tap Y!Keitai → *PC site browser* → *Bookmarks* → Tap Add → Tap URL field → Enter URL → Tap Title field → Enter title → Tap Save

#### In a page

Tap Bookmark → *Open list* → Tap Add → Tap URL field → Enter URL → Tap Title field → Enter title → Tap Save

### Editing Bookmark Title or URL

#### In Yahoo! Keitai

Tap Menu → Tap Y!Keitai → *Bookmarks* → Tap Edit → Select bookmark to edit → Tap URL field → Enter URL → Tap Title field → Enter title → Tap Save

#### In PC Site Browser

Tap Menu → Tap Y!Keitai → *PC site browser* → *Bookmarks* → Tap Edit → Select bookmark to edit → Tap URL field → Enter URL → Tap Title field → Enter title → Tap Save

#### In a page

Tap Bookmark → *Open list* → Tap Edit → Select bookmark to edit → Tap URL field → Enter URL → Tap Title field → Enter title → Tap Save

### Deleting Bookmarks

#### In Yahoo! Keitai

Tap Menu → Tap Y!Keitai → *Bookmarks* → Tap Delete → Check bookmarks to delete → Tap Delete → *Yes*

#### In PC Site Browser

Tap Menu → Tap Y!Keitai → *PC site browser* → *Bookmarks* → Tap Delete → Check bookmarks to delete → Tap Delete → *Yes*

#### In a page

Tap Bookmark → *Open list* → Tap Delete → Check bookmarks to delete → Tap Delete → *Yes*

- In Thumbnail view, select a bookmark to delete → *Yes*.

### Creating Folders in Bookmark List

#### In Yahoo! Keitai

Tap Menu → Tap Y!Keitai → *Bookmarks* → Tap More → *Create folder* → Enter folder name

#### In PC Site Browser

Tap Menu → Tap Y!Keitai → *PC site browser* → *Bookmarks* → Tap More → *Create folder* → Enter folder name

#### In a page

Tap Bookmark → *Open list* → Tap More → *Create folder* → Enter folder name

## Sending Bookmark URL

### In Yahoo! Keitai

Tap Menu → Tap Y!Keitai → **Bookmarks** → Tap More → **Send** → **Via message** → **S! Mail** or **SMS** → Select bookmark to send → (P.4-4 S! Mail 2, P.4-7 SMS 2)

### In PC Site Browser

Tap Menu → Tap Y!Keitai → **PC site browser** → **Bookmarks** → Tap More → **Send** → **Via message** → **S! Mail** or **SMS** → Select bookmark to send → (P.4-4 S! Mail 2, P.4-7 SMS 2)

### In a page

In a page, tap Bookmark → **Open list** → Tap More → **Send** → **Via message** → **S! Mail** or **SMS** → Select bookmark to send → (P.4-4 S! Mail 2, P.4-7 SMS 2)

## Sending Bookmark URL via Bluetooth®

### In Yahoo! Keitai

Tap Menu → Tap Y!Keitai → **Bookmarks** → Tap More → **Send** → **Via Bluetooth** → Check bookmarks to send → Tap Send → (P.13-7 Sending Data 2)

### In PC Site Browser

Tap Menu → Tap Y!Keitai → **PC site browser** → **Bookmarks** → Tap More → **Send** → **Via Bluetooth** → Check bookmarks to send → Tap Send → (P.13-7 Sending Data 2)

### In a page

Tap Bookmark → **Open list** → Tap More → **Send** → **Via Bluetooth** → Check bookmarks to send → Tap Send → (P.13-7 Sending Data 2)

- In Thumbnail view, select a bookmark to send → **Yes**.

## Sending Bookmark URL via Infrared

### In Yahoo! Keitai

Tap Menu → Tap Y!Keitai → **Bookmarks** → Tap More → **Send** → **Via infrared** → Check bookmarks to send → Tap Send (P.13-3)

### In PC Site Browser

Tap Menu → Tap Y!Keitai → **PC site browser** → **Bookmarks** → Tap More → **Send** → **Via infrared** → Check bookmarks to send → Tap Send (P.13-3)

### In a page

In a page, tap Bookmark → **Open list** → Tap More → **Send** → **Via infrared** → Check bookmarks to send → Tap Send (P.13-3)

- In Thumbnail view, select a bookmark to send → **Yes**.

## Moving Bookmark to Folders

### From Yahoo! Keitai

Tap Menu → Tap Y!Keitai → **Bookmarks** → Tap More → **Move** → Check bookmarks to move → Tap Move → Select a destination folder

### From PC Site Browser

Tap Menu → Tap Y!Keitai → **PC site browser** → **Bookmarks** → Tap More → **Move** → Check bookmarks to move → Tap Move → Select a destination folder

### From a page

Tap Bookmark → **Open list** → Tap More → **Move** → Check bookmarks to move → Tap Move → Select a destination folder

- To create a new folder to move an item, tap Create Folder → Enter a new folder name.
- In Thumbnail view, select a bookmark to move → Select a destination folder.

## Changing Bookmark Order

### In Yahoo! Keitai

Tap Menu → Tap Y!Keitai → **Bookmarks** → Tap More → **Change order** → Drag a bookmark to desired location → Tap Done

### In PC Site Browser

Tap Menu → Tap Y!Keitai → **PC site browser** → **Bookmarks** → Tap More → **Change order** → Drag a bookmark to desired location → Tap Done

### In a page

In a page, tap Bookmark → **Open list** → Tap More → **Change order** → Drag a bookmark to desired location → Tap Done

## Saving Bookmark to Data Folder

### In Yahoo! Keitai

Tap Menu → Tap Y!Keitai → **Bookmarks** → Tap More → **Save to Data Folder** → **Phone** → Select bookmark to save → **Yes**

### In PC Site Browser

Tap Menu → Tap Y!Keitai → **PC site browser** → **Bookmarks** → Tap More → **Save to Data Folder** → **Phone** → Select bookmark to save → **Yes**

### In a page

In a page, tap Bookmark → **Open list** → Tap More → **Save to Data Folder** → **Phone** → Select bookmark to save → **Yes**

- To save a file to **Memory Card**, insert Memory Card.

## Viewing Bookmark Details

### In Yahoo! Keitai

Tap Menu → Tap Y!Keitai → **Bookmarks** → Tap More → **Details** → Select bookmark

### In PC Site Browser

Tap Menu → Tap Y!Keitai → **PC site browser** → **Bookmarks** → Tap More → **Details** → Select bookmark

### In a page

In a page, tap Bookmark → **Open list** → Tap More → **Details** → Select bookmark

## Saved Pages

### Opening Saved Pages in a Page

In a page, tap Saved pages (in some windows, tap More → **Saved pages**) → **Open list** → Select Saved pages

- In Saved Pages, tap  or  to toggle List/Thumbnail view.

### Renaming Saved Pages

#### In Yahoo! Keitai

Tap Menu → Tap Y!Keitai → **Saved pages** → Tap Rename → Select Saved pages to edit → Enter name

#### In PC Site Browser

Tap Menu → Tap Y!Keitai → **PC site browser** → **Saved pages** → Tap Rename → Select Saved pages to edit → Enter name

#### In a page

In a page, tap Saved pages (in some windows, tap More → **Saved pages**) → **Open list** → Tap Rename → Select Saved pages to edit → Enter name

## Deleting Saved Pages

### In Yahoo! Keitai

Tap Menu → Tap Y!Keitai → **Saved pages** → Tap Delete → Select Saved pages to delete → **Yes**

### In PC Site Browser

Tap Menu → Tap Y!Keitai → **PC site browser** → **Saved pages** → Tap Delete → Select Saved pages to delete → **Yes**

### In a page

In a page, tap Saved pages (in some windows, tap More → **Saved pages**) → **Open list** → Tap Delete → Select Saved pages to delete → **Yes**

- In the list, check a Saved pages to delete → Tap Delete → **Yes**

## Changing Order of Saved Pages

### In Yahoo! Keitai

Tap Menu → Tap Y!Keitai → **Saved pages** → Tap Change order → Drag Saved pages to desired location → Tap Done

### In PC Site Browser

Tap Menu → Tap Y!Keitai → **PC site browser** → **Saved pages** → Tap Change order → Drag Saved page to desired location → Tap Done

### In a page

In a page, tap Saved pages (in some windows, tap More → **Saved pages**) → **Open list** → Tap Change order → Drag Saved pages to desired location → Tap Done

---

# Memo

A series of horizontal dotted lines for writing, consisting of 12 lines spanning the width of the page.