

Data Folder & Memory



Data Folder	12-2
Viewing Files	12-4
Viewing Images with Image Viewer	12-4
Viewing Graphics/Animation.....	12-5
Zooming In/Out	12-5
Saving Face Link.....	12-5
Face Link.....	12-6
Photo Album	12-7
Opening Photo Album	12-7
Managing Files/Folders	12-8
Creating Folders	12-8
Renaming File/Folder	12-8
Moving File/Folder.....	12-8
Copying Files/Folders	12-9
Deleting Files/Folders.....	12-9
Memory Card	12-10
Initializing Memory Card.....	12-10
Inserting & Removing	12-11
Viewing Data in Memory Card	12-11
Viewing Memory Status	12-12
Advanced Settings	12-12
Viewing Files	12-12
Photo Album	12-13
Managing Files/Folders	12-13
Memory Status	12-15

Data Folder

Handset files are organized in folders by file format.

Default Folders




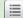

Handset automatically sorts files into these folders:

Folder/Description	File Type ¹
Pictures/My Pictograms	
Image files captured with handset Camera	JPEG, BMP, GIF, WBMP, PNG, Animation GIF
My Pictograms	GIF, GPK
Ring songs · tones	
Voice Recorder files, downloaded music, and other sound files	SMAF, MIDI, SP-MIDI, SMF, Mobile XMF, MPEG4 Audio, AMR
S! Appli	
Download S! Appli	JAD, JAR
Music/WMAudio (Memory Card only)	
Downloaded Chaku-Uta®	MPEG4 Audio (mp4, m4a, aac, 3gp), smc, WMA
Videos/WMVVideo (Memory Card only)	
Handset video files	MPEG4 (mp4, 3gp), WMV

Folder/Description	File Type ¹
Books	
Download Books	CCF
Message Templates	
S! Mail Templates	HMT
Flash®/Flash® Ringtones	
Flash®:Flash® files	
Flash® Ringtones:Ringtone assignable downloaded Flash® files	SWF
Other documents	
Document or graphic files requiring File viewer for use on handset, vFiles ² , etc.	vCard, vCalendar, vBookmark, EML, PDF, XLS, DOC, PPT, TXT, HTML, VNT, Unsupported file

 
1 Files are saved by type. Files cannot be moved to or saved in folders that do not support them.

2 Use vFiles to send or transfer handset files via S! Mail, etc. Handset supports vCard (.vcf) for Phonebook entries, vCalendar (.vcs) for Task/Schedule, and vBookmark (.vbm) for Bookmarks.

- Save up to 9999 files/folders in each default folder.
- In a folder, use **Memory status** to confirm memory. Alternatively, confirm memory in **Settings** (P.12-12).
- In Data Folder, tap  to open Memory Card Data Folder; tap  to return to handset Data Folder.
- Tap  /  to toggle between List view and Thumbnail view.
-  appears in some folders as Downloaded Site shortcut. Select the link to access site via Yahoo! Keitai.
- If files in one default folder are too large, Handset performance may fall.

Default Media Folders

Handset sorts music, picture, and video files into the following folders:

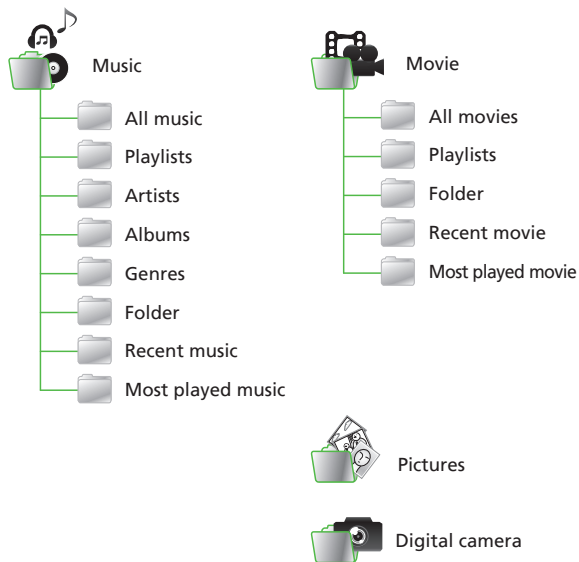



 

 

 


Viewing Files

View files in Data Folder, like picture, animation etc. (P.12-4). Select Data Folder, data list appears.

- 1 Tap Menu → **Data Folder**
- 2 Select a file location
- 3 Select a file in List window

•File List Indicators

-  : Nontransferable
 -  : Nontransferable and unusable
 -  : Protected
 -  : Copy Protected File (Transferable, Content Key Valid)
 -  : Copy Protected File (Transferable, Content Key Expired)
 -  : Copy Protected File (Transferable, Content Key Valid)
 -  : Copy Protected File (Transferable, Content Key Expired)
 -  : Set as Wallpaper (P.12-15) /Set as Ringtone (P.12-15)
 -  : Protected with WMDRM
- Nontransferable/copy protected files other than preinstalled ones cannot be used.

•Activating Camera or Voice Recorder from Data Folder

With **Pictures** folder open, tap More → **Take photo** to activate Camera in Camera mode. Similarly, with **Videos** folder open, tap More → **Record video** to activate Camera in Video mode.

With **Ring songs · tones** folder displayed, tap More → **Record sound** to activate Voice recorder.

If there is no file in each folder, **Take photo**, **Record video** and **Record sound** menu appear in Toolbar.

Note

- JPEG Files over 3 MB or larger than 5000 x 5000 pixels cannot be edited. For other formats, files less than 3 MB and smaller than 1600 x 1600 pixels can only be edited. In addition, you cannot zoom JPEG Files larger than 5000 x 5000 pixels. For animated GIF Files, zooming size vary depending on the data. For other file formats, you cannot zoom files over 3MB or larger than 5000 x 5000 pixels.
- During playback, video file thumbnails do not appear in a list view for **Videos** folder etc.

Viewing Images with Image Viewer

View images in Portrait or Landscape view. Landscape images automatically rotate when you rotate handset.

- This guide describes Portrait View operations.

- 1 Tap Menu → **Data Folder** → **Pictures**
- 2 Select a file



Tool Icons

- Rotate handset to rotate Display image.
- Tap Display to show/hide Toolbar.

- 3 Scroll Display image horizontally

- Some images may not appear.

Viewing Graphics/Animation

View graphics/animation in Portrait or Landscape view.

- This guide describes Portrait View operations.

1 Tap Menu → *Data Folder* → Select a file location

2 Select a file



- Tap to pause.
- Tap to resume.
- Tap to resume from last played.

- View SWF files in Data Folder.
- Some files may not appear.
- Selecting a compatible file from Data Folder automatically activates Flash® Viewer.

Zooming In/Out

1 Tap Menu → *Data Folder* → *Pictures* → Select an image

2 → / to adjust zoom level



- Alternatively, tap → / to adjust zoom.

3 Tap OK

- Tap to fit image to Display height. Tap to fit image to Display width.
- Touch and hold image for Zoom indicators. Image expands if scrolled up. Image reduces if scrolled down.

Saving Face Link

Link Phonebook information to portrait still image to make a call or message from image.

Link up to 10 Phonebook entry items to a still image.

Capturing & Setting Still Images


1 (2 + seconds)

2 → → Under *Face link display, On* → Tap OK


3



- Available only when Face Link is *On*.
- If captured image is recognized, frame appears.
- If Face Link has been saved, name appears. If not, ? appears.
- If captured image is not recognized, frame does not appear. The image is saved and capture window reappears.
- If *Auto save* is *Off*, image will be saved and capture window will reappear.

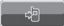- 4 Tap Face Link for linking
- 5 Search and select Phonebook entry (☞P.2-18)
- 6 

Adding Data to Saved Image

- 1 Tap Menu → *Data Folder* → *Pictures*
- 2 Select a file
- 3 
- 4 Tap Add name tag
- 5 Drag and drop frame onto image




- 6 Tap Save
- 7 Search and select Phonebook entry (☞P.2-18)

• Memory Card files cannot be set as Face Link.


Face Link

Make a call or message via Face Link image.

Calling/Messaging from Image Window

- 1 Tap Menu → *Data Folder* → *Pictures*
- 2 Select a file →  → Tap Face link
 - If multiple Face Links are set, tap one.
- 3 Make a call or message
 - To view other linked Face link images
This person's photo
 - To make a Voice Call
Voice call
 - To message
S! Mail → (☞P.4-4 S! Mail 5)
 - To view phonebook
View phonebook

Sending Face Link Image by Mail

- 1 Tap Menu → *Data Folder* → *Pictures*
- 2 Select a file → 
- 3 Tap Send via msg.
- 4 Tap Send (P.4-4 S! Mail 2)

Advanced

Advanced Settings (P.12-12)

- Purchasing or Downloading Content Key

Photo Album

View image files captured with handset. Tilt handset to scroll Images.

 
Opening Photo Album


View JPEG still images in handset or Memory Card. To view files in Photo Album, hold handset sideways.

- 1 Tap Menu → *Photo Album*



- 2 Select a folder
- 3 Select a file

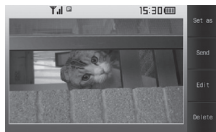

- Some files may not appear.
- In folder list or file list, drag folder or file to scroll the screen. Alternatively, tilt handset.
- Hold(Long press) a part of the image to enlarge, and scroll the image to view. To back to the normal view, press .

Scroll Photo Album

In Photo Album, tilt handset or swipe to Scroll page.

- 1 Tap Menu → *Photo Album*
- 2 Select folder
- 3 Tilt handset or swipe

- Do Step 1 then Step 3 to scroll folder.

Advanced

Advanced Settings (P.12-13)

- Setting Opened Still Image as Wallpaper etc.
- Sending Opened Still Image
- Editing Opened Still Image
- Using Oekaki anime with Opened Still Image
- Deleting Opened File

Managing Files/Folders

Make sub-folder under Picture folder or video folder. Copy, move, or delete folder or file.

Creating Folders

Create sub-folder in Default folders.
Use *Set secret* to hide created folder.

- 1 Tap Menu → *Data Folder*
- 2 Select default folder to create a sub-folder
- 3 Tap More → *Manage* → *Create folder*
 - If there is no sub-folder or file in the folder, menu in Toolbar varies.
- 4 Enter name

- New folder cannot be created in a created folder, only for My Pictograms and Flash®.

Renaming File/Folder



- 1 Tap Menu → *Data Folder*
- 2 Select default folder → Tap More → *Manage* → *Rename*
- 3 Select file or sub-folder to rename
- 4 Enter name


- Protected files cannot be renamed.

Moving File/Folder

When Memory Card is inserted, move files or folders between handset (Phone) and Memory Card.

- 1 Tap Menu → *Data Folder*
- 2 Select default folder → Tap Move → *Folders or Files*
- 3 Check files or sub-folders to move → Tap Move
- 4 Select a destination folder

- If Memory Card is inserted, tap  /  to switch between handset and Memory Card.

- Protected files cannot be moved.
- If target file/folder with the same name exists, text entry window appears; edit file/folder name.
- To move a file set for Wallpaper or Ringtone to Memory Card, a confirmation appears. Choose *Yes* to release the setting and move the file. When moving multiple or all files, choose *No* to move only files without set functions. Press  to cancel moving.



Note

- Downloaded files may not appear/play properly if moved to another device or if a different USIM Card is inserted.
- Nontransferable and unusable files (✂), protected files (🔒), or nontransferable and Copy protected files (🔒 or 📄) cannot be moved to Memory Card.

Copying Files/Folders

Copy a file or folder and paste in the same or another folder. When Memory Card is inserted, copy folders between handset and Memory Card.

- 1 Tap Menu → *Data Folder*
- 2 Select default folder → Tap Copy → *Folders or Files*
- 3 Check files or sub-folders to copy → Tap Copy
- 4 Select a destination folder

- If Memory Card is inserted, tap  /  to switch between handset and Memory Card.

- When pasting files/folders in the same location as the original, numbers such as "_0001" are automatically added to pasted file/folder names.
- If target file/folder with the same name exists, text entry window appears; edit file/folder name.

Note

- Nontransferable files cannot be copied.

Deleting Files/Folders

- 1 Tap Menu → *Data Folder* → Select a file location → Tap Delete



- 2 Check files or sub-folders to delete → Tap Delete → *Yes*

- If *Mark all* is selected, enter Phone Password → Tap OK → *Yes*.

- When deleting a file that is set to a function or protected, a confirmation appears. Choose *Yes* to cancel the setting and delete the file. When deleting multiple files, choose *Yes* → *Except protected* to delete only files not set to functions and unprotected files.
- When deleting files with Content Key, a confirmation appears. Choose *Yes* to delete both file and Content Key.

Advanced Settings (P. 12-13)

- Editing Image with Image Editor
- Using Oekaki anime with Still Image
- Viewing Slide Show
- Sending Files
- Printing Still Images via USB or Bluetooth®
- Sorting Files
- Deleting Content Key
- Setting Secret in Sub-folder
- Canceling Secret Setting Temporarily
- Activating Camera Mode
- Activating Video Mode
- Recording Sound
- Setting & Canceling File Lock
- Setting Images as Wallpaper etc.
- Setting Sound File to Ringtone in Normal Mode
- Setting Video File to Ringtone in Normal Mode
- Registering vFile to Other Functions

Memory Card

Handset is compatible with microSD™/microSDHC™ Memory Card. Purchase Memory Card to use Memory Card-related handset functions.

- Use only recommended Memory Card. Other Memory Cards may not perform properly.
- Do not place labels or stickers on Memory Card. These items may affect card performance or result in lost information.
- Never disassemble or modify a Memory Card.
- Do not expose Memory Card to strong impacts, pressure or liquids.
- Do not touch Memory Card terminals or expose them to metal objects.
- Keep a Memory Card away from dust, high humidity, or excessive heat.
- Do not use in the presence of corrosive gases.
- Avoid heat sources and do not dispose of in fire.
- A Memory Card is a consumable item. Card performance deteriorates with usage.

- SoftBank recommends 64, 128, 256, 512 MB, 1, 2 GB microSD™/microSDHC™ Memory Card or 4 GB microSDHC™ Memory Card.

Note

- **Protect Important Information**
Memory Card files may be lost or damaged by accident or malfunction. Back-up entries and store separately. SoftBank is not liable for damage from lost or altered information.
- **Memory Cards do not have Write Protection Switch.** There is a risk of accidental erasure or overwriting of files.

Initializing Memory Card

Format Memory Card, delete all data in Memory Card. Make sure to format Memory Card before inserting it.

 
- 1 **Tap Menu → Settings → Memory settings → Memory card → Tap Format → Enter Password → Tap OK → Yes**

Inserting & Removing


Turn handset power off before inserting or removing Memory Card.

Inserting

1 Open and rotate Memory Card cover

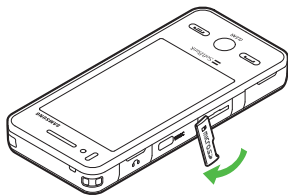

 2 With contacts down, insert Memory Card until it clicks

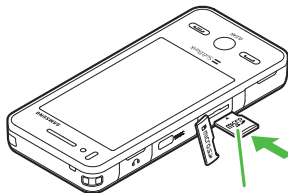


Contacts side down


3 Close Memory Card cover

Removing

 1 Open and rotate Memory Card cover

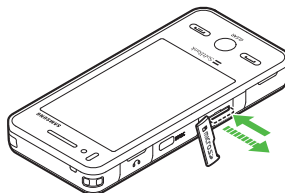

2 Card pops out; remove it

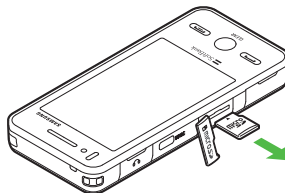 

3 Close Memory Card cover

- If Memory Card Data Folder is open when Memory Card is removed, Phone Data Folder appears.

Note

- Do not apply excessive force when inserting/removing Memory Card; may damage Memory Card or handset.
- Take care not to lose removed Memory Card.
- Avoid touching/damaging Memory Card contacts when inserting/removing it.
- Never remove Memory Card or battery while files are being accessed; may damage handset/card or result in damaged/lost files.

Advanced


Settings

- Check Memory Card details (☞ P.14-24)
- Rename Memory Card (☞ P.14-24)
- Format Memory Card (☞ P.14-24)
- Set Default Memory to Phone or Memory Card (☞ P.14-24)

Viewing Data in Memory Card

1 Tap Menu → *Data Folder*

2 Tap on top right.

 
- Inset Memory Card before checking it.
- To check Mobile phone Data Folder, Tap .

Viewing Memory Status

View following information.

- Status of message folder
- Status of memory in Data Folder
- Status of Calendar or Tasks items registered
- Status of memory in Notepad
- Status of Phonebooks (Handset and USIM Card)

1 Tap Menu → *Settings* → *Memory settings* → *Memory status*

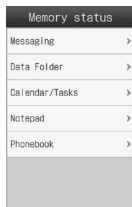

2 View each item

- **To view Messaging status**
Messaging
 - Received, Drafts, Sent and Unsent Mail memory appears by Size.
 - Select *Count* from pulldown menu to see Mail memory by Count.
 - USIM Card SMS appears by Count only.
- **To view Data Folder status**
Data Folder → *Phone memory/ Memory card*
- **To view Calendar or Tasks status**
Calendar/Tasks
- **To view Notepad status**
Notepad
- **To view Phonebook**
Phonebook

Advanced

Advanced Settings (P. 12-15)

- Deleting Registered/Saved Data

Settings

- Confirm total or remaining Phone Memory (P. 14-24)
- Clear Phone Memory (P. 14-24)
- View Memory status (P. 14-24)

Advanced Settings

Advanced Settings

Viewing Files

Purchasing or Downloading Content Key

Tap Menu → *Data Folder* → *Pictures* → Select a file location → Tap More → *Manage* → *Download Content key* → Select a file → Follow onscreen instruction

Viewing Graphics/Animation in SWF

Tap Menu → *Data Folder* → Select a file location → Select a file

To display Keypad

Tap Keypad

To toggle Full/Normal view

Tap More → *Full view* or *Normal view*

To change image quality

Tap More → *Quality* → Select an item

Deleting File

Tap Menu → *Data Folder* → Select a file location → Select a file → → *Yes*

- If no tool icon is displayed, tap the screen.

Confirming File Details

Tap Menu → *Data Folder* → Select a file location → Select a file →

- If no tool icon is displayed, tap the screen.

Photo Album

Setting Opened Still Image as Wallpaper etc.

Tap Menu → **Photo Album** → Select a file location → Select a file → Tap Set as

■ To set image to Wallpaper

Wallpaper → Tap Set

■ To set image to Incoming image

Caller ID → Search Phonebook and select entry (☎P.2-18) → Tap Set

■ To set image to Alternative picture

Still image → Tap OK

Sending Opened Still Image

Tap Menu → **Photo Album** → Select a file location → Select a file → Tap Send

■ To send via message

Via message → (☎P.4-4 S! Mail ②)

■ To send via Bluetooth®

Via Bluetooth → (☎P.13-7 Sending Data ②)

■ To send via infrared

Via infrared (☎P.13-3)

Editing Opened Still Image

Tap Menu → **Photo Album** → Select a file location → Select a file → Tap Edit → **Image editor** → (☎P.7-12 Editing Still Images ④)

Using Oekaki anime with Opened Still Image

Tap Menu → **Photo Album** → Select a file location → Select a file → Tap Edit → **Oekaki anime** → (☎P.7-13 Oekaki Anime ③)

Deleting Opened File

Tap Menu → **Photo Album** → Select a file location → Select a file → Tap Delete → **Yes**

Managing Files/Folders

Editing Image with Image Editor




Tap Menu → **Data Folder** → Select a file location → Select a file → Tap Edit → **Image editor** → (☎P.7-12 Editing Still Images ④)

Using Oekaki anime with Still Image

Tap Menu → **Data Folder** → Select a file location → Select a file → Tap Edit → **Oekaki anime** → (☎P.7-13 Oekaki Anime ③)

Viewing Slide Show

Tap Menu → **Data Folder** → **Pictures** → Select a file to view first → Tap More → **Slide show**

- To pause Slide show, tap Display and .
- To view next/previous data, tap  or .

Sending Files

Tap Menu → **Data Folder** → Select a file location → Tap More → **Send**

■ To send via message

Via message → Select a file (☎P.4-4 S! Mail ②)

■ To send via Bluetooth®

Via Bluetooth → Check file to send → Tap Send → (☎P.13-7 Sending Data ②)

■ To send via infrared

Via infrared → Check file to send → Tap Send (☎P.13-3)

Printing Still Images via USB or Bluetooth®

Tap Menu → **Data Folder** → Select a file location → Tap More → **Print**

■ USB

Via USB → Check file to print → Tap Print → (Ⓧ)P.7-15 Printing via USB (4)

■ Bluetooth®

Via Bluetooth → Check file to print → Tap Print → (Ⓧ)P.7-14 Printing via Bluetooth® (4)

Sorting Files

Tap Menu → **Data Folder** → Select a file location → Tap More → **Sort by** → Select an item

- Sort by following order.
 - Descending order of date (**Date**)
 - File type (**Type**)
 - File name (**Name**)
 - Ascending order of file size (**Size**)
 - Content Key status (**Content key type**)
- Folders appear at the top of list.
- When selecting **Type**, files are sorted in alphabetical order by file extension.
- When selecting **Name**, files are sorted in order of numerics → alphabets → Japanese syllabary.
- Files in **Message templates** files cannot be sorted by **Type**.
- When selected **Content key type**, files appear as follows: Unrestricted → Nontransferable → Copy Protected (Content key valid) → Copy Protected (Content Key expired) → Invalid Nontransferable.
- Files without title names cannot be sorted by Title.

Adding Sound Files or Video Files to Playlist

Tap Menu → **Data Folder** → **Ring songs · tones, Music, or Videos** → Tap More → **Manage** → **Add to playlist** → Check files to add → Tap OK → Select a playlist

- To create a new playlist and add files to it, tap Create in Add to Playlist window.

Managing Content Key in Data Folder

Tap Menu → **Data Folder** → Select a file location → Tap More → **Manage** → **Download Content key** → Select Content Key to view

- When a folder containing a Content Key is opened, all Data Folder/Memory Card Content Keys appear.
- If no files require Content Key, **Download Content key** does not appear.

Deleting Content Key

Tap Menu → **Data Folder** → Select a file location → Tap More → **Manage** → **Download Content key** → Tap Delete → Check Content Key to delete → Tap Delete → **Yes**

- If no files require Content Key, **Download Content key** does not appear.

Setting Secret in Sub-folder

Tap Menu → **Data Folder** → Select a sub-folder location to set secret → Tap More → **Set/Unset secret** → Enter Phone Password → Tap OK → Select a folder to set secret → Tap OK

- To release the secret setting, uncheck them.

Canceling Secret Setting Temporarily

Tap Menu → **Data Folder** → Select a folder location → Tap More → **Unlock temporarily** → Enter Phone Password → Tap OK

Activating Camera Mode

Tap Menu → **Data Folder** → **Pictures** → Tap More → **Take photo**

- If there is no data saved in **Pictures** folder, tap Take photo.

Activating Video Mode

Tap Menu → **Data Folder** → **Videos** → Tap More → **Record video**


- If there is no data saved in **Videos** folder, tap Record Video.


Recording Sound

Tap Menu → **Data Folder** → **Ring songs · tones** → Tap More → **Record sound**

- If there is no data saved in **Ring songs · tones** folder, tap Record sound.

Setting & Canceling File Lock

Tap Menu → **Data Folder** → Select a file location → Tap More → **Lock/Unlock** →  of a file to lock → Tap OK

- To release the lock, tap .
- Set file lock to restrict renaming, moving, or deleting.

Setting Images as Wallpaper etc.

Tap Menu → **Data Folder** → Select a file location → Select a file → Tap Set as

■ To set image as Wallpaper

Wallpaper → Preview image → Tap Set

■ To set image as Incoming Image

Caller ID → Search Phonebook and select entry (⊕P.2-18) → Tap Set

■ To set image as Alternative picture

Still image → Tap OK

- If a Memory Card file is set as Incoming Image or Ringtone, copy file to handset first confirmation appears. If file is copy protected, move file to handset first confirmation appears. Choose **Yes** to complete setting.

Setting Sound File to Ringtone in Normal Mode

Tap Menu → **Data Folder** → Select a file location → Select a file →  → Tap Menu → **Set as**

■ To set to Ringtone for each function

Voice ringtone, Video ringtone, Message ringtone, S! Friend's Status ringtone, Missed call notification ringtone, S! Quick News ringtone, Delivery report ringtone

■ To set as Ringtone for Phonebook Entry

Caller ringtone → Search Phonebook and select entry (⊕P.2-18)

- If a Memory Card file is set as incoming image or ringtone, copy file to handset first confirmation appears. If file is copy protected, move file to handset first confirmation appears. Choose **Yes** to complete setting.
- Only copy protected MPEG4 AAC, AAC+, or Enhanced AAC+ files can be set. However, copy protected files with play count restriction cannot be set.

Setting Video File to Ringtone in Normal Mode

Tap Menu → **Data Folder** → Select a file location → Select a file →  → Tap Menu → **Set as**

■ To set to Ringtone for each function

Voice ringtone or Video ringtone

■ To set to Ringtone for Phonebook

Caller ringtone → Select Phonebook entry to set (⊕P.2-18)

- Only copy protected MPEG4 (mp4, 3gp) AAC, AAC+, or Enhanced AAC+ files can be set. However, copy protected files with play count restriction cannot be set.

Registering vFile to Other Functions

Tap Menu → **Data Folder** → **Other documents** → Tap More → **Register to** → Select an item → Select a file

- Register a vCard or vCalendar files saved in Data Folder to Phonebook, Calendar or Tasks.

Memory Status

Deleting Registered/Saved Data

Tap Menu → **Settings** → **Memory settings** → **Memory status** → Select data → Tap Delete → Select data to delete → Tap Delete → **Yes**

- If **Mark all** is selected, tap Delete → Enter Phone Password → Tap OK → **Yes**.
- Delete message folder messages, Data Folder files, or Calendar/Tasks or Phonebook entries.
- If file(s) are locked or set for another function, a confirmation appears. Choose **Yes** to delete all files. Choose **No** to delete all other files only.

