

<b>Text Entry .....</b>	<b>3-2</b>
Basics .....	3-2
Entering Hiragana & Kanji .....	3-3
Entering Other Characters .....	3-4
Quick Entry & Handy Conversions ...	3-5
Editing Characters .....	3-6
<b>User Dictionary .....</b>	<b>3-7</b>
Saving Frequently Used Words .....	3-7
<b>Additional Functions .....</b>	<b>3-8</b>

# 3

## Text Entry



## Basics

Use handset keys or Touch Panel to enter text.


## Slider Closed



Use Onscreen Keyboard to enter text. Hide Onscreen Keyboard to edit text in expanded window.

Touch Panel

Handset Keys

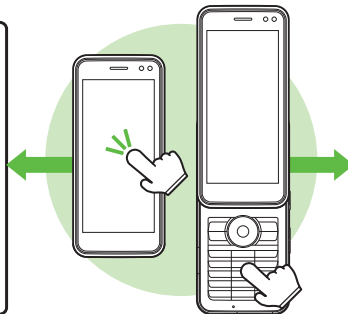


## Slider Open


Use handset keys to enter text. Touch Panel is available for selecting words from suggestion list, using Options menu, etc.

Touch Panel

Handset Keys

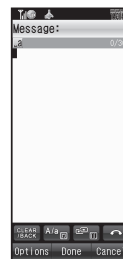

## Text Entry Window with Slider Closed

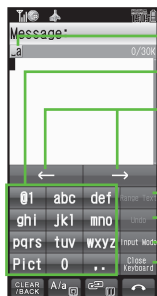

Entry Mode

Onscreen Keyboard

Move Cursor


Highlight Text Range

Undo

Switch Entry Mode

Hide Onscreen Keyboard


## Switching Entry Modes

 

or



Select mode

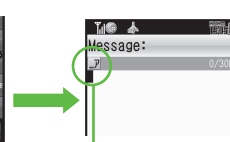

Entry Mode

## Entry Modes:

Kanji	Kanji (hiragana)	123	Single-byte number
アイウ	Double-byte katakana	Pictogram	Pictogram List
747	Single-byte katakana	My Pictograms	My Pictogram List
A b c	Double-byte alphanumerics (upper/lower case)	Symbols	Symbol List
Abc	Single-byte alphanumerics (upper/lower case)	Character Code	Character Code



# Entering Hiragana & Kanji

Follow these steps to enter **すぎ** or **鈴木** in kanji (hiragana) mode:

To type characters assigned to the same key, advance cursor first by pressing **→** or **↻**.

Long Touch onscreen hiragana key to open list of available variants such as hiragana with <sup>◌</sup> or <sup>◌</sup> and small hiragana (っ, etc.). Alternatively, type hiragana and press **絵** to add <sup>◌</sup> or <sup>◌</sup>.

Touch Panel

さ, さ, さ <ず>

 
 
 
 
→

ざ (Long) ▶ ず <ず>

か, か <き>

No Conv

Hiragana Entry



Handset Keys

3 3 3 <ず>

↻

3 3 3 ▶ \* ず <ず>

2 2 <き>



Word suggestions appear and change as hiragana is typed. (Predictive)

Alternatively, press **\* 絵** once to add <sup>◌</sup>, twice to add <sup>◌</sup> and three times to remove.

すぎ is entered.

Touch Panel

Kanji Conversion

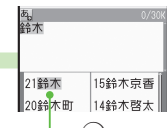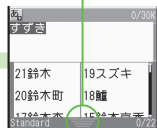

Handset Keys

Standard

↻

Words likely to follow the entry appear based on previous entries. (Previous Usage)

First suggestion appears highlighted.

鈴木 is entered.

## When Target Word is Not Listed

- Press **←Range/Range→** or **⌘ / ⌘** to segment hiragana to convert separately.

## Phonetic Conversion

- Type reading in hiragana and press **Kanji** or **⌘**.

## Advanced

- Inserting line breaks
- Inserting spaces
- Changing Font Size
- Disabling suggestions based on entered characters (And more on P.3-8)




## Entering Other Characters

### Alphanumeric Mode

Word suggestions appear and change as letters are typed.


Example: To enter *april*

#### 1 Type *a*

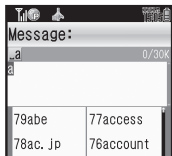

- Words starting with *a* appear.

#### 2 Type *p*

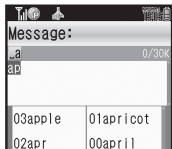

- Words starting with *ap* appear.

#### 3 *april*

### Pictograms & Symbols


May be unavailable depending on the entry mode.

#### 1 *Pict* or



- Pictogram/Symbol Log appears.

#### 2 *Pict 1/Symbols 1* or

- In Pictogram List, press *A/a* or  to toggle cross-carrier Pictograms and all Pictograms.

#### 3 *Select Pictogram or Symbol*


- Pictograms are double-byte even in single-byte modes.

#### 4 *CLEAR/BACK* or

- List closes.

### Emoticons

#### 1 *Options* or *Emoticons*

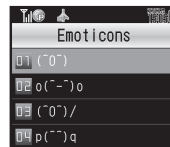

#### 2 *Select emoticon*

##### Alternative Emoticon Entry Method

- In kanji (hiragana) mode, type *かお* or a descriptive word such as *可愛い* or *うーん*, then convert the word.

##### EmoticonWordLink

- Immediately after inserting a descriptive word such as *嬉しい* or *悲しい*, corresponding emoticons may appear in the suggestion list.

### Advanced

-  Using Character Codes
-  Using Pager Code (P.3-8)



# Quick Entry & Handy Conversions

## Mail & Web Extensions

Enter `.co.jp`, `http://`, etc., easily.

- 1 **Options** or  **Quick Address List**



- 2 **Select extension**

- Extensions are single-byte even in double-byte entry modes.

## One-Hiragana Conversion

Type the first hiragana to access previously selected words.

Example: **鈴木** was previously selected after conversion.

- 1 **Type す**  $\Rightarrow$  **Swipe suggestion list** or 



## Advanced

-  Inserting ASCII Art into message text
-  Inserting Phone Book entry items (P.3-8)

- 2 **Select word/phrase <鈴木>**

## Hiragana to Katakana/Alphanumeric Conversion

Enter katakana and alphanumerics in kanji (hiragana) mode.

Example: To enter **PM**

- 1 **ま** or   $\Rightarrow$  **は** or   $\Rightarrow$  **Kana** or 












- 2 **Select word/phrase <PM>**

## Quick Conversion (for Hiragana)

A list of word suggestions appears based on the key pressed.

Example: To enter **終電**

- 1 **さ** or   $\Rightarrow$  **や** or   $\Rightarrow$  **<や>**  $\Rightarrow$  **あ** or   $\Rightarrow$  **<あ>**  $\Rightarrow$  **た**  
**絵** or  or  or   $\Rightarrow$  **<だ>**  
 $\Rightarrow$  **わ** or   $\Rightarrow$  **<わ>**  $\Rightarrow$  **Quick Conversion** or 

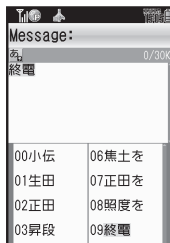

- 2 **Select word/phrase <終電>**

## One Hiragana Word Call


- Type the first hiragana of entries you used Quick Conversion for and use Quick Conversion.



## Editing Characters


### Highlighting Characters to Edit

#### One Character

Tap the character or use  to move cursor over it.



### Jumping to End/Top of Text with Handset Keys

*Options* or  ➔ *Cursor Position*  
➔ *Jump to End* or *Jump to Top*

 
#### Text Range

Follow these steps to highlight text range using Touch Panel:

#### 1 Range Text

- Alternatively, double-tap a character.

#### 2 Touch first character ➔ Drag text range



- Tap **Quit** to cancel Range Text.

### Deleting & Editing

Follow these steps to correct **また、お願いします** to **明日またお願いします**:

#### 1 Highlight character



#### 2 CLEAR/BACK or




- The highlighted character is deleted.

 
#### 3 Highlight target location ➔ Enter characters



### Recovering Deleted Characters

- Press **Undo** or  once for each character after deletion.

### Deleting All Text

- Long Touch **CLEAR/BACK** or Long Press  at the end of text. To delete characters on and after cursor, do the same at the cursor point.

### Copy/Cut & Paste

To copy/cut and paste using handset keys, see Advanced (below).

#### 1 Highlight character or text range



#### 2 Cut or Copy

#### 3 Highlight target location ➔ *Options* ➔ *Paste*

#### 4 Select text



### Advanced

 
-  Undo conversion or recover deleted characters
-  Using handset keys to copy/cut and paste (P.3-8)

## Saving Frequently Used Words

### Saving Words (Japanese)

Saved words appear among suggestions.

- 1 **MENU** or  ➔ **Settings** ➔ In Phone menu, **User Dictionary**






User Dictionary Menu

- 2 **New Entry** ➔ Enter word ➔ **Done** or 

- 3 Enter reading ➔ **Done** or 


#### Editing Entries

In , **Saved Word List** ➔ Select word ➔ **Edit** ➔ **Done** or  ➔ **Edit reading** ➔ **Done** or  ➔ **Yes**

### 931SH Download Dictionary (Japanese)

Download specialized 931SH Download Dictionaries from SH-web Mobile Internet site. Activate dictionaries to improve handset character conversion. Dictionary words appear among suggestions. Some dictionary files may not be usable.


 
- 1 In User Dictionary menu, **Acquire Dictionary**

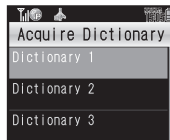


 
- 2 Select number ➔ Select dictionary

- Existing dictionary is replaced.



### Canceling Dictionary

In , highlight dictionary ➔ **Options** or  ➔ **Cancel**

### Viewing Dictionary Information

In , highlight dictionary ➔ **Options** or  ➔ **Info**

### Advanced

-   Deleting entries (P.3-8)



Text Entry	
Inserting line breaks	<p><b>At the End of Text</b> In a text entry window, double-tap or </p> <p><b>Mid-Entry</b> In a text entry window, <i>Pict</i> or  <math>\rightarrow</math> <i>Symbols 1</i> or  <math>\rightarrow</math> <math>\nabla</math></p>
Inserting spaces	In a text entry window, $\rightarrow$ or
Changing Font Size	In a text entry window, <i>Options</i> or $\rightarrow$ <i>Insert/Font Size</i> $\rightarrow$ <i>Font Size</i> $\rightarrow$ Select size
Disabling suggestions based on entered characters	In a text entry window, <i>Options</i> or $\rightarrow$ <i>Input/Conversion</i> $\rightarrow$ <i>Predictive</i> $\rightarrow$ <i>Off</i>
Disabling suggestions based on entered words	In a text entry window, <i>Options</i> or $\rightarrow$ <i>Input/Conversion</i> $\rightarrow$ <i>Previous Usage</i> $\rightarrow$ <i>Off</i>
Disabling emoticon/Pictogram suggestions based on entered words	In a text entry window, <i>Options</i> or $\rightarrow$ <i>Input/Conversion</i> $\rightarrow$ <i>EmoticonWordLink</i> $\rightarrow$ <i>Off</i>
Switching suggestion modes	In a text entry window, <i>Options</i> or $\rightarrow$ <i>Input/Conversion</i> $\rightarrow$ <i>Personal Mode</i> $\rightarrow$ Select mode <ul style="list-style-type: none"> <li>• With Slider closed, type hiragana and tap <i>Personal Mode</i> to toggle suggestion modes (Standard, Business, Male and Female).</li> </ul>
Lowering type priorities in suggestion list	In a text entry window, <i>Options</i> or $\rightarrow$ <i>Input/Conversion</i> $\rightarrow$ <i>Set Low Priority</i> $\rightarrow$ Select type (: Lower $\leftrightarrow$ : Normal) $\rightarrow$ <i>OK</i> or
Using Keypad to enter words/phrases from suggestion list	In a text entry window, <i>Options</i> or $\rightarrow$ <i>Input/Conversion</i> $\rightarrow$ <i>Select Candidate</i> $\rightarrow$ <i>Enable 1-9, 0, *, #</i>

Clearing entry log	In a text entry window, <i>Options</i> or $\rightarrow$ <i>Input/Conversion</i> $\rightarrow$ <i>Reset Log</i> $\rightarrow$ <i>Yes</i>
Using Character Codes	In a text entry window, <i>Input Mode</i> or $\rightarrow$ <i>Character Code</i> $\rightarrow$ Enter four digits (P.19-7)
Using Pager Code	In a text entry window, <i>Options</i> or $\rightarrow$ <i>Input/Conversion</i> $\rightarrow$ <i>Input Method</i> $\rightarrow$ <i>Pager Code</i> <ul style="list-style-type: none"> <li>• Return to text entry window and enter two digits (P.19-6).</li> </ul>
Inserting ASCII Art into message text	In message text entry window, <i>Options</i> or $\rightarrow$ <i>Call ASCII Art</i> $\rightarrow$ Select entry
Inserting Phone Book entry items	In a text entry window, <i>Options</i> or $\rightarrow$ <i>Insert/Font Size</i> $\rightarrow$ <i>Phone Book</i> $\rightarrow$ Select entry $\rightarrow$ Select item
Undo conversion or recover deleted characters	In a text entry window, <i>Options</i> or $\rightarrow$ <i>Undo/Recover</i> <ul style="list-style-type: none"> <li>• Alternatively, press <i>Undo</i> or .</li> </ul>
Using handset keys to copy/cut and paste	In a text entry window, <i>Options</i> or $\rightarrow$ <i>Cut or Copy</i> $\rightarrow$ Select first character $\rightarrow$ Select text range $\rightarrow$ Highlight target location $\rightarrow$ (Long)

## User Dictionary

Deleting entries	<i>MENU</i> or $\rightarrow$ <i>Settings</i> $\rightarrow$ In Phone menu, <i>User Dictionary</i> $\rightarrow$ <i>Saved Word List</i> $\rightarrow$ Highlight word $\rightarrow$ <i>Delete</i> or $\rightarrow$ <i>Yes</i>
------------------	--

