

Mobile Widget	16-2
Customizing Standby Display (Japanese)	16-2
S! Quick News	16-5
Receiving Content Updates (Japanese)	16-5
S! Information Channel	16-6
S! Information Channel & Weather Indicator (Japanese).....	16-6

e-Books	16-7
Reading e-Books (Japanese).....	16-7
Additional Functions	16-8
Troubleshooting	16-13

16

Entertainment



Customizing Standby Display (Japanese)

Paste various widgets (applications) to Standby to access/activate information/ functions immediately from Standby.



Obtaining Widgets

- 1 MENU or → Entertainment → Mobile Widget



Mobile Widget Menu

- 2 Widget Contents



Widget List

- 3 Download

- Follow onscreen instructions.

Installing Widgets

- Some widgets may need to be installed manually; follow these steps:

[Widget List] Highlight widget → Options or → Install → Yes

Activating Single Widgets

[Widget List] Select widget

Advanced

- Opening properties
- Opening widget notification history
- Canceling automatic updates
- Receiving updates automatically while abroad
- Disabling widget notifications
- Disabling cookies
- Deleting cookies (P.16-8)



Saving Widgets to Standby

Most operations are described for Touch Panel.

1 (OPEN)



- When (OPEN) does not appear, press or .

2 Drag widget to Standby

- Corresponding icon appears in Standby.

3 (CLOSE) → Completed

Removing Widgets from Standby

Long Touch widget → *Remove* → *Yes*

Moving Widgets

- Drag widget to target location.

Using Widgets

Most operations are described for Touch Panel.

1 Tap widget

- Widget activates; follow onscreen instructions.
- When no widget appears, press or .

Toggling Sheets

Toggle sheets to use widgets and Standby shortcuts pasted on each sheet.

1 While (OPEN) appears, swipe finger left or right across Display

- When (OPEN) does not appear, press or .
- Sheet name appears at the top, then disappears.
- Save widgets as needed; corresponding icons appear on the current sheet.

Using Locked Sheets

→ Enter Handset Code → *OK* or

Handling with Handset Keys

To handle widgets with handset keys, press to activate pointer (↖) first. When finished, press (pointer disappears).

Saving Widgets	Use to point to (OPEN) → Select widget →
Using Widgets	Use to point to widget →
Removing Widgets	Use to point to widget → <i>Remove</i> → <i>Yes</i>
Moving Widgets	Use to point to widget → <i>Change Layout</i> → Specify target location →
Moving Widgets to Front/Back	Use to point to widget → <i>To Front or To Back</i>
Updating View	Use to point to widget → <i>Update View</i>
Switching Sheets	Use to point to blank area (no widgets or icons) →

Advanced

- Logging in to Yahoo!JAPAN ● Viewing widget-related information ● Slowing pointer speed ● Editing sheet names ● Locking sheets (P.16-8 - 16-9)



Deleting Widgets

■ One Entry

- 1 In Widget list, highlight widget ➔ *Options* or  ➔ *Delete* ➔ *Yes*

 
■ All Entries

- 1 In Widget list, *Options* or  ➔ *Delete All* ➔ Enter Handset Code ➔ *OK* or  ➔ *Yes*

- If there is widget saved in Standby, a confirmation appears.

Using S! Quick News & S! Friend's Status Widget

S!速報ニュース/S!ともだち状況 (preloaded S! Quick News & S! Friend's Status widget) shows S! Quick News and S! Friend's Status information in Standby.



View Settings

■ Setting View Pattern

- 1  ➔ Point to S! Quick News/S! Friend's Status widget ➔ *Operation* or  ➔ *Pattern Setting*

- 2 Select item (⇄) ➔ *Save* or 

■ Switching View

- 1  ➔ Point to S! Quick News/S! Friend's Status widget ➔ *Operation* or  ➔ *Switch Pattern*

- Repeat the above steps to switch the view.

Advanced

-  Adding news items
-  Changing news scroll speed
-  Showing unread news only
-  Showing news images
-  Assigning members
-  Managing members (P.16-9)

Receiving Content Updates (Japanese)

View content updates or breaking news.
Transmission fees apply.

Registering S! Quick News Items

- MENU** or **☉** → **Entertainment**
→ **S! Quick News**



- S! Quick News List**



S! Quick News List

- 登録はこちら** → **Yes**

- Handset connects to the Internet.

- Select item**


- Follow onscreen instructions.

Opening Information

- In S! Quick News List, select item**

- Title list appears.

- Select title**

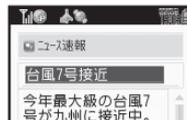

- Press **一覧** or **☐** to return to title list, or **次へ** or **▽** to open next title.

Updating Items Manually

[S! Quick News List] Highlight item
→ **メニュー** or **▽** → **更新** → **一件** or **全件**

Indicators

	Unread Special news
	Read Special news
	Unread News Flash
	Read News Flash
<input type="checkbox"/>	Unread General news
<input type="checkbox"/>	Read General news
<input checked="" type="checkbox"/>	Auto update disabled

Advanced

- Receiving S! Loop Item updates
- Updating list automatically
- Checking update schedule
- Changing background image
- Deleting S! Quick News items
- Updating S! Loop items manually
- Accessing source sites
- Disabling image download
- Deleting S! Loop items
- Resetting S! Quick News List and S! Loop List (P.16-10 - 16-11)




S! Information Channel & Weather Indicator (Japanese)

Subscribe to Japanese mobile periodicals that download to handset automatically.
Transmission fees apply.

Service Registration & Content Subscription

- 1 **MENU** or **⊙** ➔ **Entertainment**
➔ **S! Information Channel/Weather**

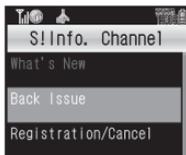

S! Information Channel Menu

- 2 **Registration/Cancel**
- Handset connects to the Internet.
Follow onscreen instructions.

New Received Information

Information window opens for new S! Information Channel info delivery.

- 1 **While Information window appears, S! Info. Channel**
- S! Information Channel page opens.
Follow onscreen instructions.
 - S! Information Channel page handling is similar to that of Yahoo! Keitai.

- 2 **⏪** or **⏩** ➔ **Page closes**

Opening Unread Latest Issue

[S! Information Channel Menu]
What's New

Opening Back Issues

[S! Information Channel Menu] **Back Issue** ➔ Select date

Using Weather Indicator

After S! Information Channel registration, local area weather indicator appears in Standby.

	Clear skies (day)		Snow
	Clear skies (night)		Thunder showers
	Cloudy		Then
	Rain		Partly/chance of

Example: ☁/☔ ➔ Partly cloudy with a chance of rain

Indicators other than the above also appear for more information.

Manual Update

[S! Information Channel Menu]
Weather Indicator ➔ **Manual Update**
➔ **Yes**

Advanced

- Hiding Information window for new received info
- Changing Display Size
- Changing scroll unit
- Copying text
- Hiding Weather Indicator in Standby
- Canceling Weather Indicator automatic updates
- Hiding Information window for weather updates (And more on **P.16-11**)



Reading e-Books (Japanese)

Use e-Book Viewer and BookSurfing® to view e-media (books, dictionaries, comics, photo books, etc.).

Downloading e-Books

1 **Y?** or **Y?** ➔ **メニューリスト**

2 **書籍・コミック・写真集**

- Follow onscreen instructions.
- Downloaded e-Books are saved to Data Folder (Books).

Note

- Alternatively, visit SH-web to download e-Books.

e-Book Viewer

Read XMDf books and dictionary files. Some files may not be supported.

1 **MENU** or **●** ➔ **Entertainment**



Entertainment Menu

2 **e-Book Viewer**

- e-Book Viewer starts. Refer to the e-Book Viewer help menu for operational instructions.

BookSurfing®

Download Contents Keys and read CCF files. Some files may not be supported.

1 **In Entertainment menu, BookSurfing**

- BookSurfing® S! Application starts. Refer to the BookSurfing® help menu for operational instructions.

Moving CCF Files via Memory Card

- When purchasing a new handset, move CCF files and retrieve Contents Keys to open the files. Some files may need to be re-downloaded.

Advanced

- ☞ ● Copying text ● Opening non-931SH e-Books (Library) ● Using Library (P.16-12)



Mobile Widget

Managing

Opening properties	<p>MENU or  → Entertainment → Mobile Widget → Widget Contents → Highlight widget → Options or  → Details</p> <ul style="list-style-type: none"> • Highlight widget other than <i>S!選報ニュース/S!ともだち状況</i>.
--------------------	--

Widget History

Opening widget notification history	<p><small>(Start Here)</small> MENU or  → Entertainment → Mobile Widget → Widget History → See below</p>
	<p>Showing All Text Highlight record → Options or  → View full text</p>
	<p>Deleting a Record Highlight record → Options or  → Delete → Yes</p>
	<p>Deleting All Records Highlight record → Options or  → Delete All → Enter Handset Code → OK or  → Yes</p>

Settings

Canceling automatic updates	<p>MENU or  → Entertainment → Mobile Widget → Settings → Auto Refresh → Off</p>
Receiving updates automatically while abroad	<p>MENU or  → Entertainment → Mobile Widget → Settings → AutoConnect Abroad → On</p>
Disabling widget notifications	<p>MENU or  → Entertainment → Mobile Widget → Settings → Notification Setting → Off</p>

Disabling cookies	<p>MENU or  → Entertainment → Mobile Widget → Settings → Cookies → Disabled</p>
Deleting cookies	<p>MENU or  → Entertainment → Mobile Widget → Settings → Delete Cookies → Yes</p>

Operations in Standby

Logging in to Yahoo!JAPAN	<p> → Options or  → Yahoo!JAPAN log in</p> <ul style="list-style-type: none"> • Follow onscreen instructions. • To log out, select <i>Yahoo!JAPAN log out</i> in the above steps.
Viewing widget-related information	<p> → Options or  → Information</p>
Slowing pointer speed	<p> → Options or  → Cursor Speed → Slow</p>

Sheets

Editing sheet names	<p><small>(Start Here)</small> Long Touch blank area in Standby (no Softkeys, icons or widgets) → Change Sheet Name → See below</p>
	<p>Renaming Select sheet → Enter name → Done or </p> <p>Resetting All Sheet Names Reset or  → Yes</p>



Locking sheets	<p>Start Here Long Touch blank area in Standby (no Softkeys, icons or widgets) → <i>Set Sheet Lock</i> → Enter Handset Code → <i>OK</i> or  → See below</p> <p>Activating Lock Select sheet → <i>On</i></p>
	<p>Changing Method for Temporary Access <i>Unlock Method</i> → <i>Action</i> → <i>OK</i> or </p> <ul style="list-style-type: none"> • Swipe a finger down across  to unlock sheet temporarily.

■ S! Quick News & S! Friend's Status Widget (S! Quick News)

Adding news items	<p> → Point to S! Quick News/S! Friend's Status widget → <i>Operation</i> or  → <i>Contents Menu</i> → <i>Add News</i> → <i>S! Quick News List</i> → <i>登録はごちら</i> → <i>Yes</i> → Select genre → Select item</p> <ul style="list-style-type: none"> • Follow onscreen instructions.
Changing news scroll speed	<p> → Point to S! Quick News/S! Friend's Status widget → <i>Operation</i> or  → <i>Contents Menu</i> → <i>News Display</i> → <i>News Speed</i> → Select speed</p>
Showing unread news only	<p> → Point to S! Quick News/S! Friend's Status widget → <i>Operation</i> or  → <i>Contents Menu</i> → <i>News Display</i> → <i>Target News</i> → <i>Unread Only</i></p>
Showing news images	<p> → Point to S! Quick News/S! Friend's Status widget → <i>Operation</i> or  → <i>Contents Menu</i> → <i>News Display</i> → <i>Display Image</i> → <i>On</i></p> <ul style="list-style-type: none"> • Available when only S! Quick News area is set to appear on the Panel.

■ S! Quick News & S! Friend's Status Widget (S! Friend's Status)

Assigning members	<p>When Pattern Setting is Not Friend's Status(List)  → Point to member field → <i>Operation</i> or  → <i>Contents Menu</i> → <i>Assign Member</i> → Select category → Select entry/member</p>
	<p>When Pattern Setting is Friend's Status(List)  → Point to S! Quick News/S! Friend's Status widget → <i>Operation</i> or  → <i>Contents Menu</i> → <i>Assign Member</i> → Select category → Select entry/member → <i>(Empty)</i></p> <ul style="list-style-type: none"> • Select a member instead of <i>(Empty)</i> to replace the member.
Managing members	<p>Start Here  → Point to member → <i>Operation</i> or  → <i>Contents Menu</i> → See below</p> <p>Deleting Members <i>Delete</i> → <i>Yes</i></p>
	<p>Changing Member Order <i>Move</i> → <i>Up/Down</i> or  /  → <i>OK</i> or </p>
	<p>Changing Member Icons <i>Change Icon</i> → Select Pictogram</p>



S! Quick News

Receiving S! Loop Item updates	<p>[Start Here] MENU or  Entertainment  S! Quick News  S! Loop List  See below</p> <p>Registering with S! Loop Items S!ループにアクセス  Yes</p> <ul style="list-style-type: none"> Handset connects to the Internet. Refer to the S! Loop help menu for operational instructions.
	<p>Opening Information Select item  Select title</p>
Updating list automatically	<p>[Start Here] MENU or  Entertainment  S! Quick News  Settings  Automatic Update  See below</p> <p>S! Quick News List S! Quick News  Select item  OK or  Select interval or On</p> <ul style="list-style-type: none"> When a confirmation appears, press OK or . When Special is set to On, items are updated every four hours. When General is set to On, items are updated once a day. To cancel automatic update, select Off. Updating items may incur high charges. Only available in Japan.
	<p>S! Loop List S! Loop  OK or  On  OK or </p> <ul style="list-style-type: none"> Items are updated about four times a day. Only available in Japan.

Checking update schedule	MENU or  Entertainment  S! Quick News  Settings  Check Schedule
Changing background image	MENU or  Entertainment  S! Quick News  Settings  Change Skin  Select pattern
Deleting S! Quick News items	<p>[Start Here] MENU or  Entertainment  S! Quick News  S! Quick News List  Highlight item  削除 or  See below</p> <p>One Entry 一件  Yes</p> <p>All Entries 全件  Enter Handset Code  OK or  Yes</p>
	<p>[Start Here] MENU or  Entertainment  S! Quick News  S! Loop List  See below</p> <p>One Entry Highlight item  メニュー or  Y  更新  一件</p> <p>All Entries メニュー or  Y  更新  全件</p>
Updating S! Loop items manually	<p>[Start Here] MENU or  Entertainment  S! Quick News  S! Loop List  See below</p> <p>One Entry Highlight item  メニュー or  Y  更新  一件</p> <p>All Entries メニュー or  Y  更新  全件</p>
Accessing source sites	MENU or  Entertainment  S! Quick News  Select list  Select item  Select title  Select title  Yes
Disabling image download	MENU or  Entertainment  S! Quick News  Settings  Show Image  Off



Deleting S! Loop items	Start Here MENU or Entertainment S! Quick News S! Loop List Highlight item 削除 or See below
	One Entry 一件 Yes
	All Entries 全件 Enter Handset Code OK or Yes
Resetting S! Quick News List and S! Loop List	MENU or Entertainment S! Quick News Settings Delete S! Quick News Lists Enter Handset Code OK or Yes • Not available during automatic updates.

S! Information Channel

Hiding Information window for new received info	MENU or Entertainment S! Information Channel/Weather Notification Off
Changing Display Size	On a page, Options or Settings Display Size Select size
Changing scroll unit	On a page, Options or Settings Scroll Unit Select unit
Copying text	On a page, Options or Copy Text Highlight first character Start or Highlight text range End or

Saving files to Data Folder	On a page, Options or Save Items Select file Save Enter name Done or Save here • Some files are saved automatically.
Changing weather forecast page font size	On a page, Options or Settings Font Size Select size
Opening page properties	On a page, Options or Page Information
Requesting re-delivery	MENU or Entertainment S! Information Channel/Weather Get Latest Contents Yes
Checking weather forecast	MENU or Entertainment S! Information Channel/Weather Weather Indicator Weather
Hiding Weather Indicator in Standby	MENU or Entertainment S! Information Channel/Weather Weather Indicator Settings Standby Setting Off
Canceling Weather Indicator automatic updates	MENU or Entertainment S! Information Channel/Weather Weather Indicator Settings Icon Update Off
Hiding Information window for weather updates	MENU or Entertainment S! Information Channel/Weather Weather Indicator Settings Weather Notif. Off



e-Books

Copying text	<p>In open page,  → 文字列を北' - → Select first character → Select text range</p> <ul style="list-style-type: none"> • Available with handset keys only.
Opening non-931SH e-Books (Library)	<p>MENU or  → Entertainment → Highlight e-Book Viewer → Library or  → Select file</p> <ul style="list-style-type: none"> • Some files may not open.
Using Library	<p>Start Here MENU or  → Entertainment → Highlight e-Book Viewer → Library or  → See below</p>
	<p>Adding Folders</p> <p>Options or  → New Folder → Enter name → Done or </p>
	<p>Switching Folders</p> <p>Options or  → Switch Folders → Select folder</p>
	<p>Renaming Folders/Files</p> <p>Highlight folder/file → Options or  → Change Name → Enter name → Done or </p>
	<p>Moving Files</p> <p>Highlight file → Options or  → Move → Select folder → Move here</p>
	<p>Deleting Folders/Files</p> <p>Highlight folder/file → Options or  → Delete → Yes</p>
	<p>Opening File Properties</p> <p>Highlight file → Options or  → Details</p>



S! Quick News**Cannot receive content updates**

- Update may fail out-of-range or in poor signal conditions.
- Automatic Update does not affect S! Quick News List News Flash or S! Loop List update items overnight.
- USIM Card replacement cancels Automatic Update.

