

| | |
|--|------------|
| Font Size | 2-2 |
| Changing Font Size | 2-2 |
| Wallpaper | 2-3 |
| Customized Screen & S! Familiar | |
| Usability | 2-4 |
| Customized Screen & S! Familiar | |
| Usability (Japanese) | 2-4 |
| Sounds & Alerts | 2-5 |
| Customizing Handset Responses ... | 2-5 |
| Text Entry | 2-6 |
| Entering Characters | 2-7 |
| Editing Characters | 2-10 |

| | |
|------------------------------------|-------------|
| User Dictionary | 2-11 |
| Saving Frequently Used Words | 2-11 |
| Dictionary | 2-12 |
| Using Dictionaries | 2-12 |
| Search | 2-14 |
| Searching Text | 2-14 |
| Scratch Pad | 2-15 |
| Phone Book | 2-16 |
| Creating Phone Book Entries | 2-16 |
| Using Phone Book Entries | 2-18 |
| Additional Functions | 2-19 |
| Troubleshooting | 2-24 |

2

 
Basic Operations




Changing Font Size

Enlarging All Fonts

Activate Large Font Menu to enlarge fonts for menus, text entry, etc. as follows:

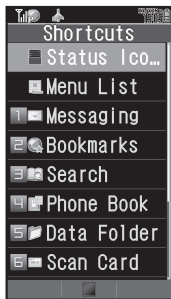

1 (Long)

 


2 **Large Font Menu** →

Canceling Large Font Menu

In 2, **Standard Menu** →

Customizing Font Sizes

 1 → **Settings** →



2 In Phone menu, **Display** →

3 **Font Settings** →



Font Settings Menu

4 **Font Size** → → **Select item** →

5 **Select size** →

Changing Font Weight

1 In Font Settings menu, **Font Weight** →

 


2 **Select weight** →



Wallpaper

- 1 → **Settings** → → In Phone menu, **Display** →
- 2 **Wallpaper** → → **Vertical** or **Horizontal** →

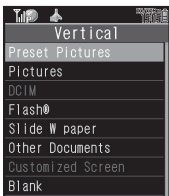

Wallpaper Menu

- 3 **Select folder** →
- 4 **Select image** →
 - Some files may not be usable.
 - Omit the next step when **Preset Pictures** is selected in 3.
- 5

Selecting Images Smaller or Larger than Display

After 4, select option → →

- For **Centered**, use to zoom in/out or press to rotate.

Selecting Images with Limited Usage Period

- A confirmation appears. Follow these steps:

Yes → →

 
If Double Number Mode Menu Opens

Select mode →

Slide Show Wallpaper

Set Slide Show to appear in Standby.
Some images may not appear.

- 1 In Wallpaper menu, **Slide W paper** →



- 2 **Folder Setting** →
- 3 **Pictures or DCIM** →
- 4 **Select sub folder** → → **Set this folder** →

- Omit steps for sub folder if none.

If There is No Image in Set Folder

- Preset images appear.

Using Preset Images

In 3, **Preset Pictures** →

Changing Pattern











In 2, **Pattern Setting** → → **Select pattern** →

- To check patterns, select one and press .




Customized Screen & S! Familiar Usability (Japanese)

Preset Customized Screens

- 1   
- 2 **Customized Screen**  
- 3 **Preset Screens**  
- 4 **Select pattern**  
- 5 

 
When Selected Customized Screen is Active

- Cancellation confirmation appears after ④.
- To cancel, choose **Yes** and press .

Downloading Customized Screens

Read information (price, etc.) on Customized Screen download page.



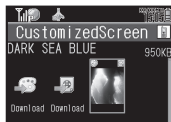


- 1   **Data Folder**    **Customized Screen**  







Customized Screen Menu

- 2 **Download Customized Screen**  
 - Follow onscreen instructions.

Customized Screen Setup


- 1 **In Customized Screen menu, select Customized Screen**  
- 2   

Applying Fee-based Customized Screen

- If Contents Key is required, follow these steps:
 - After ①,   **Yes**  
 - Read terms of service and then follow onscreen instructions.

S! Familiar Usability




Download and install Customized Screens that load legacy model interfaces.

- 1 **In Customized Screen menu, S! Familiar Usability**  

- Follow onscreen instructions.

S! Familiar Usability Setup







- Follow these steps to install downloaded S! Familiar Usability (if not installed immediately after download):

[Customized Screen Menu] **Select Customized Screen for S! Familiar Usability**   

Canceling Temporarily

    **通常メニュー**  

Advanced

-   Canceling Customized Screen
-  Canceling S! Familiar Usability
-  Canceling Customized Screen or S! Familiar Usability unconditionally
-  Deleting Customized Screens
-  Accessing Customized Screen source sites (P.2-19)



Customizing Handset Responses

Ringtone

- 1   **Settings**   **In Phone menu, Sounds & Alerts** 



Sounds & Alerts Menu

- 2 **Ringtone/videos** 

- 3 **Select item** 





For *For New Message*, etc., select **Assign Tone** and press .



- 4 **Select folder** 

- 5 **Select tone/file** 


Setting Ring Time for Incoming Mail, etc.

After , **Duration**   **Enter time** 

Playing Video for Incoming Transmissions


In , **Videos**   **Select file** 

If Portion of File Content is Specifiable


- After , start point selection window opens. Follow these steps:

Select start point 

Selecting Files with Limited Usage Period

- A confirmation appears. Choose **Yes** and press  to proceed.

 
When using Double Number in Dual Mode

- When ringtones are customizable for each line, press  in Ringtone/videos menu to switch lines.

Vibration


- 1 In Sounds & Alerts menu, **Vibration** 

- 2 **Select item**   **Switch On/Off** 



- 3 **On** 

- 4 **Vibration Pattern** 

- To check vibration patterns, select one and press .

- 5 **Select pattern** 

Setting Ringtones to Control Vibration

In , **Link to Sound** 

 
Precaution

- Cancel Vibration when charging battery to help avoid accidents.



Text Entry

Unless noted otherwise, text entry descriptions are for text entry windows.



Text Entry Window (Message Text)

Opening Help

 


Note

- Pressing repeatedly may not close text entry windows.

Switching Entry Modes

1

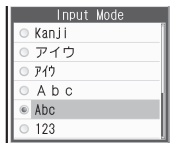

- Available entry modes appear.

2 **Select mode**

- Entry Mode Indicators:

| | |
|--|--|
| | Kanji (hiragana) |
| | Double/single-byte katakana |
| | Double-byte alphanumerics (upper/lower case) |
| | Single-byte alphanumerics (upper/lower case) |
| | Single-byte number |
| | Character Code |

appears when Predictive is active.

Character Entry Basics

Use Keypad to enter characters. Multiple characters are assigned to each key. Press a key to toggle between character options for that key.

Example: In double-byte katakana entry, press three times.

 


- Press to toggle options in reverse. To type characters assigned to the same key, press first.

Example: In single-byte alphanumerics mode, enter no.



- Long Press a key to enter the current character and advance cursor.



Advanced

 
- Using Character Codes
- Using Pager Code (P.2-19)



Entering Characters

Hiragana

Follow these steps to enter **すずき** in kanji (hiragana) mode:

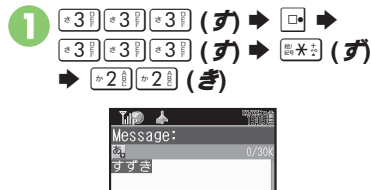

2 (No Conv)

Kanji

 
Convert **すずき** to **鈴木**.

1 Type **すずき**



- In kanji (hiragana) mode, word suggestions change as hiragana is typed. (Predictive)
- Press to toggle suggestion mode between Standard, Business, Male and Female. (Personal Mode)

2



3 **鈴木**

- To exit suggestion list, press .

4



- Words likely to follow the entry appear based on previous entries. (Previous Usage)

When Target Word is Not Listed

- Press or to segment hiragana to convert separately.
 - Press to toggle Predictive and Non-Predictive suggestions.

Phonetic Conversion

Type reading in hiragana

Advanced

- Inserting line breaks
- Inserting spaces
- Using Keypad to enter words/phrases from suggestion list
- Clearing entry log
- Changing Font Size
- Disabling suggestions based on entered characters
- Disabling suggestions based on entered words
- Disabling emoticon/Pictogram suggestions based on entered words
- Lowering type priorities in suggestion list
- Selecting a suggestion mode (P.2-19 - 2-20)



One-Hiragana Conversion

Type the first hiragana to access previously selected words.

Example: **すずき** was previously converted to **鈴木**.

1 (す) →

2 Select word/phrase →

Katakana

Follow these steps to switch to double-byte katakana mode and enter **ジュン**.

1 → **アイウ** →



 
2 (シ) → (ジ) →
 (チ) → (ユ) →
 (ノ) →



Pictograms & Symbols


May be unavailable depending on the entry mode.

1

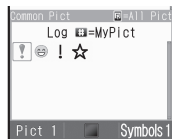

- Pictogram/Symbol Log appears.

 2 or → List toggles

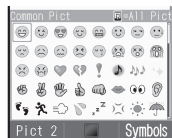

- In Pictogram List, press to toggle cross-carrier Pictograms and all Pictograms.

 
3 Select Pictogram or Symbol
→

- Pictograms are double-byte even in single-byte modes.

4 → List closes

Emoticons

1 → **Emoticons** →

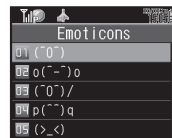

2 Select emoticon →

Alternative Emoticon Entry Method

- In kanji (hiragana) mode, type **かお** or a descriptive word such as **かーい** or **うーん**, then convert the entry.

EmoticonWordLink

 
- Immediately after inserting a descriptive word such as **嬉しい** or **悲しい**, corresponding emoticons may appear in the suggestion list.



Mail & Web Extensions

Enter **.co.jp**, **http://**, etc., easily.

1  ➔ **Quick Address List** ➔ 

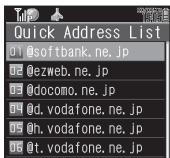

2 **Select extension** ➔ 

- Extensions are single-byte even in double-byte entry modes.

Hiragana to Katakana/ Alphanumeric Conversion

Enter katakana and alphanumerics in kanji (hiragana) mode.

Example: To enter **PM**
Use key inscriptions.

1   ➔ 



2 **Select word/phrase (PM)** ➔ 

Quick Conversion (for Hiragana)

A list of word suggestions appears based on the key pressed.


Example: To enter **終電**

1   ➔  ➔    ➔  ➔ 



2 **Select word/phrase (終電)** ➔ 

One Hiragana Word Call

- Type the first hiragana of entries you used Quick Conversion for and press .



Editing Characters

Deleting & Editing

 
Follow these steps to correct **また、お願
いし
ます** to **また明日お願いします**.

1 Select character



2

CLEAR BACK



- The highlighted character is deleted.

3 Select target location → Enter characters



Recovering Deleted Characters

- Press once for each character after deletion.

Deleting All Text

- Long Press at the end of text. To delete characters on and after cursor, select the first character of text and Long Press .

Jumping to the End or Top of Text

- *Cursor Position* → → *Jump to End or Jump to Top* →

Copy/Cut & Paste

1 → *Cut or Copy* → → Select first character →



Cut

- To cancel and start over, press .

2 Highlight text range →



3 Select target location → (Long)

- Text is entered.

Pasting Previously Cut/Copied Text

Select target location → → *Paste*

→ → Select text →

- Available when Paste List appears.

Advanced

 
- Undo conversion or recover deleted characters
- Inserting Phone Book entry items (P.2-19)

Saving Frequently Used Words

Saving Words (Japanese)

Saved words appear among suggestions.

- 1 **Settings** → **User Dictionary**



User Dictionary Menu

- 2 **New Entry** → **Enter word**

- 3 **Enter reading**

 
Editing Entries

- In **Saved Word List** → **Select word** → **Edit** → **Edit reading** → **Yes**

932SH Download Dictionary (Japanese)

Download specialized 932SH Download Dictionaries from SH-web Mobile Internet site. Activate dictionaries to improve handset character conversion. Dictionary words appear among suggestions. Some dictionary files may not be usable.

- 1 In **User Dictionary menu**, **Acquire Dictionary**



- 2 **Select number** → **Select dictionary**
 - Existing dictionary is replaced.

Canceling Dictionary

- In **select dictionary** → **Cancel**

Viewing Dictionary Information

- In **select dictionary** → **Info**

Advanced

- ☞ **Deleting entries (P.2-20)**



Using Dictionaries

2

Basic Operations


Available Dictionaries:

| | |
|------------------------|---|
| Preloaded Dictionaries | Meikyo Japanese Dictionary, Genius English-Japanese Dictionary, Genius Japanese-English Dictionary |
| Online Dictionaries* | Wikipedia, Meikyo J-Dic MX.net, Genius EJ-Dic MX.net, Genius JE-Dic MX.net, Imidas Encyclopedia, Encyclopedia Nipponica, Digital Daijisen, PROGRESSIVE English-Japanese Dictionary, PROGRESSIVE Japanese-English Dictionary, Hot Pepper Pockets, Amazon.co.jp |

*Online dictionary use requires Internet connection incurring transmission fees. Information fees may also apply. Read terms of service and then follow onscreen instructions.


Using Preloaded Dictionaries

 Searching As-You-Type

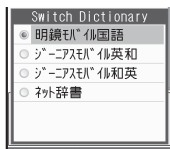

Dictionary Window

 - Last used dictionary appears first.



- Enter reading in katakana.
- Search results appear as you type.



Definition/Translation Window

Looking Up in Online Dictionaries [Definition/Translation Window]

➔ WebDict.Search ➔

- Perform from ② (except ④) in "Using Online Dictionaries" on P.2-13. (Read bulleted sentence in ① beforehand.)

Searching by Keyword



Advanced

- 👉 Viewing dictionary information
- Changing Font Size
- Looking up copied words in dictionaries
- Deleting History & bookmarks (P.2-20)



Copying Text

■ Index Word Only

1 In definition/translation window, 

2 Copy Index Word  

■ Selected Portions

1 In definition/translation window, 

2 Copy    Select first character    Highlight text range  

Using History & Bookmarks

■ Saving Bookmarks

1 In definition/translation window, 

2 Bookmark  

■ Opening History or Bookmarks






1 In Dictionary window, 

2 History or Bookmark List  

3 Select word, etc.  

- Definition/translation window opens.

Advanced

-   Selecting online dictionaries for use
-  Selecting search method for online dictionaries
-  Selecting search area for online dictionaries
-  Updating dictionary list (P.2-20)






Adding Downloaded Dictionary

1 In Dictionary window, 

2 Add Dictionary  


3 Select file  

Canceling Added Dictionary

In 2, Cancel Dictionary    Yes  

Using Online Dictionaries

1 In Dictionary window,   **初辞書**  

- Terms of service (Japanese) appear when using online dictionary for the first time. Read and then press .

2 Select pull-down menu  

3 Select dictionary  

- Select **すべて** to look up in all dictionaries at once.

4 Select entry field    Enter text  

5 Search  

6 Yes  

7 Select word, etc.  

 
- Definition/translation window opens.

Disabling Confirmation

After 5,   ( / )  From 5

Using Dictionaries during Text Entry

1 Type text  Before pressing  to complete entry, 

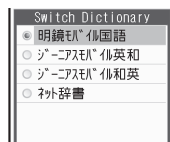

2 Select dictionary  

3 Search    Select word, etc.  

- Definition/translation window opens.

Inserting Index Word into Text

After 5,    Paste Index Word  



Searching Text

 
2

Basic Operations

Web Search

Transmission fees apply.

- 1  ➔ **Tools** ➔  ➔ 
Doc./Rec.
- 2 **Search** ➔ 

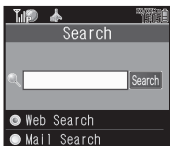

Search Window






- *Web Search* is selected by default.

 
- 3 **Select entry field** ➔  ➔ 
Enter search text ➔ 
 - 4 **Search** ➔ 
- Search results appear.

Searching within PC Sites

[Search Window]  ➔ *Change Browser*
➔  ➔ *PC Site Browser* ➔ 




Mail Search

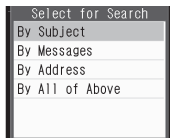- 1 **In Search window, Mail Search** ➔ 
- 2 **Select entry field** ➔  ➔ 
Enter search text ➔ 
- 3 **Search** ➔ 



- 4 **Select option** ➔ 

Searching within Received or Sent Messages

[Search Window]  ➔ *Change Mail Folder* ➔  ➔ *Received Messages or Sent Messages* ➔ 



 
Scratch Pad

Open Scratch Pad to jot down text, and more.

1   **Tools**   
Doc./Rec.





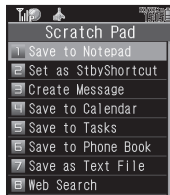













2 **Scratch Pad** 
• Text entry window opens.

3 **Enter text** 



4 **Save to Notepad** 
• Open saved entries from Notepad.

Other Scratch Pad Usage

| Usage | Operation |
|--------------------------------|---|
| Paste to Standby | Set as StbyShortcut   Select sheet  |
| Enter Mail Message Text | Create Message   Select mail type  |
| Enter Schedule Subject/Details | Save to Calendar  |
| Enter Task Subject/Details | Save to Tasks  |
| Add Last Name to Phone Book | Save to Phone Book  ▪ Reading is not entered. |
| Save Text File | Save as Text File    Enter name   Save here  ▪ Saved to Data Folder (Other Documents). |
| Search Internet | Web Search   Select browser  |

For more, see corresponding function description or follow onscreen instructions.



 
Creating Phone Book Entries

Enter a name, phone number and mail address (enter at least one of these items) and classify the entry.

1 → **Phone** → → **Add New Entry** →



2 **Last Name:** → → **Enter last name** → → **First Name:** → → **Enter first name** →

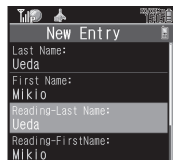

• Characters entered for names (reading for kanji) appear.

3 **Add Phone Number:** → → **Enter phone number** → → **Select type** →



 
• To save additional phone numbers, repeat **3**.

4 **Add Email Address:** → → **Enter mail address** → → **Select type** →



• To save additional mail addresses, repeat **4**.

5 **Category:** → → **Select Category** →

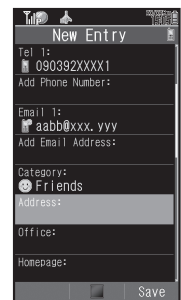

Phone Book Entry Window

6 → → **Entry is saved to Phone Book.**

Incoming Calls while Creating Entry

- Contents are temporarily saved. End the call to return.

Selecting Mode in Dual Mode

[Phone Book Entry Window] Mode:

→ → **Select mode** →


Advanced

- Saving other information
- Setting Light Color
- Changing vibration pattern
- Editing Phone Book entries
- Setting incoming mail ring time
- Renaming Categories
- Moving Categories (P.2-21 - 2-22)







Personal Ringtone

Set tone for calls from saved numbers.



- 1 In Phone Book entry window, select item, e.g., **Tone-Voice Call**: 



- 2 **Assign Tone**   Select folder 
- 3 Select tone/file 

Saving Secret Entries

Hide Phone Book entries to require Handset Code for access.

- 1 In Phone Book entry window, **Secret**: 
- 2 **On** 

Accessing Secret Entries










-    **Unlock Temporarily** 
 **Enter Handset Code** 

Customizing Response by Category

- 1   **Phone**  
Category Control 



Category Control Menu

 
- 2 Select **Category**  
 Select item 
- 3 Select item   Select item, e.g., **Assign Tone**   **Customize responses**  
 - Customize responses in the same way as Phone Book entries.
 - Not available for USIM Card.

Responses Set by Phone Book Entry

 
- Settings for each entry take priority.

Saving Numbers After Calls

After a call, save number to Phone Book.


 





- 1 When confirmation appears, **Yes** 



- 2 **As New Entry**  
Complete other fields 

 Saving to an Existing Entry

- In 2, **As New Detail**   Select entry   **Complete other fields** 



Using Phone Book Entries

Dialing via Phone Book

- 1   Select katakana row



Entry Search Window (By あかさたな)

- When using Double Number in Dual Mode, Line indicators appear.

- 2 Select entry 






Entry Details

- 3 Select phone number

- 4 

Placing Video Calls

After     Video Call 

Changing Search Method

- 1 In entry search window,   *Ph.Book Settings* 


- 2 Sort Entries 



- 3 Select method 


- Phone Book Search Methods:

| | |
|-------------|--|
| By あかさたな | Shows entries with Readings that start with katakana in the specified row |
| By Category | Opens entries in the specified Category |
| By Reading | Shows all entries in Reading order (katakana, alphabetical then numerical) |

Changing Search Method Temporarily
[Entry Search Window]  (press repeatedly to toggle search methods)

Opening from Other Functions

 Example: Enter a recipient via Phone Book when sending a message.



Select Recipient Window

- 1 Phone Book 

- Entry search window opens.








- 2 Select entry 

- 3 Select phone number or mail address 



- Recipient is entered.
- Omit 3 if only one number or address is saved.

Advanced

-  Changing view for entry search window
-  Assigning images to Phone Book entries for incoming transmissions
-  Messaging via Phone Book
-  Placing Decoration Calls via Phone Book
-  Deleting Phone Book entries
-  Checking memory status
-  Copying Phone Book entries (And more on P.2-21 - 2-22)

| Customized Screen & S! Familiar Usability | |
|--|---|
| Canceling Customized Screen | [] → [] → Off → [] → Yes → [] |
| Canceling S! Familiar Usability | [] → [] → S!おなじみ操作解除 → [] → Yes → [] |
| Canceling Customized Screen or S! Familiar Usability unconditionally | [] → Menu List → [] → Settings → [] → In Phone menu, <i>Customize</i> → [] → Off → [] → Yes → [] |
| Deleting Customized Screens | [] → Data Folder → [] → Customized Screen → [] → Select Customized Screen → [] → Delete → [] → Yes → [] <ul style="list-style-type: none"> When the corresponding Contents Key has been downloaded, choose Yes or No and press []. |
| Accessing Customized Screen source sites | [] → Data Folder → [] → Customized Screen → [] → Select Customized Screen → [] → Web Access → [] <ul style="list-style-type: none"> Follow onscreen instructions. |

Text Entry

■ Entry & Edit

| | |
|--|---|
| Using Character Codes | In a text entry window (Character Code mode), enter four digits |
| Using Pager Code | In a text entry window, [] → Input/Conversion → [] → Input Method → [] → Pager Code → [] <ul style="list-style-type: none"> Return to text entry window and enter two digits. |
| Inserting line breaks | At the End of Text In a text entry window, [] Mid-Entry In a text entry window, [] → [] → [] → [] → [] → [] |
| Inserting spaces | In a text entry window, [] |
| Using Keypad to enter words/phrases from suggestion list | In a text entry window, [] → Input/Conversion → [] → Select Candidate → [] → Enable 1-9, 0, *, # → [] |
| Clearing entry log | In a text entry window, [] → Input/Conversion → [] → Reset Log → [] → Yes → [] |
| Undo conversion or recover deleted characters | In a text entry window, [] → Undo/Recover → [] |
| Inserting Phone Book entry items | In a text entry window, [] → Insert/Font Size → [] → Phone Book → [] → Select entry → [] → Select item → [] |
| Changing Font Size | In a text entry window, [] → Insert/Font Size → [] → Font Size → [] → Select size → [] |



■ Conversion

| | |
|---|--|
| Disabling suggestions based on entered characters | In a text entry window, → <i>Input/Conversion</i> → → <i>Predictive</i> → → <i>Off</i> → |
| Disabling suggestions based on entered words | In a text entry window, → <i>Input/Conversion</i> → → <i>Previous Usage</i> → → <i>Off</i> → |
| Disabling emoticon/Pictogram suggestions based on entered words | In a text entry window, → <i>Input/Conversion</i> → → <i>EmoticonWordLink</i> → → <i>Off</i> → |
| Lowering type priorities in suggestion list | In a text entry window, → <i>Input/Conversion</i> → → <i>Set Low Priority</i> → → <i>Select type</i> → → |
| Selecting a suggestion mode | In a text entry window, → <i>Input/Conversion</i> → → <i>Personal Mode</i> → → <i>Select mode</i> → |

User Dictionary

| | |
|------------------|---|
| Deleting entries | → <i>Settings</i> → → <i>User Dictionary</i> → → <i>Saved Word List</i> → → <i>Select word</i> → → <i>Yes</i> → |
|------------------|---|

Dictionary

| | |
|---|--|
| Viewing dictionary information | → → <i>Information</i> → |
| Changing Font Size | → → <i>Font Size</i> → → <i>Select size</i> → |
| Looking up copied words in dictionaries | After copying text, → → <i>By Copy Text or Search by CopiedText</i> → → <i>Search</i> → → <i>Select word</i> → |
| Deleting History & bookmarks | <i>Start Here</i> → → <i>History or Bookmark List</i> → → <i>See below</i> One Word <i>Select word</i> → → <i>Delete</i> → → <i>Yes</i> → All Words → <i>Delete All</i> → → <i>Enter Handset Code</i> → → <i>Yes</i> → |
| Selecting online dictionaries for use | → → <i>初外辞書</i> → → <i>Edit Dict. List</i> → → <i>Select dictionary</i> → → |
| Selecting search method for online dictionaries | → → <i>初外辞書</i> → → <i>Set Search Method</i> → → |
| Selecting search area for online dictionaries | → → <i>初外辞書</i> → → <i>Set Search Area</i> → → |
| Updating dictionary list | → → <i>初外辞書</i> → → <i>Update Dictionaries</i> → → <i>Yes</i> → |



Phone Book

View Settings

| | |
|---|---|
| Changing view for entry search window | <input type="button" value="Start Here"/> → <i>Phone</i> → <input type="button" value=""/> → <i>Ph.Book Settings</i> <input type="button" value=""/> → See below |
| | Portrait Orientation <i>Vertical Display</i> → <input type="button" value=""/> → <i>List Only</i> → <input type="button" value=""/> |
| | Landscape Orientation <i>Horizontal Display</i> → <input type="button" value=""/> → <i>Name+Email</i> → <input type="button" value=""/> |
| Assigning images to Phone Book entries for incoming transmissions | <input type="button" value="Start Here"/> → <i>Phone</i> → <input type="button" value=""/> → <i>Add New Entry</i> → <input type="button" value=""/> → <i>Picture:</i> → <input type="button" value=""/> → See below |
| | Assigning Images <i>Assign Picture</i> → <input type="button" value=""/> → Select image → <input type="button" value=""/> |
| Hiding confirmation after calls to/from unsaved numbers | Capturing Images <i>Take Picture</i> → <input type="button" value=""/> → Frame image on Display <input type="button" value=""/> → <input type="button" value=""/> |
| | <input type="button" value=""/> → <i>Phone</i> → <input type="button" value=""/> → <i>Ph.Book Settings</i> → <input type="button" value=""/> <input type="button" value=""/> → <i>New Number Prompt</i> → <input type="button" value=""/> → <i>Incoming Call or Outgoing Call</i> → <input type="button" value=""/> → <i>Off</i> → <input type="button" value=""/> |

Phone Book Entry

| | |
|----------------------------|--|
| Saving other information | <input type="button" value="Start Here"/> → <i>Phone</i> → <input type="button" value=""/> → <i>Add New Entry</i> → <input type="button" value=""/> → See below |
| | Address <i>Address:</i> → <input type="button" value=""/> → Select item → <input type="button" value=""/> → Complete field → <input type="button" value=""/> → <input type="button" value="Yr"/> |
| | Office <i>Office:</i> → <input type="button" value=""/> → Select item → <input type="button" value=""/> → Enter text → <input type="button" value=""/> → <input type="button" value="Yr"/> |
| | Homepage <i>Homepage:</i> → <input type="button" value=""/> → Enter URL → <input type="button" value=""/> → Select type → <input type="button" value=""/> |
| | Note <i>Note:</i> → <input type="button" value=""/> → Enter text → <input type="button" value=""/> |
| Setting Light Color | Birthday <i>Birthday:</i> → <input type="button" value=""/> → Enter date → <input type="button" value=""/> |
| | Location Information <i>Location Info.:</i> → <input type="button" value=""/> → Enter Location Information → <input type="button" value=""/> |
| Changing vibration pattern | <input type="button" value=""/> → <i>Phone</i> → <input type="button" value=""/> → <i>Add New Entry</i> → <input type="button" value=""/> → Select item, e.g., <i>Light-Voice Call:</i> → <input type="button" value=""/> → <i>Switch On/Off</i> → <input type="button" value=""/> → Select option → <input type="button" value=""/> → <i>Light Color</i> → <input type="button" value=""/> → Select color → <input type="button" value=""/> → <input type="button" value="Light"/> |
| | <input type="button" value=""/> → <i>Phone</i> → <input type="button" value=""/> → <i>Add New Entry</i> → <input type="button" value=""/> → Select item, e.g., <i>Vibration-Message:</i> → <input type="button" value=""/> → <i>Switch On/Off</i> → <input type="button" value=""/> → Select option → <input type="button" value=""/> → <i>Vibration Pattern</i> → <input type="button" value=""/> → Select pattern → <input type="button" value=""/> → <input type="button" value="Light"/> |
| Editing Phone Book entries | <input type="button" value=""/> → Select entry → <input type="button" value=""/> → <i>Edit</i> → <input type="button" value=""/> → Select item → <input type="button" value=""/> → <i>Edit</i> → <input type="button" value=""/> → <input type="button" value="Yr"/> <ul style="list-style-type: none"> • Edit Reading after editing names. |



| | |
|---------------------------------|---|
| Setting incoming mail ring time | <p>☐ → Select entry → ☐ → Edit → ☐ → Tone-New Message: → ☐ → Duration → ☐ → Enter time → ☐ → ⏮</p> <ul style="list-style-type: none"> • Available for compatible ringtones. |
| Renaming Categories | <p>☐ → Phone → ☐ → Category Control → ☐ → Select Category → ☐ → Edit Name → ☐ → Enter name → ☐</p> |
| Moving Categories | <p>☐ → Phone → ☐ → Category Control → ☐ → Select Category → ⏮ → Select target location → ☐</p> <ul style="list-style-type: none"> • View for By Category Phone Book search changes accordingly. |

■ Using Entries

| | |
|--|--|
| Messaging via Phone Book | <p>Start Here ☐ → Select entry → ☐ → See below</p> <p>Phone Numbers Select phone number → ☐ → Create Message → ☐ → S! Mail or SMS → ☐ → Complete message → ⏮</p> <p>Mail Address Select address → ☐ → Complete message → ⏮</p> |
| Placing Decoration Calls via Phone Book | <p>☐ → Select entry → ☐ → Select phone number → ☐ → Deco. Call → ☐ → Deco. Call File → ☐ → Deco. Call Folder → ☐ → Select file → ☐ → Call Type → ☐ → Voice Call or Video Call → ☐ → ☐</p> <ul style="list-style-type: none"> • When placing a Decoration Call for the first time, a confirmation appears. |
| Initiating S! Circle Talk via Phone Book | <p>☐ → Select entry → ☐ → Select phone number → ☐ → Call S! Circle Talk → ☐ → ☐</p> <ul style="list-style-type: none"> • Set My Status to Online first. |
| Placing international calls via Phone Book | <p>☐ → Select entry → ☐ → Select phone number → ☐ → Int'l Call → ☐ → Select country → ☐ → ☐</p> |

| | |
|---|--|
| Using Location Information via Phone Book | <p>☐ → Select entry → ☐ → ☐ → Settings → ☐ → ☐ → Set to Destination → ☐</p> <ul style="list-style-type: none"> • Follow onscreen instructions. |
|---|--|

■ Manage Entries

| | |
|-----------------------------|---|
| Deleting Phone Book entries | <p>One Entry ☐ → Select entry → ☐ → Delete → ☐ → Yes → ☐</p> <p>All Entries ☐ → Phone → ☐ → Manage Entries → ☐ → Delete All → ☐ → Select entry type → ☐ → Yes → ☐ → Enter Handset Code → ☐</p> |
| Checking memory status | <p>☐ → Phone → ☐ → Manage Entries → ☐ → Memory Status → ☐</p> |
| Copying Phone Book entries | <p>One Entry (Handset → USIM Card) ☐ → Select entry → ☐ → Manage Entries → ☐ → Copy Entry to USIM → ☐ → Yes → ☐</p> <p>One Entry (USIM Card → Handset) ☐ → ☐ → Ph.Book Settings → ☐ → Select Phone Book → ☐ → USIM Memory → ☐ → Select entry → ☐ → Manage Entries → ☐ → Copy Entry to Phone → ☐</p> <p>All Entries ☐ → ☐ → Manage Entries → ☐ → Copy All → ☐ → Select method → ☐ → Yes → ☐</p> <ul style="list-style-type: none"> • If handset/USIM Card memory is low, some entries may not be copied. |



| | |
|--|---|
| Editing Categories on USIM Card | <input type="checkbox"/> Start Here <input type="checkbox"/> ⇒ <i>Phone</i> <input type="checkbox"/> ⇒ <i>Category Control</i> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> ⇒ <i>Change to USIM</i> <input type="checkbox"/> ⇒ See below |
| | Renaming Categories Select Category <input type="checkbox"/> ⇒ <i>Edit Name</i> <input type="checkbox"/> ⇒ Enter name <input type="checkbox"/> |
| | Moving Categories Select Category <input type="checkbox"/> ⇒ <i>Select target location</i> <input type="checkbox"/> |
| | Changing Icons Select Category <input type="checkbox"/> ⇒ <i>Change Icon</i> <input type="checkbox"/> ⇒ Select Pictogram <input type="checkbox"/> |
| Changing default storage media for new entries | <input type="checkbox"/> ⇒ <i>Phone</i> <input type="checkbox"/> ⇒ <i>Ph.Book Settings</i> <input type="checkbox"/> <input type="checkbox"/> ⇒ <i>Save New Entry</i> <input type="checkbox"/> ⇒ <i>USIM Memory or Ask Each Time</i> <input type="checkbox"/> |
| Switching reference Phone Book | <input type="checkbox"/> ⇒ <i>Phone</i> <input type="checkbox"/> ⇒ <i>Ph.Book Settings</i> <input type="checkbox"/> <input type="checkbox"/> ⇒ <i>Select Phone Book</i> <input type="checkbox"/> ⇒ <i>USIM Memory or Both</i> <input type="checkbox"/> |

■ Mode Settings

Activate Double Number first.

| | |
|---------------------------------------|--|
| Changing modes of all entries at once | <input type="checkbox"/> ⇒ <i>Phone</i> <input type="checkbox"/> ⇒ <i>Manage Entries</i> <input type="checkbox"/> ⇒ <i>Change Mode(All)</i> <input type="checkbox"/> ⇒ Select mode <input type="checkbox"/> <input type="checkbox"/> ⇒ Enter Handset Code <input type="checkbox"/> |
| Changing modes of multiple entries | <input type="checkbox"/> ⇒ <input type="checkbox"/> ⇒ <i>Manage Entries</i> <input type="checkbox"/> ⇒ <i>Multiple Selection</i> <input type="checkbox"/> ⇒ Select entry <input type="checkbox"/> (✓/□) ⇒ <input type="checkbox"/> ⇒ <i>Change Mode</i> <input type="checkbox"/> ⇒ Select mode <input type="checkbox"/> |
| Changing modes of entries by Category | <input type="checkbox"/> ⇒ Select Category <input type="checkbox"/> ⇒ <i>Manage Entries</i> <input type="checkbox"/> <input type="checkbox"/> ⇒ <i>Change Mode(Category)</i> <input type="checkbox"/> ⇒ Select mode <input type="checkbox"/> ⇒ Enter Handset Code <input type="checkbox"/> • Set search method to <i>By Category</i> first. |



Customized Screen

? Customized Screen is not applied

- Some Customized Screens may not contain files for Wallpaper, System Graphics, ringtones or ringvideos; default settings apply for these functions.

Phone Book

? Assigned images do not appear for incoming transmissions

- Source files may be deleted or moved to Memory Card; reassign files.
- When using copy protected files, etc., confirm that source file license/usage period has not expired.
- Images do not appear if corresponding Phone Book entry is set to Secret.
- Images do not appear for incoming Decoration Calls including image/video.
- Images may not appear when another function is active, etc.

? Handset does not ring for incoming transmissions as set

- Source files may be deleted; reassign files.
- When using copy protected files, etc., confirm that source file license/usage period has not expired.
- Ringtone/ringvideo settings are disabled if corresponding Phone Book entry is set to Secret.
- Ringtones do not sound for incoming Decoration Calls with sound.
- Memory Card with source files may be removed; reinsert the card to restore settings.

? Cannot enter 16 characters for Category names

- Character entry limit for Category names may be lower depending on the USIM Card in use.

