

Font Size	2-2
Changing Font Size	2-2
Wallpaper	2-3
Customized Screen & S! Familiar	
Usability	2-4
Customized Screen & S! Familiar	
Usability (Japanese)	2-4
Sounds & Alerts	2-5
Customizing Handset Responses ...	2-5
Text Entry	2-6
Entering Characters	2-7
Editing Characters	2-10

User Dictionary	2-11
Saving Frequently Used Words	2-11
Dictionary	2-12
Using Dictionaries (Japanese)	2-12
Search	2-14
Searching Text	2-14
Scratch Pad	2-15
Phone Book	2-16
Creating Phone Book Entries	2-16
Using Phone Book Entries	2-18
Additional Functions	2-19
Troubleshooting	2-24

2

 
Basic Operations




Changing Font Size

Enlarging All Fonts

Activate Large Font Menu to enlarge fonts for menus, text entry, etc. as follows:

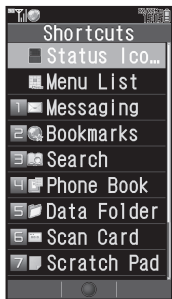

1 (Long)

 

2 **Large Font Menu** →

Canceling Large Font Menu

In 2, **Standard Menu** →

Customizing Font Sizes

1 → **Settings** →



2 In Phone menu, **Display** →

3 **Font Settings** →



Font Settings Menu

4 **Font Size** → → **Select item** →

5 **Select size** →

Changing Font Weight

1 In Font Settings menu, **Font Weight** →



 
2 **Select weight** →



Wallpaper

1 → **Settings** → → **In Phone menu, Display** →

2 **Wallpaper** →

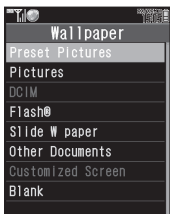

Wallpaper Menu

3 **Select folder** →

4 **Select file** →

- Some files may not be usable.
- Omit the next step when **Preset Pictures** is selected in 3.

5

Selecting Images Smaller or Larger than Display

After 4, select option → →

- For **Centered**, use to zoom in/out or press to rotate.

Selecting Images with Limited Usage Period

- A confirmation appears. Follow these steps:

Yes → →

 
If Double Number Mode Menu Opens

Select mode →

Slide Show Wallpaper

Set Slide Show to appear in Standby.
Some images may not appear.

1 **In Wallpaper menu, Slide W paper** →



2 **Folder Setting** →

3 **Pictures or DCIM** →

4 **Select sub folder** → → **Set this folder** →

- Omit steps for sub folder if none.

If There is No Image in Set Folder

- Preset images appear.

Using Preset Images

In 3, **Preset Pictures** →

Changing Pattern








In 2, **Pattern Setting** → → **Select pattern** →

- To check patterns, select one and press .





Customized Screen & S! Familiar Usability (Japanese)

Preset Customized Screens

- 1  → 
- 2 **Customized Screen** → 
- 3 **Preset Screens** → 
- 4 **Select pattern** → 
- 5  → 

When Selected Customized Screen is Active

- Cancellation confirmation appears after .
- To cancel, choose **Yes** and press .

Downloading Customized Screens

Read information (price, etc.) on Customized Screen download page.

- 1  → **Data Folder** →  → **Customized Screen** → 



Customized Screen Menu

- 2 **Download Customized Screen** → 




- Follow onscreen instructions.

Customized Screen Setup

- 1 **In Customized Screen menu, select Customized Screen** → 

- 2  → 

Applying Fee-based Customized Screen

- If Contents Key is required, follow these steps:
 After  →  → **Yes** → 
- Read terms of service and then follow onscreen instructions.

S! Familiar Usability



Download and install Customized Screens that load legacy model interfaces.

- 1 **In Customized Screen menu, S! Familiar Usability** → 

- Follow onscreen instructions.

S! Familiar Usability Setup

- Follow these steps to install downloaded S! Familiar Usability (if not installed immediately after download):

[Customized Screen Menu] Select Customized Screen for S! Familiar Usability →  → 

Canceling Temporarily

 →  → **通常メニュー** → 

Advanced

-   Canceling Customized Screen
-  Canceling S! Familiar Usability
-  Canceling Customized Screen or S! Familiar Usability unconditionally
-  Deleting Customized Screens
-  Accessing Customized Screen source sites (P.2-19)



Customizing Handset Responses

Ringtone

- 1 → **Settings** → → **In Phone menu, Sounds & Alerts** →



Sounds & Alerts Menu

- 2 **Ringtone/videos** →

- 3 **Select item** →
 - For **For New Message**, etc., select **Assign Tone** and press .



- 4 **Select folder** →
- 5 **Select tone/file** →

Setting Ring Time for Incoming Mail, etc.
 After , **Duration** → → Enter time →

 
Playing Video for Incoming Transmissions
 In , **Videos** → → Select file →

If Portion of File Content is Specifiable
 • After , start point selection window opens. Follow these steps:
Select start point →

Selecting Files with Limited Usage Period
 • A confirmation appears. Choose **Yes** and press to proceed.

Vibration

- 1 In **Sounds & Alerts** menu, **Vibration** →
- 2 **Select item** → → **Switch On/Off** →

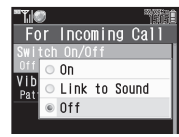

- 3 **On** →
- 4 **Vibration Pattern** →
 - To check vibration patterns, select one and press .
- 5 **Select pattern** →

Setting Ringtones to Control Vibration
 In , **Link to Sound** →

Precaution
 • Cancel Vibration when charging battery to help avoid accidents.



Text Entry

Unless noted otherwise, text entry descriptions are for text entry windows.



Text Entry Window (Message Text)

Opening Help

 


Note

- Pressing repeatedly may not close text entry windows.

Switching Entry Modes

1

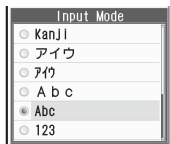

- Available entry modes appear.

2 **Select mode**

- Entry Mode Indicators:

	Kanji (hiragana)
	Double/single-byte katakana
	Double-byte alphanumerics (upper/lower case)
	Single-byte alphanumerics (upper/lower case)
	Single-byte number
	Character Code

appears when Predictive is active.

Character Entry Basics

Use Keypad to enter characters. Multiple characters are assigned to each key. Press a key to toggle character options for that key.

Example: In double-byte katakana entry, press three times.



- Press to toggle options in reverse.

To type characters assigned to the same key, press first.

Example: In single-byte alphanumerics mode, enter no.



- Long Press a key to enter the current character and advance cursor.



Advanced

- Using Character Codes
- Using Pager Code (P.2-19)



Entering Characters

Hiragana

Follow these steps to enter **すずぎ** in kanji (hiragana) mode:



2 (Confirm)

Kanji

Convert **すずぎ** to **鈴木**.

1 Type すずぎ



- In kanji (hiragana) mode, word suggestions change as hiragana is typed. (Predictive)
- Press to toggle suggestion mode between Standard, Business, Male, Female and Automatic. (Personal Mode)

2



3 鈴木

- To exit suggestion list, press .

4



- Words likely to follow the entry appear based on previous entries. (Previous Usage)

When Target Word is Not Listed

- Press or to segment hiragana to convert separately.
 - Press to toggle Predictive and Non-Predictive suggestions.

Phonetic Conversion

Type reading in hiragana

Advanced

- Inserting line breaks
- Inserting spaces
- Using Keypad to enter words/phrases from suggestion list
- Clearing entry log
- Changing Font Size
- Disabling suggestions based on entered characters
- Disabling suggestions based on entered words
- Disabling emoticon/Pictogram suggestions based on entered words
- Lowering type priorities in suggestion list
- Selecting a suggestion mode (P.2-19 - 2-20)



One-Hiragana Conversion

Type the first hiragana to access previously selected words.

Example: **すずき** was previously converted to **鈴木**.

1 3 (su) 3 (su) 3 (su) (ず) → ?

2 Select word/phrase → ●

Katakana

Follow these steps to switch to double-byte katakana mode and enter **ジュン**.

1 (J) → アイウ → ●



2 3 (sh) 3 (sh) (シ) → (シ) → ●

8 (ju) 8 (ju) (ユ) → (ユ) → ●

 
0 (n) 0 (n) (ン) → ●



Pictograms & Symbols


May be unavailable depending on the entry mode.

1 [X] → ●

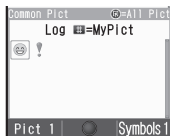

- Pictogram/Symbol Log appears.

 2 [E] or [Y] → List toggles

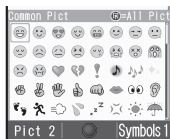

- In Pictogram List, press [E] to toggle cross-carrier Pictograms and all Pictograms.

 
3 Select Pictogram or Symbol → ●

- Pictograms are double-byte even in single-byte modes.

4 [CLEAR] → List closes

Emoticons

1 [E] → Emoticons → ●

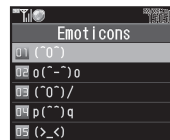

2 Select emoticon → ●

Alternative Emoticon Entry Method

- In kanji (hiragana) mode, type **かお** or a descriptive word such as **かーい** or **うーん**, then convert the entry.

EmoticonWordLink

 
- Immediately after inserting a descriptive word such as **嬉しい** or **悲しい**, corresponding emoticons may appear in the suggestion list.



Mail & Web Extensions

Enter **.co.jp**, **http://**, etc., easily.

1 ➔ **Quick Addr. List** ➔

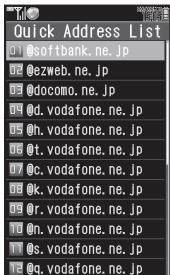

2 **Select extension** ➔

- Extensions are single-byte even in double-byte entry modes.

Hiragana to Katakana/
Alphanumeric Conversion

Enter katakana and alphanumerics in kanji (hiragana) mode.

Example: To enter **PM**

Use key inscriptions.

1 ➔



2 **Select word/phrase (PM)** ➔

Quick Conversion (for Hiragana)

A list of word suggestions appears based on the key pressed.

Example: To enter **終電**

1 (さ) ➔ (や)
➔ (あ) ➔ (だ)
➔ (か) ➔



2 **Select word/phrase (終電)** ➔

One Hiragana Word Call

- Type the first hiragana of entries you used Quick Conversion for and press .



Editing Characters

2

Basic Operations

Deleting & Editing

Follow these steps to correct **また、お願
いします** to **また明日お願いします**.

1 Select character

 


2 CLEAR BACK



- The highlighted character is deleted.

3 Select target location → Enter characters



Recovering Deleted Characters

- Press once for each character after deletion.

Deleting All Text

 
- Long Press at the end of text. To delete characters on and after cursor, select the first character of text and Long Press .

Jumping to the End or Top of Text

- **Cursor Position** → → **Jump to End or Jump to Top** →

Copy/Cut & Paste

1 → **Cut or Copy** → → **Select first character** →




Cut

- To cancel and start over, press .

2 **Highlight text range** →

 3 **Select target location** → (Long)



- Text is entered.

Pasting Previously Cut/Copied Text

- Select target location** → → **Paste**
→ → **Select text** →
- Available when Paste List appears.

Advanced

 
- Undo conversion or recover deleted characters
- Inserting Phone Book entry items (P.2-19)

Saving Frequently Used Words

Saving Words (Japanese)

Saved words appear among suggestions.

- 1 **Settings** → **User Dictionary**



User Dictionary Menu

- 2 **New Entry** → **Enter word**
- 3 **Enter reading**

Editing Entries

- In **Saved Word List** → **Edit** → **Yes**

 
935SH Download Dictionary (Japanese)

Get specialized 935SH Download Dictionaries via SH-web Mobile Internet site (*ソフトメーカー* *のSH-web* in Bookmarks; see P.5-7).

Activate dictionaries to improve handset character conversion. Dictionary words appear among suggestions.

Some dictionary files may not be usable.

- 1 In **User Dictionary menu**, **Acquire Dictionary**

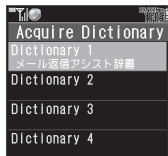

- 2 **Select number** → **Select dictionary**
 - Existing dictionary is replaced.

Canceling Dictionary

- In **select dictionary** → **Cancel**

Viewing Dictionary Information

- In **select dictionary** → **Info**

Reply Assist Dictionary (*メール返信アシスト辞書*)

- When replying, this dictionary prioritizes original message words in suggestion list.
- Effective in kanji (hiragana) mode.

Advanced

- Deleting entries (P.2-20)**



Using Dictionaries (Japanese)

Available Dictionaries:

Preloaded Dictionaries*	Meikyo Japanese Dictionary, Genius English-Japanese Dictionary, Genius Japanese-English Dictionary
Online Dictionaries	Meikyo J-Dic MX.net, Genius EJ-Dic MX.net, Genius JE-Dic MX.net, Imidas Encyclopedia, Encyclopedia Nipponica, Digital Daijisen, PROGRESSIVE English-Japanese Dictionary, PROGRESSIVE Japanese-English Dictionary, Hot Pepper Pockets, Amazon.co.jp

 
*Download and add dictionaries as needed.

Online Dictionaries

- Online dictionary use requires Internet connection incurring transmission fees. Information fees may also apply. Read terms of service and then follow onscreen instructions.
- Update dictionary list for most recent versions.

Using Preloaded Dictionaries

Searching As-You-Type

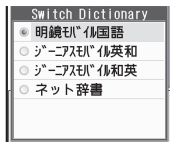


2 Select dictionary



- Last used dictionary appears first.

 3 Enter reading (spelling for English-Japanese dictionary)



- Enter reading in katakana.
- Search results appear as you type.

4 Select word, etc.



Definition/Translation Window

Looking Up in Online Dictionaries

[Definition/Translation Window]

➔ **WebDict.Search** ➔

- Perform from 2 (except 4) in "Using Online Dictionaries" on P.2-13. (Read bulleted sentence in 1 beforehand.)

Searching by Keyword

1 In Dictionary window,

2 Search Method ➔ Keyword Search ➔

3 Select entry field ➔ Enter text ➔



4 Search ➔ Select word, etc. ➔

- Definition/translation window opens.

Advanced

- Changing Font Size
- Looking up copied words in dictionaries
- Viewing dictionary information
- Updating dictionary list (And more on P.2-20)



Copying Text

Selected Portions

- 1 In definition/translation window, ●
- 2 Select first character → ●
→ Highlight text range → ●

Index Word Only

- 1 In definition/translation window, ☒
- 2 Copy Index Word → ●

Adding Downloaded Dictionary

- 1 In Dictionary window, ☒
- 2 Add Dictionary → ●
- 3 Select file → ●

Canceling Added Dictionary

In ☒, Cancel Dictionary → ● → Yes → ●

Using Online Dictionaries

- 1 In Dictionary window, ☒ → ネット辞書 → ●
• Terms of service (Japanese) appear when using online dictionary for the first time; read and then press ●.
- 2 Select pull-down menu → ●
- 3 Select dictionary → ●
• Select すべて to look up in all dictionaries at once.
- 4 Select entry field → ● → Enter text → ●
- 5 Search → ●
- 6 Yes → ●
- 7 Select word, etc. → ●
• Definition/translation window opens.

Disabling Confirmation

After ☒, ☒ (☐/☑) → From ☒

Viewing Dictionary Information

After ☒, select word, etc. → ☒ → Reference → ● → Yes → ●

Using History & Bookmarks

Saving Bookmarks

- 1 In definition/translation window, ☒
- 2 Bookmark → ●

Opening History or Bookmarks

- 1 In Dictionary window, ☒
- 2 History or Bookmark List → ●
- 3 Select word, etc. → ●
• Definition/translation window opens.

Using Dictionaries during Text Entry

- 1 Type text → Before pressing ● to complete entry, 辞書 ☒
- 2 Select dictionary → ●
- 3 Search → ● → Select word, etc. → ●
• Definition/translation window opens.

Inserting Index Word into Text

After ☒, ☒ → Paste Index Word → ●

Advanced

☒ ● Deleting History & bookmarks ● Selecting dictionaries for use ● Selecting search method ● Selecting search area (And more on P.2-20 - 2-21)



Searching Text

2

Basic Operations

Web Search

Transmission fees apply.

- 1 → **Tools** → →
Doc./Rec.
- 2 **Search** →



Search Window

- **Web Search** is selected by default.

 
- 3 **Select entry field** → →
Enter search text →
- 4 **Search** →
• Search results appear.

Searching within PC Sites

[Search Window] → **Change Browser**
→ → **PC Site Browser** →

Mail Search

- 1 In Search window, **Mail Search** →
- 2 **Select entry field** → →
Enter search text →
- 3 **Search** →

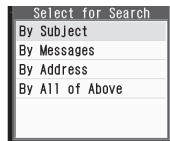

- 4 **Select option** →

Searching within Received or Sent Messages

[Search Window] → **Change Mail Folder** → → **Received Messages or Sent Messages** →



Scratch Pad

Open Scratch Pad to jot down text, and more.

1   **Tools**  

Doc./Rec.

2 **Scratch Pad** 

- Text entry window opens.

















3 **Enter text** 



4 **Save to Notepad** 

- Open saved entries from Notepad.

Other Scratch Pad Usage

Usage	Operation
Paste to Standby	Set as StbyShortcut   Select sheet 
Enter Mail Message Text	Create Message   Select mail type 
Enter Schedule Subject/Details	Save to Calendar 
Enter Task Subject/Details	Save to Tasks 
Add Last Name to Phone Book	Save to Phone Book  <ul style="list-style-type: none"> ▪ Reading is not entered.
Save Text File	Save as Text File  <ul style="list-style-type: none"> ▪ Enter name   ▪ Save here  <ul style="list-style-type: none"> ▪ Saved to Data Folder (Other Documents).
Search Internet	Web Search   Select browser 

 
For more, see corresponding function description or follow onscreen instructions.



Creating Phone Book Entries

Enter a name, phone number and mail address (enter at least one of these items) and classify the entry.

1 **Phone** → **Add New Entry**

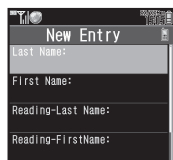


2 **Last Name** → **First Name** → **Reading-Last Name** → **Reading-FirstName**




• Characters entered for names (reading for kanji) appear.

 3 **Add Phone Number** → **Enter phone number** → **Select type**

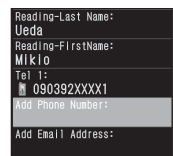

• To save additional phone numbers, repeat **3**.

 4 **Add Email Address** → **Enter mail address** → **Select type**

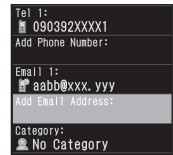

• To save additional mail addresses, repeat **4**.

5 **Category** → **Select Category**



Phone Book Entry Window

6 **Save** → **Entry is saved to Phone Book.**

Incoming Calls while Creating Entry
 • Contents are temporarily saved. End the call to return.
Selecting Mode in Dual Mode
[Phone Book Entry Window] Mode:
 → **Select mode**

Advanced

- Saving other information
- Setting Light Color
- Changing vibration pattern
- Editing Phone Book entries
- Setting incoming mail ring time
- Renaming Categories
- Moving Categories (P.2-21 - 2-22)



Personal Ringtone

Set tone for calls from saved numbers.

- 1 In Phone Book entry window, select item, e.g., **Tone-Voice Call**: ➔ ●



- 2 **Assign Tone** ➔ ● ➔ Select folder ➔ ●
- 3 Select tone/file ➔ ●

Saving Secret Entries

Hide Phone Book entries to require Handset Code for access.

 
- 1 In Phone Book entry window, **Secret**: ➔ ●
- 2 **On** ➔ ●

Accessing Secret Entries

- ➔ ● ➔ **Unlock Temporarily** ➔
- ➔ Enter Handset Code ➔ ●

Customizing Response by Category

- 1 ● ➔ **Phone** ➔ ● ➔ **Set Category** ➔ ●



Set Category Menu

 
- 2 **Select Category** ➔ ● ➔ Select item ➔ ●
- 3 Select item ➔ ● ➔ Select item, e.g., **Assign Tone** ➔ ● ➔ **Customize responses** ➔ ●
 - Customize responses in the same way as Phone Book entries.
 - Not available for USIM Card.

Responses Set by Phone Book Entry


- Settings for each entry take priority.

Saving Numbers After Calls

After a call, save number to Phone Book.



 - 1 When confirmation appears, **Yes** ➔ ●

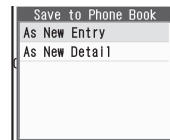

- 2 **As New Entry** ➔ ● ➔ **Complete other fields** ➔ ●

Saving to an Existing Entry

- In ●, **As New Detail** ➔ ● ➔ Select entry ➔ ● ➔ Complete other fields ➔ ●



Using Phone Book Entries

Dialing via Phone Book

- 1 → Select katakana row



Entry Search Window (By あかさたな)

- When using Double Number in Dual Mode, Line indicators appear.

- 2 Select entry →



Entry Details

- 3 Select phone number

- 4

Placing Video Calls

After , → Video Call →

 
Advanced

- Changing view for entry search window
- Assigning images to Phone Book entries for incoming transmissions
- Messaging via Phone Book
- Placing Decoration Calls via Phone Book
- Deleting Phone Book entries
- Checking memory status
- Copying Phone Book entries (And more on P.2-21 - 2-23)

Changing Search Method

- 1 In entry search window, → Ph.Book Settings →

- 2 Sort Entries →

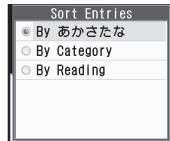

- 3 Select method →


- Phone Book Search Methods:

By あかさたな	Shows entries with Readings that start with katakana in the specified row
By Category	Opens entries in the specified Category
By Reading	Shows all entries in Reading order (katakana, alphabetical then numerical)

Changing Search Method Temporarily
[Entry Search Window] (press to toggle search methods)

Opening from Other Functions

 Example: Enter a recipient via Phone Book when sending a message.




Select Recipient Window

- 1 Phone Book →

- Entry search window opens.

- 2 Select entry →

 - 3 Select phone number or mail address →

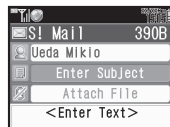

- Recipient is entered.
- Omit if only one number or address is saved.



Customized Screen & S! Familiar Usability	
Canceling Customized Screen	● → ☰ → Off → ● → Yes → ●
Canceling S! Familiar Usability	● → ☰ → S!おなじみ操作解除 → ● → Yes → ●
Canceling Customized Screen or S! Familiar Usability unconditionally	☰ → Menu List → ● → Settings → ● → In Phone menu, <i>Customize</i> → ● → Off → ● → Yes → ●
Deleting Customized Screens	● → Data Folder → ● → Customized Screen → ● → Select Customized Screen → ☰ → Delete → ● → Yes → ● • When the corresponding Contents Key has been downloaded, choose Yes or No and press ●.
Accessing Customized Screen source sites	● → Data Folder → ● → Customized Screen → ● → Select Customized Screen → ☰ → Web Access → ● • Follow onscreen instructions.

Text Entry	
■ Entry & Edit	
Using Character Codes	In a text entry window (Character Code mode), enter four digits
Using Pager Code	In a text entry window, ☰ → Input/Conversion → ● → Input Method → ● → Pager Code → ● • Return to text entry window and enter two digits.
Inserting line breaks	At the End of Text In a text entry window, ☰
	Mid-Entry In a text entry window, ☰ → ☰ → ☰ → ☰ → ☰ → ☰
Inserting spaces	In a text entry window, ☰
Using Keypad to enter words/phrases from suggestion list	In a text entry window, ☰ → Input/Conversion → ● → Select Candidate → ● → Enable 1-9, 0, *, # → ●
Clearing entry log	In a text entry window, ☰ → Input/Conversion → ● → Reset Log → ● → Yes → ●
Undo conversion or recover deleted characters	In a text entry window, ☰ → Undo/Recover → ●
Inserting Phone Book entry items	In a text entry window, ☰ → Insert/Font Size → ● → Phone Book → ● → Select entry → ● → Select item → ●
Changing Font Size	In a text entry window, ☰ → Insert/Font Size → ● → Font Size → ● → Select size → ●



■ Conversion

Disabling suggestions based on entered characters	In a text entry window, ☺ → Input/Conversion → ● → Predictive → ● → Off → ●
Disabling suggestions based on entered words	In a text entry window, ☺ → Input/Conversion → ● → Previous Usage → ● → Off → ●
Disabling emoticon/Pictogram suggestions based on entered words	In a text entry window, ☺ → Input/Conversion → ● → EmoticonWordLink → ● → Off → ●
Lowering type priorities in suggestion list	In a text entry window, ☺ → Input/Conversion → ● → Set Low Priority → ● → Select type → ● (✓) → ▽
Selecting a suggestion mode	In a text entry window, ☺ → Input/Conversion → ● → Personal Mode → ● → Select mode → ●

User Dictionary

Deleting entries	● → Settings → ● → In Phone menu, User Dictionary → ● → Saved Word List → ● → Select word → ☺ → Yes → ●
------------------	--

Dictionary

■ Preloaded & Online Dictionaries

Changing Font Size	辞書立 → ☺ → Font Size → ● → Select size → ●
Looking up copied words in dictionaries	After copying text, 辞書立 → ☺ → Search by Copied Text → ● → Search → ● → Select word, etc. → ●

Deleting History & bookmarks	Start Here 辞書立 → ☺ → ☺ → History, History List or Bookmark List → ● → See below
	One Word Select word → ☺ → Delete → ● → Yes → ●
Looking up scanned kanji in dictionaries	All Words ☺ → Delete All → ● → Enter Handset Code → ● → Yes → ●
	辞書立 → ☺ → Kanji Grabber → ● → Frame kanji in Loupe → ● → Search → ● → Select word, etc. → ● ● Definition/translation window opens.
Looking up scanned text in dictionaries	辞書立 → ☺ → Scan Text → ● → Frame text in center of Display → ● → Select line → ● → Search → ● → Select word, etc. → ● ● Definition/translation window opens.

■ Preloaded Dictionaries

Viewing dictionary information	辞書立 → ☺ → Information → ●
--------------------------------	---

■ Online Dictionaries

Updating dictionary list	辞書立 → ▽ → ネット辞書 → ● → ☺ → Update Dictionaries → ● → Yes → ●
Selecting dictionaries for use	辞書立 → ▽ → ネット辞書 → ● → ☺ → Edit Dict. List → ● → Select dictionary → ● (☐/✓) → ▽
Selecting search method	辞書立 → ▽ → ネット辞書 → ● → ☺ → Set Search Method → ● → Select option → ●
Selecting search area	辞書立 → ▽ → ネット辞書 → ● → ☺ → Set Search Area → ● → Select area → ●



Opening terms of service	<p>辞書 ☺ ☞ ネット辞書 ☞ ☞ ☞ ☞ Terms of service ☞ ☞</p> <p>● Press ● to return to Dictionary window.</p>
Opening Help	<p>辞書 ☺ ☞ ネット辞書 ☞ ☞ ☞ ☞ Select pull-down menu ☞ ☞ ☞ Select dictionary ☞ ☞ ☞ ☞ Help ☞ ☞ ☞ Yes ☞ ☞</p>

Phone Book

View Settings

Changing view for entry search window	<p>☞ ☞ Phone ☞ ☞ ☞ Ph.Book Settings ☞ ☞ ☞ View Settings ☞ ☞ ☞ List Only ☞ ☞</p>
Assigning images to Phone Book entries for incoming transmissions	<p>Start Here ☞ ☞ Phone ☞ ☞ ☞ Add New Entry ☞ ☞ ☞ Picture: ☞ ☞ ☞ See below</p> <p>Assigning Images Assign Picture ☞ ☞ ☞ Select image ☞ ☞</p> <p>Capturing Images Take Picture ☞ ☞ ☞ Frame image on Display ☞ ☞ ☞ ☞</p>
Hiding confirmation after calls to/from unsaved numbers	<p>☞ ☞ Phone ☞ ☞ ☞ ☞ Ph.Book Settings ☞ ☞ ☞ New Number Prompt ☞ ☞ ☞ Incoming Call or Outgoing Call ☞ ☞ ☞ Off ☞ ☞</p>

Phone Book Entry

Saving other information	<p>Start Here ☞ ☞ Phone ☞ ☞ ☞ Add New Entry ☞ ☞ ☞ See below</p> <p>Address Address: ☞ ☞ ☞ Select item ☞ ☞ ☞ Complete field ☞ ☞ ☞ ☞</p> <p>Office Office: ☞ ☞ ☞ Select item ☞ ☞ ☞ Enter text ☞ ☞ ☞ ☞ ☞</p> <p>Homepage Homepage: ☞ ☞ ☞ Enter URL ☞ ☞ ☞ Select type ☞ ☞</p> <p>Note Note: ☞ ☞ ☞ Enter text ☞ ☞</p> <p>Birthday Birthday: ☞ ☞ ☞ Enter date ☞ ☞</p>
	<p>Start Here ☞ ☞ Phone ☞ ☞ ☞ Add New Entry ☞ ☞ ☞ Select item, e.g., Light-Voice Call: ☞ ☞ ☞ Switch On/Off ☞ ☞ ☞ See below</p> <p>Changing Color On ☞ ☞ ☞ ☞ Light Color ☞ ☞ ☞ Select color ☞ ☞ ☞ ☞</p> <p>Setting Ringtones to Control Light Link to Sound ☞ ☞ ☞ ☞ ☞ ☞ ☞ ☞ ☞ ☞</p> <p>Disabling Off ☞ ☞ ☞ ☞ ☞ ☞ ☞</p>
	<p>☞ ☞ Phone ☞ ☞ ☞ Add New Entry ☞ ☞ ☞ ☞ Select item, e.g., Vibration-Message: ☞ ☞ ☞ ☞ Switch On/Off ☞ ☞ ☞ Select option ☞ ☞ ☞ ☞ Vibration Pattern ☞ ☞ ☞ Select pattern ☞ ☞ ☞ ☞ ☞ ☞ ☞</p>



Editing Phone Book entries	<p>☰ → Select entry → ☰ → Edit → ● → Select item → ● → Edit → ● → Ⓞ</p> <ul style="list-style-type: none"> • Edit Reading after editing names.
Setting incoming mail ring time	<p>☰ → Select entry → ☰ → Edit → ● → Tone-New Message: → ● → Duration → ● → Enter time → ● → Ⓞ</p> <ul style="list-style-type: none"> • Available for compatible ringtones.
Renaming Categories	<p>● → Phone → ● → Set Category → ● → Select Category → ● → Edit Name → ● → Enter name → ●</p>
Moving Categories	<p>● → Phone → ● → Set Category → ● → Select Category → Ⓞ → Select target location → ●</p> <ul style="list-style-type: none"> • View for <i>By Category</i> Phone Book search changes accordingly.

■ Using Entries

Messaging via Phone Book	<p>Start Here ☰ → Select entry → ● → See below</p> <p>Phone Numbers Select phone number → ● → Create Message → ● → S! Mail or SMS → ● → Complete message → Ⓞ</p>
	<p>Mail Addresses Select mail address → ● → Complete message → Ⓞ</p>
Placing Decoration Calls via Phone Book	<p>☰ → Select entry → ● → Select phone number → ● → Deco. Call → ● → Deco. Call File → ● → Deco. Call Folder → ● → Select file → ● → Call Type → ● → Voice Call or Video Call → ● → Ⓞ</p> <ul style="list-style-type: none"> • When placing a Decoration Call for the first time, follow onscreen prompt.
Initiating S! Circle Talk via Phone Book	<p>☰ → Select entry → ● → Select phone number → ● → Call S! Circle Talk → ● → ●</p> <ul style="list-style-type: none"> • Set Connection status to <i>Online</i> first.

Placing international calls via Phone Book	<p>☰ → Select entry → ● → Select phone number → ● → Int'l Call → ● → Select country → ● → ☰</p>
--	---

■ Managing Entries

Deleting Phone Book entries	<p>One Entry ☰ → Select entry → ☰ → Delete → ● → Yes → ●</p>
	<p>All Entries ● → Phone → ● → Manage Entries → ● → Delete All → ● → Select entry type → ● → Yes → ● → Enter Handset Code → ●</p>
Checking memory status	<p>● → Phone → ● → Manage Entries → ● → Memory Status → ●</p>
Copying Phone Book entries	<p>One Entry (Handset → USIM Card) ☰ → Select entry → ☰ → Manage Entries → ● → Copy Entry to USIM → ● → Yes → ●</p>
	<p>One Entry (USIM Card → Handset) ☰ → ☰ → Ph.Book Settings → ● → Select Phone Book → ● → USIM Memory → ● → Select entry → ☰ → Manage Entries → ● → Copy Entry to Phone → ●</p>
	<p>All Entries ☰ → ☰ → Manage Entries → ● → Copy All → ● → Select method → ● → Yes → ●</p> <ul style="list-style-type: none"> • If handset/USIM Card memory is low, some entries may not be copied.



Editing Categories on USIM Card	Start Here → Phone → Set Category → Change to USIM → See below
	Renaming Categories Select Category → Edit Name → Enter name
	Moving Categories Select Category → Select target location
	Changing Icons Select Category → Change Icon → Select Pictogram
Changing default storage media for new entries	Phone → Ph.Book Settings → Save New Entry → USIM Memory or Ask Each Time
Switching reference Phone Book	Phone → Ph.Book Settings → Select Phone Book → USIM Memory or Both

■ Mode Settings

Activate Double Number first.

Changing modes of all entries at once	Phone → Manage Entries → Change Mode(All) → Select mode → Enter Handset Code
Changing modes of multiple entries	Manage Entries → Multiple Selection → Select entry → Change Mode → Select mode
Changing modes of entries by Category	Select Category → Manage Entries → Change Mode(Category) → Select mode → Enter Handset Code • Set search method to <i>By Category</i> first.



Customized Screen

? Customized Screen is not applied

- Some Customized Screens may not contain files for Wallpaper, System Graphics, ringtones or ringvideos; default settings apply for these functions.

Phone Book

? Assigned images do not appear for incoming transmissions

- Source files may be deleted or moved to Memory Card; reassign files.
- When using copy protected files, etc., confirm that source file license/usage period has not expired.
- Images do not appear if corresponding Phone Book entry is set to Secret.
- Images do not appear for incoming Decoration Calls including image/video.
- Images may not appear when another function is active, etc.

? Handset does not ring for incoming transmissions as set

- Source files may be deleted; reassign files.
- When using copy protected files, etc., confirm that source file license/usage period has not expired.
- Ringtone/ringvideo settings are disabled if corresponding Phone Book entry is set to Secret.
- Ringtones do not sound for incoming Decoration Calls with sound.
- Memory Card with source files may be removed; reinsert the card to restore settings.

? Cannot enter 16 characters for Category names

- Character entry limit for Category names may be lower depending on the USIM Card in use.

