

<b>Date &amp; Time</b> .....	<b>14-2</b>
Date & Time .....	14-2
<b>Display &amp; Illumination</b> .....	<b>14-3</b>
Language .....	14-3
Image & Text .....	14-3
Display & Backlight .....	14-3
Standby Display .....	14-4
Key Backlight .....	14-4
<b>Incoming Transmissions</b> .....	<b>14-5</b>
Handset Response .....	14-5

<b>Sounds</b> .....	<b>14-6</b>
System Sounds .....	14-6
Additional Sound Settings .....	14-6
<b>Connectivity</b> .....	<b>14-7</b>
Network .....	14-7
IP Service .....	14-8
Location Information .....	14-8
<b>Reset</b> .....	<b>14-9</b>
Restoring Default Settings .....	14-9

# 14

## Handset Customization



# 🔧 Date & Time Settings

## Date & Time

[Start Here](#) → Settings → In Phone menu, *Date & Time*

Setting the date and time	<i>Set Date/Time</i> → Enter the year → Enter the month → Enter the day → Enter the time
Correcting Clock manually	<i>Time Correction</i> → <i>Manual</i> → Yes → Yes
Disabling auto Clock correction	<i>Time Correction</i> → <i>Auto Corr. Setting</i> → Off
Setting auto Clock correction timing	<i>Time Correction</i> → <i>Auto Corr. Setting</i> → On → Select item → (☐/☑) → [v] → [v]
Activating Daylight Saving	<i>Daylight Saving</i> → On
Changing Time Zone	<i>Set Time Zone</i> → Select area
Adding custom time zone	<i>Set Time Zone</i> → Enter city name → + or - → Enter time difference
Changing time format to 12 hour	<i>Time Format</i> → 12 Hour
Changing date format	<i>Date Format</i> → Select option
Starting the Calendar week on Monday	<i>Calendar Format</i> → Monday-Sunday



# ⌘ Display & Illumination Settings 1

## Language

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ Phone menu

Switching interface between Japanese and English

**Language** or 言語選択 ➔ ● ➔ **English** or 日本語 ➔ ●

## Image & Text

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ In Phone menu, **Display** ➔ ●

Showing preloaded images for incoming calls, etc.

**System Graphics** ➔ ● ➔ **Select item** ➔ ● ➔ **Preset Animation (or Pattern 1 to Pattern 3)** ➔ ●

Showing Data Folder images for incoming calls, etc.

**System Graphics** ➔ ● ➔ **Select item** ➔ ● ➔ **Select folder** ➔ ● ➔ **Select image** ➔ ● ➔ **Specify image area** ➔ ●  
 ● Some images may be usable without specifying image area.

Showing Customized Screen for incoming calls, etc.

**System Graphics** ➔ ● ➔ **Select item** ➔ ● ➔ **Customized Screen** ➔ ● ➔ ●  
 ● Not available for **Power On** or **Power Off**.

Selecting image enhancement option for Standby and video playback

**Vivid Mode** ➔ ● ➔ **Select option** ➔ ●

Changing font of numbers entered in Standby

**Dial Number** ➔ ● ➔ **Select pattern** ➔ ●

Showing a message each time handset is turned on

**Greeting Message** ➔ ● ➔ **Edit Message** ➔ ● ➔ **Enter message** ➔ ● ➔ **Switch On/Off** ➔ ● ➔ **On** ➔ ●

## Display & Backlight

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ In Phone menu, **Display** ➔ ●

Disabling display transition effects

**Display Effects** ➔ ● ➔ **Off** ➔ ●

Changing Display/key Backlight illumination time

**Backlight** ➔ ● ➔ **Time Out** ➔ ● ➔ **Select time** ➔ ●

Changing Display Brightness

**Backlight** ➔ ● ➔ **Brightness** ➔ ● ➔ **Adjust level** ➔ ●

Canceling/activating Light Sensor

**Backlight** ➔ ● ➔ **Brightness** ➔ ● ➔  (□/✓) ➔ ●

Changing inactivity time after which Display turns off

**Display Saving** ➔ ● ➔ **Select period** ➔ ●



## 🔧 Display & Illumination Settings 2

### Standby Display

[Start Here](#) → Settings → In Phone menu, *Display* → Standby Display →

Changing Clock/Calendar *Clock/Calendar* → Select type →

Showing Network service provider name in Standby *Show Operator Name* → On →

Hiding Pedometer in Standby *Pedometer* → Off →

### Key Backlight

[Start Here](#) → Settings → Phone menu

Disabling key Backlight illumination *Set Key Light* → Off →

Changing Key Illumination pattern by event *Sounds & Alerts* → *Set Key Illumi* → Select item → Key Pattern → Select pattern →








































































Disabling Key Illumination by event *Sounds & Alerts* → *Set Key Illumi* → Select item → Switch On/Off → Off →



## Incoming Transmission Settings

### Handset Response

[Start Here](#)   **Settings**   In Phone menu, **Sounds & Alerts**  

Changing ringtone volume	<b>Volume</b>   Select item   Adjust level  
Setting illumination color	<b>Event Light</b>   Select item   <b>Light Color</b>   Select color  
Changing Key Illumination patterns	<b>Event Light</b>   Select item   <b>Key Pattern</b>   Select pattern  
Selecting illumination option	<b>Event Light</b>   Select item   <b>Switch On/Off</b>   <b>On, Link to Sound or Off</b>    <ul style="list-style-type: none"> <li>• For <b>Link to Sound</b>, press  again.</li> </ul>
Enabling/disabling illumination for missed transmissions	<b>Status Light</b>   Select item   <b>Switch On/Off</b>   <b>On or Off</b>  
Setting illumination color for missed transmissions	<b>Status Light</b>   Select item   <b>Light Color</b>   Select color  
Answering calls with other keys	<b>Any Key Answer</b>   <b>On</b>   <ul style="list-style-type: none"> <li>• Use   -  ,  ,  ,  ,  ,  ,   or   in addition to .</li> </ul>



# 🔧 Sound Settings

## System Sounds

**Start Here** ● ➔ **Settings** ➔ ● ➔ In Phone menu, **Sounds & Alerts** ➔ ●

Enabling Keypad Tones	<b>System Sounds</b> ➔ ● ➔ <b>Keypad Tones</b> ➔ ● ➔ <b>Select tone</b> ➔ ●
Changing S! Circle Talk tone	<b>System Sounds</b> ➔ ● ➔ <b>S! Circle Talk</b> ➔ ● ➔ <b>Select tone</b> ➔ ●
Changing other System Sounds	<b>System Sounds</b> ➔ ● ➔ <b>Select item</b> ➔ ● ➔ <b>Tone or Sound</b> ➔ ● ➔ <b>Select folder</b> ➔ ● ➔ <b>Select tone/file</b> ➔ ● ● For files with limited usage period, choose <b>Yes</b> and press ●.
Disabling System Sounds	<b>System Sounds</b> ➔ ● ➔ <b>Select item</b> ➔ ● ➔ <b>Tone or Sound</b> ➔ ● ➔ <b>Off</b> ➔ ● ● Not available for <b>S! Circle Talk</b> .
Changing System Sound duration	<b>System Sounds</b> ➔ ● ➔ <b>Select item</b> ➔ ● ➔ <b>Duration</b> ➔ ● ➔ <b>Select/enter time</b> ➔ ● ● Not available for <b>Keypad Tones</b> or <b>S! Circle Talk</b> .
Changing System Sound volume	<b>Volume</b> ➔ ● ➔ <b>General Volume</b> ➔ ● ➔ <b>Adjust level</b> ➔ ●

## Additional Sound Settings

**Start Here** ● ➔ **Settings** ➔ ● ➔ **Phone menu**











































































































































Disabling Speaker when using Headphones	<b>Ringer Output</b> ➔ ● ➔ <b>Earphone</b> ➔ ●
Activating Speaker surround	<b>Sounds &amp; Alerts</b> ➔ ● ➔ <b>Surround</b> ➔ ● ➔ <b>On</b> ➔ ●



# Connectivity Settings 1

## Network

Start Here    **Settings**   **Network**

Selecting a Network manually	<i>Select Network</i>    <i>Manual</i>    <i>Select Network</i>  
Adding preferred Networks	<i>Select Network</i>    <i>Set Preferred</i>    <i>Select target location</i>      <i>Insert</i>    <i>Select Network</i>  
Adding preferred Networks to the end	<i>Select Network</i>    <i>Set Preferred</i>        <i>Add to End</i>      <i>Select Network</i>  
Deleting preferred Networks	<i>Select Network</i>    <i>Set Preferred</i>    <i>Select Network</i>    <i>Delete</i>  
Adding Networks	<i>Select Network</i>    <i>Add New Network</i>    <i>Add</i>    <i>Enter country code</i>    <i>Enter Network code</i>    <i>Enter name</i>    <i>Select NW Type</i>    <i>Select type</i>   <ul style="list-style-type: none"> <li>• After selecting <b>Add New Network</b> and pressing , Network list appears if Network has already been added. To add more, press  again and proceed.</li> </ul>
Editing Networks	<i>Select Network</i>    <i>Add New Network</i>    <i>Select Network</i>    <i>Change</i>    <i>Edit in the same manner as adding Networks</i>  
Deleting Networks	<i>Select Network</i>    <i>Add New Network</i>    <i>Select Network</i>    <i>Delete</i>  
Switching Network services manually	<i>Select Service</i>    <i>Manual</i>    <i>Select service</i>  
Retrieving Network Information	<i>Retrieve NW Info</i>    <i>Yes</i>  
Checking Network status	<i>Network Info</i>  
Editing access point names for external devices	<i>External Device</i>    <i>Select name</i>    <i>Edit</i>  
Clearing access point names for external devices	<i>External Device</i>      <i>Reset</i>    <i>Enter Handset Code</i>    <i>Yes</i>  



## 🔧 Connectivity Settings 2

### IP Service

[Start Here](#) → Settings → In Phone menu, Locks

Disabling IP Service

**IP Service Setting** → Off → Enter Handset Code

- When **Off**, S! Friend's Status, S! Circle Talk, Decoration Call, S! Appli Notification Setting and Mobile Widget Notification Setting are disabled.

### Location Information

[Start Here](#) → Settings → Network → Location Info

Adding/editing Location Information destination URLs

**URL Setting** → <Empty> (or select URL) → Edit → Enter URL

- Default URL is not editable.

Specifying Location Information destination URL

**URL Setting** → Select URL

Viewing Location Information destination URL

**URL Setting** → Select URL → Display

Deleting Location Information destination URLs

**URL Setting** → Select URL → Delete → Yes

Hiding Location Information

**Datum On/Off** → Off → Enter Handset Code

Changing Location Information confirmation option

**Location Property** → Select option

Suppressing Information window after sending Location Information automatically

**Inform Location** → Do not Show → Enter Handset Code

Opening sent Location Information records

**Offer Loc. Logs** → Select record

Deleting sent Location Information records

**Offer Loc. Logs** → Select record → Delete or Delete All → Yes





# Reset Settings

## Restoring Default Settings

[Start Here](#) → **Settings** → **In Phone menu, Master Reset**

Restoring default handset settings	<p><b>Reset Settings</b> → <b>Enter Handset Code</b> → <b>Yes</b> → <b>Yes</b></p> <ul style="list-style-type: none"> <li>Some default settings may not be restored.</li> </ul>
Clearing all Phone Book entries, Data Folder files, etc.	<p><b>Reset All</b> → <b>Enter Handset Code</b> → <b>Yes</b> → <b>Yes</b></p> <ul style="list-style-type: none"> <li>Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keitai® service providers for details.)</li> <li>Files and records deleted by Reset All cannot be restored. Reset All deletes all downloaded S! Applications and Lifestyle-Applications.</li> <li>Handset Code returns to the default setting.</li> </ul>

- A confirmation may appear before entering Handset Code; end the current function to proceed.
- When Double Number is active, regardless of usage mode setting, Reset Settings restores all default settings (Double Number is canceled), and Reset All clears all user files.

