

<b>Infrared</b> .....	<b>13-2</b>
Transferring Files via Infrared .....	13-3
<b>IC Transmission</b> .....	<b>13-5</b>
Transferring Files via IC Transmission .....	13-6
<b>Bluetooth®</b> .....	<b>13-7</b>
Transferring Files via Bluetooth® .....	13-8
<b>External Device Connection</b> .....	<b>13-11</b>
Connecting PC or Blu-ray Disc Recorder.....	13-11

<b>Backup</b> .....	<b>13-12</b>
Basics.....	13-12
Backup & Restore .....	13-13
<b>S! Addressbook Back-up (SAB)...</b>	<b>13-14</b>
About SAB.....	13-14
Backup & Restore .....	13-16
<b>Additional Functions</b> .....	<b>13-17</b>
<b>Troubleshooting</b> .....	<b>13-20</b>

# 13

## Connectivity & File Backup



## Infrared

Wirelessly transfer files between 936SH and compatible devices.

936SH supports IrSimple™ high-speed wireless communications protocol; exchange large image files instantly with compatible mobile phones, printers, etc.

### Transferable Files

Phone Book	Received Msg.
Calendar	Sent Messages
Tasks	Drafts
Notepad	Templates (Messaging)
Bookmarks	Data Folder

 
- Copy/forward protected files are not transferable.
- Some files may not be transferable; some settings may be lost, or files may not be saved properly. For details, see "Troubleshooting" at the end of this chapter.

### Getting Started

#### Infrared Precautions

Align Infrared Ports of both devices.

- Handset cannot receive connection requests during Software Update.

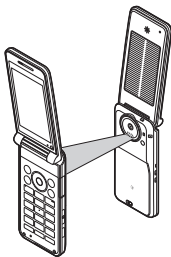

- Do not place objects between devices.
- Keep Infrared Ports aligned during transfer.
- Do not look into Infrared Port during infrared transmissions. Eyesight may be affected.
- 936SH complies with IrMC 1.1, however, some files may not transfer properly.

### Transfer Options

<b>One File Transfer</b>	Transfer single files
<b>All File Transfer</b>	Transfer all files by function
<b>IrSS Transfer</b>	Exchange single image files with compatible devices at high speed

- Some transfer options may be unavailable depending on file type.
- Transfer Memory Card files one by one.

#### Authorization Code

 
- Four-digit code required for Infrared transfers. All File Transfers possible when codes match. (Authorization Code is changeable for each transfer.)




# Transferring Files via Infrared

## Receiving Files


### 1 (Long)



 appears

- Infrared is activated. (Alternatively, activate it via Main Menu.)
- Handset receives files if sent within three minutes.
- Handset must be in Standby to accept connection requests.
- To cancel Infrared, Long Press .

### 2 Connection request arrives

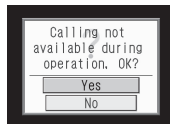 

Request Window


### 3 Perform subsequent operations

- To cancel transfer, press .

## Subsequent Operations

### ■ One File Transfer

Yes    Yes  

- If storage media confirmation appears, select media and press .

### ■ All File Transfer (Adding Files)

Yes    Enter Handset Code 

  Enter Authorization Code 

  As New Items  

### ■ All File Transfer (Overwriting Existing Files)

Yes    Enter Handset Code 

  Enter Authorization Code 

  Delete All & Save    Yes  

- For Phone Book, My Details except handset phone number is overwritten as well.

### ■ IrSS Transfer

Yes  

- Files are saved to Data Folder (Pictures).

## Advanced

-   Activating Infrared via Main Menu
-  Sending images via IrSS Transfer without reducing size (P.13-17)

 


## Sending Files

## One File Transfer

Example: Phone Book entry

- 1 → **Select entry** → → **Send Entry** →




- 2 **Via Infrared** →



- 3 **Yes** → → **Transfer starts**
  - When complete, entry search window returns.

## All File Transfer

 - 1 → **Settings** → → → **Connectivity** → **Infrared** →
- 2 **Send All** →
- 3 **Yes** → → **Enter Handset Code** →

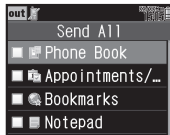

- 4 **Select item** → (  /  ) → **Complete selection** →
- 5 **Enter Authorization Code** → → **Transfer starts** →

## Sending Phone Book

- In , Picture transfer confirmation appears; follow these steps:  
**Yes or No** →

## Sending JPEG Images at High Speed

- 1 → **Data Folder** →
- 2 **Pictures or DCIM** →   
For *DCIM*, select a folder and press .
- 3 **Select image** → (Long)



- 4 **Yes or No** → → **Transfer starts**
  - Images may be reduced automatically before transfer depending on the size.
  - When complete, file list returns.
  - Transfers are one-way; end even if files are not received.

## Advanced

- Sending My Details
- Sending non-Phone Book files (P.13-17)



## IC Transmission

 
Wirelessly transfer files between 936SH and compatible devices.

- For transferable files, see P.13-2.
- Cancel IC Card Lock beforehand.
- Disconnect Headphones, USB Cable and AC Charger beforehand.

### Getting Started

#### IC Transmission Precautions

Align  logos of both devices.

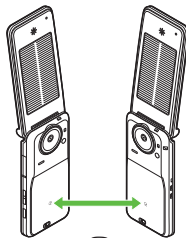

Align  logos

Keep  logos aligned during transfer.

### Transfer Options


<b>One File Transfer</b>	Transfer single files
<b>All File Transfer</b>	Transfer all files by function

- Some transfer options may be unavailable depending on file type.
- Transfer Memory Card files one by one.

#### Authorization Code

- Four-digit code required for IC transfers. All File Transfers possible when codes match. (Authorization Code is changeable for each transfer.)

### Advanced

 
-   Disabling one file reception (P.13-17)



# Transferring Files via IC Transmission

## Receiving Files

### 1 Connection request arrives

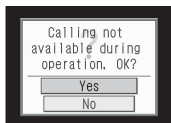

Request Window

- Handset must be in Standby to accept connection requests.


### 2 Perform subsequent operations

- To cancel transfer, press .













## Subsequent Operations

### One File Transfer













Yes   Yes   

- If storage media confirmation appears, select media and press .

### All File Transfer (Adding Files)

Yes   Enter Handset Code    
  Enter Authorization Code    
  As New Items  

### All File Transfer (Overwriting Existing Files)

 
Yes   Enter Handset Code    
  Enter Authorization Code    
 Delete All & Save   Yes    
 • For Phone Book, My Details except handset phone number is overwritten as well.

## Sending Files


### One File Transfer

Example: Phone Book entry

### 1 Select entry Send Entry



### 2 Via IC Transmission

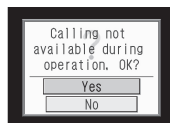 


### 3 Yes Transfer starts

### All File Transfer

### 1 Settings Connectivity IC Transmission
 
### 2 Send All

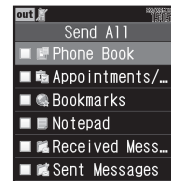

### 3 Yes Enter Handset Code



### 4 Select item Complete selection

### 5 Enter Authorization Code Transfer starts

### Sending Phone Book

- In , Picture transfer confirmation appears; follow these steps:  
 Yes or No 

## Advanced

-   Sending My Details   Sending non-Phone Book files (P.13-17)

## Bluetooth®

Wirelessly transfer files/data between 936SH and compatible devices (watches, handsfree devices, etc.).

- For transferable files, see **P.13-2**.
- 936SH supports simultaneous connection with two devices. (May be unavailable depending on the device type.)
- Bluetooth® connection may not be possible with some Bluetooth® devices.
  - Handset shall be connected to certified Bluetooth® devices that meet the specification standards developed by Bluetooth SIG.
  - Data transfers may fail depending on characteristics or specifications of the certified Bluetooth® devices.
  - Noise may interfere with wireless or handsfree conversations.
- TV audio is supported only on SCMS-T DRM scheme compliant Bluetooth® devices.

### Getting Started

#### Bluetooth® Precautions

Check transmission range of your Bluetooth® device to use with handset properly. Maximum transmission range for transfers between 936SH handsets is ten meters. (Bluetooth® connection/transfer rate may vary depending on conditions.)

 
#### Handsfree Device Precaution

- Handle call operations on the device in use.

#### Bluetooth® Watches

- Compatible Bluetooth® watches support these functions:
  - Time Correction
  - Alarm Notice
  - News Notice
  - Mail Notice
  - Remote Shutter
  - Mode Settings
  - Quick Silent
  - Caller ID Notice
  - Hold Calls
  - Operator Notice
- For details about functions/operations, see the Bluetooth® watch guide.

### Bluetooth® Connection

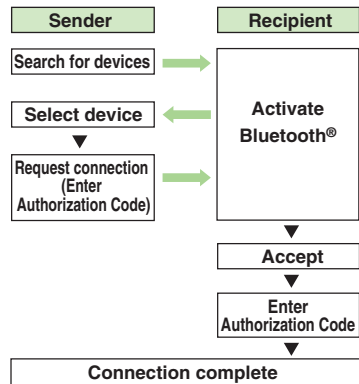

#### Authorization Code

- 4 to 16-digit code required for Bluetooth® connections. Pairing possible when codes match.
- For handsfree devices, enter specified Authorization Code.

### Advanced

- Cloaking handset to avoid connection requests
- Setting idle time after which Bluetooth® is canceled
- Switching audio output to wireless device
- Changing Bluetooth® name for handset
- Talking on handsfree device
- Avoiding connection requests from Bluetooth®-compatible S! Applications in Standby, etc.
- Opening Bluetooth®-related handset properties (**P.13-17**)
- Synchronizing Bluetooth® watch with handset
- Enabling/disabling Bluetooth® watch responses (**P.13-18**)



# Transferring Files via Bluetooth®

## Activating Bluetooth®

### 1 (Long)



appears

 
- Bluetooth® is activated.
- Handset must be in Standby to accept connection requests from unpaired handsfree devices, etc.
- To cancel Bluetooth®, Long Press

## Connecting Bluetooth® Devices

### Device Search & Pairing


Activate Bluetooth® on devices to be paired with.

### 1 → Settings → → Connectivity → Bluetooth →

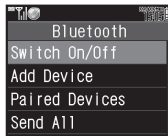

Bluetooth Menu

### 2 Add Device →

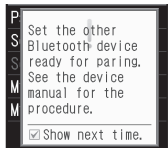 

- To disable confirmation, press before .

### 3

- Found devices are listed after search.
- Press to cancel.

### 4 Select device →

If a confirmation appears, choose **Yes** and press .

### 5 Enter the same Authorization Code for handset and the other device → → Pairing complete

- On the other device, complete code entry within 30 seconds.
- Authorization Codes are not necessary for paired devices.

## Advanced

- Activating Bluetooth® via Main Menu
- Editing Paired Device list
- Disconnecting devices
- Connecting devices supporting handsfree telephony and audio output by service
- Specifying a preferred device for wireless connection (P.13-17 - 13-18)





## Connecting Paired Devices

### 1 In Bluetooth menu, *Paired Devices* ➔ ●



Paired Device List

### 2 Select device ➔ ●

If handset is already connected to another device, disconnection confirmation may appear; choose **Yes** and press ●.

- The device is connected and  (preferred) appears.

## Accepting Connection Requests

 
Follow these steps to accept connection requests from unpaired devices:

### 1 Connection request arrives



Request Window

### 2 Yes ➔ ●

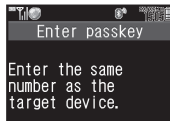

### 3 Enter the same Authorization Code as sender's ➔ ●

- Complete code entry within 30 seconds.



 
## Transferring Files

Follow the steps below to exchange files with paired devices.

- For transferable files, see P.13-2.
- When requested, enter Authorization Code.

### Receiving Files

#### 1 Connection request arrives

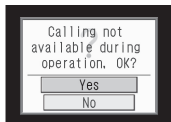


#### 2 Perform subsequent operations

- To cancel transfer, press .




### Subsequent Operations

#### One File Transfer





Yes  $\rightarrow$    $\rightarrow$  Yes  $\rightarrow$  

- If storage media confirmation appears, select media and press .

#### All File Transfer (Adding Files)

Yes  $\rightarrow$    $\rightarrow$  Enter Handset Code  $\rightarrow$    $\rightarrow$  As New Items  $\rightarrow$  

#### All File Transfer (Overwriting Existing Files)

 
Yes  $\rightarrow$    $\rightarrow$  Enter Handset Code  $\rightarrow$    $\rightarrow$  Delete All & Save  $\rightarrow$    $\rightarrow$  Yes  $\rightarrow$  

### Sending Files

#### One File Transfer

Example: Phone Book entry

1   $\rightarrow$  Select entry  $\rightarrow$    $\rightarrow$  Send Entry  $\rightarrow$  

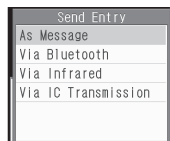


2 Via Bluetooth  $\rightarrow$  

3 Select device  $\rightarrow$  

4 Yes  $\rightarrow$    $\rightarrow$  Transfer starts


- When complete, entry search window returns.

### All File Transfer

 1 In Bluetooth menu, *Send All*  $\rightarrow$  


2 Select device  $\rightarrow$    $\rightarrow$  Yes  $\rightarrow$  

3 Enter Handset Code  $\rightarrow$  

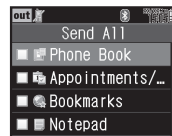




4 Select item  $\rightarrow$   (/ )  $\rightarrow$  Complete selection  $\rightarrow$    $\rightarrow$  Transfer starts  $\rightarrow$  

### Sending Phone Book

- In 4, Picture transfer confirmation appears; follow these steps:  
Yes or No  $\rightarrow$  

## Advanced

-   Sending My Details  Sending non-Phone Book files (P.13-18)

 
## Connecting PC or Blu-ray Disc Recorder

### Connecting PC

#### Accessing Memory Card

Connect handset to a PC via USB Cable to access Memory Card from the PC without removing card from handset. USB Cable may be purchased separately.

### 1 Connect handset to a PC via USB Cable

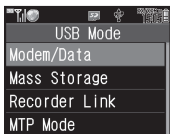

### 2 Mass Storage ➔

- Use PC to access Memory Card.

### 3 Yes ➔

#### Connection ends

- Disconnect USB Cable.

#### If Menu in 1 Does Not Appear

- Follow these steps:
  - ➔ **Settings** ➔ **Connectivity** ➔ **USB Mode** ➔ **From 2**
  - Operations on the PC may be required; if prompted, follow onscreen instructions.

#### Utility Software (Japanese)

For more PC-related operations, download Utility Software (including USB Cable driver) from the following URL.

#### • Utility Software

<http://k-tai.sharp.co.jp/download/tools/utility/>

#### Mobile Data Communication Fees

 
- Using the Internet by connecting handset to PC/PDA via USB Cable or Bluetooth® may incur high charges as large-volume packet transmissions tend to occur in a short period of time.

### Connecting Blu-ray Disc Recorder

Connect handset to a Blu-ray Disc recorder via USB Cable to transfer recorded programs to Memory Card without removing card from handset.

- Compatible only with SHARP Blu-ray Disc recorders. For details, see **P.15-23** "Compatible Blu-ray Disc Recorders."
- USB Cable may be purchased separately.

### 1 Connect handset to a Blu-ray Disc recorder via USB Cable

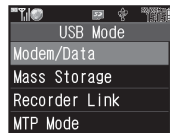

### 2 Recorder Link ➔

- Transfer files from Blu-ray Disc recorder to Memory Card.

### 3 Yes ➔ Connection ends

- Open transferred files via Recorder Contents in TV menu or Media Player menu (Videos).

#### If Menu in 1 Does Not Appear

- Follow these steps:
  - ➔ **Settings** ➔ **Connectivity** ➔ **USB Mode** ➔ **From 2**
  - Operations on the PC may be required; if prompted, follow onscreen instructions.



## Basics

Back up information to Memory Card, and restore to handset as needed.

### Supported Items

Select items to back up, or transfer all at once. Items with \* are selectable at once via **Check Selection** in Options menu.

Phone Book*	Sent Messages*
Calendar*	Drafts*
Tasks*	Templates (Messaging)
Bookmarks*	Contents Keys
Notepad*	Data Folder
Mail Groups*	User Dictionary
Received Msg.*	

### Precautions

- Not available if battery is low.
- Some items may not be transferable; some settings may be lost, or files may not transfer properly. For details, see "Troubleshooting" at the end of this chapter.

### Transferring All Items

- Use blank Memory Card for **Backup All Items**. Do not use the card to save other files after **Backup All Items**; backed up content may not be restored properly.

### Contents Keys

- Moving Keys to Memory Card creates a special file. Performing Backup again on the same Memory Card overwrites that file. Perform Restore beforehand.

 


# Backup & Restore

## Handset to Memory Card

Follow these steps to back up selected items at once:

- 1 → **Settings** → → → **Connectivity** → **Backup/Restore** →

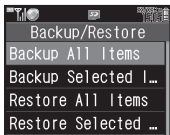

Backup/Restore Menu

- 2 **Backup Selected Items** → → **Enter Handset Code** →
- 3 **Yes** →
- 4 **Select item** → (□/✓) → **Complete selection**
  - For *Phone Book*, confirmation appears. Choose **Yes** or **No** and press .

- 5 → **Yes** →
  - To cancel, press .

- 6 **Backup complete** → →

### Selecting Multiple Items at Once

In 4, → **Select option** → → **From**

### Selecting/Canceling All Items

In 4, → **Check All or Uncheck All** →

## Memory Card to Handset

Follow these steps to restore selected items: (Restoring backed up content to handset overwrites current--with the exception of Contents Keys--handset content.)

- 1 In **Backup/Restore menu**, **Restore Selected Items** → → **Enter Handset Code** →
- 2 **Yes** →
- 3 **Select item** → (□/✓) → **Complete selection**

- 4
  - If no file list appears, skip ahead to 7.

- 5 **Select file** →
  - Repeat 5 to complete selection.

- 6

- 7 **Yes** →
  - To cancel, press .

- 8 **Restore complete** → →

### Selecting Multiple Items at Once

In 3, → **Select option** → → **From**

### Selecting/Canceling All Items

In 3, → **Check All or Uncheck All** →

### Changing Restoration Method

After 3, select item → → **Change to Add Mode or Chg. to Overwrite Mode** → → **From**

 
## Advanced

- Backing up all items ● Encoding data for backup ● Restoring all items ● Deleting backup files (P.13-19)



## About SAB

Back up Phone Book content in SAB; add Phone Book changes to SAB anytime. Edit SAB online via PC; add SAB changes to Phone Book anytime. Restore lost or altered Phone Book content from SAB.

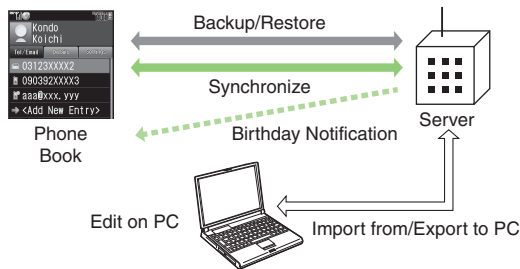

- SAB requires a separate contract and basic monthly fee.
- Use SAB to add Phone Book content to a new compatible SoftBank handset; some conditions apply (P.13-15).
- Use a PC to edit SAB online.
- For more about SAB, see SoftBank Mobile Website (P.15-23).
- Sync commands (Backup, Restore and Synchronize) all incur transmission fees.

### Auto Synchronization

- When subscribed to SAB, Network Information retrieval activates auto synchronization (Set Auto Sync: **On**, Set Frequency: **After Editing Ph.Book(10 min.)**, Set Sync Mode: **Synchronize**); Phone Book changes are added to SAB automatically.
- Cancel auto synchronization as needed. However, it reactivates after Network Information retrieval.

## SAB Sync Commands & Features

Backup/ Restore	Backup	Export Phone Book content to SAB <sup>1</sup>
	Restore	Import SAB content to Phone Book <sup>2</sup>
Synchronize	Synchronize	Synchronize Phone Book and SAB <sup>3</sup>
	Sync from Client	Add Phone Book changes to SAB <sup>4</sup>
	Sync from Server	Add SAB changes to Phone Book <sup>5</sup>
Edit on PC	Import from PC	Upload PC address book info to SAB
	Export to PC	Export SAB content to PC address book
Send Notice <sup>6</sup>	Birthday Notification	SAB sends reminders via SMS to handset
	Email Address Notification <sup>7</sup>	Send new handset mail address to specified addresses
	"Disaster Message Board" Message Notification <sup>8</sup>	Send emergency message board update to specified addresses
Spam Filter	Tomodachi Email Filter <sup>9</sup>	Always accept messages from mail addresses saved in SAB

<sup>1</sup> Any existing SAB content is deleted.

<sup>2</sup> Any existing Phone Book content is deleted.

<sup>3</sup> If the same entry item is edited in Phone Book and SAB, SAB content is referenced.

<sup>4</sup> Unrelated SAB changes remain.

<sup>5</sup> Unrelated Phone Book changes remain.

<sup>6</sup> Access this function via handset or a PC.

<sup>7</sup> Backup resets notification setting; handset address is sent to all addresses.

<sup>8</sup> Backup resets notification setting; updates are not sent to any address.

<sup>9</sup> Export Phone Book content to SAB beforehand.



## Service Usage Outline

### Complete Contract

Visit a SoftBank Shop, dial 157 from a SoftBank handset for SoftBank Mobile Customer Center, General Information or access My SoftBank (Japanese) via Yahoo! Keitai.



### Receive User ID & Password

After subscription, user ID and password arrive via SMS.

- User ID and password are required to use SAB via a PC.



### Use SAB

Export Phone Book content to SAB.

## Precautions

### ■ Unsynchronizable Items

SAB restoration cancels these Phone Book settings:

- Picture, Tone/Video, Vibration

### ■ Unintentional Phone Book or SAB Content Deletion

- When no Phone Book content exists, selecting *Synchronize*, *Sync from Client* or *Backup* deletes all SAB content.
- When no SAB content exists, selecting *Synchronize*, *Sync from Server* or *Restore* deletes all Phone Book content.

### ■ Phone Book ⇄ SAB Content Capacity Disparities

When the number of savable items varies between Phone Book and SAB entries, Synchronization reflects lower limit.

### ■ Contract Termination

SAB content is deleted upon contract termination.

### ■ SAB Transfers to New Handsets

- **SAB-Compatible 3G Handsets**  
SAB remains as last saved and is fully accessible.
- **Other 3G Handsets**  
SAB remains as last saved and is accessible via PC.
- **V3/V4/V5/V6/V8 Series**  
Service contract is terminated and SAB content is deleted.

### ■ When Double Number is Active

Regardless of usage mode setting, all Phone Book content is backed up.

## Advanced

- 👉 ● Canceling auto synchronization (P.13-19)

 


## Backup & Restore

### Backup (Phone Book → SAB)

Any existing SAB content is deleted.

- 1 → **Phone** → → **S! Addressbook Backup** →



S! Addressbook Menu


- 2 **Start Sync** → → **Backup** →

- 3 **Yes** → → **Enter Handset Code** →

- Backup starts; when complete, details appear.

- 4 → **Backup complete**

#### Canceling Backup

 

### Restore (SAB → Phone Book)

Any existing Phone Book content is deleted.

 
- 1 In S! Addressbook menu, **Start Sync** → → **Restore** →

- 2 **Yes** → → **Enter Handset Code** →

- Restore starts; when complete, details appear.

- 3 → **Restore complete**

#### Canceling Restore



### Synchronizing Phone Book

Synchronize Options:

<b>Synchronize</b>	Synchronize Phone Book and SAB
<b>Sync from Client</b>	Add Phone Book changes to SAB
<b>Sync from Server</b>	Add SAB changes to Phone Book

If this is your first use of SAB (new handset), Synchronization is performed via Synchronize regardless of selection.

 
- 1 In S! Addressbook menu, **Start Sync** → → **Select option** →

- 2 **Yes** → → **Enter Handset Code** →

- Synchronization starts; when complete, details appear.

- 3 → **Synchronization complete**

#### Canceling Synchronization



### Advanced

- Changing auto synchronization settings
- Confirming password
- Opening log (P.13-19)





Infrared	
Activating Infrared via Main Menu	● → Settings → ● → Connectivity → Infrared → ● → Switch On/Off → ● → On(3 min.) → ●
Sending My Details	● → [07] → ⊕ → Send My Card → ● → Via Infrared → ● → Yes → ● → Transfer starts
Sending non-Phone Book files	In file list, select file → ⊕ → Send (or Send/Blog) → ● → Via Infrared → ● → Yes → ● → Transfer starts
Sending images via IrSS Transfer without reducing size	● → Settings → ● → Connectivity → Infrared → ● → IrSS Key Setting → ● → Send via IrSS → ●

IC Transmission	
Disabling one file reception	● → Settings → ● → Connectivity → IC Transmission → ● → 1 File Reception → ● → Off(Disabled) → ●
Sending My Details	● → [07] → ⊕ → Send My Card → ● → Via IC Transmission → ● → Yes → ● → Transfer starts
Sending non-Phone Book files	In file list, select file → ⊕ → Send (or Send/Blog) → ● → Via IC Transmission → ● → Yes → ● → Transfer starts

Bluetooth®	
General	
Cloaking handset to avoid connection requests	● → Settings → ● → Connectivity → Bluetooth → ● → My Device Settings → ● → Visibility → ● → Hide My Phone → ●
Setting idle time after which Bluetooth® is canceled	● → Settings → ● → Connectivity → Bluetooth → ● → My Device Settings → ● → Bluetooth Timeout → ● → Select time → ●
Switching audio output to wireless device	● → Settings → ● → Connectivity → Bluetooth → ● → My Device Settings → ● → Sound Output → ● → Bluetooth Device → ● <ul style="list-style-type: none"> <li>• Bluetooth Device is set automatically when connection is made from wireless Headphones.</li> </ul>
Changing Bluetooth® name for handset	● → Settings → ● → Connectivity → Bluetooth → ● → My Device Settings → ● → Device Name → ● → Enter name → ●
Talking on handsfree device	● → Settings → ● → Connectivity → Bluetooth → ● → My Device Settings → ● → Handsfree Setting → ● → Handsfree Mode → ●
Avoiding connection requests from Bluetooth®-compatible S! Applications in Standby, etc.	● → Settings → ● → Connectivity → Bluetooth → ● → My Device Settings → ● → S! Appli Request → ● → Off → ●
Opening Bluetooth®-related handset properties	● → Settings → ● → Connectivity → Bluetooth → ● → My Device Details → ● <ul style="list-style-type: none"> <li>• Press ⊕ to view service details.</li> </ul>
Activating Bluetooth® via Main Menu	● → Settings → ● → Connectivity → Bluetooth → ● → Switch On/Off → ● → On → ●



## Bluetooth® Watches

Synchronizing Bluetooth® watch with handset	<p>  → <b>Settings</b> →  → <b>Connectivity</b> → <b>Bluetooth</b> →  → <b>Setting Watch</b> →  → <b>Set BT-Watch Time</b> →  → <b>Yes</b> → </p> <ul style="list-style-type: none"> <li>• Connect handset to a Bluetooth® watch beforehand.</li> </ul>
Enabling/disabling Bluetooth® watch responses	<p>  → <b>Settings</b> →  → <b>Connectivity</b> → <b>Bluetooth</b> →  → <b>Setting Watch</b> →  →  → <b>Select item</b> →  → <b>Permit or Prohibit</b> → </p> <ul style="list-style-type: none"> <li>• Register a Bluetooth® watch beforehand.</li> </ul>

## Paired Devices

Editing Paired Device list	<p>  → <b>Settings</b> →  → <b>Connectivity</b> → <b>Bluetooth</b> →  → <b>Paired Devices</b> →  → <b>Select device</b> →  → <b>See below</b> </p> <p><b>Renaming Paired Devices</b></p> <p><b>Change Name</b> →  → <b>Enter name</b> → </p> <p><b>Deleting Paired Devices</b></p> <p><b>Delete</b> →  → <b>Yes</b> → </p> <ul style="list-style-type: none"> <li>• To delete a device connected to handset, choose <b>Yes</b> and press .</li> </ul>
Disconnecting devices	<p>  → <b>Settings</b> →  → <b>Connectivity</b> → <b>Bluetooth</b> →  → <b>Paired Devices</b> →  → <b>Select connected device</b> →  </p>
Connecting devices supporting handsfree telephony and audio output by service	<p>  → <b>Settings</b> →  → <b>Connectivity</b> → <b>Bluetooth</b> →  → <b>Paired Devices</b> →  →  → <b>Select Service</b> →  → <b>Handsfree function or Audio function</b> →  </p>

Specifying a preferred device for wireless connection	<p>  → <b>Settings</b> →  → <b>Connectivity</b> → <b>Bluetooth</b> →  → <b>Paired Devices</b> →  →  → <b>Select device</b> →  → <b>Set to Prior Connect</b> →  → <b>See below</b> </p> <p><b>For Handsfree Telephony</b></p> <p><b>Handsfree On</b> → </p> <ul style="list-style-type: none"> <li>• For <b>Handsfree On</b>, specified device reconnects to handset when placing/receiving calls.</li> </ul> <p><b>For Audio Output</b></p> <p><b>Audio On</b> → </p> <ul style="list-style-type: none"> <li>• For <b>Audio On</b>, Media Player/TV audio output is redirected to specified device automatically when  Sound Output is set to <b>Bluetooth Device</b>.</li> </ul>
---	---

## Sending Files

Sending My Details	<p>  →  → <b>Send My Card</b> →  → <b>Via Bluetooth</b> →  → <b>Select device</b> →  → <b>Yes</b> →  → <b>Transfer starts</b> </p>
Sending non-Phone Book files	<p>In file list, select file →  → <b>Send (or Send/Blog)</b> →  → <b>Via Bluetooth</b> →  → <b>Select device</b> →  → <b>Yes</b> →  → <b>Transfer starts</b></p>



## Backup

## Backup &amp; Restore

Backing up all items	<ul style="list-style-type: none"> <li>● → Settings → ● → ☺ Connectivity → Backup/Restore → ● → Backup All Items → ● → Enter Handset Code → ● → Yes → ● → Yes → ● → Backup complete → ● → ●</li> </ul>
Encoding data for backup	<ul style="list-style-type: none"> <li>● → Settings → ● → ☺ Connectivity → Backup/Restore → ● → Settings/Manage → ● → Encode Settings → ● → Select item → ● → On → ●</li> <li>• Available for Phone Book, Messaging folders, Calendar and Tasks.</li> </ul>
Restoring all items	<ul style="list-style-type: none"> <li>● → Settings → ● → ☺ Connectivity → Backup/Restore → ● → Restore All Items → ● → Enter Handset Code → ● → Yes → ● → Yes → ● → Restore complete → ● → ●</li> </ul>
<b>Backup Files</b>	
Deleting backup files	<ul style="list-style-type: none"> <li>● → Settings → ● → ☺ Connectivity → Backup/Restore → ● → Settings/Manage → ● → File Management → ● → Select item → ● → Select file → ● (☐/☑) → Complete selection → ▾ → Yes → ●</li> </ul>

## S! Addressbook Back-up

Canceling auto synchronization	<ul style="list-style-type: none"> <li>● → Phone → ● → S! Addressbook Backup → ● → Set Auto Sync → ● → Enter Handset Code → ● → Set On/Off → ● → Off → ●</li> </ul>
Changing auto synchronization settings	<p><b>Start Here</b> ● → Phone → ● → S! Addressbook Backup → ● → Set Auto Sync → ● → Enter Handset Code → ● → See below</p> <ul style="list-style-type: none"> <li>• Set Set On/Off to On beforehand.</li> </ul> <p><b>Changing Auto Sync Frequency</b></p> <ul style="list-style-type: none"> <li>Set Frequency → ● → Select frequency → ● → Enter/select date/time/day of the week → ●</li> <li>• For <i>After Editing Ph.Book(10 min.)</i>, omit steps for date, time, etc.</li> </ul> <p><b>Changing Auto Sync Command</b></p> <ul style="list-style-type: none"> <li>Set Sync Mode → ● → Select command → ●</li> </ul>
Confirming password	<ul style="list-style-type: none"> <li>▽ → メニューリスト → ● → My SoftBank → ● → English → ● → Password confirmation for S! Address Book → ●</li> <li>• Follow onscreen instructions.</li> </ul>
Opening log	<ul style="list-style-type: none"> <li>● → Phone → ● → S! Addressbook Backup → ● → Sync History → ● → Select record → ●</li> </ul>



## File Transfer

### ? Some files are not received

- If storage limit is reached during transfers, remaining files will not be received.

### ? Cannot receive/accept connection requests even when Infrared/Bluetooth® is On

- Handset may not be in Standby.
- Keypad Lock/Function Lock may be active.
- Software Update may be in progress.

### ? Phone Book settings are lost

- One file transfer resets these settings:
  - Category, Tone/Video, Light, Vibration, Secret
- Picture setting may be lost depending on image; send the image separately and reassign it.

### ? Calendar/Tasks settings are lost

- One file transfer resets these settings:
  - Alarm Tone/Video, Secret, S! Friend's Status

### ? Bookmarks are not saved properly

- Large Bookmarks may not be received correctly.
- Streaming Bookmarks are saved as Yahoo! Keitai Bookmarks.

### ? Messages are not saved properly on handset

- Messages may not be received depending on the size.
- Messages received via One File Transfer are saved to Other Documents folder and cannot be used as messages.
- Sky Mail may be received as S! Mail when transferred from other SoftBank handsets via All File Transfer.
- In All File Transfers, overwriting messaging folders deletes sort keys.

### ? Messages are not saved properly on recipient devices

- Mail Notices are saved as messages, invalidating complete message retrieval.
- When sending messages to other handset models via All File Transfer, Spam Folder messages may be saved to the incoming message folder.
- When sending messages in Drafts to other handset models via All File Transfer, only the first entered recipient may remain or SMS addressed to multiple recipients may not be saved.

### ? Cannot find files in DCIM folder

- Received files in DCIM folder are saved to Pictures folder.

## Infrared

### ? Infrared transfer fails

- Infrared Port may be obstructed by dust, etc.; clean with soft cloth.
- Transfers may fail in direct sunlight, under fluorescent lighting or near infrared equipment.



## Backup & Restore

### ? Backup fails

- Check handset/Memory Card memory; backup may fail if the memory is low.

### ? Some files are not restored

- If storage limit is reached during Restore, remaining files will not be restored.

### ? Cannot use backup files on other SoftBank handsets or PCs

- Some backup files may not be usable on other SoftBank handsets or PCs.

### ? Cannot open backup files

- Some backup files may open only after being restored to handset.

### ? Phone Book settings are lost

- Picture setting may be lost depending on image; send the image separately and reassign it.

### ? Messages are not saved properly

- Transfer may delete sort keys.
- Mail Notices are restored as messages, invalidating complete message retrieval.

### ? Bookmarks are not saved properly

- Yahoo! Keitai, Streaming and PC Site Browser Bookmarks are all backed up as a single file.
- Streaming Bookmarks are saved as Yahoo! Keitai Bookmarks.

## ■ Exporting Backed Up Data to Other SoftBank Handsets

### ? Messages are not saved properly

- If spam filter is available on recipient handset, Spam Folder messages are saved in spam folder regardless of the setting. (If unavailable, they are saved as normal received messages.)
- When restoring draft messages, only the first entered recipient may remain or SMS addressed to multiple recipients may not be saved.

## ■ Importing Data Backed Up on Other SoftBank Handsets

### ? Messages are not saved properly

- Messages may not be restored depending on the size.
- Sky Mail may be restored as S! Mail.

