

Settings


Sound & Vibration	18-2
Ringtones.....	18-2
Charge Sound/Key Tone	18-3
Display	18-3
Display Settings.....	18-3
Main Menu	18-4
Clock	18-5
Back Light.....	18-5
Font.....	18-6
Motion Control Setting	18-6
Speed Selector Setting	18-6
Manner Mode	18-7
Incoming Settings	18-7
Date & Time	18-8
Call Settings	18-9
Call Time & Call Cost.....	18-9
Making & Receiving Calls	18-9
Notification Light	18-10
Text Entry	18-11
Text Entry Method	18-11
Conversion.....	18-11
Conversion during Message Text Entry	18-12
Phone Book	18-12
Voice Dial	18-12

Video Call	18-13
Function Menus.....	18-13
Engaged Video Call Settings	18-13
Digital TV	18-14
Camera	18-15
Camera Settings (Camera Mode/Action Mode).....	18-15
Video Camera Settings (Video Camera Mode)	18-17
Mobile Widget (Japanese)	18-18
S! Quick News (Japanese)	18-18
Display Settings.....	18-18
Auto Update/Deleting Information	18-19
Bluetooth®	18-19
Messaging	18-20
Universal Settings.....	18-20
S! Mail Settings.....	18-21
SMS Settings	18-22
Internet	18-22
Browser Display Settings.....	18-22
Memory Manager & Reset	18-23
Security Settings	18-23
Reset.....	18-24
S! Appli	18-24
Osaifu-Keitai®	18-24
S! GPS Navi Settings	18-25
Default Settings	18-26
Confirming Settings	18-27

Settings Sound & Vibration

Ringtones

From  Main Menu  Settings

Setting/Operation	Default
Change Ringtone > <i>Sound Settings</i> → <i>Ring Tones</i> → Select an item → <i>Select Ring Tone</i> → Select a type → Select a folder → Select a tone	Phone/Video Call: Pattern 1 Message: Tone3
Set Machi-Uta® (Change Ringback Tone)¹ > <i>Sound Settings</i> → <i>Machi-Uta</i> → Select an item	—
Change Ringer Volume > <i>Sound Settings</i> → <i>Ringer Volume</i> → Select a type →  to adjust volume	Level 4
Disable 3D Sound Effect (Ringtone/Melody) > <i>Sound Settings</i> → <i>Stereo/3D Sound</i> → <i>OFF</i>	ON
Set Ringtone Sound Output for Earphone² > <i>Sound Settings</i> → <i>Earphone</i> → <i>Earphone</i>	Earphone + Speaker
Set Message Ringtone Duration > <i>Sound Settings</i> → <i>Message Ring Tones</i> → <i>ON</i> or <i>OFF</i> (→ For <i>ON</i> , enter ring time)	ON (Ring time: 05 sec)
Set Vibration Alert > <i>Incoming Settings</i> → <i>Vibrator</i> → Select an item → Select a vibration pattern	OFF

¹ For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

² When earphone is connected and Sound Settings is set to **Earphone**, ringtone sounds through earphone and speaker for incoming calls/messages or alarms after about 20 seconds. Other sounds (e.g. Demo playback) are heard only from earphone.

Pre-installed Ringtones

Title	Composer
Pinwheel	Original
SINFONIA NR 101 THE CLOCK HOB I 101	HAYDN FRANZ JOSEPH
JE TE VEUX	SATIE ERIK ALFREDI LE
DANSE DES MIRLITONS // CASSE NOISETTE OP 71A /ORI	CHAJKOVSKIJ PETR ILICH
HEIGH HO // SNOW WHITE AND THE SEVEN DWARFS /INST	CHURCHILL FRANK E
DANCE OF THE KNIGHTS OP 64 NO 13	PROKOFEV SERGEJ S
WALTZ/COPPELIA BALLET SUITE	DELIBES LEO CLEMENT PHILIBERT
PETER AND THE WOLF OP 67	PROKOFEV SERGEJ S

Names of composers given above conform to JASRAC Website. Parts of titles may not appear due to Display size.

Charge Sound/Key Tone

From ► Main Menu ► Settings

Setting/Operation	Default
■ Set Key Tone > Sound Settings → Key Tone → ON or OFF	OFF
■ Charging Start/End Tone Off > Phone Settings → Battery → Charge Sound → OFF	ON

Settings Display

Display Settings

From ► Main Menu ► Settings ► Display Settings

Setting/Operation	Default
■ Change Wallpaper > Internal Display → Stand-by Display → Select an item (→ Select a folder) → Select an image	(☞P.18-26)
■ Add Calendar to Wallpaper > Internal Display → Stand-by Display → Calendar → Select a view format → BG Image ON or BG Image OFF (→ For BG Image ON, select a folder → select an image)	—
■ Change Wallpaper Randomly > Internal Display → Stand-by Display → Random Display → Select a folder → Every Hour or Every Day	—
■ Change Outgoing Call/Message Image > Internal Display → Select an outgoing type → Select a folder → Select an image	(☞P.18-26)
■ Change Incoming Call/Message Image > Internal Display → Select an incoming type → Select Calling Disp. ¹ → Select an image type → Select a folder → Select an image	(☞P.18-26)
■ Change Battery/Antenna Indicator > Internal Display → Battery Icon or Antenna Icon → Select a pattern	Pattern 1

<ul style="list-style-type: none"> ■ Change Start-up Window > <i>Internal Display</i> → <i>Start-up</i> → <i>OFF</i>, <i>Message</i>, <i>Pictures</i> or <i>Videos</i>² 	-
<ul style="list-style-type: none"> ■ Change Display Color Scheme > <i>Color</i> → Select a color 	(☞P.18-26)
<ul style="list-style-type: none"> ■ Set Interface Language > <i>言語設定</i> → <i>日本語</i> 	日本語
<ul style="list-style-type: none"> ■ Show New Call/Message when Handset Opens > <i>Open for New</i> → <i>ON</i> 	OFF

- ¹ ● Setting applies to messages retrieved manually (*Incoming Options* (☞P.18-21) set to *Manual Retrieval*) or when Server Mail is retrieved (Retrieve New window cannot be changed).
- ² ● For *Pictures* or *Videos*: Select a folder → Select an image
 ● For *Message*: Enter text

Main Menu

From ► **Main Menu** ► **Settings** ► **Display Settings**
 ► **Menu Icons**

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Change Main Menu Theme > Select a pattern 	(☞P.18-26)
<ul style="list-style-type: none"> ■ Change Main Menu Icons > <i>Customize</i> → Select a menu → Select a folder → Select an image 	-
<ul style="list-style-type: none"> ■ Change Main Menu Background > <i>Customize</i> → <i>Background Image</i> → Select a folder → Select an image 	-

Clock

From ► Main Menu ► Settings ► Display Settings
► Internal Display ► Clock

Setting/Operation	Default
■ Change Standby Clock Pattern ¹ > <i>Stand-by Clock</i> → [Pattern] → Select a pattern → [Set]	(P.18-26)
■ Change Standby Clock Position ^{1 2} > <i>Stand-by Clock</i> → [Position] → Select a position → [Set]	Pattern 1
■ Change Standby Clock Size ¹ > <i>Stand-by Clock</i> → [Size] → <i>Small</i> → [Set]	Large
■ Change Standby Clock at Upper Right (lower right in Landscape View) > <i>Icon Clock</i> → Select a pattern	(P.18-26)

¹ Highlight *Stand-by Clock* → [Play] to view Standby Clock.

² Clock appears in **Pattern 1** when:

- Calendar, World Clock or Operator Name is set to appear in Standby.
- Time zone is set to other than GMT+9.
- Privacy Key Lock is active.

Back Light

From ► Main Menu ► Settings ► Display Settings

Setting/Operation	Default
■ Turn Back Light On/Off; Set Power Saver Mode ¹ > <i>Back Light Time</i> → <i>Lighting</i> → <i>ON</i> or <i>OFF</i> → Enter time to Power Saver mode	ON + 15secs.
■ Illuminate Back Light while Charging > <i>Back Light Time</i> → <i>Charging</i> → <i>Long Time Light</i> ²	Standard ³
■ Limit Back Light to Display Only > <i>Back Light Time</i> → <i>Area</i> → <i>LCD</i>	LCD + Keys
■ Adjust Brightness > <i>Back Light Time</i> → <i>Brightness</i> → Select a brightness level	Auto ⁴
■ Set Soft Light Off > <i>Back Light Time</i> → <i>Soft Light</i> → <i>OFF</i>	ON
■ Disable Auto Image Compensation > <i>LCD AI</i> → <i>OFF</i>	ON

¹ During operation (except when in Standby or S! Appli is active), press and hold [5] to toggle **ON/OFF**.

² When set to **Long Time Light**, Back Light changes to Power Saver mode in three hours.

³ When set to **Standard**, Back Light illuminates with the same setting as **Lighting** setting.

⁴ When set to **Auto**, Back Light is automatically adjusted according to ambient light.

Font

From ► Main Menu ► Settings ► Display Settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Change Font Size by Function > <i>Font Size</i> → Select an item → Select a size 	Standard
<ul style="list-style-type: none"> ■ Set Menu Font Sizes Collectively > <i>Font Size</i> → <i>Collective Setting</i> → <i>Large</i> or <i>Small</i>* 	Standard
<ul style="list-style-type: none"> ■ Change Font Style (Incoming/Outgoing Call Window) > <i>Disp. Call/Recv #</i> → <i>Pattern 2</i> 	Pattern 1

* When *Small* is set, font size for Phone Book and Incoming/Outgoing Call Logs is *Standard*.

Motion Control Setting

From ► Main Menu ► Settings ► Phone Settings
► Motion Control Setting

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Disable All Motion Control Settings > <i>OFF</i> 	ON (Except Y! Keitai)
<ul style="list-style-type: none"> ■ Customize Motion Control Settings per Function > Highlight <i>Customize</i> → [Edit] → Select a function → Select an item → [Finish] 	Pictures, PC Site Browser, TV: ON Videos, PC Movies: ON(Wide Screen) Yahoo! Keitai: OFF

Settings Speed Selector Setting

From ► Main Menu ► Settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Change/Disable Speed Selector Sound* > <i>Sound Settings</i> → <i>Speed Selector Sound</i> → Select a pattern or <i>OFF</i> 	Pattern 1
<ul style="list-style-type: none"> ■ Deactivate Speed Selector > <i>Phone Settings</i> → <i>Speed Selector Setting</i> → <i>Speed Selector</i> → <i>OFF</i> 	ON
<ul style="list-style-type: none"> ■ Change Functions Activated by Speed Selector Operation in Standby > <i>Phone Settings</i> → <i>Speed Selector Setting</i> → <i>Rotation Setting</i> → <i>Clockwise</i> or <i>Counterclockwise</i> → Select a function 	Key Guidance

* Volume control is not available.

Settings Manner Mode

From ► Main Menu ► Settings ► Incoming Settings
► Manner Mode Type

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Set Manner Mode Type > <i>Manner Mode, Super Silent</i> or <i>User Mode</i> (→ For <i>User Mode</i>, set individual items → [Finish]) 	Manner Mode

■ Default Settings by Mode

Manner Mode	Super Silent	Driving Mode	User Mode
Answer Phone			
Value set for Answer Phone	Value set for Answer Phone	ON	OFF
Vibrator			
ON	ON	OFF	ON
Volume (In. Calls/Msg Ring T./Alarm)			
Silent	Silent	Silent	Silent
Rec. Check Tone			
ON	OFF	ON	ON
Key Tone			
OFF	OFF	OFF	OFF
Selector Sound			
OFF	OFF	OFF	OFF
Mic Sensitiv.			
Up	Up	Up	Up
LVA Tone (Low battery alarm)			
OFF	OFF	OFF	OFF

Settings Incoming Settings

From ► Main Menu ► Settings ► Incoming Settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Change Answer Setting (P.18-8) > <i>Answer Setting</i> → <i>Quick Silent</i> or <i>OFF</i> 	Any Key Answer
<ul style="list-style-type: none"> ■ Answer Calls by Opening Handset > <i>Open-to-Ans. Call</i> → <i>Phone</i> or <i>Video Call</i> → <i>Answer</i> 	Keep Ringing
<ul style="list-style-type: none"> ■ Hide Caller Image Saved in Phone Book > <i>Phone Book Image</i> → <i>OFF</i> 	ON
<ul style="list-style-type: none"> ■ Activate Auto Answer with Earphone > <i>Auto Answer</i> → <i>ON</i> → Enter ring time 	OFF
<ul style="list-style-type: none"> ■ Set Call Waiting Response > <i>In-call Management</i> → <i>Call Forwarding</i> or <i>Call Rejection</i> 	Answer

Answer Setting Key Operations

Any Key Answer	To answer a call, press any of the following keys: Voice Call: , , - , , , , , , , , , (ft) Video Call: , ,
Quick Silent	To cancel ringtone/vibration, press any of the following keys: Voice Call: - , , , , , , , , , (ft) Video Call: - , , , , , , , , (ft)
OFF	To answer a call, press any of the following keys: Voice Call: , Video Call: , ,

- When [Voice Mail] is assigned to indicated at the bottom of Display, press to start voice or video recording.

Settings Date & Time

From **Main Menu** **Settings** **Date & Time**

Setting/Operation	Default
Change Date and Time* > Date & Time → Enter year, date, time and time zone	-
Display World Clock > World Clock → ON → to select an area	OFF
Activate Daylight Savings Time > Daylight Savings → ON	OFF
Deactivate Alarm while Operating Other Functions > Alarm Tone → <i>Operation Preferred</i>	Alarm Preferred
Deactivate Automatic Time Correction via Yahoo! Keitai > Time Correction → OFF	ON

* Date & Time Settings effective on handset: from 09:00 on 2000/01/01 to 23:59 on 2037/12/31 (when time zone is set to GMT+9).

Settings Call Settings

Call Time & Call Cost

From ► Main Menu ► Settings ► Call Settings


Setting/Operation	Default
<ul style="list-style-type: none"> ■ Display Call Time/Cost¹ > <i>Call Time/Cost</i> 	—
<ul style="list-style-type: none"> ■ Reset Total Call Charge/Time > <i>Reset</i> → Enter Phone Password → <i>Reset Total Duration</i> or <i>Reset Total Cost</i> → YES (→ For <i>Reset Total Cost</i>, enter PIN2) 	—
<ul style="list-style-type: none"> ■ Set Charge Limit² > <i>Set Max Cost Limit</i> → ON → Enter charge limit → Enter PIN2 	OFF


¹ May not be available depending on subscription status. In that case, Set Max Cost Limit is not available.

² When set to **ON**, incoming/outgoing calls including emergency number calls are not dialable if charge limit is reached.

Making & Receiving Calls

From ► Main Menu ► Settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Change Earpiece Volume > <i>Call Settings</i> → <i>Volume</i> →  to adjust volume 	Level 4

<ul style="list-style-type: none"> ■ Set Handset Response when Closed during Call > <i>Call Settings</i> → <i>Setting When Closed</i> → <i>Hold Call*</i> or <i>End the Call</i> 	Continue
<ul style="list-style-type: none"> ■ Set Hold Tone > <i>Call Settings</i> → <i>Hold Tones</i> → <i>On-hold Tone</i> or <i>Holding Tone</i> → Select a tone 	On-hold Tone: On-hold Tone 1 Holding Tone: JESU JOY OF MAN's
<ul style="list-style-type: none"> ■ Turn Off Noise Reduction > <i>Call Settings</i> → <i>Noise Reduction</i> → OFF 	ON
<ul style="list-style-type: none"> ■ Change Alarm before Connection is Disconnected > <i>Call Settings</i> → <i>Quality Alarm</i> → OFF or <i>Low Tone</i> 	High Tone
<ul style="list-style-type: none"> ■ Change Alarm until Line is Reconnected > <i>Call Settings</i> → <i>Reconnect Signal</i> → OFF or <i>Low Tone</i> 	High Tone
<ul style="list-style-type: none"> ■ Call Service Numbers (Service not available at present) > <i>Call Settings</i> → <i>Service Numbers</i> → Select a service number →  	—
<ul style="list-style-type: none"> ■ Specify Phone Book Entry to Call with Earphone > <i>Phone Settings</i> → <i>Headset Switch to Call</i> → <i>Voice Call</i> → Search Phone Book → Select an entry 	OFF

* When **Hold Call** is selected: **Speaker ON** (Hold tone sounds from speaker)/**Speaker OFF** (Hold tone does not sound from speaker)

Settings Notification Light

From ► **Main Menu** ► **Settings** ► **Notification Light**

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Set Notification Light by Incoming Type (Voice/Video Calls or Messages) > Incoming → Select Color → Select a type → Select a color 	(☞P.18-26)
<ul style="list-style-type: none"> ■ Change Notification Light Color Name for Incoming Call/Message > Incoming → Color → Edit Color Name → Select a color → Edit color name 	—
<ul style="list-style-type: none"> ■ Adjust Notification Light Color Tone for Incoming Call/Message > Incoming → Color → Adjust Color Tone → Select a color → Adjust color tone 	—
<ul style="list-style-type: none"> ■ Set Notification Light for Missed Calls/New Messages > Missed Call/Unread → OFF When Checked or OFF 	OFF after 24hours
<ul style="list-style-type: none"> ■ Set Notification Light When Opening/Closing Handset > Slide → Slide Open or Slide Close → Select OFF or a color 	(☞P.18-26)
<ul style="list-style-type: none"> ■ Set Notification Light During Calls/Music Playback/Bluetooth® Transmission/IC Card Reading > Select a function → Select ON, OFF or a color 	—

<ul style="list-style-type: none"> ■ Set Notification Light During Speed Selector Operation > Speed Selector → Select OFF or a color 	(☞P.18-26)
<ul style="list-style-type: none"> ■ View Notification Light Status* > Confirm Status 	—

* View Notification Light settings for incoming calls/messages or engaged calls.

Settings Text Entry

Text Entry Method

From ► **Main Menu** ► **Settings** ► **Phone Settings**
► **Text Entry Method**

Setting/Operation	Default
■ Set Input Mode > Input Mode → Check input mode(s) to use → ☑ [Finish] → Select a input mode to prioritize	Input mode: All Prioritized mode: Mode 1 (5-touch)
■ Hide Predictive Candidates/Context Forecast List > Predict → OFF	ON (Show)
■ Disable Learning for Secret Mode/Secret Data Only > Learn in Secret Mode → Enter Phone Password → OFF	ON
■ Reset Learned Words > Reset Learned Words → Enter Phone Password → YES	—

Conversion

From ► Text entry window, ☑ [Menu] ► **Text entry setting**

Setting/Operation	Default
■ View Learned Words > Learned words → Select a row → Select a log ● To delete learned words: Highlight a log → ☑ [Menu] → Delete this or Delete all (→ For Delete all , enter Phone Password) → YES	—
■ Hide Predictive Candidates and Context Forecast Lists > Predict → OFF	ON (Show)
■ Hide Context Forecast List > Candidate display → OFF	ON (Show)
■ Fix Entered Characters Automatically > Character set time → Select a speed	OFF
■ Hide Word Suggestion Guidance for 2/NIKO-touch Input Method > 2/NIKO-touch guide → OFF	ON (Show)

Conversion during Message Text Entry

From ► Main Menu ► Messaging ► Settings
 ► Universal Settings ► Text Predict

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Deactivate Pre-text Predict > <i>Pre-text Predict</i> → OFF 	ON
<ul style="list-style-type: none"> ■ Deactivate Time Season Predict > <i>Time Season Predict</i> → OFF 	ON
<ul style="list-style-type: none"> ■ Activate Text Expression > <i>Text Expression</i> → <i>Written Language</i> or <i>Colloquialism</i> 	Normal Phrase

Settings Phone Book

From ► Main Menu ► Phone ► Settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Change Save Location for New Entry > <i>Save Settings</i> → <i>USIM</i> or <i>Ask Every Time</i> 	Phone
<ul style="list-style-type: none"> ■ Change Phone Book Search Method > <i>Search Method</i> → Select a method 	A-KA-SA-TA-NA
<ul style="list-style-type: none"> ■ Change Font Size > <i>Font Size</i> → <i>Phone Book</i> or <i>Call Log</i> → <i>Large</i> 	Standard
<ul style="list-style-type: none"> ■ Forbid Forwarding Phone Book Entry Images > <i>Forwarding Image</i> → OFF 	ON*

* If **ON** is selected, images can be forwarded via Infrared, IC transmission or Bluetooth®.

Settings Voice Dial

From ► Main Menu ► Settings ► Phone Settings
 ► Voice Settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Activate Voice Dial Automatically > <i>Auto Voice Dial</i> → ON 	OFF
<ul style="list-style-type: none"> ■ Activate Voice Dial via Earphone or Bluetooth® Device > <i>Voice Earphone Dial</i> → ON 	OFF

Settings Video Call

Function Menus

From ► Main Menu ► Settings ► Video Call

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Change Incoming Image Quality > <i>Incoming Video Qlty</i> → <i>Quality Prioritized</i> or <i>Motion Prioritized</i> 	Standard
<ul style="list-style-type: none"> ■ Change Outgoing Image > <i>Select Images</i> → Select a category → Highlight <i>Original</i> → [Menu] → <i>Change setting</i> → Select a folder → Select a file → [Play] to view image 	Pre-installed
<ul style="list-style-type: none"> ■ Switch Earpiece On > <i>Loud Speaker</i> → OFF 	ON (Loud Speaker ON)
<ul style="list-style-type: none"> ■ Switch to Voice Call when Video Call Fails > <i>Voice Call Auto Redial</i> → ON 	OFF
<ul style="list-style-type: none"> ■ Toggle Outgoing/Incoming Image Setting > <i>Switch Images</i> → Select an item 	Receiving Priority
<ul style="list-style-type: none"> ■ Monitor Room Remotely > <i>Remote Monitoring</i> (P.2-8) 	—

Engaged Video Call Settings

From ► During a Video Call, [Menu] ► V. Call settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Change Incoming Image Quality > <i>Incoming Video Qlty</i> → <i>Qlty Prioritized</i> or <i>Motion Prioritized</i> 	Standard
<ul style="list-style-type: none"> ■ Change Brightness > <i>Brightness</i> → Select a brightness level 	0
<ul style="list-style-type: none"> ■ Adjust Outgoing Image Color Tone to Lighting Conditions > <i>White balance</i> → Select an environment 	Automatic
<ul style="list-style-type: none"> ■ Change Outgoing Image Color Tone > <i>Color mode set</i> → Select a color tone 	Normal
<ul style="list-style-type: none"> ■ Enhance Image Quality in Low Light Conditions > <i>Night mode</i> → ON 	OFF
<ul style="list-style-type: none"> ■ Set Focus* > <i>Focus</i> → Select a focus type 	Landscape

* Outside Camera only

Settings Digital TV

From **Main Menu** ► **TV** ► **User Settings**

Setting/Operation	Default
Change Display Setting > <i>Display</i> → <i>Display Setting</i> → <i>Visual image+DBC</i> or <i>Enlarged V. image+DBC</i>	V. image+ Caption+ DBC
Change Caption Position in Landscape View > <i>Display</i> → <i>Caption Posit. In W-scr</i> → <i>Upper</i>	Lower
Hide Indicators in Landscape View > <i>Display</i> → <i>Icons</i> → <i>OFF</i>	ON
Change Ticker Setting for Incoming Mail Notification > <i>Display</i> → <i>Mail Ticker Display</i> → <i>Sender+Subject</i> or <i>OFF</i>	Receipt Notification
Forbid Enhancing Frame Rate Automatically > <i>Video</i> → <i>Mobile W-Speed</i> → <i>OFF</i>	ON
Change Image Quality > <i>Video</i> → <i>Image Quality</i> → Select an item	Dynamic
Set Back Light Duration while Watching TV > <i>Display Light</i> → <i>Lighting Duration</i> → Enter duration (min.)	Constant Light
Deactivate Auto Volume > <i>Sound Effect</i> → <i>Auto Volume</i> → <i>OFF</i>	ON
Remaster Sounds from Earphone or Bluetooth® Device > <i>Sound Effect</i> → <i>Remaster</i> ¹ → <i>ON</i>	OFF

Add Listening Effect to Sound from Earphone or Bluetooth® Device > <i>Sound Effect</i> → <i>Listening</i> ¹ → Select an item	OFF
Change Quality of Sound from Earphone or Bluetooth® Device > <i>Sound Effect</i> → <i>Equalizer</i> ¹ → Select an item	Normal
End Recording when Battery Runs Low > <i>Recording</i> → <i>Rec. When Low Battery</i> → <i>Stop Recording</i>	Continue Recording
Start Recording TV Automatically when a Call Comes in while Watching TV > <i>Recording</i> → <i>Rec. Program When Call</i> → <i>ON</i>	OFF
Hide Images on Data Broadcast Sites > <i>Data Broadcasting</i> → <i>Images</i> → <i>OFF</i>	ON
Turn Off Sounds from Data Broadcast/Sites > <i>Data Broadcasting</i> → <i>Sound Effect</i> → <i>OFF</i>	ON
Show Confirmation on Data Broadcast > <i>Data Broadcasting</i> → <i>Reset Settings</i> → <i>YES</i>	–
Set Power Saving Mode² > <i>ECO Mode</i> → <i>YES</i>	OFF
Reset Channel List > <i>Reset Channel Setting</i> → Enter Phone Password → <i>YES</i>	–
Delete Information in Broadcasting Storage Area > <i>Reset Storage Area</i> → (Highlight an affiliated channel →) [Menu] → <i>Delete</i> → <i>Delete this</i> or <i>Delete all</i> (→ For <i>Delete all</i> , enter Phone Password) → <i>YES</i>	–

<p>■ Reset TV Settings > Reset TV Settings → Enter Phone Password → YES</p>	—
<p>■ Check TV Settings > Check TV Settings</p>	—

¹ Remaster/Listening/Equalizer Settings: (P.5-7)

² To cancel ECO Mode, perform same operation. When ECO Mode is set, following settings automatically activate and cannot be changed. When canceled, original settings return.

Mobile W-Speed: OFF

Image Quality: Normal

Remaster: OFF

Listening: OFF

Equalizer: Normal

Settings Camera

- Change settings before capturing images. (P.6-5).
- Some settings are not available depending on camera mode, image size or photo mode.

Camera Settings (Camera Mode/Action Mode)

Camera Mode

From ► **Main Menu** ► **Camera** ► **Camera** ► [Menu]

Action Mode

From ► **Main Menu** ► **Camera** ► **Camera** ► [Video]
 ► [Cont.] ► [Menu]

Setting/Operation	Default
<p>■ Change Camera Mode > CHG camera-mode → Select a mode</p>	—
<p>■ Change Photo Mode > Photo mode (P.6-9)</p>	Camera mode: Intelligent Auto Action mode: Normal
<p>■ Change Image Size > Image size → Select a size</p>	Camera mode: Standby (480x854) Action mode: VGA(480x640)

<ul style="list-style-type: none"> ■ Change Brightness > <i>Camera settings</i> → <i>Brightness</i> → Select a level 	±0
<ul style="list-style-type: none"> ■ Adjust Color Balance According to Lighting Conditions > <i>Camera settings</i> → <i>White balance</i> → Select an item 	Auto
<ul style="list-style-type: none"> ■ Change Color Mode > <i>Camera settings</i> → <i>Color mode set</i> → Select an item 	Normal
<ul style="list-style-type: none"> ■ Change Focus Setting > <i>Camera settings</i> → <i>Focus</i> → Select an item 	Camera mode: Face Detection Action mode: Auto
<ul style="list-style-type: none"> ■ Change Image Quality > <i>Camera settings</i> → <i>Image quality</i> → Select an item 	Fine
<ul style="list-style-type: none"> ■ Deactivate Image Stabilizer (Outside Camera only) > <i>Camera settings</i> → <i>Img. stabilizer</i> → OFF 	Auto
<ul style="list-style-type: none"> ■ Add Frames > <i>Camera settings</i> → <i>Shoot with frame</i> → ON → Select a frame → Capture an image 	OFF
<ul style="list-style-type: none"> ■ Change Shutter Click Sound > <i>Camera settings</i> → <i>Shutter sound</i> → Select an item 	Sound 1
<ul style="list-style-type: none"> ■ Minimize Flicker while Shooting near Fluorescent Light > <i>Camera settings</i> → <i>Flicker correction</i> → <i>Mode 1 (50Hz)</i> or <i>Mode 2 (60Hz)</i> 	Automatically

<ul style="list-style-type: none"> ■ Change Save Location > <i>Storage setting</i> → <i>Store in</i> → <i>microSD</i> 	Phone
<ul style="list-style-type: none"> ■ Set Auto-Save Off > <i>Storage setting</i> → <i>Auto save set</i> → OFF 	ON (Automatically save)
<ul style="list-style-type: none"> ■ Set Auto Shutter On > <i>Auto shutter</i> (☞P.6-7) 	OFF
<ul style="list-style-type: none"> ■ Capture Images with High Sensitivity > <i>High sensitiv.</i> → ON 	OFF
<ul style="list-style-type: none"> ■ Set Flash/Photo Light (Auto-flash) > <i>Flash setting</i> or <i>Photo light set.</i> (☞P.6-9) 	Camera mode: Auto Action mode: OFF
<ul style="list-style-type: none"> ■ Set Auto Timer > <i>Auto timer</i> (☞P.6-7) 	OFF
<ul style="list-style-type: none"> ■ Change Continuous Shooting Setting > <i>Cont. shooting set.</i> (☞P.6-10) 	—
<ul style="list-style-type: none"> ■ Change Viewfinder Size > <i>Display size</i> → <i>Fit in display</i> 	Actual size
<ul style="list-style-type: none"> ■ Hide Display Indicators > <i>Icon</i> → OFF 	ON (Show)
<ul style="list-style-type: none"> ■ View Memory Information > <i>Memory Status</i> 	—

Video Camera Settings (Video Camera Mode)

From **Main Menu** ► **Camera** ► **Video Camera**
 ► [Menu]

Setting/Operation	Default
Change Camera Mode > <i>CHG camera-mode</i> → Select a mode	–
Change Photo Mode > <i>Photo mode</i> (P.6-9)	Normal
Change Image Size > <i>Image size</i> → Select a size	QCIF (176x144)
Change Recording Time > <i>File size setting</i> → <i>Long time</i>	Mail restrict'n(S) (for S! Mail attachment)
Change Brightness > <i>Camera settings</i> → <i>Brightness</i> → Select a level	±0
Adjust Color Balance According to Lighting Conditions > <i>Camera settings</i> → <i>White balance</i> → Select an item	Auto
Change Color Mode > <i>Camera settings</i> → <i>Color mode set</i> → Select an item	Normal
Change Focus Setting > <i>Camera settings</i> → <i>Focus</i> → Select an item	Face Detection
Change Image Quality* > <i>Camera settings</i> → <i>Image quality</i> → Select an item	Normal
Deactivate Image Stabilizer (Outside Camera only) > <i>Camera settings</i> → <i>Img. stabilizer</i> → <i>OFF</i>	Auto

Change Shutter Click Sound > <i>Camera settings</i> → <i>Shutter sound</i> → Select an item	Sound 1
Minimize Flicker while Shooting near Fluorescent Light > <i>Camera settings</i> → <i>Flicker correction</i> → <i>Mode 1 (50Hz)</i> or <i>Mode 2 (60Hz)</i>	Automatically
Change Save Location > <i>Storage setting</i> → <i>Store in</i> → <i>microSD</i>	Phone
Set Auto-Save Off > <i>Storage setting</i> → <i>Auto save set</i> → <i>OFF</i>	ON (Automatically save)
Set Photo Light (Auto-flash) > <i>Photo light set.</i> → <i>ON</i>	OFF
Set Auto Timer > <i>Auto timer</i> (P.6-7)	OFF
Forbid Recording Audio > <i>Movie type set</i> → <i>Video</i>	Normal
Change Viewfinder Size > <i>Display size</i> → <i>Fit in display</i>	Actual size
Change to S! Mail Attachment Mode > <i>Attach S! Mail mode</i> → <i>YES</i>	–
Hide Display Indicators > <i>Icon</i> → <i>OFF</i>	ON (Show)
View Memory Information > <i>Memory Status</i>	–

* Available only when *File size setting* is set to *Long time*

Settings Mobile Widget (Japanese)

From ► Main Menu ► Widget ► Settings

Setting/Operation	Default
■ Deactivate Auto Update > <i>Auto Refresh</i> → OFF	ON (Activate)
■ Activate Auto Roaming Abroad > <i>Auto Roaming</i> → ON	OFF (Deactivate)
■ Hide Confirmation when Roaming Abroad > <i>Roaming Notification</i> → OFF	ON (Show)
■ Forbid Sending/Receiving Cookies > <i>Cookies</i> → OFF	ON (Send/Receive)
■ Delete Cookies > <i>Delete Cookies</i> → YES	—

Settings S! Quick News (Japanese)

Display Settings

From ► Main Menu ► Settings ► Display Settings
► Internal Display ► S! Quick News Settings

Setting/Operation	Default
■ Show Only Unread Items in Standby > <i>Unread/Read Setting</i> → Unread	Unread + Read
■ Change Marquee Speed > <i>Marquee Speed</i> → Fast or Slow	Normal
■ Hide S! Quick News > <i>Display Always</i> → OFF	ON (Show)
■ Image Download > <i>Image Display</i> → ON	OFF

Auto Update/Deleting Information

From ► **Main Menu** ► News/Entertainment
► S! Quick News ► Settings

Setting/Operation	Default
<p>■ Automatically Update Quick News in S! Quick News List^{1 2}</p> <p>> <i>Auto Refresh</i> → S! Quick News → Set update frequency</p>	OFF
<p>■ Automatically Update General News (Once a day)^{1 2}</p> <p>> <i>Auto Refresh</i> → General → ON</p>	OFF
<p>■ Automatically Update Special News (Every four hours)^{1 2}</p> <p>> <i>Auto Refresh</i> → Special → ON</p>	OFF
<p>■ Delete S! Quick News Information</p> <p>> <i>Del S! Quick News List</i> → YES → Enter Phone Password</p>	—

¹ If calls are in progress at update time, auto update does not occur until next update.

² Video Calls are rejected during auto update.

Settings® Bluetooth®

From ► **Main Menu** ► Tools ► Bluetooth
► My Devices Settings

Setting/Operation	Default
<p>■ Set Authentication/Encryption to Send Phone Book Entries</p> <p>> <i>Set Authentications</i> → ON → ON</p>	OFF/OFF
<p>■ Enter Password when Sending All Phone Book Entries</p> <p>> <i>Session Number Setting</i> → ON</p>	OFF
<p>■ Set Duration to Search for Bluetooth® Devices</p> <p>> <i>Time-out to Search</i> → Enter duration (sec.)</p>	05 sec
<p>■ Stop Ringtone Output to Headset/Handsfree Device</p> <p>> <i>Forward Ring Tone</i> → OFF</p>	ON
<p>■ Continue Calls on Handset when Bluetooth® is Disconnected from Headset/Handsfree Device</p> <p>> <i>Disconnection Settings</i> → Continue on the Phone</p>	End the Call
<p>■ Always Make Calls from Handset even when Headset Device is Connected</p> <p>> <i>Dial from Headset</i> → Deactivate</p>	Activate
<p>■ Always Use Handsfree Device to Make/Receive Calls</p> <p>> <i>Handsfree Setting</i> → Handsfree Mode</p>	Private Mode ¹

■ View Bluetooth® Properties

> Device Properties²

¹ In **Private Mode**, device that makes/answers call takes priority.

² Device name, address, class and supported services appear.

To change device name: [Envelope] [Edit]

Settings Messaging

Universal Settings

From ▶ Main Menu ▶ Messaging ▶ Settings
▶ Universal Settings

Setting/Operation	Default
<p>■ Change Font Size*</p> <p>> Font Size → Small or Large</p>	Normal
<p>■ Set Scroll Unit in Text Entry/Preview Window</p> <p>> Scroll Unit → Half Screen or Whole Screen</p>	Single Line
<p>■ Quote Original Message in Reply</p> <p>> Quote Message → ON (S! Mail/SMS) or OFF</p>	ON (S! Mail)
<p>■ Request Delivery Confirmation (Available when messaging to SoftBank handset numbers)</p> <p>> Delivery Report → ON</p>	OFF
<p>■ Change Anti-Spam Measures</p> <p>> Anti-Spam Measures → Report Spam → [Edit] → Edit recipient address → [Envelope] [Finish] → YES</p>	stop@meiwaku.softbankmobile.co.jp
<p>■ Reset Anti-Spam Measures</p> <p>> Anti-Spam Measures → Report Spam → [Y] [Menu] → Reset Address → [Envelope] [Finish] → YES</p>	—
<p>■ Set Auto Delete Off (For Sent/Unsent)</p> <p>> Auto Sent Msg Del → OFF</p>	ON

<ul style="list-style-type: none"> ■ Set Auto Delete Off (For Incoming Mail) > <i>Auto Received Msg Del</i> → <i>ON (Read Msg Only)</i> or <i>OFF</i> 	ON (All Msg)
<ul style="list-style-type: none"> ■ Hide Incoming Mail Notification while Other Function is Active > <i>Receiving Display</i> → <i>Operation Preferred</i> 	Alarm Preferred (Show)
<ul style="list-style-type: none"> ■ Hide Outgoing Mail Display > <i>Sending Display</i> → <i>OFF</i> 	ON (Show)

* Character size in SMS or S! Mail subject field does not change. Check preview to see actual size.

S! Mail Settings

From ► **Main Menu** ► **Messaging** ► **Settings**
 ► **S! Mail Settings**

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Set Reply-to Address > <i>Sending Options</i> → <i>Set Reply-To</i> → <i>ON</i> → Select reply-to address entry field → Select a reply-to address or enter directly → [Finish] 	OFF (Not set)
<ul style="list-style-type: none"> ■ Set Signature > <i>Sending Options</i> → <i>Set Signature</i> → Select an item (→ <i>ON</i> or <i>ON When New</i> → Select signature entry field → Enter signature → [Finish]) 	OFF (Not set)
<ul style="list-style-type: none"> ■ Set Auto-Compression for Image Files Off > <i>Sending Options</i> → <i>Image Compression</i> → <i>OFF</i> 	ON ¹
<ul style="list-style-type: none"> ■ Set S! Mail Download Condition (within Japan) > <i>Incoming Options</i> → <i>Home Auto Setting</i> → <i>Download by Numbers</i> or <i>Manual Retrieval</i> 	Auto Download All
<ul style="list-style-type: none"> ■ Retrieve S! Mail Manually while Abroad > <i>Incoming Options</i> → <i>Roaming Auto Setting</i> → <i>Manual Retrieval</i> 	Auto Download
<ul style="list-style-type: none"> ■ Play Attached Music Files Automatically² > <i>Incoming Options</i> → <i>Auto Sound Play</i> → <i>ON</i> 	OFF (Not play back)

¹ JPEG files only

² When multiple sound files are attached, the first file plays.

SMS Settings

From ► **Main Menu** ► **Messaging** ► **Settings**
 ► **SMS Settings**

Setting/Operation	Default
■ Change SMS Center Number* > <i>Message Center</i> → Enter SMS Center number	+819066519300
■ Set Input Character to English > <i>Set Input Character</i> → <i>English (160char.)</i>	Japanese (70char.)

* Changing Message Center number may disable SMS.

Settings Internet

Browser Display Settings

Yahoo! Keitai

From ► **Main Menu** ► **Yahoo!** ► **Set Yahoo! Keitai**

PC Site Browser

From ► **Main Menu** ► **Yahoo!** ► **PC Site Browser**
 ► **Set PC Site Browser**

Setting/Operation	Default
■ Font Size > <i>Font Size</i> → <i>Large</i> or <i>Small</i>	Normal
■ Scroll Unit > <i>Scroll Unit</i> → <i>Whole Screen</i> or <i>Half Screen</i>	Single Line
■ Images Off > <i>Downloads</i> → <i>Display Image</i> → <i>OFF</i>	ON
■ Sound Off > <i>Downloads</i> → <i>Play Sounds</i> → <i>OFF</i>	ON
■ Hide Warning Messages when Activating PC Site Browser or Switching to Yahoo! Keitai* > <i>Warning Messages</i> → <i>PC Site Browser</i> (when activating) or <i>Yahoo! Keitai</i> (when switching) → <i>OFF</i>	ON

* PC Site Browser only

Memory Manager & Reset

Yahoo! Keitai

From ► **Main Menu** ► Yahoo! ► Set Yahoo! Keitai

PC Site Browser

From ► **Main Menu** ► Yahoo! ► PC Site Browser
► Set PC Site Browser

Setting/Operation	Default
■ Clear Cache > <i>Memory Manager</i> → Clear Cache → YES	–
■ Delete Cookies > <i>Memory Manager</i> → Delete Cookies → YES	–
■ Delete User ID or Password Entered when Authentication is Required > <i>Memory Manager</i> → Delete Certificates → YES	–
■ Set Data Storage Location to microSD Card* > <i>Save Settings</i> → microSD	Phone

* Yahoo! Keitai Browser only

Security Settings

Yahoo! Keitai

From ► **Main Menu** ► Yahoo! ► Set Yahoo! Keitai
► Security

PC Site Browser

From ► **Main Menu** ► Yahoo! ► PC Site Browser
► Set PC Site Browser ► Security

Setting/Operation	Default
■ Set Auto Send Off for Manufacturer's Number (for Authentication) > <i>Manufacture Number</i> → OFF	ON (Send)
■ Forbid Sending Referer Information > <i>Send Referer</i> → OFF	ON (Send)
■ Select whether or Not to Allow Cookies to Be Stored on Handset > <i>Cookies</i> → OFF or Ask Every Time	ON (Save)
■ Select whether or Not to Run Scripts in Yahoo! Keitai ¹ > <i>Script</i> → Select an item	Ask before Connect
■ Select whether or Not to Run Scripts in PC Site Browser ² > <i>Script</i> → Select an item	ON (Run)
■ View Server Certificates Issued by Certificate Authorities > <i>Root Certificates</i> → Select an item	–

<ul style="list-style-type: none"> ■ Select whether or Not to Retain Authentication Information > <i>Certificate Retention</i> → <i>Always Keep</i> or <i>Not Keep</i> 	Keep While Browsing
<ul style="list-style-type: none"> ■ Hide Confirmation when Connecting to Secure Site > <i>Secure Prompt</i> → <i>OFF</i> 	ON

¹ Yahoo! Keitai Browser only

² PC Site Browser only

Reset

Yahoo! Keitai

From ► **Main Menu** ► **Yahoo!** ► **Reset**


PC Site Browser

From ► **Main Menu** ► **Yahoo!** ► **PC Site Browser** ► **Reset**

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Reset Browser Settings > <i>Restore Defaults</i> → <i>YES</i> → Enter Phone Password 	–
<ul style="list-style-type: none"> ■ Initialize Browser > <i>Initialized Browser</i> → <i>YES</i> → Enter Phone Password 	–

Settings S! Appli

From ► **Main Menu** ► **S! Appli** ► **S! Appli Settings**

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Volume > <i>Volume</i> →  to adjust volume 	Level 4
<ul style="list-style-type: none"> ■ Backlight On/Off¹ > <i>Display Backlight</i> → <i>Always ON</i> or <i>Always OFF</i> 	Follow General Setting ²
<ul style="list-style-type: none"> ■ Deactivate Vibration > <i>Vibration</i> → <i>OFF</i> 	ON (Activate)
<ul style="list-style-type: none"> ■ Update S! Appli Information on microSD Card from Another Handset > <i>Synchronize microSD</i> 	–

¹ Back Light does not go out completely when S! Appli is active.

² Back Light Time setting (P.18-5) applies.

Settings Osaifu-Keitai®

From ► **Main Menu** ► **Tools** ► **Osaifu-Keitai** ► **IC Card Settings**

Setting/Operation	Default
<ul style="list-style-type: none"> ■ View IC Card Status > <i>IC Card Status</i> 	–
<ul style="list-style-type: none"> ■ Disable Handset Response to Commands from Reader/Writer > <i>Interface Settings</i> → Enter Phone Password → Select an item → <i>OFF</i> 	All ON

Settings S! GPS Navi Settings

From ► Main Menu ► Tools ► S! GPS Navi ► NAVI Settings

Setting/Operation	Default
<p>■ Select Navi Appli to Activate > <i>Select Navi Appli</i> → Select a Navi Appli</p>	NAVITIME
<p>■ Save Current Map URL > <i>Map URL Settings</i> → Highlight <Not Recorded> → [Edit] → <i>URL Name</i> → Enter a name → <i>Map URL</i> → Enter a URL ("http://" or "https://") → [Finish]</p>	-
<p>■ Select Map URL > <i>Map URL Settings</i> → Select a name</p>	NAVITIME
<p>■ Edit/Delete Map URL* > <i>Map URL Settings</i> → Highlight a name → [Menu] → <i>Edit</i> or <i>Delete</i></p>	-
<p>■ Activate to Lock Positioning Function > <i>Positioning Lock</i> → Enter Phone Password → <i>ON</i></p>	OFF
<p>■ Hide Confirmation when Sending Location Information > <i>Send Location Info</i> → Enter Phone Password → <i>Send without Check</i> (Send location information without showing confirmation)</p>	Send with Check (Show confirmation every time)
<p>■ Hide Notification of Incoming Location Provision Request > <i>Notification Setting</i> → Enter Phone Password → <i>OFF</i></p>	ON

■ **Set Positioning Ringtone/Vibrator/Ringtone Duration**

> *Recv Location Request* → *Ringtone*,
Vibration Alert or *Ringtone Duration* →
 Set individual item

Ringtone:
 Pattern 2
 Vibrator Alert:
 Pattern 1
 Ringtone
 Duration:
 05 seconds

* Pre-installed NAVITIME cannot be edited or deleted.

Default Settings

Default settings vary by handset color as below.

- For operations, refer to respective setting sections.

Setting		Moonlight Purple	Pink	Champagne	Black	
Notification Light (☞P.18-10)	Incoming	Voice Call	A-Signal	B-Signal	C-Signal	D-Signal
		Video Call	A-Signal	B-Signal	C-Signal	D-Signal
		Message	A-Rhythm	B-Rhythm	C-Rhythm	D-Rhythm
	Slide	Slide Open	Slide-01	Slide-02	Slide-03	Slide-04
		Slide Close	Slide-05	Slide-06	Slide-07	Slide-08
Speed Selector		Rotation-01	Rotation-04	Rotation-07	Rotation-10	
Display Settings (☞P.18-3 to 6)	Stand-by Display	Purple (Image)	Pink (Image)	Champagne (Image)	Black (Image)	
	Stand-by Clock (Pattern)	Pattern 4	Pattern 4	Pattern 1	Pattern 4	
	Icon Clock	Pattern 4	Pattern 4	Pattern 1	Pattern 4	
	Outgoing Image (Call/Message)	Purple	Pink	Pink	Black	
	Incoming Image (Call/Message)	Purple	Pink	Pink	Black	
	Menu Icons	Purple	Pink	Champagne	Original	
	Color Scheme	Purple	Pink	Gold	Black	

Confirming Settings

Main Menu ► Settings ► Phone Settings
► Confirm Settings

■ Confirmable Settings

- Back Light Time
 - View Blind
 - Volume
 - Shikkari Talk
 - Noise Reduction
 - Select Network
 - Speed Selector Setting
 - Motion Control Setting
- ★ appears for items changed from default settings.

