

Internet Services	6-2
Service Basics	6-2
Yahoo! Keitai	6-3
Using Yahoo! Keitai.....	6-3
PC Sites	6-5
Browsing PC Sites.....	6-5
Browsing.....	6-6
Basic Operations	6-6

Bookmarks & Saved Pages	6-9
Using Bookmarks & Saved Pages....	6-9
RSS Feeds	6-10
Updating Blogs & News.....	6-10
Additional Functions	6-11
Troubleshooting.....	6-19

6

Internet



Service Basics

Access the Mobile Internet via Yahoo! Keitai, or view PC Internet sites via PC Site Browser or Direct Browser.

- Service requires a separate contract; retrieve Network Information to use these services.
- For more about Yahoo! Keitai, see SoftBank Mobile Website (**P.17-23**).
- Outside Japan, Yahoo! Keitai and PC Site Browser cannot be used over Wi-Fi.


Transmission/Information Fees

Some page content may automatically activate Internet connection incurring transmission fees. Information fees may also apply.

Security

Electronic certificates are saved on handset to support SSL (encryption protocol for Internet transmissions of important/sensitive information).

Opening Secure Pages

- A confirmation appears. Choose **Yes** and press  to proceed.
- When a security notice appears, subscribers must decide for themselves whether or not to open the page. Opening secure pages constitutes agreement to the terms of usage. SoftBank, VeriSign Japan, Cybertrust, Entrust Japan, GMO GlobalSign, RSA Security, SECOM Trust Systems and Comodo Japan cannot be held liable for any damages associated with the use of SSL.

Advanced

-   Clearing cache (temporarily saved information)  Clearing authentication information (And more on **P.6-11**)
-  Resetting browser settings and stored information (Bookmarks, Saved Pages, etc.) (And more on **P.6-18**)



Using Yahoo! Keitai


Access Yahoo! Keitai sites via 3G Network or Wi-Fi.

- Subscription to Keitai Wi-Fi is required to use Yahoo! Keitai over Wi-Fi.
- To use Wi-Fi, complete related settings beforehand.
- Within registered access point range, handset connects to the Internet via Wi-Fi automatically whenever possible; switch between 3G and Wi-Fi manually.
- Network does not switch to Wi-Fi automatically if Wi-Fi signal reception is poor or after switching it to 3G manually.
- Internet pages may not open depending on connection/Server status, etc.


Using Yahoo! Keitai Main Menu

Browse Yahoo! Keitai sites from Yahoo! Keitai Main Menu.


1 ➔ Connection starts

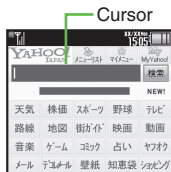

Internet Page


- Yahoo! Keitai Main Menu appears.
- To disconnect, press .

2 ➔ Highlight menu item ➔

- Corresponding page opens.
- Repeat  to open additional links.

3 ➔ Yes ➔ ➔ Page closes



Returning to Previous Pages

[Internet Page]  ➔ Previous page opens

- Follow these steps to return to the initial page:

[Internet Page]  ➔ Forward ➔ 

Returning to Yahoo! Keitai Main Menu

[Internet Page]  ➔ Yahoo! Keitai ➔ 


User Authentication

Enter user ID or password ➔  ➔ 



Accessing *メニューリスト* Directly

 ➔ Yahoo! ➔  ➔ Menu List ➔ 

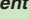Switching between 3G and Wi-Fi Manually

[Internet Page]  ➔ Convenient Functions ➔  ➔ Switch Wi-Fi/3G ➔  ➔ Select network ➔ 

Advanced

-   Switching browsers (P.6-11)



Playing Media during Download

Play files while they transfer from the server (progressive download) or stream media files.

- Save progressive download files of 10 MB or less after playback as needed.
- These media files cannot be saved even after playback:
 - Progressive download files larger than 10 MB
 - Streaming media files
- Fast forward/rewind is not available for progressive download files larger than 10 MB.
- Packet transmission fees apply (except when downloading via Wi-Fi) even while playback is paused.

1 On a page, select file → ●

- Playback starts.

Pausing Playback

Press ●

- To resume playback, press ●.
- Progressive download continues even while playback is paused. For files larger than 10 MB, progressive download stops if playback is paused for a period of time.

Stopping Playback

Back → ●

Stopping Progressive Download

 
- For files of 10 MB or less, progressive download continues even when playback is paused or stopped. To stop download, press Back to return to the previous page, then press Back again.

Playback Sound

- Sound is heard from Speaker/Headphones regardless of Sound Output setting.

Using History**1** ● → Yahoo! → ● → History → ●**2** Select record → ● → Connection starts

- Corresponding page opens.

3 ● → Yes → ● → Page closes**Entering URLs Directly****1** ● → Yahoo! → ● → Enter URL → ●**2** Enter URL → ● → Connection starts

- Corresponding page opens.

3 ● → Yes → ● → Page closes**Advanced**

- Using previously entered URLs ● Deleting History records ● Sorting History records (And more on P.6-11)
- Customizing media playback settings (And more on P.6-15)



Browsing PC Sites

View PC Internet sites via PC Site Browser or Direct Browser. (Direct Browser requires Wi-Fi connection.)

- To use Wi-Fi, complete related settings beforehand.
- Internet pages may not open depending on connection/Server status, etc.
- When using PC Site Browser within registered access point range, handset connects to the Internet via Wi-Fi automatically whenever possible; switch between 3G and Wi-Fi manually.
- Network does not switch to Wi-Fi automatically if Wi-Fi signal reception is poor or after switching it to 3G manually.
- Browsing PC sites via PC Site Browser may incur high charges depending on subscribed price plan.
- Subscription to Keitai Wi-Fi is required to use PC Site Browser over Wi-Fi.
- PC Site Browser and Direct Browser share Bookmarks, Saved Pages, History records, etc.

1 ● ➔ **Yahoo!** ➔ ●

2 **PC Site Browser or Direct Browser** ➔ ●

3 **Homepage** ➔ ● ➔ **Connection starts**



Internet Page

- Yahoo! JAPAN Home opens.
- If a message appears, follow onscreen prompts.
- To disconnect, press (Ⓜ).

4 **Highlight menu item** ➔ ●

- Corresponding page opens.
- Repeat 4 to open additional links.

5 (Ⓜ) ➔ **Yes** ➔ ● ➔ **Page closes**

Direct Browser

- Use this Wi-Fi-based browser to view PC sites without using SoftBank 3G Network service.

Returning to Previous Pages

[Internet Page] (Ⓜ) ➔ **Previous page opens**

- Follow these steps to return to the initial page:

[Internet Page] (Ⓜ) ➔ **Forward** ➔ ●

Returning to Yahoo! JAPAN Home

[Internet Page] (Ⓜ) ➔ **Homepage** ➔ ●

User Authentication

Enter user ID or password ➔ ● ➔ (Ⓜ)

Using History

In (Ⓜ), **History** ➔ ● ➔ **Select record** ➔ ●

Entering URLs Directly

In (Ⓜ), **Enter URL** ➔ ● ➔ **Enter URL** ➔ ●

Hiding Softkeys

[Internet Page] (Ⓜ) ➔ **Convenient Functions** ➔ ● ➔ **Softkey Area** ➔ ● ➔ **Off** ➔ ●

Switching between 3G and Wi-Fi Manually (PC Site Browser)

[Internet Page] (Ⓜ) ➔ **Convenient Functions** ➔ ● ➔ **Switch Wi-Fi/3G** ➔ ● ➔ **Select network** ➔ ●

Advanced

- Switching browsers
- Using previously entered URLs
- Deleting History records
- Opening History properties (P.6-11)
- Showing navigation map for continuous scroll
- Changing scroll unit
- Hiding PC Site Browser messages
- Setting up proxy
- Setting search engine URLs (And more on P.6-14)




Basic Operations

Page Browsing

Scrolling Pages


If page content continues beyond view, use to scroll pages.

Long Press to scroll continuously.

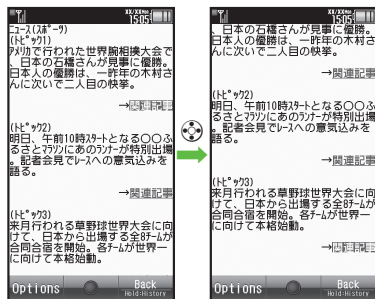

Switching Frames

On framed pages, Long Press to switch active frame.

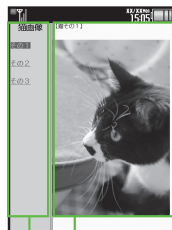

Frames

- In pointer navigation, point to a frame and press to select it.
- Otherwise, use to select one.
- Alternatively, tap a frame to select it.

Viewing Single Frame

[Internet Page] Select frame

Convenient Functions

Frame In

- To return, press .

Tabbed Browsing

 
Open another page in a new tab and switch between tabs.

Opening a New Tab

1 On a page, select menu item

Tab Menu

2 Open in New Tab



Switching Tabs

1 (Long) **Select tab**

- In pointer navigation, point to a tab and press to open it.
- Alternatively, tap a tab to open it.

Closing Tabs

(Long) **Select tab**

Tab Menu **Close Tab**

or **Close All Other Tabs**


Advanced

- Looking up copied words in dictionaries
- Saving files to Data Folder
- Changing Font Size
- Enlarging specific areas
- Disabling automatic image display/sound playback
- Changing scroll unit (And more on P.6-12 - 6-14)

Selecting Items in Enlarged View

Enlarge area to select items with finger.

1 On a page, Long Touch area

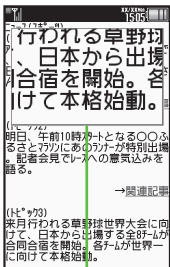

Enlarged View

2 Drag finger to highlight item in enlarged view → Release

Enlarging Areas in Pointer Navigation
[Internet Page] Point to area →

(Long)

- Use to move pointer in enlarged view; highlight item and press to execute it.
- To close enlarged view, press a key other than .

Selecting Text

 
Activate pointer navigation to enable text selection (Drag Mode). Select text to copy or look up words in dictionaries.

- Text may not be selectable or linked page may open depending on the site or page.
- Follow these steps to use a dictionary:

1 On a page, point to first character → (Long)

- Drag Mode is activated.

2 Highlight text range



3

- Text range remains unchanged even when pointer is moved.

4 → Select dictionary

- Dictionary opens with text inserted.

5 Search → → Select word, etc. →

Starting Over


After 3, point to first character →

→ From 2



Additional Page Operations

Enter text or select/execute items.

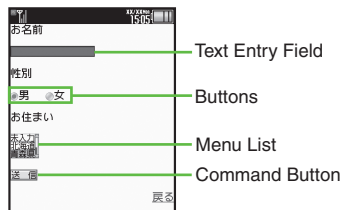

Text Entry

1 On a page, select text entry field →

2 Enter text →
 • Internet page returns.

Using Entered Text (Input Memory)

[Internet page] Select text entry field
 → → → *Insert/Font Size* →
 → *Input Memory* → → Select text
 →

Pull-down Menu Item Selection

1 On a page, select menu list field →

2 Select item →

When Multiple Selection is Supported

• Select items as needed and press .

Page Item Indicators

Selection Items

Buttons or boxes appear.

1 On a page, select button or box →



• / changes to / .

Execution Items

Execute the assigned command.

1 On a page, select command
 →



Using Bookmarks & Saved Pages

Bookmarks

Bookmark sites for quick access.

Saving Bookmarks

- 1 On a page, **Bookmarks** **<Add New Entry>**
 - **<Add New Entry>** appears in gray for unsavable pages.

- 2 Check/edit URL

- 3 Check/edit title

- 4 Save

Opening Bookmarks

- 1 **Yahoo!** **Bookmarks**



- 2 Select title
 - Corresponding page opens.

Switching Bookmarks Lists

After 1, **Change List** **Select type**

Opening Bookmarks Online

[Internet Page] **Bookmarks** **Select title**

Saved Pages

Save page content; handset opens saved pages without connecting to the Internet.

Saving Pages

- 1 On a page, **Saved Pages** **Save**
 - **Save** appears only for savable pages.

- 2 Check/edit title

Opening Saved Pages

- 1 **Yahoo!** **Saved Pages**



- 2 Select page
 - Corresponding page opens.

Switching Saved Pages Lists

After 1, **Change List** **Select type**

Opening Saved Pages Online

[Internet Page] **Saved Pages** **Open List** **Select page**

Advanced

- Deleting titles Editing titles Changing title order Sorting titles into folders Deleting pages Editing page titles Changing page order (And more on P.6-15 - 6-16)



Updating Blogs & News

Register RSS-compatible sites; view content updates without opening source sites.

Packet transmission fees apply (except when handling RSS feeds via Wi-Fi).

Subscribing to RSS Feeds

Indicator below appears for RSS-compatible sites.



RSS Indicator

Available for PC Site Browser and Direct Browser.

- 1 On a compatible page, → **Register In RSS Feed** →
- 2 Select feed → (/) → **Complete selection** →
- 3 **Save** →
 - Choose **Yes** to update immediately or **No** and press .

Via RSS Icons

Use RSS icons to subscribe to RSS feeds from sites that are not RSS-compatible. Available for PC Site Browser and Direct Browser.

- 1 On a page, select icon →
- 2 **Yes** → → **Save** →

Checking Updates

Follow these steps to update all feeds:

- 1 → **Yahoo!** →
- 2 **PC Site Browser** → → **RSS Feed** →



RSS Feed List

- 3 **Reload All** → →
- 4 **Yes or No** →
- 5 **Select feed** →



Title List

- 6 **Select title** →
 - Information appears.

Updating Single RSS Feeds

[RSS Feed List] Select feed → → **Reload** → → → **Yes or No** →

Accessing Source Sites

[Title List] Select title → → **Select linked title** → → **Yes** → → → **Yes or No** →

Advanced

- Disabling feed updates
- Sorting feeds into folders
- Deleting feeds
- Sorting feeds
- Opening feed properties
- Exchanging feeds with other devices
- Sending feeds via mail (P.6-17)



Connecting & Browsing

General

Switching browsers	<p>On a page, → Switch Browser → → This Page or Linked Page → → Select browser → → </p> <ul style="list-style-type: none"> • A confirmation may appear when switching to PC Site Browser.
Using previously entered URLs	<p>Start Here → → Yahoo! → → → See below</p> <p>Yahoo! Keitai Enter URL → → → → URL Entry Log → → </p> <p>PC Site Browser & Direct Browser PC Site Browser or Direct Browser → → </p> <p>Enter URL → → → → URL Entry Log → → </p> <p>Select URL → → → </p>

History

Follow these steps to switch History lists:

→ **Change List** → → **Select browser** → →

Deleting History records	<p>Start Here → → Yahoo! → → → History → → </p> <p>See below</p> <p>One Record Select record → → → Delete → → → Yes → → </p> <p>All Records → Delete All → → → Enter Handset Code → → → Yes → → </p>
--------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Opening History properties	→ Yahoo! → → → History → → → Select record → → → Details → →
Sorting History records	→ Yahoo! → → → History → → → → Sort → → → By Domain or By Date → →
Sending History records via mail	→ Yahoo! → → → History → → → Select record → → → Send URL → → → S! Mail or SMS → → → Complete message → → <ul style="list-style-type: none"> • S! Mail Composition window opens automatically depending on character count.

Memory Operation

For PC Site Browser and Direct Browser, perform the following sequence instead of **Browser Settings** → .

PC Site Browser (or Direct Browser) → → → **PC Site Browser Settings (or Set Direct Browser)** → →

Clearing cache (temporarily saved information)	→ Yahoo! → → → Browser Settings → → → Memory Operation → → → Delete Cache → → → Yes → →
Clearing cookies	→ Yahoo! → → → Browser Settings → → → Memory Operation → → → Delete Cookies → → → Yes → →
Clearing authentication information	→ Yahoo! → → → Browser Settings → → → Memory Operation → → → Delete Auth Info → → → Yes → →



Page Operations

■ All Browsers

Using linked info	Dialing Numbers On a page, highlight number → ● → <i>Call or Video Call</i> → ●
	Sending Messages On a page, highlight number or mail address → ● → <i>Create Message</i> → ● → <i>S! Mail or SMS</i> → ● → <i>Complete message</i> → ▾
Copying text	On a page, ☰ → <i>Copy Text</i> → ● → Select first character → ● → <i>Highlight text range</i> → ●
Looking up copied words in dictionaries	On a page, ☰ → <i>Convenient Functions</i> → ● → <i>Copy & Search Dict.</i> → ● → Select first character → ● → <i>Highlight text range</i> → ● → Select dictionary → ● → <i>Search</i> → ● → Select word, etc. → ●
Using Web Search	On a page, ☰ → <i>Convenient Functions</i> → ● → <i>Web Search</i> → ● → Enter search text → ●
Searching current page	On a page, ☰ → <i>Convenient Functions</i> → ● → <i>Search</i> → ● → Enter search text → ● ● Press ● to jump to next search result, if any.
Jumping to page top/bottom	On a page, ☰ → <i>Convenient Functions</i> → ● → <i>Jump In Page</i> → ● → <i>Page Top or Page Bottom</i> → ●
Opening page properties	On a page, ☰ → <i>Convenient Functions</i> → ● → <i>Details</i> → ● → Select item → ●
Sending URLs via mail	On a page, ☰ → <i>Convenient Functions</i> → ● → <i>Send URL</i> → ● → <i>S! Mail or SMS</i> → ● → <i>Complete message</i> → ▾ ● S! Mail Composition window opens automatically depending on character count.

Handling Flash® files

[Start Here] On a page, ☰ → *Convenient Functions* → ● → *Flash®Menu* → ● → See below

Pausing/Playing

Pause, Resume or Replay → ●

Selecting Image Quality

Quality → ● → Select quality → ●

Saving files to Data Folder

[Start Here] On a page, ☰ → *Save Items* → ● → See below

Files on Page

Select file → ● → *Save* → ● → Enter name → ● → *Save here* → ●

- Some files are saved automatically.
- End memory-consuming operations (TV recording, etc.) beforehand.
- Confirm signal is strong, battery is adequately charged and that there is enough free memory beforehand.

Background Images

Save Background Image → ● → *Save* → ● → Enter name → ● → *Save here* → ●

Updating page content

On a page, ☰ → *Reload* → ●
● To update content in Saved Pages, open a page and follow the steps above.

Changing encoding to read garbled text

On a page, ☰ → *Settings* → ● → *Char-code* → ● → Select option → ●

Opening function shortcuts

On a page, ☰ → *Help* → ●



■ Yahoo! Keitai

Changing Font Size	On a page, 3 (Long) to enlarge or 1 (Long) to reduce
--------------------	--------------------------------------------------------------------

■ PC Site Browser & Direct Browser

Switching view	On a page, ☰ → <i>PC Screen or Small Screen</i> → ● <ul style="list-style-type: none"> In Small Screen view, PC sites are redesigned to fit Display.
Zooming on pages (Zoom Factor)	On a page, 3 (Long) to enlarge or 1 (Long) to reduce
Jumping to specific locations	On a page, 5 (Long) → Quick Movement map appears → Select target location → ●
Enlarging specific areas	On a page, point to area → 7 (Long) <ul style="list-style-type: none"> Use ☒ to move pointer in enlarged view; highlight item and press ● to execute it. To close enlarged view, press a key other than ☒.

Internet Page Settings

■ All Browsers

For PC Site Browser and Direct Browser, perform the following sequence instead of **Browser Settings** → ●.

PC Site Browser (or Direct Browser) → ● → **PC Site Browser Settings (or Set Direct Browser)** → ●

Disabling automatic image display/sound playback	Start Here ● → Yahoo! → ● → Browser Settings → ● → Downloads → ● → See below
	Image Display <i>Images</i> → ● → <i>Do not Show</i> → ● Sound Playback <i>Sounds</i> → ● → <i>Do not Play</i> → ●
Changing Font Size	● → Yahoo! → ● → Browser Settings → ● → Font Size → ● → Select size → ●
Using pointer navigation	Start Here ● → Yahoo! → ● → Browser Settings → ● → Cursor Settings → ● → See below
	Activating <i>Cursor Mode Settings</i> → ● → <i>Normal Mode</i> → ● Changing Pointer Speed <i>Speed Settings</i> → ● → Select speed → ●
Using Memory Card as primary download storage	● → Yahoo! → ● → Browser Settings → ● → Download to → ● → Prefer Card → ● <ul style="list-style-type: none"> Some files may be saved to handset regardless of this setting.



■ Yahoo! Keitai

Changing scroll unit ● → *Yahoo!* → ● → *Browser Settings* → ●
 → *Scroll Unit* → ● → *Select unit* → ●

■ PC Site Browser & Direct Browser

For Direct Browser, perform the following sequence instead of *PC Site Browser* → ● → *PC Site Browser Settings* → ●.
Direct Browser → ● → *Set Direct Browser* → ●

Showing navigation map for continuous scroll ● → *Yahoo!* → ● → *PC Site Browser* → ● →
PC Site Browser Settings → ● → *Scroll Settings*
 → ● → *Page Navigation* → ● → *On* → ●

Changing scroll unit ● → *Yahoo!* → ● → *PC Site Browser* → ● →
PC Site Browser Settings → ● → *Scroll Settings* → ● → *Scroll Unit* → ● → *Select unit* → ●

■ PC Site Browser

Hiding PC Site Browser messages ● → *Yahoo!* → ● → *PC Site Browser* → ● →
PC Site Browser Settings → ● → *Warning Message* → ● → *Off* → ●

■ Direct Browser

Restricting Direct Browser use ● → *Yahoo!* → ● → *Direct Browser* → ● →
Set Direct Browser → ● → *Direct Browser Lock* → ● → *On* → ● → *Enter Administrator Code* → ●

Setting up proxy	[Start Here] ● → <i>Yahoo!</i> → ● → <i>Direct Browser</i> → ● → <i>Set Direct Browser</i> → ● → <i>Proxy Setting</i> → ● → <i>Enter Administrator Code</i> → ● → <i>Use</i> → ● → <i>See below</i>
	Entering Address <i>Proxy Address</i> → ● → <i>Enter address</i> → ● →
	Entering Port Number <i>Port Number</i> → ● → <i>Enter number</i> → ● →
Editing proxy settings	Specifying Addresses to Bypass Proxy <i>Apply Address</i> → ● → ● → <i>Enter address</i> → ● →
	● → <i>Yahoo!</i> → ● → <i>Direct Browser</i> → ● → <i>Set Direct Browser</i> → ● → <i>Proxy Setting</i> → ● → <i>Enter Administrator Code</i> → ● → <i>Use</i> → → <i>Select item</i> → ● → <i>Edit</i> →
Changing home page	● → <i>Yahoo!</i> → ● → <i>Direct Browser</i> → ● → <i>Set Direct Browser</i> → ● → <i>Homepage Settings</i> → ● → <i>Enter URL</i> → ●
Setting search engine URLs	[Start Here] ● → <i>Yahoo!</i> → ● → <i>Direct Browser</i> → ● → <i>Set Direct Browser</i> → ● → <i>Search Page</i> → ● → <i>See below</i>
	Adding <Empty> → ● → ● → <i>Enter URL</i> → ●
	Changing <i>Select URL</i> → ●
	Editing <i>Select URL</i> → → ● → <i>Edit</i> → ●



Streaming & Progressive Download

General

Customizing media playback settings	<p>Start Here During playback, → Settings → </p> <p>→ See below</p>
	<p>Changing Playback Size</p> <p>Display Size → → Select size → </p> <ul style="list-style-type: none"> • Playback size may not change depending on file.
	<p>Setting Backlight Status</p> <p>Backlight → → Select option → </p> <ul style="list-style-type: none"> • Selecting Normal Settings applies Display Backlight settings.
	<p>Adjusting Sound Effects</p> <p>Sound Effects → → Select effect → </p>

Streaming

Streaming from Media Player	<p>Start Here → Entertainment → → Media Player → → Streaming → → See below</p>
	<p>Resuming from Stopped Point</p> <p>Last Played → </p>
	<p>Using Bookmarks</p> <p>Bookmarks → → Select title → </p>
Switching networks during media playback	<p>During playback, → Switch Wi-Fi/3G → </p> <p>→ Select network → </p>

Bookmarks

Deleting titles	<p>Start Here → Yahoo! → → Bookmarks → </p> <p>→ See below</p>
	<p>One Title</p> <p>Select title → → Delete → → Yes → </p>
	<p>All Titles</p> <p> → Delete All → → Enter Handset Code</p> <p>→ → Yes → </p>
Editing titles	<p> → Yahoo! → → Bookmarks → → </p> <p>Select title → → Edit → → Title: → → </p> <p>Enter title → → </p>
Editing bookmarked URLs	<p> → Yahoo! → → Bookmarks → → </p> <p>Select title → → Edit → → URL: → → </p> <p>Edit → → </p>
Sending bookmarked URLs via mail	<p> → Yahoo! → → Bookmarks → → </p> <p>Select title → → Send → → As Message</p> <p>→ → S! Mail or SMS → → Complete message → </p> <ul style="list-style-type: none"> • S! Mail Composition window opens automatically depending on character count.
Changing title order	<p> → Yahoo! → → Bookmarks → → </p> <p>Select title → → Change Order → → </p> <p>Select target location → </p>
Opening title properties	<p> → Yahoo! → → Bookmarks → → </p> <p>Select title → → Details → </p>



Sorting titles into folders

Start Here	→	Yahoo!	→	Bookmarks	→	See below
Creating Folders						
Create Folder	→	Enter name	→			
Moving to Folders						
Select title	→	Move	→	Select folder	→	Move
Moving from Folders						
Select folder	→	Select title	→	Move	→	Move
Renaming Folders						
Select folder	→	Rename	→	Enter name	→	
Deleting All Titles within a Folder						
Select folder	→	Select title	→	Delete All	→	Enter Handset Code
→ Yes						
Deleting Folders						
Select folder	→	Delete	→	Enter Handset Code	→	Yes

Saved Pages

Start Here	→	Yahoo!	→	Saved Pages	→	See below
Deleting pages						
One Page						
Select page	→	Delete	→	Yes	→	
All Pages						
Delete All	→	Enter Handset Code	→	Yes	→	
Editing page titles						
Yahoo!	→	Saved Pages	→	Select page	→	Rename
→ Enter title						
Changing page order						
Yahoo!	→	Saved Pages	→	Select page	→	Change Order
→ Select target location						
Opening page properties						
Yahoo!	→	Saved Pages	→	Select page	→	Details
Switching page list view						
Yahoo!	→	Saved Pages	→	Select page	→	List View or Preview View



RSS Feeds

For Direct Browser, select **Direct Browser** instead of **PC Site Browser**.

Disabling feed updates	<p>● → Yahoo! → ● → PC Site Browser → ● → RSS Feed → ● → Select feed → ☰ → Manage RSS Feed → ● → Restrict Update → ●</p>
Sorting feeds into folders	<p>Start Here ● → Yahoo! → ● → PC Site Browser → ● → RSS Feed → ● → See below</p>
	<p>Creating Folders</p> <p>☰ → Manage RSS Feed → ● → Create Folder → ● → Enter name → ●</p>
	<p>Moving to Folders</p> <p>Select feed → ☰ → Manage RSS Feed → ● → Move → ● → Select folder → ● → Move → ●</p>
	<p>Renaming Folders</p> <p>Select folder → ☰ → Manage RSS Feed → ● → Rename → ● → Enter name → ●</p>
	<p>Deleting Folders</p> <p>Select folder → ☰ → Delete → ● → Enter Handset Code → ● → Yes → ●</p>
Deleting feeds	<p>Start Here ● → Yahoo! → ● → PC Site Browser → ● → RSS Feed → ● → See below</p>
	<p>One Entry</p> <p>Select feed → ☰ → Delete → ● → Yes → ●</p>
	<p>All Entries</p> <p>☰ → Manage RSS Feed → ● → Delete All → ● → Enter Handset Code → ● → Yes → ●</p> <ul style="list-style-type: none"> Alternatively, perform Delete RSS Feed List in Memory Operation (PC Site Browser Settings or Set Direct Browser) to delete all feeds.

Sorting feeds	<p>● → Yahoo! → ● → PC Site Browser → ● → RSS Feed → ● → ☰ → Manage RSS Feed → ● → Sort → ● → Select option → ●</p>
Opening feed properties	<p>● → Yahoo! → ● → PC Site Browser → ● → RSS Feed → ● → Select feed → ☰ → Manage RSS Feed → ● → Details → ●</p>
Exchanging feeds with other devices	<p>Start Here ● → Yahoo! → ● → PC Site Browser → ● → RSS Feed → ● → ☰ → Manage RSS Feed → ● → See below</p>
	<p>Exporting All Feeds</p> <p>Export All → ● → Select storage media → ●</p>
	<p>Importing (Adding Feeds)</p> <p>Import → ● → Select file → ● → As New Items → ● → Yes or No → ● → Yes or No → ●</p>
Sending feeds via mail	<p>Importing (Overwriting Existing Feeds)</p> <p>Import → ● → Select file → ● → Delete All → ● → Enter Handset Code → ● → Yes → ● → Yes or No → ● → Yes or No → ●</p>
	<p>● → Yahoo! → ● → PC Site Browser → ● → RSS Feed → ● → Select feed → ☰ → Manage RSS Feed → ● → As Message → ● → Complete message → ☰</p>



Security Settings

For PC Site Browser and Direct Browser, perform the following sequence instead of **Browser Settings** ➔ ●.

PC Site Browser (or Direct Browser) ➔ ● ➔ **PC Site Browser Settings (or Set Direct Browser)** ➔ ●

Disabling manufacture number auto send for authentication	● ➔ Yahoo! ➔ ● ➔ Browser Settings ➔ ● ➔ Security Settings ➔ ● ➔ Manufacture Number ➔ ● ➔ Off ➔ ● ● Not available for Direct Browser.
Disabling referer information delivery to the Server	● ➔ Yahoo! ➔ ● ➔ Browser Settings ➔ ● ➔ Security Settings ➔ ● ➔ Send Referrer ➔ ● ● ➔ Not Send ➔ ●
Enabling/disabling cookies	● ➔ Yahoo! ➔ ● ➔ Browser Settings ➔ ● ➔ Security Settings ➔ ● ➔ Cookies ➔ ● ➔ Select option ➔ ●
Selecting script execution option	● ➔ Yahoo! ➔ ● ➔ Browser Settings ➔ ● ➔ Security Settings ➔ ● ➔ Script Settings ➔ ● ● ➔ Select option ➔ ●
Hiding confirmations before entering/exiting secure pages	● ➔ Yahoo! ➔ ● ➔ Browser Settings ➔ ● ➔ Security Settings ➔ ● ➔ Secure Prompt ➔ ● ● ➔ Do not Show ➔ ●
Opening electronic certificates saved on handset	● ➔ Yahoo! ➔ ● ➔ Browser Settings ➔ ● ➔ Security Settings ➔ ● ➔ Root Certificates ➔ ● ● ➔ Select certificate ➔ ●

Changing validity of entered user ID/ password

- ➔ **Yahoo!** ➔ ● ➔ **Browser Settings** ➔ ●
➔ **Security Settings** ➔ ● ➔ **Keep Auth Info** ➔ ●
● ➔ **Select option** ➔ ●
- **Per Browsing** retains entered user ID/password during browsing sessions. **On** retains such authentication information even after powering handset off.
 - Authentication information may not be retained depending on the site.

Enabling/disabling Ajax (for asynchronous communication)

- ➔ **Yahoo!** ➔ ● ➔ **Browser Settings** ➔ ●
➔ **Security Settings** ➔ ● ➔ **Restrict Ajax** ➔ ●
● ➔ **Select option** ➔ ●

Resetting

For PC Site Browser and Direct Browser, perform the following sequence instead of **Browser Settings** ➔ ●.

PC Site Browser (or Direct Browser) ➔ ● ➔ **PC Site Browser Settings (or Set Direct Browser)** ➔ ●

Resetting browser settings and stored information (Bookmarks, Saved Pages, etc.)	● ➔ Yahoo! ➔ ● ➔ Browser Settings ➔ ● ➔ Initialized Browser ➔ ● ➔ Enter Handset Code ➔ ● ➔ Yes ➔ ● ● For Direct Browser, enter Administrator Code instead of Handset Code.
Restoring default handset settings	● ➔ Yahoo! ➔ ● ➔ Browser Settings ➔ ● ➔ Reset Settings ➔ ● ➔ Enter Handset Code ➔ ● ➔ Yes ➔ ● ● For Direct Browser, enter Administrator Code instead of Handset Code.



Connecting & Browsing

? What is the bar at Display bottom?

- This is a data progress bar; the number beside it indicates transmitted (green) or received (red) data.

Page Operations

? Internet page does not open completely

- Portions of page content may not appear in tabbed browsing; close other tabs.

? Text overlaps

- The site may be designed for browsing on PCs; try *Tiny* font size.
- Text may overlap when Zoom Factor is used; adjust scale.

? Cannot access other functions while browsing the Internet

- Multi Job may be active. When switching between browsers, additional function activation is disabled; close either browser and retry.

