

Videos/Music	9-2
Accessing Webcasting Sites (Japanese).....	9-2
Media Player	9-3
Media Player Basics	9-3
Music	9-5
Playing Music.....	9-5

Video	9-6
Playing Video	9-6
Playlists	9-7
Using Playlists	9-7
Additional Functions	9-8
Troubleshooting	9-12

9

Video & Music

 


Accessing Webcasting Sites (Japanese)

Access Yahoo! Streaming and other webcasting sites.

- Subscription to Keitai Wi-Fi may be required to use some services/content.
- Read information on the source site.

1 MENU ➔ Videos/Music

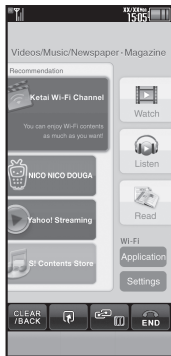

- If an update message appears, follow onscreen prompts.

2 Select item

- Follow onscreen instructions.

Menu Updates

Information window opens for Videos/Music menu update notice. Follow these steps to open it:

1 In Information window, Menu Update Notif.

2 Yes

- Follow onscreen instructions.

Suppressing Information Window for Menu Updates

 
**MENU ➔ Settings ➔ Phone/☎ tab
➔ Video/Music Menu Updates ➔ Notification Off**

Streaming

Most media on webcasting sites are provided as streams; handset plays media while it downloads.

Playing Media Streams

1 Select file

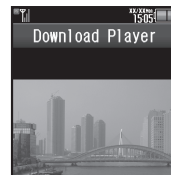

- Playback starts.
- For playback window description, see P.9-6 "Video Playback Window Description."

Stopping Playback

During playback, **CLEAR/BACK ➔ Back Playback Sound**

- Streaming sound is heard from Speaker/Headphones regardless of Sound Output setting in Media Player.



Media Player Basics

Use Media Player to play music/video on 941SH.

- Download media files from Mobile Internet sites via Media Player or transfer files from PCs or AQUOS Blu-ray Disc recorders (hereafter "Blu-ray Disc recorders").
- Transfer PC music files and save them on Memory Card.

Music File Support

My Music

(Handset/Memory Card)
Downloads/Transferred Files

SD AUDIO

(Memory Card)
Transferred SD-Audio Files

WMA

(Memory Card)
Transferred WMA Files

Video File Support

My Videos

(Handset/Memory Card)
Downloads/Recorded Files

Recorder Contents/ SD VIDEO

(Memory Card)
Transferred SD-Video Files

Playback Precautions

- Media Player is not compatible with some recording/playback formats. Files may not play depending on the Memory Card status.
- Playback stops for incoming calls.
- If battery is low, Media Player will not play. Playback stops if battery runs low during playback.
- Turn down the volume if distortion is noticeable in Speaker sound.
- Handset plays media while it downloads (streaming/progressive download). Packet transmission fees apply (except when downloading via Wi-Fi) even while playback is paused.

Compatibility

- Files transferred from PCs cannot be used as ringtones or System Sounds.



Downloading Media Files

Download media files from the Internet. Read information (price, expiry date, etc.) on the source site.

1 MENU ➔ Entertainment ➔ Media Player



Media Player Menu

2 Music or Videos

3 Download Music or Download Videos

- Follow the links to download media.

Saving Music Files from PCs

- Use software to convert music file format.
- For software usage and specifications, see the provider's website, etc.
- SoftBank Mobile does not guarantee compatibility with any software.
- USB Cable may be purchased separately.

Handling Transferred Files

- Copyright laws limit duplicated material to private use only.
- Files created with PC software, etc. may not play.
- Comply with copyright and other intellectual property laws when using obtained files.

 
Saving AAC Files

Convert PC music files to 941SH-compatible format (P.17-20), then save to corresponding Memory Card folder (P.17-24) via Mass Storage. Install USB Cable driver beforehand.

Saving WMA Files

Follow these steps to save WMA files via compatible software:
(Copy protected files can only be played on the handset with which the files were transferred.)

1 Connect handset to a PC via USB Cable

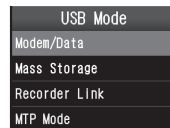

2 MTP Mode

- Copy music from PC. Refer to the software's help menu for operational instructions.

3 Cancel ➔ Yes ➔ Connection ends

- Disconnect USB Cable.

If Menu in 1 Does Not Appear

- Follow these steps:
MENU ➔ Tools ➔ Connectivity tab
➔ USB Mode ➔ From 2
■ Operations on the PC may be required; if prompted, follow onscreen instructions.



Playing Music

 
- 1 MENU ➔ Entertainment
- 2 Media Player ➔ Music
- 3 My Music ➔ Music or Ring Tones tab



Music Playlists Window

- 4 All Music

- 5 Select file

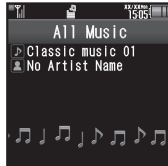

Music Playback Window

- Album art appears for compatible Chaku-Uta Full® files. (WMA album art is not supported.)

Using Other Functions while Playing Music After Ⓞ, CLEAR/BACK or END

- To stop playback, follow these steps in Standby:

Widget Off ➔ Yes

Playing SD AUDIO or WMA Files

In Ⓞ, SD AUDIO or WMA ➔ From 4

Searching Music Files

After 4, Options ➔ Search ➔ Enter search text ➔ Done

Lyric Display-Compatible Files

- Tap **Lyrics** to display lyrics.

Music Playback Window Description



1	Playback in progress	8	Playback Mode*
2	Title	9	Information link
3	Artist name	10	Elapsed time
4	Pause*	11	Skip forward*
5	Track number	12	Volume control*
6	Playback slider*	13	Sound Effects*
7	Replay*		

*Tap for operation.

Opening Help

[Music Playback Window] Options
➔ Help

 
Advanced

- ☞ Resuming from stopped point ● Specifying start point ● Playing repeatedly or randomly ● Setting Sound Effects (And more on P.9-8)



Playing Video


- 1 MENU → Entertainment
- 2 Media Player → Videos
- 3 My Videos → Phone Memory or Memory Card

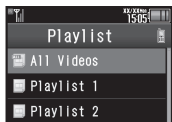

Video Playlists Window

- 4 All Videos

 - 5 Select file

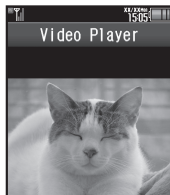

Video Playback Window

- 6 CLEAR/BACK → Playback stops

Playing Video Files Transferred from Blu-ray Disc Recorders

In ③, Recorder Contents → ⑤

Playing SD VIDEO Files

In ③, SD VIDEO → ⑤

Searching Video Files

After ④, Options → Search → Enter search text → Done

At Alarm Time

- Playback pauses.

Video Recorded on Other Devices

- Video image may appear rotated.

Video Playback Window Description



1	Title	7	Elapsed time
2	Author name	8	Volume
3	Clip number	9	Information link
4	Status	10	Sound Effects
5	Playback Mode	11	Toggle panel on/off
6	Pause		

Opening Help

[Video Playback Window] Options
→ Help

Advanced

- Resuming from stopped point
- Specifying start point
- Accessing linked information
- Switching audio output to wireless device
- Playing repeatedly or randomly
- Setting Sound Effects
- Setting playback size
- Setting Backlight status
- Hiding linked information (P.9-8)



 
Using Playlists

Playlists store playback orders. Add favorite media files to Playlists, or organize files by artist/genre. Playlists store only file locations. Source files remain in All Music or All Videos.


Adding to Playlist

Follow these steps to add a music file to **プレイリスト1**:

- 1 **MENU** ➔ **Entertainment**
- 2 **Media Player** ➔ **Music**

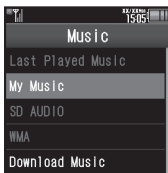

 
- 3 **My Music**
- 4 **All Music** ➔ **Highlight file** ➔ **Options**

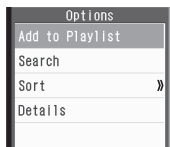

- 5 **Add to Playlist** ➔ **プレイリスト1**

Renaming Playlists

 - 1 **In Playlists window, highlight Playlist** ➔ **Options**

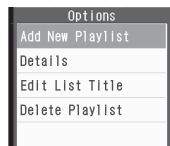

- 2 **Edit List Title** ➔ **Enter name** ➔ **Done**




Advanced

- Organizing Playlists ● Sorting files ● Opening properties ● Deleting/editing SD AUDIO files ● Deleting All WMA files ● Downloading Contents Keys (P.9-9 - 9-10)
- Organizing Playlists ● Sorting files ● Downloading Contents Keys ● Opening properties ● Deleting SD VIDEO files ● Renaming files transferred from Blu-ray Disc recorders (And more on P.9-10 - 9-11)



Media Playback

Music & Video

Resuming from stopped point	MENU ➔ Entertainment ➔ Media Player ➔ Music or Videos ➔ Last Played Music or Last Played Video
Specifying start point	During playback, Options ➔ Time Search ➔ Enter time ➔ Accept
Accessing linked information	During playback, Options ➔ Access Web Link ➔ Yes
Switching audio output to wireless device	MENU ➔ Entertainment ➔ Media Player ➔ Music or Videos ➔ Settings ➔  Sound Output ➔ Bluetooth Device

Music

Playing repeatedly or randomly	[Start Here] During playback, Options ➔ Playback Mode ➔ See below
	Repeat One File Repeat
	Repeat All Files Repeat All
	Play Randomly Random
	Repeat Randomly Random Repeat
Setting Sound Effects	During playback, Options ➔ Sound Effects ➔ Select effect

Video

Some functions may be unavailable depending on file.

Playing repeatedly or randomly	[Start Here] During playback, Options ➔ Settings ➔ Playback Mode ➔ See below
	Repeat One File Repeat
	Repeat All Files Repeat All
	Play Randomly Random
Setting Sound Effects	During playback, Options ➔ Settings ➔ Sound Effects ➔ Select effect
Setting playback size	During playback, Options ➔ Settings ➔ Display Size ➔ Select size
Setting Backlight status	During playback, Options ➔ Settings ➔ Backlight ➔ Select option • Selecting Normal Settings applies Display Backlight settings.
Hiding linked information	During playback, Options ➔ Settings ➔ Web Link Setting ➔ Off



Managing Music Files

Organizing Playlists	<p>Start Here MENU ➤ Entertainment ➤ Media Player ➤ Music ➤ My Music ➤ Music or Ring Tones tab ➤ See below</p> <p>Adding New Playlists Options ➤ Add New Playlist ➤ Enter name ➤ Done</p> <p>Deleting Playlists Highlight Playlist ➤ Options ➤ Delete Playlist ➤ Yes</p> <p>Deleting Playlist Files Select Playlist ➤ Highlight file ➤ Options ➤ Delete ➤ Yes</p> <p>Changing File Order Select Playlist ➤ Highlight file ➤ Options ➤ Change Order ➤ Select target location</p>
	<p>MENU ➤ Entertainment ➤ Media Player ➤ Music ➤ My Music ➤ Music or Ring Tones tab ➤ All Music ➤ Options ➤ Sort ➤ Select option</p>
Sorting files	


Opening properties	<p>Start Here MENU ➤ Entertainment ➤ Media Player ➤ Music ➤ See below</p> <p>SD AUDIO Files SD AUDIO ➤ All Music ➤ Highlight file ➤ Options ➤ Details</p> <p>Other Files My Music ➤ Music or Ring Tones tab ➤ Select Playlist ➤ Highlight file ➤ Options ➤ Details</p>
	<p>Start Here MENU ➤ Entertainment ➤ Media Player ➤ Music ➤ SD AUDIO ➤ See below</p> <p>Deleting Single Files All Music ➤ Highlight file ➤ Options ➤ Delete Track ➤ Yes • Source files will be deleted.</p> <p>Deleting All Files Highlight All Music ➤ Options ➤ Delete All Tracks ➤ Yes ➤ Yes • Source files will be deleted.</p> <p>Editing Title/Artist All Music ➤ Highlight file ➤ Options ➤ Edit ➤ Select item ➤ Enter title or name ➤ Done</p>
Deleting/editing SD AUDIO files	<p>MENU ➤ Entertainment ➤ Media Player ➤ Music ➤ Settings ➤ Delete All WMA ➤ Enter Handset Code ➤ OK ➤ Yes • Source files will be deleted.</p>



Downloading Contents Keys	<p>MENU ➔ Entertainment ➔ Media Player ➔ Music ➔ My Music ➔ Music or Ring Tones tab ➔ Select Playlist ➔ Select file (with ) ➔ Yes</p> <ul style="list-style-type: none"> Follow onscreen instructions.
---------------------------	---

Managing Video Files

Organizing Playlists	<p><small>[Start Here]</small> MENU ➔ Entertainment ➔ Media Player ➔ Videos ➔ My Videos ➔ Phone Memory or Memory Card ➔ See below</p>
	<p>Adding New Playlists Options ➔ Add New Playlist ➔ Enter name ➔ Done</p>
	<p>Deleting Playlists Highlight Playlist ➔ Options ➔ Delete Playlist ➔ Yes</p>
	<p>Deleting Playlist Files Select Playlist ➔ Highlight file ➔ Options ➔ Delete ➔ Yes</p>
Sorting files	<p>Changing File Order Select Playlist ➔ Highlight file ➔ Options ➔ Change Order ➔ Select target location</p>
	<p>MENU ➔ Entertainment ➔ Media Player ➔ Videos ➔ My Videos ➔ Phone Memory or Memory Card ➔ All Videos ➔ Options ➔ Sort ➔ Select option</p>

Downloading Contents Keys	<p>MENU ➔ Entertainment ➔ Media Player ➔ Videos ➔ My Videos ➔ Phone Memory or Memory Card ➔ All Videos ➔ Select file (with ) ➔ Yes</p> <ul style="list-style-type: none"> Follow onscreen instructions.
Opening properties	<p><small>[Start Here]</small> MENU ➔ Entertainment ➔ Media Player ➔ Videos ➔ See below</p>
	<p>SD VIDEO Files SD VIDEO ➔ Highlight file ➔ Options ➔ Details</p>
	<p>Files Transferred from Blu-ray Disc Recorders Recorder Contents ➔ Highlight file ➔ Options ➔ Details</p>
Deleting SD VIDEO files	<p>Other Files My Videos ➔ Phone Memory or Memory Card ➔ Select Playlist ➔ Highlight file ➔ Options ➔ Details</p>
	<p>MENU ➔ Entertainment ➔ Media Player ➔ Videos ➔ SD VIDEO ➔ Highlight file ➔ Options ➔ Delete ➔ Yes</p> <ul style="list-style-type: none"> Source files will be deleted.



Renaming files transferred from Blu-ray Disc recorders	MENU ➤ Entertainment ➤ Media Player ➤ Videos ➤ Recorder Contents ➤ Highlight file ➤ Options ➤ Rename ➤ Enter name ➤ Done
Checking Memory Card memory status	MENU ➤ Entertainment ➤ Media Player ➤ Videos ➤ Recorder Contents ➤ Options ➤ Memory Remaining
Deleting files transferred from Blu-ray Disc recorders	<div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <small>(Start Here)</small> MENU ➤ Entertainment ➤ Media Player ➤ Videos ➤ Recorder Contents ➤ See below </div> Single Files Highlight file ➤ Options ➤ Delete ➤ Yes All Files Options ➤ Delete All ➤ Enter Handset Code ➤ OK ➤ Yes



Music

? How do I delete files in All Music?

- Delete All Music files in My Music via Data Folder (Music or Ring Songs-Tones).

? WMA files do not appear (WMA files are not transferable)

- Did you use 941SH to transfer the files? Copy protected files can only be played on the handset with which the files were transferred.
- Copy protection information may be corrupted; perform **Delete All WMA** and re-transfer the files.
- Files transferred via Mass Storage appear when moved to corresponding Memory Card folder. (Transfer copy protected files via MTP Mode.)
- WMA files may be corrupted; perform **Delete All WMA** and retry.

? Cannot play WMA files

- Playback rights may have expired (license not found message appears); re-transfer the files. If files still cannot be played, they may be corrupted; perform **Delete All WMA** and retry.

Video

? How do I delete files in All Videos?

- Delete All Videos files via Data Folder (Videos).

? Cannot play video files

- Files created with PC software, etc. may not play.

