

S! Appli	10-2
Using S! Applications.....	10-2
Mobile Widget	10-3
Customizing Standby Display (Japanese).....	10-3

Additional Functions	10-6
Troubleshooting	10-10

10

S! Applications & Widgets



Using S! Applications

Try out the preloaded S! Applications or download and use 941SH-compatible S! Applications, including games.

- Refer to the S! Application's help menu or the source Internet site, etc. for operational instructions.
- Subscription to Keitai Wi-Fi is required to use S! Applications over Wi-Fi.

Remote Control (Familink Remote)

- Use **ファミリンクリモコン** for **AQUOS S!** Application (Japanese) to control a TV, VCR, etc. via infrared.

1 MENU ➔ S! Appli

2 S! Appli Library



S! Appli Library

3 Select application

Network S! Applications

- A message appears indicating that Internet connection is required. Follow onscreen instructions.

Incoming Calls

 
- Incoming calls automatically pause S! Application.

Opening S! Appli Notification History

In **2**, *Notification History*

Exiting S! Applications

1

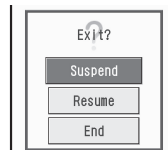

2 End

Pausing S! Applications

In **2**, *Suspend*

Resuming S! Applications

MENU ➔ Resume

- Tap **Cancel** to open Main Menu and keep the S! Application paused. (Additional function activation may be disabled depending on the S! Application.)
- Tap **End** to exit the S! Application.

Advanced

-  ● Downloading S! Applications ● Adjusting S! Application sound volume ● Canceling surround effect ● Setting handset responses to incoming transmissions ● Setting S! Application to activate in Standby ● Setting Permissions ● Opening properties ● Moving S! Applications to Memory Card
- Changing S! Application settings ● Deleting S! Applications ● Restoring default S! Application settings ● Restoring default S! Appli Library
- Synchronizing Memory Card S! Applications with 941SH ● Opening Java™ license information (P.10-6 - 10-7)



Customizing Standby Display (Japanese)

Paste various widgets (applications) to Standby to access/activate information/functions immediately from Standby.



Widgets

S! Quick News &
S! Friend's Status Widget

Obtaining Widgets

1 MENU ➔ Widget



Mobile Widget Menu

2 Widget Store

- Follow onscreen instructions.

Installing Widgets

- Some widgets may need to be installed manually; follow these steps:

[Mobile Widget Menu] **Widget Contents** ➔ **Highlight widget** ➔ **Options** ➔ **Install** ➔ **Yes**

Activating Single Widgets

[Mobile Widget Menu] **Widget Contents** ➔ **Select widget**

Deleting Widgets

1 In Mobile Widget menu, **Widget Contents**

2 Highlight widget ➔ **Options**

- S!速報ニュース/S!ともだち状況 cannot be deleted.

3 **Delete** ➔ **Yes**

Deleting All Widgets

In 2, highlight S!速報ニュース/S!ともだち状況 ➔ **Options** ➔ **Delete All** ➔ **Enter Handset Code** ➔ **OK** ➔ **Yes**

- If there is a widget saved in Standby, a confirmation appears; follow onscreen prompt.

Advanced

- Opening properties
- Opening widget notification history
- Canceling automatic updates
- Receiving updates automatically while outside Japan
- Hiding confirmation outside Japan
- Disabling widget notifications
- Disabling cookies
- Deleting cookies (P.10-8)



Saving Widgets to Standby

If **OPEN** does not appear, tap **Widget On**.

1 OPEN



2 Drag widget to Standby

- Corresponding icon appears in Standby.

3 CLOSE

 
Using Handset Keys

- ⌚ ➔ Use ⌘ to select **OPEN** ➔ Select widget ➔ Use ⌘ to specify target location ➔ ⌚
- After pressing ⌚, Long Press (⌘) to activate pointer navigation; select widgets, etc. (To cancel pointer navigation, Long Press (⌘).)

Using Widgets

If no widget appears, tap **Widget On**.

1 Select widget

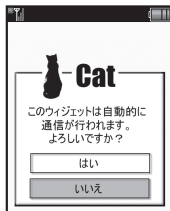

- Widget activates; follow onscreen instructions.

Using Handset Keys

- ⌚ ➔ Use ⌘ to highlight widget ➔ ⌚ ➔ ⌚

Using Sheets

Paste widgets and Standby Shortcuts on each sheet; toggle sheets to use them.

■ Toggling Sheets

If no widget appears, tap **Widget On**.

1 Swipe finger left or right across Display



- Sheet name appears at the top, then disappears.
- Save widgets as needed; corresponding icons appear on the current sheet.

Using Locked Sheets

🔒 ➔ Enter Handset Code ➔ OK

Using Handset Keys

⌚ ➔ ⌘ (press to toggle sheets)

Advanced

- 👉 ● Logging in to Yahoo! JAPAN ● Moving widgets ● Slowing pointer speed ● Editing sheet names ● Locking sheets (And more on **P.10-8 - 10-9**)

Saving Widgets on Other Sheets

- 1 In Mobile Widget menu, *Widget Contents*
- 2 Highlight widget ➔ *Options*
- 3 *Set as StbyShortcut*



 
- 4 Select sheet



- 5 Specify target location ➔ *Assign*

Removing Widgets from Standby

- 1 Long Touch widget



- 2 *Remove*
- 3 *Yes*

Using S! Quick News & S! Friend's Status Widget

941SH is preloaded with *S!速報ニュース/S!ともだち状況* (S! Quick News & S! Friend's Status widget) that shows S! Quick News and S! Friend's Status information in Standby.



View Settings

■ Setting View Pattern

- 1 ➔ Highlight S! Quick News & S! Friend's Status widget ➔ *Options*

- 2 *Settings* ➔ *Pattern Setting*

- 3 Select item (/) ➔ *Confirm*

■ Switching View

- 1 ➔ Highlight S! Quick News & S! Friend's Status widget ➔ *Options*

- 2 *Operation* ➔ *Switch Pattern*
 - Repeat the above steps to switch the view.

Advanced

- Removing widgets at once
- Adding news items
- Setting news scroll speed
- Showing unread news only
- Assigning members
- Managing members (P.10-9)



S! Applications	
Downloading S! Applications	<i>MENU</i> ➔ <i>S! Appli</i> ➔ <i>S! Appli Library</i> ➔ <i>Download S! Appli</i> • Follow onscreen instructions.
Adjusting S! Application sound volume	<i>MENU</i> ➔ <i>S! Appli</i> ➔ <i>Settings</i> ➔ <i>Application Volume</i> ➔ <i>Adjust level</i> ➔ <i>Accept</i>
Canceling surround effect	<i>MENU</i> ➔ <i>S! Appli</i> ➔ <i>Settings</i> ➔ <i>Surround</i> ➔ <i>Off</i>
Setting handset responses to incoming transmissions	[Start Here] <i>MENU</i> ➔ <i>S! Appli</i> ➔ <i>Settings</i> ➔ <i>Calls & Alarms</i> ➔ See below
	Showing Calls Select item ➔ <i>Show Call Notice</i>
	Pausing S! Application for Incoming Mail <i>Incoming Message</i> ➔ <i>Message Priority</i>
	Showing Alarm Notice <i>Alarm</i> ➔ <i>Alarm Notice</i>
	Showing Incoming S! Appli Request Notice <i>Notification</i> ➔ <i>Start Notice</i>

	[Start Here] <i>MENU</i> ➔ <i>S! Appli</i> ➔ See below
	Activating Screensaver <i>Settings</i> ➔ <i>Screensaver</i> ➔ <i>Switch On/Off</i> ➔ <i>On</i>
	Setting Screensaver <i>S! Appli Library</i> ➔ <i>Highlight application</i> ➔ <i>Options</i> ➔ <i>As Screensaver</i> • <i>As Screensaver</i> appears for compatible S! Applications. • Screensaver may not start or operate correctly when an external device (Headphones, etc.) is connected to handset.
Setting S! Application to activate in Standby	Changing Screensaver Activation Time <i>Settings</i> ➔ <i>Screensaver</i> ➔ <i>Activation Time</i> ➔ <i>Enter time</i> ➔ <i>Accept</i>
	Disabling Automatic Screensaver Restart <i>Settings</i> ➔ <i>Screensaver</i> ➔ <i>Stop Auto Start</i> ➔ <i>On</i>
Setting Permissions	[Start Here] <i>MENU</i> ➔ <i>S! Appli</i> ➔ <i>S! Appli Library</i> ➔ <i>Highlight application</i> ➔ <i>Options</i> ➔ <i>Permission</i> ➔ See below
	Customizing Permissions for S! Appli Operations Select item ➔ Select option
	Resetting Permission Settings <i>Reset Settings</i> ➔ <i>Yes</i>
Opening properties	<i>MENU</i> ➔ <i>S! Appli</i> ➔ <i>S! Appli Library</i> ➔ <i>Highlight application</i> ➔ <i>Options</i> ➔ <i>Details</i>



Moving S! Applications to Memory Card	<p>MENU ➔ S! Appli ➔ S! Appli Library ➔ Multi Select ➔ Select application (<input type="checkbox"/>/<input checked="" type="checkbox"/>) ➔ Complete selection ➔ Options ➔ Move to Card</p> <ul style="list-style-type: none"> When an older version of the S! Application is saved, tap Yes or No. Repeat application selection step as needed before tapping Options. Some S! Applications may not be moved to Memory Card.
Changing S! Application settings	<p>Start Here MENU ➔ S! Appli ➔ Settings ➔ See below</p> <p>Activating Notification Setting Notification Setting ➔ On</p> <p>Setting Backlight Status Backlight ➔ Switch On/Off ➔ Select option</p> <ul style="list-style-type: none"> Selecting Normal Settings applies Display Backlight settings. <p>Disabling Backlight Flashing Backlight ➔ Blink ➔ Off</p> <p>Disabling Vibration Vibration ➔ Off</p>
Deleting S! Applications	<p>MENU ➔ S! Appli ➔ S! Appli Library ➔ Highlight application ➔ Options ➔ Delete ➔ Yes</p> <ul style="list-style-type: none"> Handset Code may be required. Cancel Screensaver to delete Screensaver S! Application.
Restoring default S! Application settings	<p>MENU ➔ S! Appli ➔ Settings ➔ Set to Default ➔ Enter Handset Code ➔ OK ➔ Yes</p>

Restoring default S! Appli Library	<p>MENU ➔ S! Appli ➔ Settings ➔ Memory All Clear ➔ Enter Handset Code ➔ OK ➔ Yes</p> <ul style="list-style-type: none"> Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keita® service providers for details.) Memory All Clear deletes all downloaded S! Applications and Lifestyle-Applications; Near Chat access restriction will be canceled.
Synchronizing Memory Card S! Applications with 941SH	<p>MENU ➔ S! Appli ➔ Settings ➔ Synchronization ➔ Yes</p>
Opening Java™ license information	<p>MENU ➔ S! Appli ➔ Information</p>



Mobile Widget

■ Managing

Opening properties	MENU → Widget → Widget Contents → Highlight widget → Options → Details <ul style="list-style-type: none"> Select widget other than <i>速報ニュース/ともだち状況</i>.
--------------------	--

■ Widget History

Opening widget notification history	(Start Here) MENU → Widget → Widget History → See below
	Showing All Text Highlight record → Options → View full text
	Deleting a Record Highlight record → Options → Delete → Yes
	Deleting All Records Highlight record → Options → Delete All → Enter Handset Code → OK → Yes

■ Settings



Canceling automatic updates	MENU → Widget → Settings → Auto Refresh → Off
Receiving updates automatically while outside Japan	MENU → Widget → Settings → AutoConnect Abroad → On
Hiding confirmation outside Japan	MENU → Widget → Settings → Set Use Abroad → Off

Disabling widget notifications	MENU → Widget → Settings → Notification Setting → Off
Disabling cookies	MENU → Widget → Settings → Cookies → Disabled
Deleting cookies	MENU → Widget → Settings → Delete Cookies → Yes




■ Operations in Standby

Selecting widget display option	⌚ → Options → Settings → Show Widget → Select option <ul style="list-style-type: none"> Choose Off to disable widget display.
Logging in to Yahoo! JAPAN	⌚ → Options → Yahoo!JAPAN log in <ul style="list-style-type: none"> Follow onscreen instructions. To log out, select Yahoo!JAPAN log out in the above steps.
Moving widgets	⌚ → Options → Move Mode → Drag widget → Confirm
Moving widgets to front/back	⌚ → ⌚ Highlight widget → Options → Operation → To Front or To Back
Updating view	⌚ → ⌚ Highlight widget → Options → Operation → Update View









Removing widgets at once	Start Here  ⇒ <i>Options</i> ⇒ <i>Operate from List</i> ⇒ <i>Remove</i> ⇒ See below
	All Widgets <i>Remove All</i> ⇒ <i>Highlight sheet</i> ⇒ <i>Remove</i> ⇒ <i>Yes</i> Selected Widgets <i>Select & Remove</i> ⇒ <i>Select widget</i> <input checked="" type="checkbox"/> ⇒ <i>Complete selection</i> ⇒ <i>Remove</i> ⇒ <i>Yes</i>
Slowing pointer speed	 ⇒ <i>Options</i> ⇒ <i>Settings</i> ⇒ <i>Cursor Speed</i> ⇒ <i>Slow</i>





Sheets

Editing sheet names	Start Here  ⇒ <i>Options</i> ⇒ <i>Settings</i> ⇒ <i>Sheet Settings</i> ⇒ <i>Change Sheet Name</i> ⇒ See below
	Renaming <i>Select sheet</i> ⇒ <i>Enter name</i> ⇒ <i>Done</i> Resetting All Sheet Names <i>Reset</i> ⇒ <i>Yes</i>
Locking sheets	Start Here  ⇒ <i>Options</i> ⇒ <i>Settings</i> ⇒ <i>Sheet Settings</i> ⇒ <i>Set Sheet Lock</i> ⇒ <i>Enter Handset Code</i> ⇒ <i>OK</i> ⇒ See below
	Activating Lock <i>Select sheet</i> ⇒ <i>On</i> Changing Method for Temporary Access <i>Unlock Method</i> ⇒ <i>No Password</i> <ul style="list-style-type: none"> Tap  to unlock sheet temporarily.

S! Quick News & S! Friend's Status Widget (S! Quick News)

Adding news items	 ⇒  Highlight S! Quick News & S! Friend's Status widget ⇒ <i>Options</i> ⇒ <i>Operation</i> ⇒ <i>Content Menu</i> ⇒ <i>Add News</i> ⇒ <i>S! Quick News List</i> ⇒ <i>登録はこちら</i> ⇒ <i>Yes</i> ⇒ <i>Select genre</i> ⇒ <i>Select item</i> <ul style="list-style-type: none"> Follow onscreen instructions.
Setting news scroll speed	 ⇒  Highlight S! Quick News & S! Friend's Status widget ⇒ <i>Options</i> ⇒ <i>Operation</i> ⇒ <i>Content Menu</i> ⇒ <i>News Display</i> ⇒ <i>News Speed</i> ⇒ <i>Select speed</i>
Showing unread news only	 ⇒  Highlight S! Quick News & S! Friend's Status widget ⇒ <i>Options</i> ⇒ <i>Operation</i> ⇒ <i>Content Menu</i> ⇒ <i>News Display</i> ⇒ <i>Target News</i> ⇒ <i>Unread Only</i>

S! Quick News & S! Friend's Status Widget (S! Friend's Status)

Assigning members	 ⇒  Highlight S! Quick News & S! Friend's Status widget ⇒ <i>Options</i> ⇒ <i>Operation</i> ⇒ <i>Content Menu</i> ⇒ <i>Assign Member</i> ⇒ <i>Select category</i> ⇒ <i>Select entry/member</i> ⇒ <i>(Empty)</i>
Managing members	Start Here  ⇒  Highlight S! Quick News & S! Friend's Status widget ⇒ <i>Widget</i> (pointer appears) ⇒  <i>Point to member</i> ⇒ <i>Options</i> ⇒ <i>Operation</i> ⇒ <i>Content Menu</i> ⇒ See below <ul style="list-style-type: none"> Open Slider first.
	Deleting Members <i>Delete</i> ⇒ <i>Yes</i>
	Changing Member Order <i>Move</i> ⇒ <i>Up or Down</i> ⇒ <i>OK</i>
	Changing Member Icons <i>Change Icon</i> ⇒ <i>Select Pictogram</i>



S! Applications



Cannot move S! Applications to Memory Card

- Memory Card memory may be low or the S! Application may already be saved.



S! Applications do not pause for incoming transmissions despite *Calls & Alarms* settings

- Regardless of setting, a notice appears for Screensaver S! Applications.



Keitai Wi-Fi connection failure confirmation appears upon starting S! Application

- Handset may be outside Wi-Fi range. Move into range or cancel **Switch from Wi-Fi to 3G** in Switch Notification.

