

<b>Internet Services .....</b>	<b>5-2</b>
Service Basics .....	5-2
<b>Yahoo! Keitai .....</b>	<b>5-3</b>
Using Yahoo! Keitai.....	5-3
<b>PC Site Browser .....</b>	<b>5-4</b>
Using PC Site Browser .....	5-4
<b>Browsing.....</b>	<b>5-5</b>
Basic Operations .....	5-5

<b>Bookmarks &amp; Saved Pages .....</b>	<b>5-7</b>
Using Bookmarks & Saved Pages....	5-7
<b>RSS Feeds .....</b>	<b>5-8</b>
Updating Blogs & News.....	5-8
<b>Additional Functions .....</b>	<b>5-9</b>
<b>Troubleshooting.....</b>	<b>5-16</b>

# 5

## Yahoo! Keitai & PC Site Browser



## Service Basics

Access the Mobile Internet via Yahoo! Keitai, or view PC Internet sites via PC Site Browser.

- Service requires a separate contract; retrieve Network Information to use these services.
- For more about Yahoo! Keitai, see SoftBank Mobile Website (P.15-23).


### Transmission/Information Fees

Some page content may automatically activate Internet connection incurring transmission fees. Information fees may also apply.






### Security

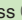Electronic certificates are saved on handset to support SSL (encryption protocol for Internet transmissions of important/sensitive information).

### Opening Secure Pages

- A confirmation appears. Choose **Yes** and press  to proceed.
- When a security notice appears, subscribers must decide for themselves whether or not to open the page. Opening secure pages constitutes agreement to the terms of usage. SoftBank, VeriSign Japan, Cybertrust, Entrust Japan, GlobalSign, RSA Security and SECOM Trust Systems cannot be held liable for any damages associated with the use of SSL.

## Advanced

-   Clearing cache (temporarily saved information)  Clearing authentication information (And more on P.5-9)
-  Disabling manufacture number auto send for authentication  Resetting browser settings and stored information (Bookmarks, Saved Pages, etc.) (And more on P.5-15)




# Using Yahoo! Keitai

## Using Yahoo! Keitai Main Menu


Browse Yahoo! Keitai sites from Yahoo! Keitai Main Menu.

Internet pages may not open depending on connection/Server status, etc.


### 1 ➔ Connection starts

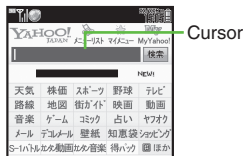

Internet Page






- Yahoo! Keitai Main Menu appears.
- To disconnect, press .

### 2 Highlight menu item ➔

- Corresponding page opens.
- Repeat  to open additional links.

### 3 ➔ Yes ➔ ➔ Page closes

## Advanced

-  Switching browsers
-  Using previously entered URLs
-  Deleting History records
-  Sorting History records (And more on P.5-9)
-  Customizing media playback settings (And more on P.5-12)

## Returning to Previous Pages

[Internet Page]  ➔ Previous page opens

- Follow these steps to return to the initial page:

[Internet Page]  ➔ Forward ➔ 


## Returning to Yahoo! Keitai Main Menu






[Internet Page]  ➔ Yahoo! Keitai ➔ 

## User Authentication

Enter user ID or password ➔  ➔ 

## Playing Media during Download

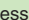[Internet Page] Select file ➔ 

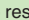- Play files while they transfer from the server (progressive download) or stream media files. Save media played via progressive download as needed (streamed media cannot be saved).
- Press  or  to pause or stop playback. (Progressive download continues; press  twice during playback to stop it.)
- To resume playback, press  in pause.
- Packet transmission fees apply even while playback is paused.
- Sound is heard from Speaker/Headphones regardless of  Sound Output setting.

## Using History

### 1 ➔ Yahoo! Keitai ➔ ➔ History ➔



### 2 Select record ➔ ➔ Connection starts

- Corresponding page opens.

### 3 ➔ Yes ➔ ➔ Page closes

## Entering URLs Directly

### 1 ➔ Yahoo! Keitai ➔ ➔ Enter URL ➔



### 2 Enter URL ➔ ➔ Connection starts

- Corresponding page opens.

### 3 ➔ Yes ➔ ➔ Page closes




# Using PC Site Browser

Browse PC sites from Yahoo! JAPAN (preset home page).

- Internet pages may not open depending on connection/Server status, etc.
- Browsing PC sites may incur higher charges depending on subscribed price plan.

1 ● → **Yahoo! Keitai** → ● → **PC Site Browser** → ●

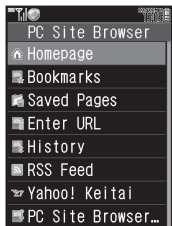

2 **Homepage** → ● → **Connection starts**



Internet Page

- Yahoo! JAPAN Home opens.
- If a message appears, follow onscreen prompts.
- To disconnect, press (Y).

3 **Highlight menu item** → ●

- Corresponding page opens.
- Repeat 3 to open additional links.

4 (Y) → **Yes** → ● → **Page closes**

## Returning to Previous Pages

[Internet Page] (Y) → **Previous page opens**

- Follow these steps to return to the initial page:

[Internet Page] (S) → **Forward** → ●

## Returning to Yahoo! JAPAN Home

[Internet Page] (S) → **Homepage** → ●

## User Authentication

Enter user ID or password → ● → (Y)

## Using History

In 2, **History** → ● → **Select record** → ●

## Entering URLs Directly

In 2, **Enter URL** → ● → **Enter URL** → ●

## Hiding Softkeys

[Internet Page] (S) → **Convenient Functions** → ● → **Softkey Area** → ● → **Off** → ●

## Browsing in Wideview

[Internet Page] Rotate handset 90 degrees counterclockwise

- Use Multi Selector according to page orientation.

## Advanced

- Switching browsers ● Using previously entered URLs ● Deleting History records ● Opening History properties ● Sorting History records ● Sending History records via mail (P.5-9)
- Showing navigation map for continuous scroll ● Changing scroll unit ● Hiding PC Site Browser messages (P.5-12)




# Basic Operations

## Page Browsing

### Scrolling Pages


If page content continues beyond view, use to scroll pages.

Long Press to scroll continuously.

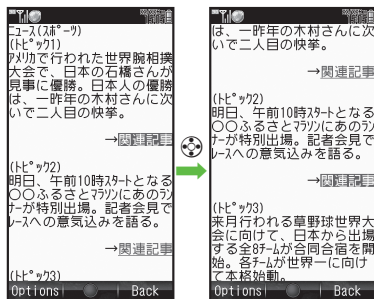

## Switching Frames

On framed pages, Long Press to switch active frame.

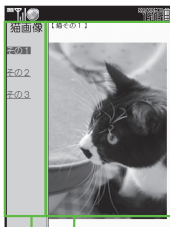

Frames

- In pointer navigation, point to a frame and press to select it.
- Otherwise, use to select one.

### Viewing Single Frame


- Select frame **Convenient Functions** **Frame In**
- To return, press .

## Tabbed Browsing

Open another page in a new tab and switch between tabs.

### Opening a New Tab

- 1 On a page, select menu item **Tab Menu**
- 2 Open in New Tab

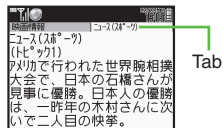

### Switching Tabs

- 1 (Long) **Select tab**
- In pointer navigation, point to a tab and press to open it.

### Closing Tabs

- (Long) **Select tab** **Tab Menu** **Close Tab or Close All Other Tabs**

## Advanced

- Looking up copied words in dictionaries
- Using Web Search
- Searching current page
- Jumping to page top/bottom
- Saving files to Data Folder
- Changing Font Size
- Enlarging specific areas
- Disabling automatic image display/sound playback
- Changing scroll unit (And more on P.5-10 - 5-12)



## Selecting Text


Activate pointer navigation to enable text selection (Drag Mode). Select text to copy or look up words in dictionaries.

- Text may not be selectable or linked page may open depending on the site or page.
- Follow these steps to use a dictionary:

### 1 On a page, point to first character → ● (Long)

- Drag Mode is activated.

### 2 Highlight text range

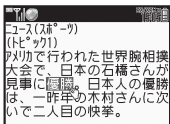

### 3 ●

- Text range remains unchanged even when pointer is moved.

### 4 辞書 → Select dictionary

- Dictionary opens with text inserted.


### 5 Search → ● → Select word, etc. → ●

#### Starting Over

- After ●, point to first character → ●
- From ●

## Additional Page Operations

Enter text or select/execute items.

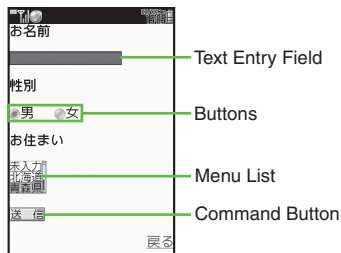

## Text Entry

### 1 On a page, select text entry field → ●

### 2 Enter text → ●

- Internet page returns.

#### Using Entered Text (Input Memory)

- [Internet page] Select text entry field
- ● → ● → Insert/Font Size → ●
- Input Memory → ● → Select text
- ●

## Pull-down Menu Item Selection

### 1 On a page, select menu list field → ●

### 2 Select item → ●

#### When Multiple Selection is Supported

- Select items as needed and press .

## Page Item Indicators

### ■ Selection Items

Buttons ○ or boxes □ appear.

### 1 On a page, select button or box → ●



- ○/□ changes to ●/☑

### ■ Execution Items

Execute the assigned command.

### 1 On a page, select command → ●





## Updating Blogs & News

Register RSS-compatible sites; view content updates without opening source sites. Transmission fees apply.







### Subscribing to RSS Feeds

 appears for RSS-compatible sites.










RSS Indicator

Available for PC Site Browser.

- 1 On a compatible page,  → Register In RSS Feed → 
- 2 Select feed →  (  /  ) → Complete selection → 
- 3 Save → 
  - Choose **Yes** to update immediately or **No** and press .





### Via RSS Icons


Use RSS icons to subscribe to RSS feeds from sites that are not RSS-compatible. Available for PC Site Browser.

- 1 On a page, select icon → 
  - 2 Yes →  → Save → 
- ### Checking Updates
- Follow these steps to update all feeds:
- 1  → Yahoo! Keitai → 
  - 2 PC Site Browser →  → RSS Feed → 



RSS Feed List

- 3 Reload All →  → 
- 4 Yes or No → 
- 5 Select feed → 




Title List

- 6 Select title → 
  - Information appears.

### Updating Single RSS Feeds

[RSS Feed List] Select feed →  → Reload →  →  → Yes or No → 

### Accessing Source Sites

[Title List] Select title →  → Select linked title →  → Yes →  →  → Yes or No → 

### Advanced

-  Disabling feed updates
-  Sorting feeds into folders
-  Deleting feeds
-  Sorting feeds
-  Opening feed properties
-  Exchanging feeds with other devices
-  Sending feeds via mail (P.5-14)





## Connecting &amp; Browsing

## ■ General

Switching browsers	On a page,  → <i>Convenient Functions</i> →  → <i>Change to PC Browser or Change to Y! Keitai</i> →  → <i>This Page or Linked Page</i> →  → <i>Yes or No</i> →
Using previously entered URLs	→ <i>Yahoo! Keitai</i> →  → See below
	<b>Yahoo! Keitai</b> <i>Enter URL</i> →  →  → <i>URL Entry Log</i> → → <i>Select URL</i> →  →
	<b>PC Site Browser</b> <i>PC Site Browser</i> →  → <i>Enter URL</i> →  → → <i>URL Entry Log</i> →  → <i>Select URL</i> →  →

## ■ History

Deleting History records	→ <i>Yahoo! Keitai</i> →  → <i>History</i> →  →  → <i>Change to PC Browser or Change to Y! Keitai</i> →  → See below
	<b>One Record</b> <i>Select record</i> →  → <i>Delete</i> →  → <i>Yes</i> →
	<b>All Records</b> → <i>Delete All</i> →  → <i>Enter Handset Code</i> →  → <i>Yes</i> →
Opening History properties	→ <i>Yahoo! Keitai</i> →  → <i>History</i> →  →  → <i>Select record</i> →  → <i>Details</i> →
Sorting History records	→ <i>Yahoo! Keitai</i> →  → <i>History</i> →  →  → <i>Sort</i> →  → <i>By Domain or By Date</i> →

## Sending History records via mail

- *Yahoo! Keitai* → → *History* → → → *Select record* → → *Send URL* → → *S! Mail or SMS* → → *Complete message* →
- S! Mail Composition window opens automatically depending on character count.

## ■ Memory Operation

For PC Site Browser, perform the following sequence instead of *Browser Settings* → .

*PC Site Browser* → → *PC Site Browser Settings* →

Clearing cache (temporarily saved information)	→ <i>Yahoo! Keitai</i> →  → <i>Browser Settings</i> →  → <i>Memory Operation</i> →  → <i>Delete Cache</i> →  → <i>Yes</i> →
Clearing cookies	→ <i>Yahoo! Keitai</i> →  → <i>Browser Settings</i> →  → <i>Memory Operation</i> →  → <i>Delete Cookies</i> →  → <i>Yes</i> →
Clearing authentication information	→ <i>Yahoo! Keitai</i> →  → <i>Browser Settings</i> →  → <i>Memory Operation</i> →  → <i>Delete Auth Info</i> →  → <i>Yes</i> →



## Page Operations

## ■ Yahoo! Keitai &amp; PC Site Browser

Using linked info	<b>Dialing Numbers</b> On a page, highlight number → ● → <i>Call or Video Call</i> → ●
	<b>Sending Messages</b> On a page, highlight number or mail address → ● → <i>Create Message</i> → ● → <i>S! Mail or SMS</i> → ● → <i>Complete message</i> → ▾
Copying text	On a page, ☺ → <i>Copy Text</i> → ● → Select first character → ● → <i>Highlight text range</i> → ●
Looking up copied words in dictionaries	On a page, ☺ → <i>Convenient Functions</i> → ● → <i>Copy &amp; Search Dict.</i> → ● → Select first character → ● → <i>Highlight text range</i> → ● → Select dictionary → ● → <i>Search</i> → ● → Select word, etc. → ●
Using Web Search	On a page, ☺ → <i>Convenient Functions</i> → ● → <i>Web Search</i> → ● → Enter search text → ●
Searching current page	On a page, ☺ → <i>Convenient Functions</i> → ● → <i>Search</i> → ● → Enter search text → ● ● Press ● to jump to next search result, if any.
Jumping to page top/bottom	On a page, ☺ → <i>Convenient Functions</i> → ● → <i>Jump In Page</i> → ● → <i>Page Top or Page Bottom</i> → ●
Opening page properties	On a page, ☺ → <i>Convenient Functions</i> → ● → <i>Details</i> → ● → Select item → ●
Sending URLs via mail	On a page, ☺ → <i>Convenient Functions</i> → ● → <i>Send URL</i> → ● → <i>S! Mail or SMS</i> → ● → <i>Complete message</i> → ▾ ● S! Mail Composition window opens automatically depending on character count.

## Handling Flash® files

[Start Here] On a page, ☺ → *Convenient Functions* → ● → *Flash@Menu* → ● → See below

**Pausing/Playing**

*Pause, Resume or Replay* → ●

**Selecting Image Quality**

*Quality* → ● → Select option → ●

## Saving files to Data Folder

[Start Here] On a page, ☺ → *Save Items* → ● → See below

**Files on Page**

Select file → ● → *Save* → ● → Enter name → ● → *Save here* → ●

- Some files are saved automatically.
- End memory-consuming operations (TV recording, etc.) beforehand.
- Confirm signal is strong, battery is adequately charged and that there is enough free memory beforehand.

**Background Images**

*Save Background Image* → ● → *Save* → ● → Enter name → ● → *Save here* → ●

## Updating page content

On a page, ☺ → *Reload* → ●  
● To update content in Saved Pages, open a page and follow the steps above.

## Changing encoding to read garbled text

On a page, ☺ → *Settings* → ● → *Char-code* → ● → Select option → ●

## Opening function shortcuts

On a page, ☺ → *Help* → ●



## ■ Yahoo! Keitai

Changing Font Size	On a page, <b>3</b> (Long) to enlarge or <b>1</b> (Long) to reduce
--------------------	--

## ■ PC Site Browser

Switching view	On a page, <b>⊞</b> → <i>PC Screen or Small Screen</i> → ● <ul style="list-style-type: none"> <li>In Small Screen view, PC sites are redesigned to fit Display.</li> </ul>
Zooming on pages (Zoom Factor)	On a page, <b>3</b> (Long) to enlarge or <b>1</b> (Long) to reduce
Jumping to specific locations	On a page, <b>5</b> (Long) → <i>Quick Movement map appears</i> → <i>Select target location</i> → ●
Enlarging specific areas	On a page, point to area → <b>7</b> (Long) <ul style="list-style-type: none"> <li>Use <b>⊞</b> to move pointer in enlarged view; highlight item and press ● to execute it.</li> <li>To close enlarged view, press a key other than <b>⊞</b>.</li> </ul>

## Internet Page Settings

### ■ Yahoo! Keitai & PC Site Browser

For PC Site Browser, perform the following sequence instead of *Browser Settings* → ●.

*PC Site Browser* → ● → *PC Site Browser Settings* → ●

Disabling automatic image display/sound playback	<b>Start Here</b> ● → <i>Yahoo! Keitai</i> → ● → <i>Browser Settings</i> → ● → <i>Downloads</i> → ● → <i>See below</i>
	<i>Image Display Images</i> → ● → <i>Do not Show</i> → ●
Changing Font Size	<b>Start Here</b> ● → <i>Yahoo! Keitai</i> → ● → <i>Browser Settings</i> → ● → <i>Font Size</i> → ● → <i>Select size</i> → ●
	<i>Sound Playback Sounds</i> → ● → <i>Do not Play</i> → ●
Using pointer navigation	<b>Start Here</b> ● → <i>Yahoo! Keitai</i> → ● → <i>Browser Settings</i> → ● → <i>Cursor Settings</i> → ● → <i>See below</i>
	<i>Activating Cursor Mode Settings</i> → ● → <i>Normal Mode</i> → ●
	<i>Changing Pointer Speed Speed Settings</i> → ● → <i>Select speed</i> → ●
Using Memory Card as primary download storage	● → <i>Yahoo! Keitai</i> → ● → <i>Browser Settings</i> → ● → <i>Download to</i> → ● → <i>Prefer Card</i> → ●
	<ul style="list-style-type: none"> <li>Some files may be saved to handset regardless of this setting.</li> </ul>
Changing scroll unit	● → <i>Yahoo! Keitai</i> → ● → <i>Browser Settings</i> → ● → <i>Scroll Unit</i> → ● → <i>Select unit</i> → ●

### ■ Yahoo! Keitai



## ■ PC Site Browser

Showing navigation map for continuous scroll	<ul style="list-style-type: none"> <li>● → <i>Yahoo! Keitai</i> → ● → <i>PC Site Browser</i></li> <li>→ ● → <i>PC Site Browser Settings</i> → ● →</li> <li><i>Scroll Settings</i> → ● → <i>Page Navigation</i> → ●</li> <li>→ <i>On</i> → ●</li> </ul>
Changing scroll unit	<ul style="list-style-type: none"> <li>● → <i>Yahoo! Keitai</i> → ● → <i>PC Site Browser</i></li> <li>→ ● → <i>PC Site Browser Settings</i> → ● →</li> <li><i>Scroll Settings</i> → ● → <i>Scroll Unit</i> → ● →</li> <li><i>Select unit</i> → ●</li> </ul>
Hiding PC Site Browser messages	<ul style="list-style-type: none"> <li>● → <i>Yahoo! Keitai</i> → ● → <i>PC Site Browser</i></li> <li>→ ● → <i>PC Site Browser Settings</i> → ● →</li> <li><i>Warning Message</i> → ● → <i>PC Site Browser or</i></li> <li><i>Yahoo! Keitai</i> → ● → <i>Off</i> → ●</li> </ul>

## Streaming &amp; Progressive Download

## ■ General

Customizing media playback settings	<ul style="list-style-type: none"> <li><b>Start Here</b> ● → <i>During playback</i>, ⊞ → <i>Settings</i> → ●</li> <li>→ <i>See below</i></li> </ul>
	<p><b>Changing Playback Size</b></p> <ul style="list-style-type: none"> <li><i>Display Size</i> → ● → <i>Select size</i> → ●</li> <li>● Playback size may not change depending on file.</li> </ul>
	<p><b>Setting Backlight Status</b></p> <ul style="list-style-type: none"> <li><i>Backlight</i> → ● → <i>Select option</i> → ●</li> <li>● Selecting <i>Normal Settings</i> applies Display Backlight settings.</li> </ul>
	<p><b>Adjusting Sound Effects</b></p> <ul style="list-style-type: none"> <li><i>Sound Effects</i> → ● → <i>Select effect</i> → ●</li> </ul>

## ■ Streaming

Streaming from Media Player	<ul style="list-style-type: none"> <li><b>Start Here</b> ● → ● → <i>Media Player</i> → ● → <i>Streaming</i></li> <li>→ ● → <i>See below</i></li> </ul>
	<p><b>Resuming from Stopped Point</b></p> <ul style="list-style-type: none"> <li><i>Last Played</i> → ●</li> </ul>
	<p><b>Using Bookmarks</b></p> <ul style="list-style-type: none"> <li><i>Bookmarks</i> → ● → <i>Select title</i> → ●</li> </ul>
	<p><b>Using History</b></p> <ul style="list-style-type: none"> <li><i>History</i> → ● → <i>Select record</i> → ●</li> </ul>

## Bookmarks

Deleting titles	<ul style="list-style-type: none"> <li><b>Start Here</b> ● → ● → <i>Yahoo! Keitai</i> → ● →</li> <li><i>Bookmarks</i> → ● → <i>See below</i></li> </ul>
	<p><b>One Title</b></p> <ul style="list-style-type: none"> <li><i>Select title</i> → ⊞ → <i>Delete</i> → ● → <i>Yes</i> → ●</li> </ul>
	<p><b>All Titles</b></p> <ul style="list-style-type: none"> <li>⊞ → <i>Delete All</i> → ● → <i>Enter Handset Code</i></li> <li>→ ● → <i>Yes</i> → ●</li> </ul>
Editing titles	<ul style="list-style-type: none"> <li>● → <i>Yahoo! Keitai</i> → ● → <i>Bookmarks</i> → ●</li> <li>→ <i>Select title</i> → ⊞ → <i>Edit</i> → ● → <i>Title:</i> → ●</li> <li>→ <i>Enter title</i> → ● → <i>Y</i></li> </ul>
Editing bookmarked URLs	<ul style="list-style-type: none"> <li>● → <i>Yahoo! Keitai</i> → ● → <i>Bookmarks</i> → ●</li> <li>→ <i>Select title</i> → ⊞ → <i>Edit</i> → ● → <i>URL:</i> → ●</li> <li>→ <i>Edit</i> → ● → <i>Y</i></li> </ul>
Sending bookmarked URLs via mail	<ul style="list-style-type: none"> <li>● → <i>Yahoo! Keitai</i> → ● → <i>Bookmarks</i> → ●</li> <li>→ <i>Select title</i> → ⊞ → <i>Send</i> → ● → <i>As</i></li> <li><i>Message</i> → ● → <i>S! Mail or SMS</i> → ● →</li> <li><i>Complete message</i> → <i>Y</i></li> <li>● S! Mail Composition window opens automatically depending on character count.</li> </ul>



Changing title order	<ul style="list-style-type: none"> <li>● ➤ <i>Yahoo! Keitai</i> ➤ ● ➤ <i>Bookmarks</i> ➤ ●</li> <li>➤ <i>Select title</i> ➤ ☰ ➤ <i>Change Order</i> ➤ ● ➤</li> <li><i>Select target location</i> ➤ ●</li> </ul>
Opening title properties	<ul style="list-style-type: none"> <li>● ➤ <i>Yahoo! Keitai</i> ➤ ● ➤ <i>Bookmarks</i> ➤ ●</li> <li>➤ <i>Select title</i> ➤ ☰ ➤ <i>Details</i> ➤ ●</li> </ul>
Sorting titles into folders	<ul style="list-style-type: none"> <li><b>Start Here</b> ● ➤ <i>Yahoo! Keitai</i> ➤ ● ➤</li> <li><i>Bookmarks</i> ➤ ● ➤ <i>See below</i></li> </ul>
	<p><b>Creating Folders</b></p> <ul style="list-style-type: none"> <li>☰ ➤ <i>Create Folder</i> ➤ ● ➤ <i>Enter name</i> ➤ ●</li> </ul>
	<p><b>Moving to Folders</b></p> <ul style="list-style-type: none"> <li><i>Select title</i> ➤ ☰ ➤ <i>Move</i> ➤ ● ➤ <i>Select folder</i></li> <li>➤ ● ➤ <i>Move</i> ➤ ●</li> </ul>
	<p><b>Moving from Folders</b></p> <ul style="list-style-type: none"> <li><i>Select folder</i> ➤ ● ➤ <i>Select title</i> ➤ ☰ ➤ <i>Move</i></li> <li>➤ ● ➤ <i>Move</i> ➤ ●</li> </ul>
	<p><b>Renaming Folders</b></p> <ul style="list-style-type: none"> <li><i>Select folder</i> ➤ ☰ ➤ <i>Rename</i> ➤ ● ➤ <i>Enter name</i> ➤ ●</li> </ul>
	<p><b>Deleting All Titles within a Folder</b></p> <ul style="list-style-type: none"> <li><i>Select folder</i> ➤ ● ➤ ☰ ➤ <i>Delete All</i> ➤ ● ➤</li> <li><i>Enter Handset Code</i> ➤ ● ➤ <i>Yes</i> ➤ ●</li> </ul> <p><b>Deleting Folders</b></p> <ul style="list-style-type: none"> <li><i>Select folder</i> ➤ ☰ ➤ <i>Delete</i> ➤ ● ➤ <i>Enter Handset Code</i> ➤ ● ➤ <i>Yes</i> ➤ ●</li> </ul>

## Saved Pages

Deleting pages	<ul style="list-style-type: none"> <li><b>Start Here</b> ● ➤ <i>Yahoo! Keitai</i> ➤ ● ➤ <i>Saved Pages</i> ➤ ● ➤ <i>See below</i></li> </ul> <p><b>One Page</b></p> <ul style="list-style-type: none"> <li><i>Select page</i> ➤ ☰ ➤ <i>Delete</i> ➤ ● ➤ <i>Yes</i> ➤ ●</li> </ul> <p><b>All Pages</b></p> <ul style="list-style-type: none"> <li>☰ ➤ <i>Delete All</i> ➤ ● ➤ <i>Enter Handset Code</i></li> <li>➤ ● ➤ <i>Yes</i> ➤ ●</li> </ul>
	<ul style="list-style-type: none"> <li>● ➤ <i>Yahoo! Keitai</i> ➤ ● ➤ <i>Saved Pages</i> ➤ ●</li> <li>➤ <i>Select page</i> ➤ ☰ ➤ <i>Rename</i> ➤ ● ➤ <i>Enter title</i> ➤ ●</li> </ul>
Editing page titles	<ul style="list-style-type: none"> <li>● ➤ <i>Yahoo! Keitai</i> ➤ ● ➤ <i>Saved Pages</i> ➤ ●</li> <li>➤ <i>Select page</i> ➤ ☰ ➤ <i>Rename</i> ➤ ● ➤ <i>Enter title</i> ➤ ●</li> </ul>
Changing page order	<ul style="list-style-type: none"> <li>● ➤ <i>Yahoo! Keitai</i> ➤ ● ➤ <i>Saved Pages</i> ➤ ●</li> <li>➤ <i>Select page</i> ➤ ☰ ➤ <i>Change Order</i> ➤ ● ➤</li> <li><i>Select target location</i> ➤ ●</li> </ul>
Opening page properties	<ul style="list-style-type: none"> <li>● ➤ <i>Yahoo! Keitai</i> ➤ ● ➤ <i>Saved Pages</i> ➤ ●</li> <li>➤ <i>Select page</i> ➤ ☰ ➤ <i>Details</i> ➤ ●</li> </ul>
Switching page list view	<ul style="list-style-type: none"> <li>● ➤ <i>Yahoo! Keitai</i> ➤ ● ➤ <i>Saved Pages</i> ➤ ●</li> <li>➤ <i>Select page</i> ➤ ☰ ➤ <i>List View or Preview View</i> ➤ ●</li> </ul>



## RSS Feeds

Disabling feed updates	<ul style="list-style-type: none"> <li>● → Yahoo! Keitai → ● → PC Site Browser →</li> <li>● → RSS Feed → ● → Select feed → ☰ →</li> <li>Manage RSS Feed → ● → Restrict Update → ●</li> </ul>
Sorting feeds into folders	<p><b>Start Here</b> ● → Yahoo! Keitai → ● → PC Site Browser → ● → RSS Feed → ● → See below</p> <p><b>Creating Folders</b></p> <p>☰ → Manage RSS Feed → ● → Create Folder → ● → Enter name → ●</p> <p><b>Moving to Folders</b></p> <p>Select feed → ☰ → Manage RSS Feed → ● → Move → ● → Select folder → ● → Move → ●</p> <p><b>Renaming Folders</b></p> <p>Select folder → ☰ → Manage RSS Feed → ● → Rename → ● → Enter name → ●</p> <p><b>Deleting Folders</b></p> <p>Select folder → ☰ → Delete → ● → Enter Handset Code → ● → Yes → ●</p>
	<p><b>Start Here</b> ● → Yahoo! Keitai → ● → PC Site Browser → ● → RSS Feed → ● → See below</p> <p><b>One Entry</b></p> <p>Select feed → ☰ → Delete → ● → Yes → ●</p> <p><b>All Entries</b></p> <p>☰ → Manage RSS Feed → ● → Delete All → ● → Enter Handset Code → ● → Yes → ●</p> <p>• Alternatively, perform <i>Delete RSS Feed List</i> in Memory Operation (PC Site Browser Settings) to delete all feeds.</p>
	<p><b>Start Here</b> ● → Yahoo! Keitai → ● → PC Site Browser → ● → RSS Feed → ● → See below</p> <p><b>One Entry</b></p> <p>Select feed → ☰ → Delete → ● → Yes → ●</p> <p><b>All Entries</b></p> <p>☰ → Manage RSS Feed → ● → Delete All → ● → Enter Handset Code → ● → Yes → ●</p> <p>• Alternatively, perform <i>Delete RSS Feed List</i> in Memory Operation (PC Site Browser Settings) to delete all feeds.</p>
	<p><b>Start Here</b> ● → Yahoo! Keitai → ● → PC Site Browser → ● → RSS Feed → ● → See below</p> <p><b>One Entry</b></p> <p>Select feed → ☰ → Delete → ● → Yes → ●</p> <p><b>All Entries</b></p> <p>☰ → Manage RSS Feed → ● → Delete All → ● → Enter Handset Code → ● → Yes → ●</p> <p>• Alternatively, perform <i>Delete RSS Feed List</i> in Memory Operation (PC Site Browser Settings) to delete all feeds.</p>
Deleting feeds	<p><b>Start Here</b> ● → Yahoo! Keitai → ● → PC Site Browser → ● → RSS Feed → ● → See below</p> <p><b>One Entry</b></p> <p>Select feed → ☰ → Delete → ● → Yes → ●</p> <p><b>All Entries</b></p> <p>☰ → Manage RSS Feed → ● → Delete All → ● → Enter Handset Code → ● → Yes → ●</p> <p>• Alternatively, perform <i>Delete RSS Feed List</i> in Memory Operation (PC Site Browser Settings) to delete all feeds.</p>

## Sorting feeds

● → Yahoo! Keitai → ● → PC Site Browser → ● → RSS Feed → ● → ☰ → Manage RSS Feed → ● → Sort → ● → Select option → ●

## Opening feed properties

● → Yahoo! Keitai → ● → PC Site Browser → ● → RSS Feed → ● → Select feed → ☰ → Manage RSS Feed → ● → Details → ●

## Exchanging feeds with other devices

**Start Here** ● → Yahoo! Keitai → ● → PC Site Browser → ● → RSS Feed → ● → ☰ → Manage RSS Feed → ● → See below

## Exporting All Feeds

Export All → ● → Select storage media → ●

## Importing (Adding Feeds)

Import → ● → Select file → ● → As New Items → ● → Yes or No → ● → Yes or No → ●

## Importing (Overwriting Existing Feeds)

Import → ● → Select file → ● → Delete All → ● → Enter Handset Code → ● → Yes → ● → Yes or No → ● → Yes or No → ●

## Sending feeds via mail

● → Yahoo! Keitai → ● → PC Site Browser → ● → RSS Feed → ● → Select feed → ☰ → Manage RSS Feed → ● → As Message → ● → Complete message → ☺



## Security Settings

For PC Site Browser, perform the following sequence instead of **Browser Settings** → ●.

**PC Site Browser** → ● → **PC Site Browser Settings** → ●

Disabling manufacture number auto send for authentication	● → <b>Yahoo! Keitai</b> → ● → <b>Browser Settings</b> → ● → <b>Security Settings</b> → ● → <b>Manufacture Number</b> → ● → <b>Off</b> → ●
Disabling referer information delivery to the Server	● → <b>Yahoo! Keitai</b> → ● → <b>Browser Settings</b> → ● → <b>Security Settings</b> → ● → <b>Send</b> <b>Referer</b> → ● → <b>Not Send</b> → ●
Enabling/disabling cookies	● → <b>Yahoo! Keitai</b> → ● → <b>Browser Settings</b> → ● → <b>Security Settings</b> → ● → <b>Cookies</b> → ● → <b>Select option</b> → ●
Selecting script execution option	● → <b>Yahoo! Keitai</b> → ● → <b>Browser Settings</b> → ● → <b>Security Settings</b> → ● → <b>Script</b> <b>Settings</b> → ● → <b>Select option</b> → ●
Hiding confirmations before entering/exiting secure pages	● → <b>Yahoo! Keitai</b> → ● → <b>Browser Settings</b> → ● → <b>Security Settings</b> → ● → <b>Secure</b> <b>Prompt</b> → ● → <b>Do not Show</b> → ●
Opening electronic certificates saved on handset	● → <b>Yahoo! Keitai</b> → ● → <b>Browser Settings</b> → ● → <b>Security Settings</b> → ● → <b>Root</b> <b>Certificates</b> → ● → <b>Select certificate</b> → ●

Changing validity of entered user ID/password

- → **Yahoo! Keitai** → ● → **Browser Settings**  
→ ● → **Security Settings** → ● → **Keep Auth**  
**Info** → ● → **Select option** → ●
- **Per Browsing** retains entered user ID/password during browsing sessions. **On** retains such authentication information even after powering handset off.
  - Authentication information may not be retained depending on the site.

Enabling/disabling Ajax (for asynchronous communication)

- → **Yahoo! Keitai** → ● → **Browser Settings**  
→ ● → **Security Settings** → ● → **Restrict**  
**Ajax** → ● → **Select option** → ●

## Resetting

For PC Site Browser, perform the following sequence instead of **Browser Settings** → ●.

**PC Site Browser** → ● → **PC Site Browser Settings** → ●

Resetting browser settings and stored information (Bookmarks, Saved Pages, etc.)	● → <b>Yahoo! Keitai</b> → ● → <b>Browser Settings</b> → ● → <b>Initialized Browser</b> → ● → <b>Enter</b> <b>Handset Code</b> → ● → <b>Yes</b> → ●
Restoring default handset settings	● → <b>Yahoo! Keitai</b> → ● → <b>Browser Settings</b> → ● → <b>Reset Settings</b> → ● → <b>Enter Handset</b> <b>Code</b> → ● → <b>Yes</b> → ●



## Connecting & Browsing

### ? What is the bar at Display bottom?

- This is a data progress bar; the number beside it indicates transmitted (green) or received (red) data.

## Page Operations

### ? Internet page does not open completely

- Portions of page content may not appear in tabbed browsing; close other tabs.

### ? Text overlaps

- The site may be designed for browsing on PCs; try ***Tiny*** font size.
- Text may overlap when Zoom Factor is used; adjust scale.

### ? Cannot access other functions while browsing the Internet

- When switching between Yahoo! Keitai and PC Site Browser (☐ appears), additional function activation is disabled; close either browser and retry.

