

<b>Data Folder</b> .....	<b>14-2</b>
Opening Files .....	14-3
Managing Files & Folders .....	14-4

<b>Memory Card</b> .....	<b>14-5</b>
Using Memory Card .....	14-5
<b>Additional Functions</b> .....	<b>14-8</b>
<b>Troubleshooting</b> .....	<b>14-11</b>

# 14

## Data Folder & Memory Card



## Data Folder

Handset files are organized in folders by file format.

### ■ Preset Folders

	Contents
Pictures*	Still images
DCIM	Large still images on Memory Card (images captured with save location set to <b>DCIM</b> )
Ring Songs-Tones*	Downloaded melodies and other sound files
S! Appli*	S! Applications
Widget*	Widgets
Music*	Downloaded Chaku-Uta Full® files
Videos*	Video images
Lifestyle-Appli*	Lifestyle-Appli required to use Osaifu-Keitai®
Books*	Downloaded e-Books, etc.
Customized Screen*	Downloaded Customized Screen files
Status Templates	Combinations of Status Icon and Status Label for S! Friend's Status
Decoration Call*	Decoration Call files created on handset or obtained via mail
Flash®	Downloaded Flash® (animation) files
Other Documents	Other files (Dictionary files, etc.)

\*Contains corresponding Yahoo! Keitai menu shortcut.

### Checking Memory Status


**MENU** ➔ **Data Folder** ➔ **Memory Status** ➔ **Phone Memory or Memory Card**

- The category **Others**: includes Data Folder management files, Saved Pages, etc.
- Delete messages/files when memory is low. Handset performance may be affected when memory is full.



# Opening Files


## 1 MENU → Data Folder

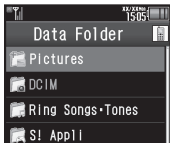

- Unselectable files/folders appear in gray.
- To show/hide sub folders, highlight a folder and tap + .


## 2 Select folder

To open a sub folder, highlight it and tap **Open**.

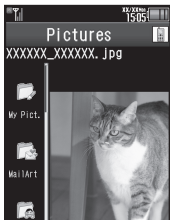

File List

## 3 Select file

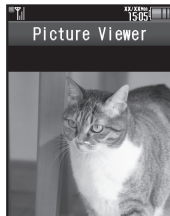

- The content plays or appears.
- To return to file list, tap **CLEAR/BACK**.

### Handling Open Images

- Tap **Zoom** to enlarge, or **Rotate** to rotate 90 degrees clockwise. Swipe finger left or right across Display to open next or previous image.

### Attaching to Mail

After 2, highlight file → **Options** → **Send/Blog** → **As Message**

- If a confirmation appears, follow onscreen instructions.

### Copy Protected Files ( or )

- Some functions may be unavailable.

## Slide Show

Available for Pictures or DCIM folder.

## 1 In file list, highlight file → Options



## 2 Slide Show

- Slide Show starts.

## 3 Stop → Slide Show stops

### Setting Interval

After 2, **Set** → **Speed** → **Select speed** → **CLEAR/BACK**

- When Speed is set to **Manual**, press **Next/** or to advance or reverse frame.

### Note

- Backlight stays on during Slide Show; exit to save battery power.

## Advanced

- Switching file list view
- Setting image quality
- Changing Slide Show settings
- Using files as Wallpaper
- Using files as ringtones
- Using files as ringvideos (And more on P.14-8 - 14-9)



## Managing Files & Folders

### Adding Folders

May be unavailable for some folders.

- MENU** ➔ **Data Folder** ➔  
**Select folder**



File List

- Options**  
If **Download** is highlighted or folder is empty, skip ahead to 4.
- Manage Items**
- Create Folder** ➔ **Enter name** ➔ **Done**

### Moving/Copying Files

Some files may not be moved/copied.

- In file list, highlight file ➔ **Options**
- Move or Copy** ➔ **Phone or Memory Card**  
• For still images, tap **Pictures** or **Mail Art**.
- Select folder**
- Move here or Copy here**

### Selecting Multiple Files

- In file list, **Multi Select**
- Select file**  
• Repeat 2 as needed. (To uncheck, highlight a file with  and tap **Uncheck**.)

### Hiding Folders

Restrict access to created folders. Only handset folders can be hidden.

- In file list, highlight folder ➔ **Options**
- Set Secret** ➔ **Enter Handset Code** ➔ **OK**

### Accessing Secret Folders (Unlock Temporarily)

[File List] **Options** ➔ **Unlock Temporarily** ➔ **Enter Handset Code** ➔ **OK**

### Canceling Secret

Unlock Secret folders temporarily and highlight Secret folder ➔ **Options** ➔ **Unset Secret** ➔ **Enter Handset Code** ➔ **OK**

### Advanced

- Renaming folders
  - Opening file properties
  - Renaming files
  - Sorting files
  - Deleting files & created folders
  - Handling SVG files with handset keys
- (P.14-9 - 14-10)



## Using Memory Card

Use microSD™/microSDHC™ Memory Card (hereafter "Memory Card") to save and organize files for use on 941SH. Use recommended Memory Cards only. For details, see P.17-23 "microSD™ Memory Card Compatibility."


### Important Memory Card Usage Notes

- Do not force Memory Card into or out of handset.
- Keep Memory Cards out of infant's reach; may cause suffocation if swallowed.
- Do not touch terminals or expose them to metal objects.
- SoftBank Mobile is not liable for any damages resulting from accidental loss/alteration of information. Keep a copy of Phone Book entries, etc. in a separate place.
- Never remove Memory Card or battery while files are being accessed.
- Be careful not to erase or overwrite files accidentally.

### Inserting



First, power handset off.

#### 1 Remove cover

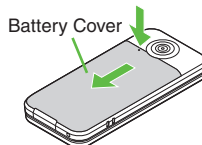

- Press and slide as shown.

#### 2 Slide holder as shown in ① (toward OPEN▶) and lift it as shown in ②

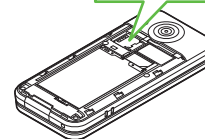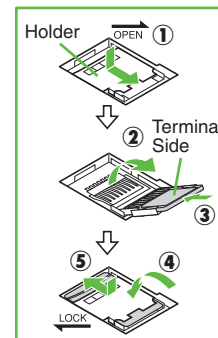


### ③ Insert card (terminals down) into holder as shown in ③

- At time of purchase, a plastic dummy card is inserted into holder to protect contact pins. Remove the dummy when inserting Memory Card.
- Do not insert other objects into Memory Card holder.

### ④ Replace holder and slide as shown in ⑤ (◀LOCK)

### ⑤ Close cover

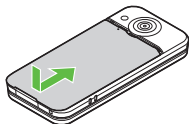

- Position and slide the cover gently as shown until it stops.

#### If Appears after Power On

- Memory Card may not be inserted properly; reinsert the card.



### Removing

First, power handset off. (Battery does not need to be removed.)

### ① Remove cover then lift holder

### ② Slide out card gently as shown in ③


### ③ Replace holder then close cover

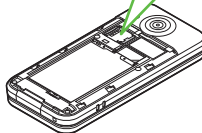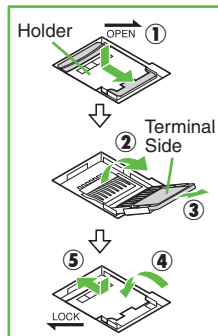

## Format Card

When using a new Memory Card for the first time, format it on the handset before trying to save files, etc. Format Card deletes all Memory Card files, even those created on other devices.


- MENU** → **Settings** → **Phone/**  **tab** → **Memory Card**

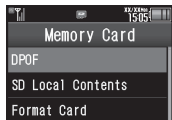

- Format Card** → **Yes**

- Offline Mode is set. Handset transmissions are suspended until format is complete.

- Enter Handset Code** → **OK**

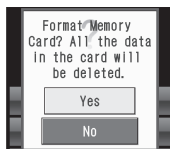

- Yes**


- To cancel, tap **No**.

### Precaution

- Never remove Memory Card or battery while formatting; may cause damage.

## Opening Memory Card Files

- MENU** → **Data Folder**
- Options** → **Change to MemoryCard**

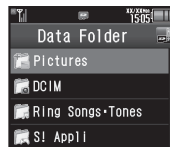

- Memory Card Data Folder opens.

- Select folder**

To open a sub folder, highlight it and tap **Open**.

- Select file**

## Advanced

-  **Using HTML files on Memory Card (P.14-10)**



File/Folder View Settings	
Switching file list view	<i>MENU</i> ➔ <i>Data Folder</i> ➔ Select folder ➔ <i>Options</i> ➔ <i>Manage Items</i> ➔ <i>Change List View</i> ➔ Select option
Setting image quality	<i>MENU</i> ➔ <i>Data Folder</i> ➔ Select folder ➔ Select file ➔ <i>Options</i> ➔ <i>Switch Display (Picture Quality for Flash® files)</i> ➔ Select quality
Setting image transition effect using swipe or ☺	<i>MENU</i> ➔ <i>Data Folder</i> ➔ Select folder ➔ Select file ➔ <i>Options</i> ➔ <i>Switch Effect</i> ➔ Select effect
Changing Slide Show settings	<small>(Start Here)</small> <i>MENU</i> ➔ <i>Data Folder</i> ➔ <i>Pictures (or DCIM)</i> ➔ Highlight file ➔ <i>Options</i> ➔ <i>Slide Show</i> ➔ <i>Set</i> ➔ See below
	<b>Playing Once</b> <i>Repeat</i> ➔ <i>Off</i>
	<b>Playing Music</b> <i>BGM Settings</i> ➔ <i>Switch On/Off</i> ➔ <i>On</i>
	<b>Setting Music</b> <i>BGM Settings</i> ➔ <i>Play Ring Tones</i> ➔ Select folder ➔ Select file
	<b>Setting Key Illumination Pattern</b> <i>Illumination</i> ➔ <i>Key Pattern</i> ➔ Select pattern ➔ <i>Confirm</i>
<b>Disabling Illumination</b> <i>Illumination</i> ➔ <i>Switch On/Off</i> ➔ <i>Off</i> ➔ <i>Confirm</i>	

Changing Slide Show settings	<small>(Start Here)</small> <i>MENU</i> ➔ <i>Data Folder</i> ➔ <i>Pictures (or DCIM)</i> ➔ Highlight file ➔ <i>Options</i> ➔ <i>Slide Show</i> ➔ <i>Set</i> ➔ See below
	<b>Hiding Softkeys</b> <i>SW Guide Display</i> ➔ <i>Off</i>
	<b>Setting Backlight to Turn Off after a Period of Time</b> <i>Always Backlight</i> ➔ <i>Off</i> <ul style="list-style-type: none"> <li>Choosing <i>Off</i> applies Display Backlight settings. (Display remains on during Slide Show regardless of Display Saving setting.)</li> </ul>
Hiding Softkeys in image view	<b>Setting Image Transition Effect</b> <i>Switch</i> ➔ Select effect
	<i>MENU</i> ➔ <i>Data Folder</i> ➔ Select folder ➔ Select file ➔ <i>Options</i> ➔ <i>SW Guide Display</i> ➔ <i>Off</i>





## Using Files/Folders

Using files as Wallpaper	<p><b>MENU</b> ➤ <i>Data Folder</i> ➤ Select folder ➤ Highlight file ➤ <i>Options</i> ➤ <i>Set as Wallpaper</i> ➤ <i>Vertical or Horizontal</i> ➤ <i>Assign</i></p> <ul style="list-style-type: none"> <li>For images smaller or larger than Display, Wallpaper Display options appear; tap one.</li> </ul>
Using files as ringtones	<p><b>MENU</b> ➤ <i>Data Folder</i> ➤ Select folder ➤ Highlight file ➤ <i>Options</i> ➤ <i>Set as Ringtone</i> ➤ Select item</p> <ul style="list-style-type: none"> <li>If prompted, enter ring time and tap <i>Accept</i>.</li> <li>If a confirmation appears, follow onscreen instructions.</li> </ul>
Using files as ringvideos	<p><b>MENU</b> ➤ <i>Data Folder</i> ➤ <i>Videos</i> ➤ Highlight file ➤ <i>Options</i> ➤ <i>Set as Ring Video</i> ➤ Select item</p> <ul style="list-style-type: none"> <li>If prompted, enter ring time and tap <i>Accept</i>.</li> </ul>
Saving Phone Book entries	<p><b>MENU</b> ➤ <i>Data Folder</i> ➤ Select folder ➤ Highlight file ➤ <i>Options</i> ➤ <i>Save to Phone Book</i> ➤ <i>As New Entry</i> ➤ Complete other fields ➤ <i>Save</i></p> <ul style="list-style-type: none"> <li>To add to an existing entry, select <i>As New Detail</i>.</li> </ul>
Activating mobile camera, etc. in corresponding folders	<p><b>MENU</b> ➤ <i>Data Folder</i> ➤ Select folder ➤ <i>Options</i> ➤ <i>Take Picture, Record Video or Record Voice</i></p>

## Managing Files/Folders

Renaming folders	<p><b>MENU</b> ➤ <i>Data Folder</i> ➤ Select folder ➤ Highlight folder ➤ <i>Options</i> ➤ <i>Manage Items</i> ➤ <i>Rename</i> ➤ Enter name ➤ <i>Done</i></p> <ul style="list-style-type: none"> <li>Assign different names to folders within a layer.</li> </ul>
Opening file properties	<p><b>MENU</b> ➤ <i>Data Folder</i> ➤ Select folder ➤ Highlight file ➤ <i>Options</i> ➤ <i>Details</i></p>
Renaming files	<p><b>MENU</b> ➤ <i>Data Folder</i> ➤ Select folder ➤ Highlight file ➤ <i>Options</i> ➤ <i>Manage Items</i> ➤ <i>Rename</i> ➤ Enter name ➤ <i>Done</i></p>
Sorting files	<p><b>MENU</b> ➤ <i>Data Folder</i> ➤ Select folder ➤ <i>Options</i> ➤ <i>Manage Items</i> ➤ <i>Sort</i> ➤ Select method</p>
Deleting files & created folders	<p><small>[Start Here]</small> <b>MENU</b> ➤ <i>Data Folder</i> ➤ Select folder ➤ See below</p>
	<p><b>Single Files</b></p> <p>Highlight file ➤ <i>Options</i> ➤ <i>Delete</i> ➤ <i>Yes</i></p>
	<p><b>Folder &amp; Files Within</b></p> <p>Highlight folder ➤ <i>Options</i> ➤ <i>Delete</i> ➤ Enter Handset Code ➤ <i>OK</i> ➤ <i>Yes</i></p>



Handling SVG files  
with handset keys

## Line Scroll



## Page Scroll

[2] (Up), [8] (Down), [6] (Right), [4] (Left)

## Zoom

[1] (Zoom out), [3] (Zoom in)

## Rotate

[7] (Counterclockwise), [9] (Clockwise)

## Key Action Mode

[0]

## Default View

[5]

## Memory Card

Using HTML files  
on Memory Card*MENU* → *Settings* → *Phone* tab → *Memory Card* → *SD Local Contents* → *Select file*

## Managing Files/Folders



### Cannot copy files

- Files may be copy/forward protected. (If a copy/forward protected file is included in selected files, only the remaining files are copied.)



### Copied/moved files cannot be used on PCs, etc.

- Some files may not be usable on other SoftBank handsets or PCs, etc.



### Cannot sort files properly

- Check the number of files/folders in the folder. Files/folders in folders containing 961 or more files/folders are sorted per 240 files/folders in the order they were saved. The order may change when a file/folder is deleted, etc.



### Cannot use some characters in file/folder names

- Single-byte Symbols  $\backslash$ , /, :, ;, ,, <, >, /, ?, \* and " are not supported.

