

Emergency Calls	4-2
Voice Calling	4-3
Video Calling	4-6
Decoration Call	4-8
Speed Dial	4-9
Call Log	4-10
Call Time	4-11

Call Barring	4-12
Restrict Destinations	4-12
Reject Numbers	4-13
Optional Services	4-14
Additional Functions	4-16
Troubleshooting	4-24

4

Calling



Emergency Calls

Your location is automatically reported to the corresponding agency (police, etc.) when you place emergency calls (110, 119 or 118) with SoftBank 3G handsets. (Emergency Location Report)

941SH reports Location Information based on positioning signals from radio stations.

- Registration/transmission fees do not apply.
- Positioning accuracy is affected by location/signal conditions. Always provide your location and purpose on the phone.
- Location Information is not reported when emergency calls are placed without Caller ID (such as when the number is prefixed with **184**). However, the corresponding agency may obtain your Location Information in a life threatening situation.
- Location Information is not reported during international roaming.

Handset Restrictions & Emergency Calls

Emergency calls are possible even while some handset restrictions are active.


Active Restriction	Emergency Calls
Function Lock	Possible
Bar Outgoing Calls	
Offline Mode	Restricted
Keypad Lock	
PIN Entry	



Voice Calling

Answering a Voice Call


Incoming Call window opens for a call.

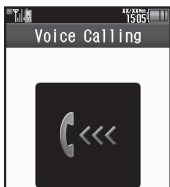

Incoming Voice Call Window

Slider Closed

1 Answer to accept the call

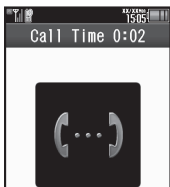

- Call connects.
- Use to adjust Earpiece Volume.

2 End Call → Call ends

When Keypad Lock is Active

- Press to cancel Keypad Lock first.
- ### After Calls to/from Unsaved Numbers
- Save to Phone Book confirmation appears. Tap **New Entry** or **New Detail** to save number; entry search window or Phone Book entry window opens, respectively.


■ Incoming Call Window Operations (Touch Panel)

Muting Ringer Temporarily	Tap <i>Ringer Off</i>
Recording Caller Messages	Tap <i>Record</i>
Placing Calls on Hold	Tap <i>Hold</i>

Tap **Answer** to answer calls on hold or mid-recording.

Slider Open (Handset Keys)

1 to accept the call

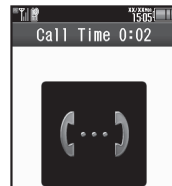

- Call connects.
- Use to adjust Earpiece Volume.

2 → Call ends

After Calls to/from Unsaved Numbers

- Save to Phone Book confirmation appears. Highlight **New Entry** or **New Detail** and press to save number; entry search window or Phone Book entry window opens, respectively.

■ Incoming Call Window Operations (Handset Keys)

Muting Ringer Temporarily	
Recording Caller Messages	→ <i>Record Message</i>
Placing Calls on Hold	

Press to answer calls on hold or mid-recording.

Advanced

- Rejecting calls
- Answering with Headphones
- Adjusting Earpiece Volume
- Sending/blocking Caller ID
- Muting Microphone
- Recording caller voice (And more on **P.4-16 - 4-18**)
- Answering calls automatically when using Headphones (And more on **P.4-23**)



Placing a Voice Call


Slider Closed

- 1  ➔ Enter phone number with area code



- To correct entry, tap **CLEAR/BACK**.

2 **Call**

- Wait for receiver to accept the call.
- Use  to adjust Earpiece Volume.




3 **End Call ➔ Call ends**

- After calls to unsaved numbers, save to Phone Book confirmation appears.


Slider Open (Handset Keys)

- 1  Use Keypad to enter phone number with area code



- To correct entry, use  to place cursor under the digit and press . To delete the digits above and after the cursor, Long Press .

2 

- Wait for receiver to accept the call.
- Use  to adjust Earpiece Volume.

3  ➔ **Call ends**

- After calls to unsaved numbers, save to Phone Book confirmation appears.

Placing an International Call

Described for Slider closed operation:


- 1  ➔ Enter phone number with area code ➔ **Options**

2 **Int'l Call**

- 3 **Select country ➔ Call**
- Handset dials the number.

4 **End Call ➔ Call ends**

Calling Unlisted Countries

In , **Enter Code ➔ Enter country code ➔ OK ➔ Call**




Placing Calls from Outside Japan

See below to place a call to Japan from abroad. Apply for Global Roaming beforehand. See SoftBank Mobile Website for details: http://mb.softbank.jp/en/global_services/

- Access roaming area/rate information or print it out to carry with you while traveling abroad.
- Described for Slider closed operation.

Calls Overseas

- Calling may not be possible outside Japan. Connections depend on available network, signal strength, and handset settings.

-  **Enter phone number with area code** ➔ *Options*
- Int'l Call** ➔ *日本(JPN)* ➔ *Call*
 - Handset dials the number.
 - To call other countries, select the target country instead of *日本(JPN)*.
- End Call** ➔ *Call ends*

Calling SoftBank Handsets

- In , always select *日本(JPN)*.

Calling Landlines & Mobiles within the Same Country

- Enter phone number with area code
➔ *Call* ➔ *Dial to Your Stay*

Answer Phone

Caller messages are recorded on handset.

- Answer Phone cannot be used when handset is off or out-of-range. Use Voicemail to record caller messages when Answer Phone is not available.
- To answer a call mid-recording, tap *Answer*.
 - No message will be recorded.

Playing Messages





- MENU** ➔ *Phone* ➔ *Play Messages*
- Select record**
 - Playback stops automatically at the end of message.

Using Handset Keys

 ➔ 

Playback Operations


Key operations appear in parentheses.

Volume Control	 (🔊)
Replay/Skip Backward	 (⏮)
Stop	 (⏹)
Skip Forward	 (⏭)
Delete	<i>Delete</i> ➔ <i>Yes</i> (☹) ➔ <i>Yes</i>







Canceling Answer Phone

- MENU** ➔ *Settings* ➔ *Call tab* ➔ *Answer Phone*
- Switch On/Off** ➔ *Off*

Using Handset Keys

 (Long)

Advanced


-   Setting ring time
-  Sampling outgoing message
-  Muting Earpiece (And more on P.4-16)
-  Placing calls by entering country code directly
-  Using Roaming Dial Assistant to place international calls while outside Japan (And more on P.4-17)



Video Calling

View the other party's image or send an Outgoing Image to compatible handsets. Handle Video Calls like Voice Calls. This page describes functions/operations unique to Video Call.

Window Description

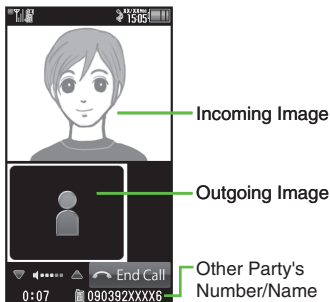

Important Video Call Usage Notes


- If both parties are using handset models without internal cameras, Video Call cannot be used as intended.
- If both parties are not using the same Video Call system, call may be interrupted. (Video Call charges apply.)
- Video Calls cannot be placed while TV is active.

Advanced

- Answering Video Calls automatically (And more on P.4-16)
- Adjusting Outgoing Image brightness
- Sending camera image when initiating Video Calls
- Disabling Loudspeaker for Video Calls
- Muting Microphone when initiating Video Calls (And more on P.4-18 - 4-23)

Answering a Video Call


Incoming Call window opens for a call.

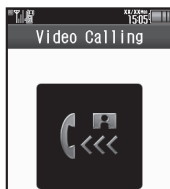

Incoming Video Call Window

Slider Closed

1 Answer to accept the call

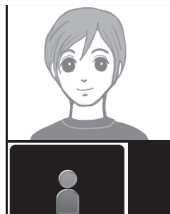

- Alternative Image is sent. (Video Call charges apply to the caller.)

2 End Call → Call ends

When Keypad Lock is Active

- Press **Ctrl** to cancel Keypad Lock first.


Engaged Video Call Operations (Touch Panel)

Toggle View	<i>Options</i> → <i>Switch Images</i> → Select option
Toggle Outgoing Image	Tap <i>SW</i>
Open Help	<i>Options</i> → <i>Help</i>



Slider Open (Handset Keys)

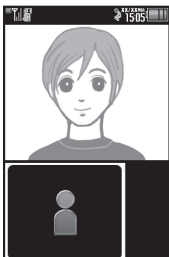

1  to accept the call



- Alternative Image is sent. (Video Call charges apply to the caller.)

2  ➔ Call ends

Engaged Video Call Operations (Handset Keys)


Toggle View	
Toggle Outgoing Image	
Open Help	 ➔ <i>Help</i>

Placing a Video Call

Slider Closed

1  ➔ Enter phone number

2 *Options* ➔ *Video Call*

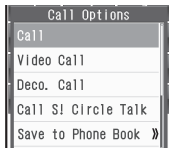


- Image appears when call is accepted.
- For operations during a Video Call, see P.4-6 "Engaged Video Call Operations (Touch Panel)."

3 *End Call* ➔ Call ends

Slider Open (Handset Keys)

1 Use Keypad to enter phone number ➔ 

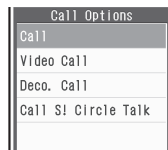

2 *Video Call*

- Image appears when call is accepted.
- For operations during a Video Call, see "Engaged Video Call Operations (Handset Keys)" on the left.

3  ➔ Call ends



Decoration Call

Show decorative message in incoming call windows on recipient's handset.

- Available without a separate contract.
- Recipient's handset must be Decoration Call-compatible.
- Charges apply to the caller when Decoration Call is placed successfully.

Answering a Decoration Call

Incoming Call window opens for a call.



Incoming Decoration Call Window

If Softkeys do not appear, handle incoming Decoration Call like any other call.

1 Answer to accept the call

- Call connects.

2 End Call → Call ends

- Open/save Decoration Call files from received call records.

When Keypad Lock is Active

- Press **Ctrl** to cancel Keypad Lock first.

Note

- Decoration Call file may not play depending on recipient handset settings.

Placing a Decoration Call

Follow these steps to place a Decoration Call by entering a phone number:

- 1 → Enter phone number
→ Options → Deco. Call



2 Deco. Call File

3 Deco. Call Folder → Select file

- To check selected file, tap **Play**.

4 Call

- Handset dials the number. (It may take some time.)

5 End Call → Call ends

Placing Your First Decoration Call

- A confirmation appears. Follow onscreen instructions.
 - To show confirmation next time as well, tap **Uncheck** (☐).

Placing Decoration Video Calls

After ☺, Call Type → Video Call → 4

Advanced

- Creating Decoration Call files
- Editing Decoration Call files
- Saving received Decoration Call files
- Restricting incoming/outgoing Decoration Calls
- Hiding incoming Decoration Call window
- Using mobile camera to create Decoration Call files
- Showing options upon Decoration Call failure (P.4-19)



Speed Dial

Saving Phone Numbers

Save phone numbers to Speed Dial/Mail list for easy dialing.

- 1 **MENU** ➔ *Phone*
- 2 *Speed Dial/Mail*
- 3 *<Empty>* ➔ **Select entry**
- 4 **Select phone number**



- Select mail address prompt appears. To save mail address for easy messaging, select one. (Omit **☺**.)

- 5 **Do not Assign**

6 **Save** ➔ **Saved**

- To save additional phone numbers, repeat **☺** - **☺**.

Using Headphones for Speed Dial

- Save a phone number to **☺**.

Canceling Speed Dial Entries

- In **☺**, highlight entry ➔ *Options* ➔ *Remove Selected* or *Remove All* ➔ *Yes*
 - Omit entry selection step when canceling all entries.

Using Speed Dial

- 1 **☺** ➔ **Enter 0 - 99 (entry number)**

2 **Call**

Placing Video Calls

- In **☺**, **☺** ➔ *Speed Video*

Placing Decoration Calls

- In **☺**, **☺** ➔ *Speed Deco. Call* ➔ *Deco. Call File* ➔ *Deco. Call Folder (or From Call Log)* ➔ **Select file (or record)** ➔ *Call*

- To create a new file, select *Create New File* in Deco. Call File menu.

Using Headphones


- In Standby, Long Press Call Button until a double beep sounds; handset dials the number saved in **☺**. To end the call, Long Press Call Button until a beep sounds.




Call Log

Open recent dialed/received call records.

1 

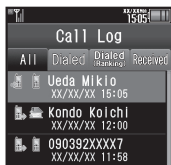

- Alternatively, press .
- All Calls, Dialed Numbers, Dialed Ranking and Received Calls appear on separate tabs.

2 **Select record**

- Open Decoration Call record and tap **Play** for the corresponding file.

When the Same Number is Dialed More than Once Using the Same Call Option

- Only the last record appears. (All records appear for S! Circle Talk and Decoration Call.)



Advanced


-  Dialing from records (And more on **P.4-19**)

Call Time

Check estimated time of the most recent call and all calls.

1 MENU ➔ Settings ➔ Call tab

2 Call Time/Data Counter

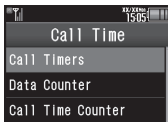

Call Time/Data Counter Menu

3 Call Timers



4 Dialed Calls or Received Calls

Resetting Dialed or Received Call Timer
After **4**, Reset ➔ Enter Handset Code ➔ OK ➔ Yes

Advanced

● Setting handset to beep during Voice Calls ● Checking accumulated data transmission volume ● Resetting Data Counter (And more on P.4-20)



Restrict Destinations

Allow calls to numbers saved in Phone Book or Permitted List only.

Limiting to Phone Book

- 1 **MENU** ➔ **Settings** ➔ **Call tab** ➔ **Call Barring**
- 2 **Restrict Destinations** ➔ **Enter Handset Code** ➔ **OK**



Restrict Destinations Menu

- 3 **Phonebook Entries** ➔ **On**

When Phonebook Entries is On

- Handset Code is required to add/edit Phone Book entries.

Limiting to Permitted List

Specifying Numbers

- 1 In Restrict Destinations menu, **Specified Numbers**



Specified Numbers Menu

- 2 **Permitted List**
- 3 **<Empty>**
- 4 **Enter phone number** ➔ **Done**
 - Repeat 3 - 4 to add phone numbers.

Activating Permitted List

- 1 In Specified Numbers menu, **Switch On/Off**
- 2 **On**



Advanced

- Designating Permitted List numbers from saved information
- Editing Permitted List (P.4-20 - 4-21)


Reject Numbers

Reject calls from specified/unsaved numbers or calls without Caller ID.

Rejecting Specified Numbers


Specifying Numbers

- 1 **MENU** ➔ **Settings** ➔ **Call tab** ➔ **Call Barring**
- 2 **Reject Numbers** ➔ **Enter Handset Code** ➔ **OK**

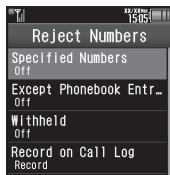

Reject Numbers Menu

3 Specified Numbers

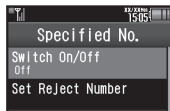

Specified Numbers Menu

- 4 **Set Reject Number**
- 5 **<Empty>**
- 6 **Enter phone number** ➔ **Done**
 - Repeat **☺** - **☺** to add phone numbers.

Activating Rejection

- 1 **In Specified Numbers menu,** **Switch On/Off**
- 2 **On**

Rejecting Unsaved Numbers

- 1 **In Reject Numbers menu,** **Except Phonebook Entries**

- 2 **On**

Saved Numbers Containing P (Pause)

- Calls from the number before **P** are rejected.

Rejecting Withheld Caller ID

Calls from public phones or with undisplayable Caller ID are also rejected.

- 1 **In Reject Numbers menu,** **Withheld**

- 2 **On**

Advanced

- ☞ Designating numbers to reject from saved information
- ☞ Editing Reject Numbers list
- ☞ Excluding rejected calls from Call Log (P.4-21)



Optional Services

Call Forwarding and Voicemail can only be set simultaneously when Call Forwarding is set to Video Calls.

4
Calling

Call Forwarding	Automatically divert all or all unanswered incoming calls to another preset phone number
Voicemail	Redirect all or unanswered calls to Voicemail Center; access messages from handset/touch tone phones
Call Waiting*	Answer incoming calls or open another line during a call
Group Calling*	Switch between open lines or connect multiple lines at once for teleconferencing
Caller ID	Show or hide your own number when placing calls
Call Barring	Restrict incoming/outgoing calls depending on conditions

*A separate contract is required.

Initiating Call Forwarding

Follow these steps to divert calls to a phone number saved in Phone Book after selected ring time (**No Answer** set):

- MENU** ➔ **Settings** ➔ **Call** tab
- Voicemail/Divert**




Voicemail/Divert Menu

- Diverts**



- Select call type**

- No Answer**



- Phone Book** ➔ **Select entry**

- Select phone number**
 - Omit if only one number is saved.

- Done**

- Select ring time**

Diverting Calls without Handset Response
In **Always** ➔ -

Entering Forwarding Number Directly
In **Enter Number** ➔ **Enter phone number** ➔ **Done** ➔ **Select ring time**




Advanced

Checking service status (P.4-21)

Initiating Voicemail

Follow these steps to divert calls to Voicemail Center after selected ring time (**No Answer** set):

- 1 In Voicemail/Divert menu, **Voicemail** ➔ **Activate**



- 2 **No Answer** ➔ **Select ring time**

Diverting Calls without Handset Response
In **e**, **Always**

Missed Call Notification

Activate this function for records of calls missed while handset is off/out-of-range and Voicemail is active.

- 1 **MENU** ➔ **Settings** ➔ **Call** tab



Call Menu

- 2 **out** **Missed Calls** ➔ **Call**

- Follow the voice guidance for further operations.

Playing Messages

- 1 In Voicemail/Divert menu, **Voicemail**

- 2 **Call Voicemail**

- Follow the voice guidance for further operations.

Deleting New Voicemail Message Indicator
In **e**, **Delete Icon** ➔ **Yes**

Canceling Call Forwarding/Voicemail

- 1 In Voicemail/Divert menu, **Cancel All**



- 2 **Yes**

Advanced

- Activating Call Waiting
- Talking on multiple lines simultaneously
- Setting/canceling outgoing call restriction
- Setting/canceling incoming call restriction (And more on P.4-21 - 4-22)



Receiving a Call

■ Handling Incoming Calls

Rejecting calls	When a call arrives, <i>Reject</i>
Placing calls on hold	When a call arrives, <i>Hold</i> <ul style="list-style-type: none"> Tap <i>Answer</i> to answer the call on hold.
Answering with Headphones	When a call arrives, <i>Long Press Call Button</i> <ul style="list-style-type: none"> To end the call, <i>Long Press Call Button</i>.

■ Answer Phone

Recording caller messages	When a Voice Call arrives, <i>Record</i> <ul style="list-style-type: none"> Tap <i>Answer</i> to answer the call mid-recording. (No message will be recorded.)
Setting ring time	<i>MENU</i> ➤ <i>Settings</i> ➤ <i>Call tab</i> ➤ <i>Answer Phone</i> ➤ <i>Answer Time</i> ➤ Enter time ➤ <i>Accept</i>
Sampling outgoing message	<i>MENU</i> ➤ <i>Settings</i> ➤ <i>Call tab</i> ➤ <i>Answer Phone</i> ➤ <i>Outgoing Message</i> <ul style="list-style-type: none"> Tap <i>CLEAR/BACK</i> to stop playback.
Muting Earpiece	<i>MENU</i> ➤ <i>Settings</i> ➤ <i>Call tab</i> ➤ <i>Answer Phone</i> ➤ <i>Volume</i> ➤ <i>Silent</i>
Deleting all messages	<i>MENU</i> ➤ <i>Phone</i> ➤ <i>Play Messages</i> ➤ <i>Options</i> ➤ <i>Delete All</i> ➤ Enter Handset Code ➤ <i>OK</i> ➤ <i>Yes</i>

■ Remote Monitor (Video Call)

Answering Video Calls automatically	<i>[Start Here]</i> <i>MENU</i> ➤ <i>Settings</i> ➤ <i>Call tab</i> ➤ <i>Video Call</i> ➤ <i>Remote Monitor</i> ➤ Enter Handset Code ➤ <i>OK</i> ➤ See below
	<p>Saving Numbers from Phone Book</p> <p><i>Auto Answer List</i> ➤ Highlight <i><Empty></i> ➤ <i>Options</i> ➤ <i>Change</i> ➤ <i>From Phone Book</i> ➤ Select entry ➤ Select phone number</p> <ul style="list-style-type: none"> To enter a phone number directly, tap <i><Empty></i>.
	<p>Saving Numbers from Call Log</p> <p><i>Auto Answer List</i> ➤ Highlight <i><Empty></i> ➤ <i>Options</i> ➤ <i>Change</i> ➤ <i>From Call Log</i> ➤ Select record</p>
Editing Auto Answer List	<p>Activating Remote Monitor</p> <p><i>Switch On/Off</i> ➤ <i>On</i> ➤ <i>OK</i></p> <ul style="list-style-type: none"> When Remote Monitor is active, auto answer tone sounds even in Manner mode; cancel afterward.
	<p><i>[Start Here]</i> <i>MENU</i> ➤ <i>Settings</i> ➤ <i>Call tab</i> ➤ <i>Video Call</i> ➤ <i>Remote Monitor</i> ➤ Enter Handset Code ➤ <i>OK</i> ➤ <i>Auto Answer List</i> ➤ See below</p> <p>Editing Numbers</p> <p>Select entry ➤ Edit ➤ <i>Done</i></p> <p>Deleting Entries</p> <p> Highlight entry ➤ <i>Options</i> ➤ <i>Delete</i> ➤ <i>Yes</i></p>
Setting ring time	<i>MENU</i> ➤ <i>Settings</i> ➤ <i>Call tab</i> ➤ <i>Video Call</i> ➤ <i>Remote Monitor</i> ➤ Enter Handset Code ➤ <i>OK</i> ➤ <i>Answer Time</i> ➤ Enter time ➤ <i>Accept</i>





Placing a Call

Basic Operations

Adjusting Earpiece Volume	MENU ➤ Settings ➤ In Sound/Display menu, Earpiece Volume ➤ Adjust level ➤ Accept
Sending/blocking Caller ID	After phone number entry, Options ➤ Hide My ID or Show My ID
Specifying line in Dual Mode	After phone number entry, Options ➤ Select Line(Voice) or Select Line(Video) ➤ Select line

International Calls

Placing calls by entering country code directly	 ➤ XX (+ appears) ➤ Enter country code ➤ Enter phone number with area code ➤ Call <ul style="list-style-type: none"> • Omit the first 0 of the area code except when calling Italy or some other countries.
Using Roaming Dial Assistant to place international calls while outside Japan	<p><small>(Start Here)</small>  ➤ Enter phone number with area code ➤ Call ➤ See below</p> <ul style="list-style-type: none"> • Prompts do not appear for numbers with country codes. • To disable Roaming Dial Assistant automatically after a call, tap Check to check box next to Don't use this tool again.. <p>Calling Japan (Landlines & Mobiles) Dial to Japan ➤ Call</p> <p>Calling Other Counties (Landlines & Mobiles) Dial to Other Country ➤ Select country ➤ Call</p>

Disabling Roaming Dial Assistant

MENU ➤ **Settings** ➤ **Call** tab ➤ **Int'l Calling** ➤ **Roaming Dial Assistant** ➤ **Off**

- When **Off**, handset dials the entered phone number as-is even while outside Japan.

Saving frequently used international prefix

MENU ➤ **Settings** ➤ **Call** tab ➤ **Int'l Calling** ➤ **Int'l Prefix** ➤ Enter Handset Code ➤ **OK** ➤ Enter prefix ➤ **Done**

Adding/changing/deleting country codes

(Start Here) **MENU** ➤ **Settings** ➤ **Call** tab ➤ **Int'l Calling** ➤ **Country Codes** ➤ See below

Adding

<Empty> ➤ Enter name ➤ **Done** ➤ Enter country code ➤ **Done**

Changing

Select country ➤ **Change** ➤ Enter name ➤ **Done** ➤ Enter country code ➤ **Done**




Deleting

Select country ➤ **Delete** ➤ **Yes**



During a Call

■ Voice Call & Video Call

Muting Microphone	Voice Call During a call, Mute • To cancel, tap Unmute .
	Video Call During a call, Options ➤ Mute • To cancel, tap Unmute .
Activating/canceling Loudspeaker	Activating Loudspeaker for Voice Call During a call,  ➤ While message appears, OK • To cancel, tap  .
	Canceling Loudspeaker for Video Call During a call,  .
Switching sound output	During a call, Options ➤ Transfer Audio ➤ To Phone or To Bluetooth • For To Bluetooth , tap a device.
Opening Phone Book	During a call, Options ➤ Phone Book ➤ Select entry • Tap CLEAR/BACK twice to return to call window.
Saving Phone Book entries	During a call, Options ➤ Phone Book ➤ Options ➤ Add New Entry ➤ Complete fields ➤ Save • Tap CLEAR/BACK to return to call window.
Disabling touch tone signaling	During a call, Options ➤ Disable DTMF

Placing calls on hold


During a call, **Options** ➤ **Hold**





- Subscription to Call Waiting or Group Calling is required to place Voice Calls on hold.
- To resume Voice Calls, tap **Options**, then tap **Retrieve**.
- To resume Video Calls, tap **Retrve**.

■ Voice Call Only




Recording caller voice	During a call, Options ➤ Record Caller Voice ➤ Recording starts ➤ Stop ➤ Recording ends
Opening messages	During a call, Options ➤ Messaging ➤ Select Messaging folder ➤ Select folder ➤ Select message • Tap CLEAR/BACK three times to return to call window.
Creating messages	During a call, Options ➤ Messaging ➤ Create Message or Create New SMS ➤ Complete message ➤ Send
■ Video Call Only	
Adjusting Outgoing Image brightness	During a call, Options ➤ Exposure ➤ Adjust level ➤ OK • Alternative Image brightness is fixed.








Decoration Call	
Creating Decoration Call files	<p>Start Here MENU → Data Folder → Decoration Call → Options → Create New File → Text Input → Enter text → Done → Images → See below</p> <p>Using Still Images Picture → Pictures → Select file → Sounds → Select folder → Select file → Yes or No → Save → Save here</p> <p>Using Video Video → Videos → Select file → Yes or No → Save → Save here</p> <p>Using Flash® Animation Flash® → Select file → Yes or No → Save → Save here</p>
	<p>MENU → Data Folder → Decoration Call → Highlight file → Options → Edit → Edit → Save → Save as New or Overwrite</p> <ul style="list-style-type: none"> • For Save as New, tap Save here.
	<p> → Highlight record → Options → Save File → Save here</p>
	<p>MENU → Settings → Call tab → Decoration Call → Switch On/Off → Off → Enter Handset Code → OK</p>
Hiding incoming Decoration Call window	<p>MENU → Settings → Call tab → Decoration Call → Play in Receiving → Off</p>

Using mobile camera to create Decoration Call files	<p>Start Here MENU → Data Folder → Decoration Call → Options → Create New File → Text Input → Enter text → Done → Images → See below</p> <p>Capturing Still Images Picture → Take Picture →  to shoot →  → Save → Save here</p> <p>Recording Video Video → Record Video →  to start recording →  to stop → Save → Yes or No → Save → Save here</p>
	<p>Showing options upon Decoration Call failure</p> <p>MENU → Settings → Call tab → Decoration Call → Notice → On</p>

Call Log

Dialing from records	<p>Calling Dialed Numbers (Redial)  → Select record → Call</p> <ul style="list-style-type: none"> • To place Video Calls, tap Options instead of Call, then tap Video Call.
	<p>Calling from Received Call Records  → Select record → Call</p> <ul style="list-style-type: none"> • To place Video Calls, tap Options instead of Call, then tap Video Call.
Sending messages from records	<p> → Highlight record → Options → Create Message → S! Mail or SMS → Complete message → Send</p>



Saving Phone Book entries from records	 → Highlight record → Options → Save to Phone Book → As New Entry → Complete other fields → Save <ul style="list-style-type: none"> To add to an existing entry, select <i>As New Detail</i>.
Placing Decoration Calls from records	 → Highlight record → Options → Deco. Call → Deco. Call File → Select/create file → Call
Initiating S! Circle Talk from records	 → Highlight record → Options → Call S! Circle Talk → Call <ul style="list-style-type: none"> Set Connection status to <i>Online</i> first.
Deleting records	One Record  → Highlight record → Options → Delete → Yes
	All Records  → Options → Delete All → Enter Handset Code → OK → Yes
Hiding Dialed Ranking	MENU → Phone → Call Log Setting → Hide Dialed Ranking <ul style="list-style-type: none"> Handset Code is required to re-select <i>Show Dialed Ranking</i>.

Call Time & Data Communication

Call Time

Setting handset to beep during Voice Calls	MENU → Settings → Call tab → Call Time/Data Counter → Minute Minder → On
Hiding Call Time during calls	MENU → Settings → Call tab → Call Time/Data Counter → Call Time Counter → Off

Resetting Call Timers	MENU → Settings → Call tab → Call Time/Data Counter → Call Timers → Clear Timers → Enter Handset Code → OK → Yes
-----------------------	---

Data Communication

Checking accumulated data transmission volume	MENU → Settings → Call tab → Call Time/Data Counter → Data Counter → All Data
Resetting Data Counter	MENU → Settings → Call tab → Call Time/Data Counter → Data Counter → Clear Counter → Yes

Restrict Destinations

Designating Permitted List numbers from saved information	<small>[Start Here]</small> MENU → Settings → Call tab → Call Barring → Restrict Destinations → Enter Handset Code → OK → Specified Numbers → Permitted List → Highlight <Empty> → Options → See below
	From Phone Book <i>Ph.Book List</i> → Select entry → Select phone number
	From Call Log Records <i>From Call Log</i> → Select record
	From S! Friend's Status Member List <i>From Friend's Status</i> → Select member



Editing Permitted List	<p>Start Here MENU ➔ Settings ➔ Call tab ➔ Call Barring ➔ Restrict Destinations ➔ Enter Handset Code ➔ OK ➔ Specified Numbers ➔ Permitted List ➔ See below</p>
	<p>Editing Numbers Select number/name ➔ Edit ➔ Done</p>
	<p>Deleting Numbers Highlight number/name ➔ Options ➔ Delete ➔ Yes</p>

Reject Numbers

Designating numbers to reject from saved information	<p>Start Here MENU ➔ Settings ➔ Call tab ➔ Call Barring ➔ Reject Numbers ➔ Enter Handset Code ➔ OK ➔ Specified Numbers ➔ Set Reject Number ➔ Highlight <Empty> ➔ Options ➔ See below</p>
	<p>From Phone Book Ph.Book List ➔ Select entry</p>
	<p>From Call Log Records From Call Log ➔ Select record</p>
	<p>From S! Friend's Status Member List From Friend's Status ➔ Select member</p>
Editing Reject Numbers list	<p>Start Here MENU ➔ Settings ➔ Call tab ➔ Call Barring ➔ Reject Numbers ➔ Enter Handset Code ➔ OK ➔ Specified Numbers ➔ Set Reject Number ➔ See below</p>
	<p>Editing Numbers Select number/name ➔ Edit ➔ Done</p>
	<p>Deleting Numbers Highlight number/name ➔ Options ➔ Delete ➔ Yes</p>

Excluding rejected calls from Call Log

MENU ➔ Settings ➔ Call tab ➔ Call Barring ➔ Reject Numbers ➔ Enter Handset Code ➔ OK ➔ Record on Call Log ➔ Do not Record

Optional Services

All Services

Checking service status

MENU ➔ Settings ➔ Call tab ➔ Select service ➔ Status

- Available for Voicemail/Divert, Show My Number, Call Barring and Call Waiting.
- For Call Barring, select restriction.

Call Waiting (Contract Required)

Activating Call Waiting

MENU ➔ Settings ➔ Call tab ➔ Call Waiting ➔ On

Placing Line 1 on hold to answer Line 2

A tone sounds during a Voice Call ➔ Hold & Answer

- Tap **Swap** to switch between lines.
- Tap **End Call** to end active line and re-engage the party on hold.

Group Calling (Contract Required)

Opening another line during a Call

During a Voice Call, enter phone number ➔ Call

- Alternatively, select a number from Call Log records.

Switching between open lines (Swap Calls)

During a Voice Call, **Swap**

- Tap **Swap** to switch between lines.



Talking on multiple lines simultaneously	While switching between lines, <i>Options</i> ➔ <i>Group Calling</i> ➔ <i>Conference All</i>
Switching to private conversation	During Group Calling, select number/name ➔ <i>Private</i>

■ Call Barring

Changing Network Password	<i>MENU</i> ➔ <i>Settings</i> ➔ <i>Call tab</i> ➔ <i>Call Barring</i> ➔ <i>Change NW Password</i> ➔ Enter current Network Password ➔ <i>OK</i> ➔ Enter new Network Password ➔ <i>OK</i> ➔ Re-enter new Network Password ➔ <i>OK</i>
---------------------------	---

Setting/canceling outgoing call restriction	<i>[Start Here]</i> <i>MENU</i> ➔ <i>Settings</i> ➔ <i>Call tab</i> ➔ <i>Call Barring</i> ➔ <i>Bar Outgoing Calls</i> ➔ See below
	Setting Restriction Select restriction ➔ <i>On</i> ➔ Enter Network Password ➔ <i>OK</i> <ul style="list-style-type: none"> • Outgoing SMS messages are also restricted. • Outgoing S! Circle Talk requests are not affected. • Following restrictions are available: <ul style="list-style-type: none"> ■ All Outgoing Calls: Restrict all non-emergency calls ■ Bar Int'l Call: Restrict all international calls ■ Local & Home Only: Restrict all international calls except to Japan
	Canceling All Restrictions <i>Cancel All</i> ➔ Enter Network Password ➔ <i>OK</i>

Setting/canceling incoming call restriction	<i>[Start Here]</i> <i>MENU</i> ➔ <i>Settings</i> ➔ <i>Call tab</i> ➔ <i>Call Barring</i> ➔ <i>Bar Incoming Calls</i> ➔ See below
	Setting Restriction Select restriction ➔ <i>On</i> ➔ Enter Network Password ➔ <i>OK</i> <ul style="list-style-type: none"> • Incoming SMS messages are also restricted. • Incoming S! Circle Talk requests are not affected. • Following restrictions are available: <ul style="list-style-type: none"> ■ All Incoming Calls: Reject all calls ■ Bar if Abroad: Reject calls when outside Japan
	Canceling All Restrictions <i>Cancel All</i> ➔ Enter Network Password ➔ <i>OK</i>

■ Caller ID

Showing/hiding Caller ID	<i>MENU</i> ➔ <i>Settings</i> ➔ <i>Call tab</i> ➔ <i>Show My Number</i> ➔ <i>On or Off</i>
--------------------------	--



Settings

■ Voice Call & Video Call

Activating auto call answer upon Slider open	<i>MENU</i> ➤ <i>Settings</i> ➤ <i>Call tab</i> ➤ <i>Slider Settings</i> ➤ <i>Open to Answer</i> ➤ <i>On</i>
Activating auto end call upon Slider close	<i>MENU</i> ➤ <i>Settings</i> ➤ <i>Call tab</i> ➤ <i>Slider Settings</i> ➤ <i>Close to</i> ➤ <i>End Call</i>

■ Voice Call

Answering calls automatically when using Headphones	<small>Start Here</small> <i>MENU</i> ➤ <i>Settings</i> ➤ <i>Call tab</i> ➤ <i>Auto Answer</i> ➤ Enter Handset Code ➤ <i>OK</i> ➤ See below
	Activating Auto Answer <i>Switch On/Off</i> ➤ <i>On</i> <ul style="list-style-type: none"> When Auto Answer is active, Auto Answer tone sounds after ringtone even in Manner mode; cancel afterward.
	Setting Ring Time <i>Answer Time</i> ➤ Enter time ➤ <i>Accept</i>

■ Video Call

Sending camera image when initiating Video Calls	<i>MENU</i> ➤ <i>Settings</i> ➤ <i>Call tab</i> ➤ <i>Video Call</i> ➤ <i>Camera Picture</i> ➤ <i>Default Image</i> ➤ <i>External Camera</i>
Disabling Loudspeaker for Video Calls	<i>MENU</i> ➤ <i>Settings</i> ➤ <i>Call tab</i> ➤ <i>Video Call</i> ➤ <i>Loudspeaker</i> ➤ <i>Off</i>
Muting Microphone when initiating Video Calls	<i>MENU</i> ➤ <i>Settings</i> ➤ <i>Call tab</i> ➤ <i>Video Call</i> ➤ <i>Mute Microphone</i> ➤ <i>On</i>
Setting Alternative Image that is sent when initiating Video Calls	<i>MENU</i> ➤ <i>Settings</i> ➤ <i>Call tab</i> ➤ <i>Video Call</i> ➤ <i>Camera Picture</i> ➤ <i>Alternative Image</i> ➤ Select folder ➤ Select file ➤ <i>Assign</i>
Setting quality of Incoming/ Outgoing Images	<i>MENU</i> ➤ <i>Settings</i> ➤ <i>Call tab</i> ➤ <i>Video Call</i> ➤ <i>Incoming Picture</i> or <i>Outgoing Picture</i> ➤ Select quality
Setting image that is sent while call is on hold	<i>MENU</i> ➤ <i>Settings</i> ➤ <i>Call tab</i> ➤ <i>Video Call</i> ➤ <i>Hold Guidance Pict</i> ➤ Select folder ➤ Select file ➤ <i>Assign</i> <ul style="list-style-type: none"> Omit file selection step when using Customized Screen image.
Setting Backlight status	<i>MENU</i> ➤ <i>Settings</i> ➤ <i>Call tab</i> ➤ <i>Video Call</i> ➤ <i>Backlight</i> ➤ Select option <ul style="list-style-type: none"> Selecting Normal Setting applies Display Backlight settings.



Receiving a Call

? Cannot use Answer Phone or Caller Voice

- Answer Phone and Caller Voice are disabled when less than 12 seconds remain or 20 messages are recorded. Delete messages.
- Answer Phone and Caller Voice are not available for Video Calls.

Placing a Call

? Cannot place call via Speed Dial

- Speed Dial is not available when Phone Book access is restricted by Application Lock.

? Cannot place call

- Cancel Keypad Lock, Function Lock and Offline Mode, if active.

? Call won't connect

- Did you include the area code or the first 0? Dial the number including the area code or 0.
- Handset may be out-of-range (*out* appears). Move to a place where signal is strong and retry.

During a Call

? Outgoing image is distorted during Video Calls

- Rapid motion can make images appear choppy or distorted.

? Camera image switches to Alternative Image during Video Calls

- Prolonged camera use may cause camera area to heat up, resulting in automatic shutdown; wait a while and retry.

? Conversation is hampered

- Conversations may be hampered by ambient noise.
- Check Earpiece Volume when using Loudspeaker. Increasing Earpiece Volume may cause feedback/interference.

? Call is choppy or cut off

- Network signal may be weak. Move to a place where signal is strong and retry.
- Battery may need to be charged or replaced. Charge battery or install a charged battery.

? Clicking noise is heard during call

- Handset may be moving into another service area. Noise is heard when Network signal switches. This is normal.

? Cannot hear other party's voice

- Earpiece Volume may be low. Increase Earpiece Volume (P.4-3).
- Sound output may be set to use handsfree device. Set Transfer Audio (P.4-18) to *To Phone*.



Other

**Call Time (in *Dialed Calls* or *Received Calls*) seems incorrect**

- Ring time for incoming or outgoing calls is not counted. (On hold time is counted.)

**Cannot save phone number for Call Forwarding**

- Does the number start with **1, 00, 0120** or **0990**? Public service numbers, international call numbers starting with 00, toll-free numbers and fee-based service numbers cannot be saved.

